

WARRANTY, SERVICE, OR RECALIBRATION
For warranty, service, or recalibration, contact:

Traceable® Products are ISO 9001:2018 Quality-
Certified by DNV and ISO/IEC 17025:2017
accredited as a Calibration Laboratory by A2LA.

Cat. No. 1072

Traceable® is a registered trademark of Cole-Parmer.

©2020 Traceable® Products. 92-1072-00 Rev. 5 040920

**TRACEABLE®
CALENDAR
THERMOMETER
CLOCK
INSTRUCTIONS**

FEATURE

1. Day and Calendar function
2. Temperature function
3. Snooze function
4. Hourly chime
5. 12/24 function

DATE SETTING

1. Slide the selector to DATE SET.
2. Press YEAR to the requested year. Press MONTH and DATE to the required month and date respectively. The correct day will automatically be displayed.

TIME SETTING

1. Slide the selector to TIME SET.
2. Press HOUR to increase hour digits and MIN to increase minute digits. Press SEC to return to 00.

3. Choose 12/24 selector for wither 12 hours or 24 hours format.

TEMPERATURE CHANGING

1. Switch to either AL. OFF, AL. ON or SNZ.
2. Press ° C / ° F to choose the desired temperature measurement.

CHIME SETTING

1. Slide the selector to AL. SET.
2. Press SEC/DATE, "J" sign appears.
3. Slide the selector to AL. ON, SNZ or AL. OFF
4. The chime will sound every hour.
5. Switch to AL.SET. Press SEC/DATE again to cancel the hourly chime.
6. The chime is from 7:00a.m. to 9:00p.m.

ALARM AND SNOOZE SETTING

(I) ALARM SETTING

1. Switch the selector to AL. SET.
2. Press HOUR to increase the hour digits and MIN to increase the minute digits.
3. Switch the selector to AL. ON position. The alarm signal "Q" will be seen on the display.
4. When the set alarm reaches, a melody plays. It can be stopped by pressing SEC/DATE. Or it can be stopped by turning the selector to AL. OFF position, the alarm signal "Q" disappears.

(II) SNOOZE SETTING

1. Set the alarm time and switch the selector to SNZ position. Both the alarm signal "Q" and snooze signal "ZZ" will be seen on the display.
2. When the set alarm reaches, a melody plays.

3. After 10 minutes the snooze alarms in a melody.
4. The snooze is stopped when the selector is switched to AL. OFF position. Both the alarm signal "A" and snooze signal "ZZ" disappear.

BATTERY REPLACEMENT

1. Press battery cover. Open in direction indicated. Insert 2 new 1.5 volts AAA (UM4). They should be in the correct direction. (The clock will be damaged if placed incorrectly).
2. Alkaline batteries are recommended.

PRECAUTION

Avoid any water on the sensor.

HANGING ON A WALL

This clock is supplied with a screw for hanging on a wall. For best viewing of the LCD, hang the clock at a minimum height of 6 foot 5 inches to obtain the viewing angle of approximately 70° as indicated.

