

30-682, 30-682M, 30-682F, 30-682L, 30-683

# PowerPlug™ Luminaire Disconnect - Models 182 & 183

# **Installation Instructions:**



### Conductor installation:

- Wiring must comply with all applicable electrical codes.
- Turn off power before removing or installing disconnect.
- Strip wires to 3/8 inch (9,5 mm).
- Grip black ballast wire firmly and push conductor into port marked with black "B".
- Grip white ballast wire firmly and push conductor into port adjacent to black ballast wire on Model 182 or the unmarked port on Model 183. Skip steps 6 - 8 for 30-682L
- Grip black supply wire firmly and push into port marked with black "LINE".
- Grip white supply wire firmly and push into port adjacent to black supply wire on Model 182 or the unmarked port on Model 183.
- For three wire ballasts using Model 183, repeat above instructions for third set of wires on the port marked with "dashed line."
- Use only one conductor per port and assure that no copper is exposed on any of the wires inserted
- 10. See disconnect de-mate/mate installation instructions on this page when replacing ballasts.
- 11. The wire insertion side of this product is listed for ONE TIME USE ONLY. DO NOT REMOVE AND REPLACE WIRES.

### TABLE 1: Voltage/Current Maximum:

Voltage (V)	Current (A)
600	3

## TABLE 2: Wire Size & Type

Wire Type	Wire Size
Solid and Tin Bonded	18 AWG
Copper to copper connections only. Do not use on Aluminum.	

#### **TABLE 3: Environmental Conditions**

Environmental Conditions	Rating
Temperature Rating	105°C (221°F)
Flame Rating	UL94-0

Rated for a limited number of current-interrupting operations.

#### Disconnect de-mate / mate installation

1. To de-mate, grasp disconnect at each end and pull apart to separate the disconnect halves. Do NOT pull on wires.





