

INSTRUCTION MANUAL

Heated Glove Liners

60795

HeatTek™

- STRETCHABLE AND BREATHABLE SPANDEX FABRIC
- FOCUSED HEAT ZONES
- DESIGNED TO FIT UNDER KNIT-DIPPED, LEATHER, OR GENERAL-PURPOSE WORK GLOVES
- POWERED BY RECHARGEABLE LI-ION BATTERIES
- TWO HEAT LEVEL SETTINGS
- TOUCH SCREEN COMPATIBLE



GENERAL SPECIFICATIONS

Klein Tools 60795 Heated Glove Liners are designed to be worn under work gloves to provide warmth to the hands when working in the cold. Featuring low and high heat settings, these low-profile flexible liners help maintain dexterity while hugging the hand to provide focused heat to the fingertips, outer hand, and wrist area. Powered by replaceable rechargeable batteries.

- **Liner Material:** Polyester-Spandex
- **Battery Type:** Internal Lithium Polymer, 7.4V DC, 3000 mAh (22.2 Wh)
- **Battery Life:** HIGH: 3 hours, LOW: 9 hours (on full charge)
- **Required Charger Voltage / Current :** 5V DC, 2A
- **Charging Temperature:** 32°F to 113° F (0°C to 45°C)
- **Operating Temperature:** -4°F to 113°F (-20°C to 45°C)
- **Storage Temperature:** 14°F to 113°F (-10°C to 45°C)
- **Dimensions: Battery Pack:** 2.6" × 2.4" × 0.6" (66 × 61 × 15 mm)
Charger: 4.8" × 1" × 0.5" (1219 × 25 × 13 mm)
Liner: 12" × 4" × 0.7" (305 × 102 × 18 mm)
- **Weight: Battery Pack:** 3.2 oz. (91 g)
Liner: 6.4 oz. (181 g)
- **Standards:** REACH, ROHS, UL2054, DOE/CEC/NRCAN
- **Drop Protection:** 6.6 ft. (2m)

Specifications subject to change.

Label on Battery Pack

Heated Glove Liner Battery

Cat. No. 29125

Nominal: 7.4V

Input: 8.4V $\overline{=}$ 1.5A Capacity: 3000 mAh (22.2 Wh)

MMYYF-HS



Warning: Risk of Fire and Burns.

- Do NOT Open, Crush, Puncture, or Incinerate
- Do NOT expose to temperatures above 131°F (55°C)
- Only charge with Klein Tools Charger Cat. No. 29126
- For use only with Klein Tools Heated Glove Liner



Label on Battery Pack Charger

Heated Glove Liner Battery Charger

Cat. No. 29126



For Use with Klein Tools 29125 Battery only.

Para utilizar solo con batería 29125 de Klein Tools.

Conçu pour être utilisé uniquement avec le chargeur portatif Klein Tools n° 29125.



Input: 5V $\overline{=}$ 2A

Output 2 x 8.4V $\overline{=}$ 800mA

MMYYF-HS

WARNINGS

READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS TO ENSURE SAFE OPERATION. FAILURE TO OBSERVE THESE WARNINGS CAN RESULT IN RISK OF FIRE, ELECTRIC SHOCK, SERIOUS INJURY AND/OR PROPERTY DAMAGE.

- Inspect before use:
 - **DO NOT** wear the liners if there are rips, tears, or if the power button does not turn it on and off. Any heated clothing that cannot be controlled with the power button is dangerous.
 - **DO NOT** use the product if it is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or injury.
- This product is intended to be worn under protective exterior gloves appropriate for the task. Use caution when working in situations that could damage the liners and/or battery, such as excessive impacts (hammering) or using sharp tools.
- Risk of fire and burns. **DO NOT** open, crush, heat above specified maximum temperature or incinerate battery pack. Prolonged exposure to direct sunlight can result in elevated temperatures.
- **DO NOT** subject to impacts or drops greater than 6ft. (1.8m) Drops larger than this may not show signs of damage, but internal components may have been compromised. It is advisable to replace the unit if any such severe events occur.
- **DO NOT** expose to moisture, rain, or snow.
- Turn off the liners and disconnect battery pack immediately if:
 - any discomfort occurs.
 - the power button flashes red and blue continuously when powered on.
 - the power button is illuminated, but no heat output can be detected.
 - the liners or battery do not operate as expected.
- This product is **NOT** to be worn by children, people with poor blood circulation or with a medical condition such as sensitivity to overheating.
- Risk of fire and electric shock:
 - **ONLY** use the liners with Klein Tools battery packs, Model # 29125.
 - **ONLY** charge batteries with the included charging cable, Model # 29126.
- Hand Wash only: Remove the battery before washing. See CLEANING section for more information.
- Keep away from high-voltage devices.
- **DO NOT** attempt to repair the liners, battery pack, or charging cable. There are no user-serviceable parts.
- To reduce the risk of accidental operation, disconnect the battery from the power cable and remove the battery pack from the battery pouch when not in use.

FEATURE DETAILS



1. Battery Packs (x2)
2. Battery Pack Charging Port (x2)
3. Battery Pack Charger
4. Charger Outputs to Battery Packs (x2)
5. USB-A Charger Input
6. Charging Status Indicators (x2)
7. Heated Liners (pair)

8. Battery Pouch (x2)
9. Liner Battery Input (x2)
10. Draw String (x2)
11. Power Button (x2)
12. 2XL Cut A1 Knit Dipped Gloves (60823)
13. Pairing Clips (x2)

OPERATING INSTRUCTIONS

CHARGING BATTERIES

NOTE: Fully charge before first use. First-time charge should be minimum 4 hours. DO NOT charge batteries inside liners.

NOTE: When the batteries are near depletion, the Power Button(s) ⑪ will blink every 5 seconds. Recharge batteries per the instructions below.

Connect each Charger Output ④ to a Battery Pack Charging Port ②, then connect the USB-A Charger Input ⑤ into a USB AC adapter or other USB power supply (not included). The Charging Status Indicators ⑥ will illuminate red while charging, and will illuminate green when batteries are fully charged. Disconnect batteries from charger when charging is complete.

NOTE: It is recommended to always charge both batteries at the same time.

INSTALLING BATTERIES INTO LINERS

Insert a Battery Pack ① into the Battery Pouch ⑧ on one of the Liners ⑦ and secure, then connect the Liner Battery Input ⑨ to the Battery Pack Port ②. Repeat process on other Liner.

WEARING

NOTE: Depending on the ambient external temperature, it can take several minutes for the Liners to reach maximum heat.

Pull Liners ⑦ snugly onto hands and cinch the Draw String ⑩ securely. Pull the included 60823 2XL Cut A1 Knit Dipped Gloves ⑫, or any appropriately sized gloves, over each Liner ⑦. Check for proper fit and dexterity.

To power on, press and hold the Power Button ⑪ on each Liner ⑦ for 2 seconds. The Liners will power on in High Heat Mode, indicated by the Power Button ⑪ illuminating red. To change to Modes, press and release the Power Button ⑪, which will then illuminate blue to indicate Low Heat Mode.

 **DO NOT** expose to moisture, rain, or snow.

To power off, press and hold the Power Button ⑪ on each Liner ⑦ for 2 seconds.

NOTE: If at any time the Power Button ⑪ repeatedly blinks red and blue, immediately

CLEANING

DISCONNECT AND REMOVE BATTERIES FROM LINER BEFORE CLEANING.

1. Spot clean only. Use mild detergent and damp soft cotton cloth. DO NOT Machine wash, Do NOT use bleach, DO NOT immerse liners.
2. Air dry liners on flat surface at room temperature. Ensure liners are completely dry prior to using or storing.

STORAGE

Disconnect and remove batteries from liner. Follow the above cleaning procedure if needed. If storing for an extended period of time, charge batteries prior to storing, and periodically recharge to maintain battery charging capacity. Store in a cool, dry place.

NOTE: *It is recommended to retain the original retail box for storage purposes.*

IC COMPLIANCE

Canada ICES-003 (B) / NMB-003 (B)

DISPOSAL / RECYCLE



Do not place equipment and its accessories in the trash. Items must be properly disposed of in accordance with local regulations. Please see **www.epa.gov/recycle** for additional information.

NOTES