

SPECIFICATIONS:

Display: ½" LCD
Range: 99 Minutes, 59 seconds to zero
Resolution: 1 second
Accuracy: 0.01%
Alarm: 1 Minute audible alarm, bright red LED flashing visual alarm
Function: Countdown timing
Features: Water-resistant, Audible alarm, Flashing red LED when time is up, Infinite timeouts, Supplied with lanyard and suction cup.

CONTROLS/INDICATORS

Separate START and STOP buttons, and ten time-setting buttons, numbered "1" through "10".

OPERATION

1. Select desired countdown time with buttons "1" through "10".
2. Press the "START" button to begin countdown.
3. Press the "STOP" button for timeouts or to stop the countdown.
4. When zero is reached a bright red LED flashes and an audible alarm sounds for one minute.
5. Alarm can be turned off by pressing any of the buttons on the unit.
6. To clear the time entry, press the "STOP" button twice.

ALL OPERATIONAL DIFFICULTIES

If this unit does not function properly for any reason, replace the battery with a new high-quality battery (see "Battery Replacement" section). Low battery power can occasionally cause any number of "apparent" operational difficulties. Replacing the battery with a new fresh battery will solve most difficulties.

BATTERY REPLACEMENT

Erratic readings, a faint display or no display are all indicators that the batteries must be replaced. The two battery compartments located on the back of the unit can be opened with a screw driver (turn in the direction indicated). Replace exhausted batteries with two new 1.5 volt batteries. When replacing battery compartment covers, carefully ensure that each cover is properly in place in order to maintain the unit's water-resistance. Replacement Battery Cat. No. 1039.

**TRACEABLE®
WATER-
RESISTANT,
FLASHING TIMER
INSTRUCTIONS**

© Control Company Cat. No. 5036

Traceable® is a registered trademark of © Control Company.

©2016 © Control Company. 92-5036-00 Rev. 2 060816