



709/709H

Precision Loop Calibrator

Users Manual

January 2013
© 2013 Fluke Corporation. All rights reserved. Specifications are subject to change without notice.
All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for three years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.



Table of Contents

Title	Page
Introduction	1
How to Contact Fluke.....	2
Safety Information	3
Symbols	4
Standard Equipment.....	6
The Product.....	8
The Buttons	8
The Selection Knob	9
Main Menu	9
mA Source.....	10
mA Simulate	12
mA Measure	13
mA Measure with 24V	14
Volts Measure	15
Calibrator Setup Menu	16

Auto Ramp Time	17
Auto Step Time	17
Step and Ramp Operation	18
Automatic Step and Ramp	18
Valve Test	19
HART 250Ω Resistor	20
mA Span	20
Contrast	21
Auto Shutdown Time.....	21
HART Write Enable.....	22
HART Device Communication	23
HART Connections	23
In Circuit, External Loop Power.....	24
In Circuit, Product Loop Power.....	25
Across Circuit, Communicator Only	26
Communications Setup and Selection	27
Mode	28
250Ω Resistor	28
HART Connect	29
Polling Loop	29
Tag Selection	30
Acquiring Data.....	30
Disconnect from Loop	31
Function Select Menu	31
Device Setup and Data	32
Write LRV and URV Values.....	33
Write LRV	33
Write URV	34
Trim, Set, and Zero Menu	34

Contents (continued)

Trim 4 mA.....	35
Trim 20 mA.....	36
Set Fixed mA Output	37
PV Zero	38
Device Diagnostic.....	39
Configuration Log and Data Log.....	40
Configuration Log	40
Data Log	42
Maintenance.....	44
Clean the Product.....	45
Fuse	45
Battery Replacement	46
User-Replaceable Parts	47
Specifications	49

List of Tables

Table	Title	Page
1.	Symbols.....	4
2.	Standard Equipment.....	6
3.	Buttons	8
4.	User-Replaceable Parts	47

List of Figures

Figure	Title	Page
1.	Standard Equipment.....	7
2.	Buttons	8
3.	Main Menu.....	9
4.	mA Source Connections.....	11
5.	mA Simulate Connections	12
6.	mA Measure Connections	13
7.	mA Measure with 24 V Connections	14
8.	Volts Measure Connections.....	15
9.	Setup Menu, Screen 1.....	16
10.	Setup Menu, Screen 2.....	16
11.	Auto Ramp Time Screen	17
12.	Auto Ramp Step Time Screen.....	17
13.	Valve Test Enable Screen	19
14.	HART Resistor Enable Screen	20
15.	mA Span Selection Screen.....	20

Contents (continued)

45.	Data Log Screen	42
46.	Logging Interval Screen	43
47.	Active Logging Screen	43
48.	Battery Replacement.....	46

<

