




Series DH DIGIHELIC® Differential Pressure Controller

QUICK SET-UP SHEET



Wire per wiring diagram on unit.
(Also page 3 of instruction manual)

Home Display at Power Up

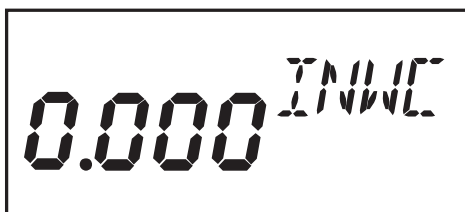

Note: To see full scale range of unit press **E** at home display.

SET DE-ACTIVATION (*SPIL*) AND ACTIVATION (*SPIH*) SET POINTS (Relay A on wiring diagram)

To set *SPIL*

press **SP/AL** button once. You will see:

Example View

(Numbers may be different depending on unit purchased).



To adjust press **E**. *SPIL* will blink. Press **▼** or **▲** as desired. Press **E** when finished adjusting to save reading. *SPIL* will stop blinking.

Example of New *SPIL* Setting

continued over →

To set *SPIH*

From *SPIL* screen press  button once. You will see:

Example View

(Numbers may be different depending on unit purchased).



To adjust press . *SPIH* will blink. Press  or  as desired. Press  when finished adjusting to save reading. *SPIH* will stop blinking.

Example of New *SPIH* Setting



Press  to return to the home display. You now have programmed the Digihelic® control to activate relay A at 4.500" w.c. and de-activate at 1.500" w.c.

To change engineering units select velocing or flow modes, set relay B for set point control or alarm modes, select security levels, calibrate the unit, and many more, see main instruction manual.