

IMPORTANT:
Read Before Using

IMPORTANT :
Lire avant usage




Operating/Safety Instructions

Consignes de fonctionnement/sécurité

Instrucciones de funcionamiento y seguridad

GLL3-300

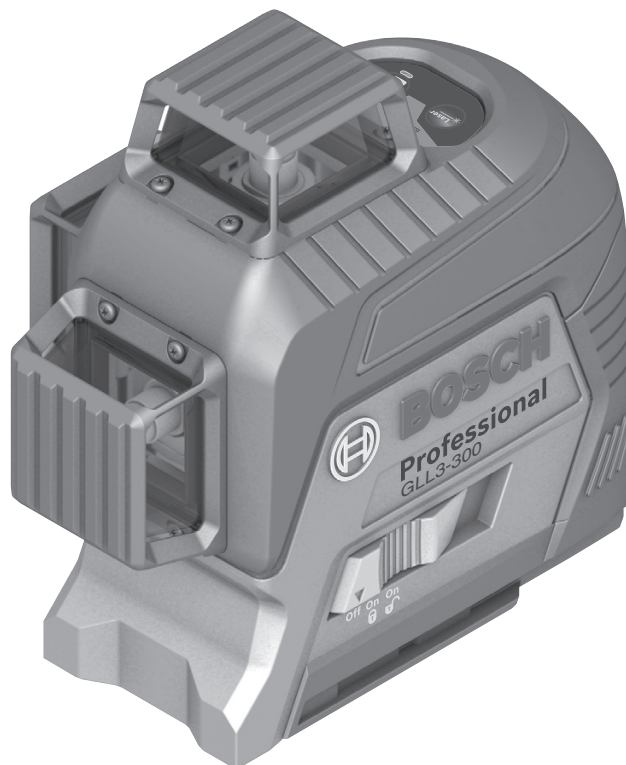

BOSCH


**Call Toll Free
for Consumer
Information &
Service Locations**

**Pour obtenir des informations
et les adresses de nos centres
de service après-vente,
appelez ce numéro gratuit**







**Llame gratis para
obtener información
para el consumidor y
ubicaciones de servicio**


**For English Version
See page 5**

**Version française
Voir page 16**

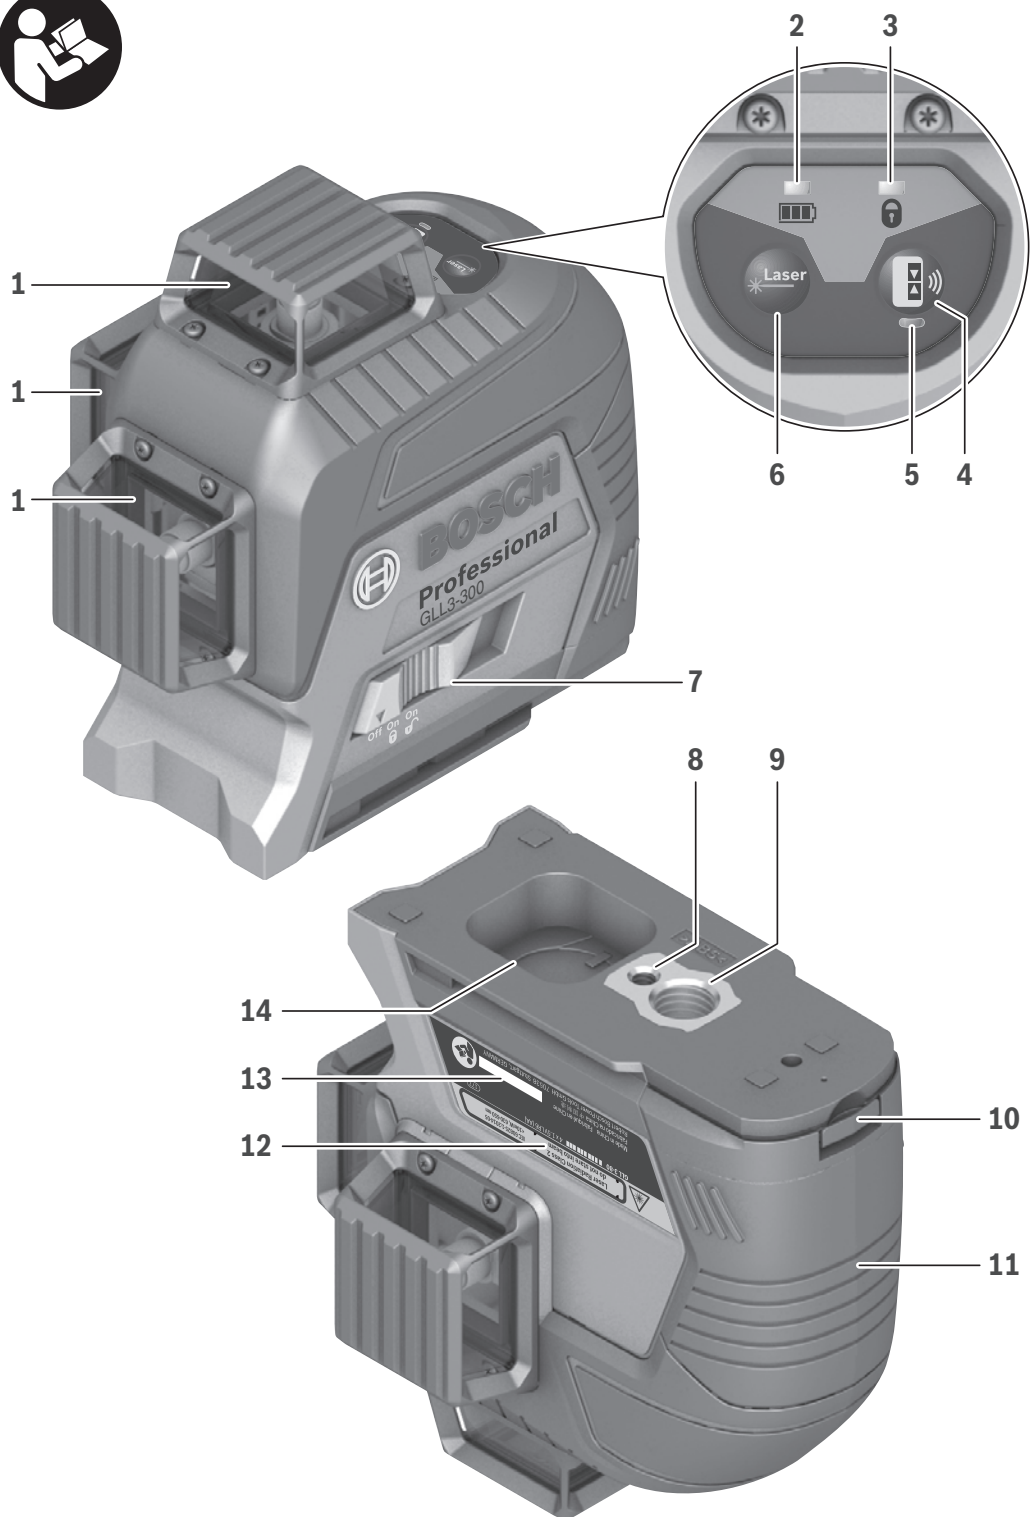


GLL3-300

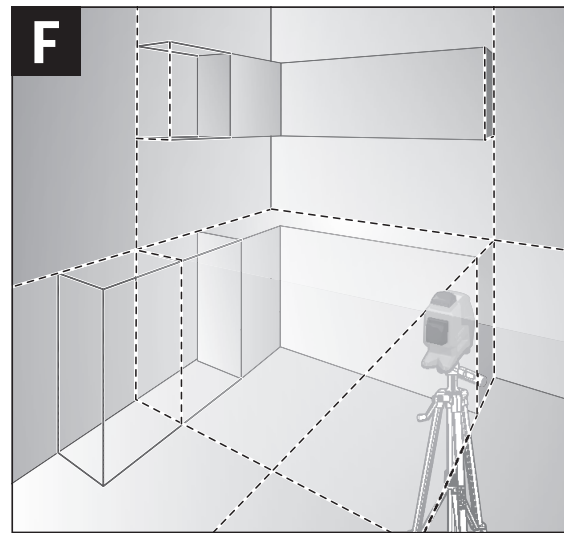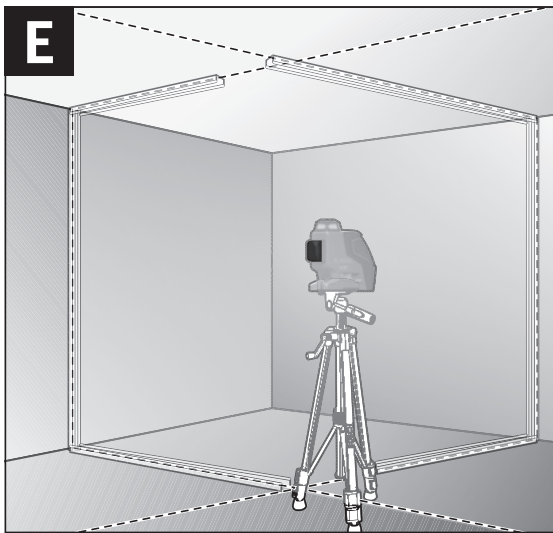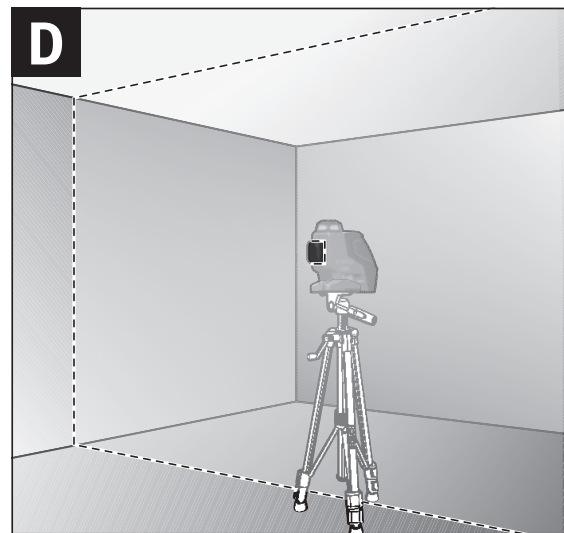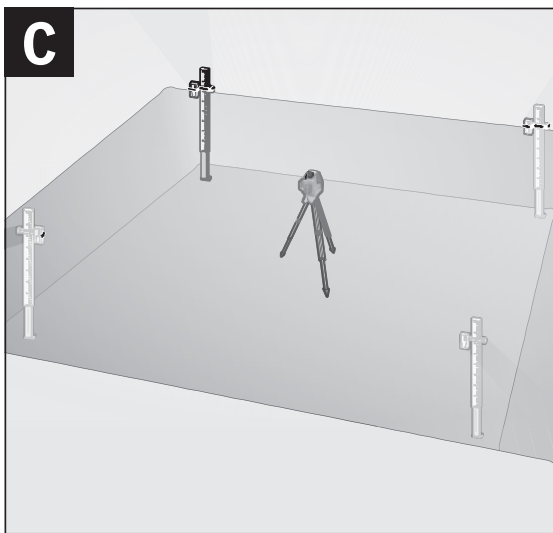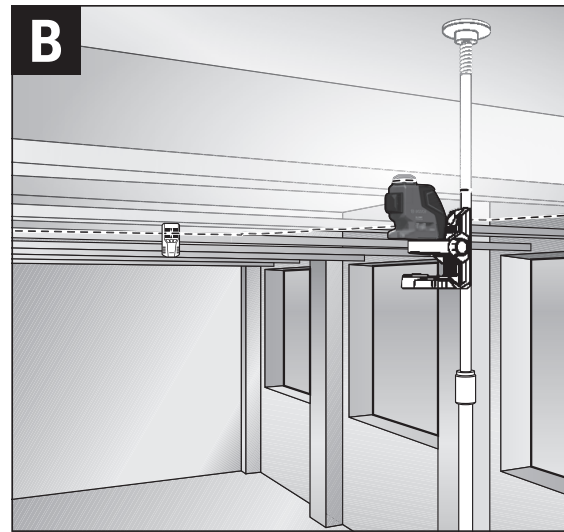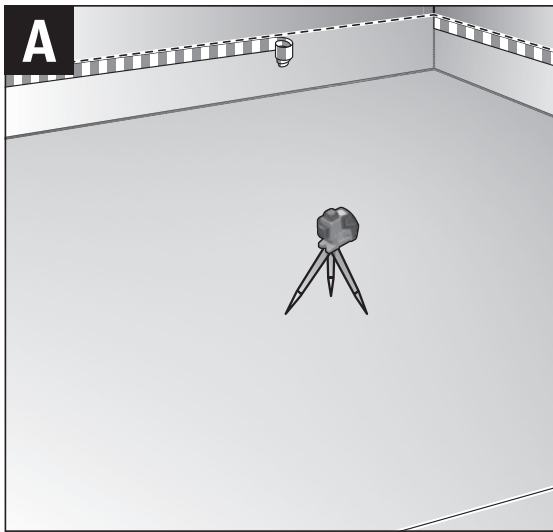

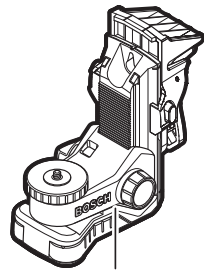

15
BM 1
0 601 015 A01

 

LR 6
0 601 069 H10




LR 8
0 601 069 J11


16




17
1 608 M00 05B

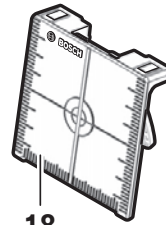

18

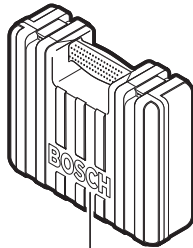

19
6 082 762 25N

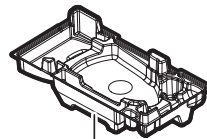

20
6 082 943 6N7



21







22
BT 150
0 601 096 B00



23
BP 350
0 601 015 B00

Safety Symbols

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Read manual symbol - Alerts user to read manual.
	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	This symbol designates that this laser leveling tool complies with Part 15 of the FCC Rules.


General Safety Rules

⚠ WARNING Read all instructions. Failure to follow all instructions listed below may result in hazardous radiation exposure, electric shock, fire and/or serious injury. The term “tool” in all of the warnings listed below refers to your mains-operated (corded) tool or battery-operated (cordless) tool.

⚠ WARNING The following labels are on your laser tool for your convenience and safety. They indicate where the laser light is emitted by the tool. ALWAYS BE AWARE of their location when using the tool.



Do not direct the laser beam at persons or animals and do not stare into the laser beam yourself. This tool produces laser class 2 laser radiation and complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007. This can lead to persons being blinded.

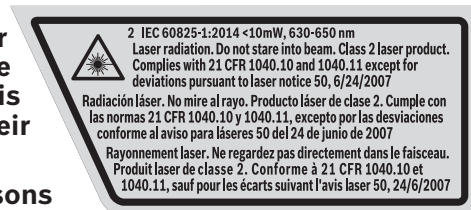

DO NOT remove or deface any warning or caution labels. Removing labels increases the risk of exposure to laser radiation.

Use of controls or adjustments or performance of procedures other than those specified in this manual, may result in hazardous radiation exposure.

ALWAYS make sure that any bystanders in the vicinity of use are made aware of the dangers of looking directly into the laser tool.

DO NOT place the laser tool in a position that may cause anyone to stare into the laser beam intentionally or unintentionally. Serious eye injury could result.

ALWAYS position the laser tool securely. Damage to the laser tool and/or serious injury to the user could result if the laser tool fails.

ALWAYS use only the accessories that are recommended by the manufacturer of your laser tool. Use of accessories that have been designed for use with other laser tools could result in serious injury.

DO NOT use this laser tool for any purpose other than those outlined in this manual. This could result in serious injury.

DO NOT leave the laser tool “ON” unattended in any operating mode.

DO NOT disassemble the laser tool. There are no user serviceable parts inside. Do not modify the product in any way. Modifying the laser tool may result in hazardous laser radiation exposure.

DO NOT use the laser viewing glasses as safety goggles. The laser viewing glasses are used for improved visualization of the laser beam, but they do not protect against laser radiation.

DO NOT use the laser viewing glasses as sun glasses or in traffic. The laser viewing glasses do not afford complete UV protection and reduce color perception.

DO NOT use any optical tools such as, but not limited to, telescopes or transits to view the laser beam. Serious eye injury could result.

DO NOT stare directly at the laser beam or project the laser beam directly into the eyes of others. Serious eye injury could result.

Work area safety

Keep work area clean and well lit. Cluttered or dark areas invite accidents.

DO NOT operate the laser tool around children or allow children to operate the laser tool. Serious eye injury could result.

DO NOT use laser tools, attachments and accessories outdoors when lightning conditions are present.

Do not operate the measuring tool in explosive environments, such as in the presence of flammable liquids, gases or dusts. Sparks can be created in the measuring tool which may ignite the dust or fumes.

Electrical safety

⚠ WARNING Batteries can explode or leak, cause injury or fire.

To reduce this risk, always follow all instructions and warnings on the battery label and package.

DO NOT short any battery terminals.

DO NOT charge alkaline batteries.

DO NOT mix old and new batteries. Replace all of them at the same time with new batteries of the same brand and type.

DO NOT mix battery chemistries.

Dispose of or recycle batteries per local code.

DO NOT dispose of batteries in fire.

Keep batteries out of reach of children.

Remove batteries if the device will not be used for several months.

Personal safety

If laser radiation strikes your eye, you must deliberately close your eyes and immediately turn your head away from the beam.

Do not make any modifications to the laser equipment.

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating a tool may result in serious personal injury or incorrect measurement results.

Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

Use caution when using laser tools in the vicinity of electrical hazards.

Magnets



Keep the tool, positioning device BM 1 15, laser receiver LR 6/LR8 16, and laser target plate 18 away from cardiac pacemakers.

The magnets of the tool and laser target plate generate a field that can impair the function of cardiac pacemakers.

Keep the tool positioning device BM 1 15, laser receiver LR 6/LR8 16, and laser target plate 18 away from magnetic data medium and magnetically-sensitive equipment. The effect of the magnets of the tool and laser target plate can lead to irreversible data loss.

Noise Information

The A-weighted sound pressure level of the audio signal at one meter distance is 80dB(A).

Do not hold the measuring tool close to your ear!

Use and care

Use the correct tool for your application. The correct tool will do the job better and safer.

Do not use the tool if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.

Store idle tool out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. Tools are dangerous in the hands of untrained users.

Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the operation. If damaged, tool repaired before use. Many accidents are caused by poorly maintained tools.

Use the tool, accessories, etc., in

accordance with these instructions and in the manner intended for the particular type of tool, taking into account the working conditions and the work to be performed. Use of the tool for operations different from those intended could result in a hazardous situation.

Service

Have your tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the tool is maintained.

Develop a periodic maintenance schedule for tool. When cleaning a tool be careful not to disassemble any portion of the tool since internal wires may be misplaced or pinched or may be improperly mounted. Certain cleaning agents such as gasoline, carbon tetrachloride, ammonia, etc. may damage plastic parts.

SAVE THESE INSTRUCTIONS

FCC Caution



The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE! This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee

that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"Exposure to Radio Frequency (RF) Signals: The wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population.

These guidelines are based on the safety standards previously set by international standard bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Intended Use

The tool is intended for determining and checking horizontal and vertical lines.

Features

The numbering of the product features shown refers to the illustration of the tool on the graphic page.

- | | |
|--|--|
| 1 Exit opening for laser beam | 13 Serial number |
| 2 Battery low indicator | 14 Recess for <i>Bluetooth®</i> module
that can be retrofitted |
| 3 Working without automatic leveling
indicator | 15 Positioning device BM 1* |
| 4 Receiver mode button | 16 Laser receiver* |
| 5 Receiver mode indicator | 17 Laser viewing glasses* |
| 6 Operating mode button | 18 Laser target plate |
| 7 On/Off switch | 19 Hard Carrying Case |
| 8 Tripod mount 1/4" | 20 Inlay* |
| 9 Tripod mount 5/8" | 21 Protective pouch* |
| 10 Latch of battery lid | 22 Tripod BT 150* |
| 11 Battery lid | 23 Telescoping pole system BP350* |
| 12 Laser warning label | |

*The accessories illustrated or described are not included as standard delivery.

Technical Data

Laser Line	GLL3-300
Article number	3 601 K63 S10
Working range (typical) ¹⁾	
–without laser receiver (diameter)	200 ft (60m)
–with laser receiver (diameter)	15-300 ft (5-91 m)
Leveling accuracy (typical)	±3/32 in. at 30 ft (±2.40 mm at 10 m)
Self-leveling range (typical)	±4°
Leveling duration (typical)	<4s
Operating temperature	14°F ~ 104 °F (-10 °C ~ +40 °C)
Storage temperature	-4°F ~ 158 °F (-20 °C ~ +70 °C)
Relative air humidity, max.	90 %
Laser class	2
Laser type	630–650 nm <10mW
C ₆	10
Divergence of laser line	50 x 10 mrad (full angle)
Shortest pulse duration	1/10000 s
Tripod mount	1/4"-20, 5/8"-11
Batteries	4 x 1.5V LR6 (AA)
Operating time with 3 laser levels	4 h
Weight	1.8 lb (820 g)
Dimensions	5.9" x 3.3" x 5.6" (149 x 84 x 142 mm)
Degree of protection ²⁾	IP 54 (dust and splash water protected)

1) The working range can be decreased by unfavourable environmental conditions (e.g. direct sun irradiation).

2) Battery compartment not included.

The measuring tool can be clearly identified with the serial number **13** on the type plate.

Preparation

Inserting/Replacing the Battery

Alkaline batteries are recommended for the tool.

To open the battery compartment **11**, slide the latch **10** in the direction of the arrow and fold the battery lid up. Insert the batteries.

Insert batteries using correct polarity as illustrated on the inside of battery lid.

When the batteries become weak, a 5 s audio signal will sound. The battery low indicator **2** continuously flashes red.

When the batteries are weak when switching on the tool, the 5 s audio signal will sound directly after switching on the tool.

Always replace all batteries at the same time. Only use batteries from one brand and with the identical capacity.

- **Remove the batteries from the tool when not using it for extended periods.**

When storing for extended periods, the batteries can corrode and discharge themselves.

Operation

Initial Operation

- **Loud audio signals will sound under certain conditions while operating the tool. Therefore, keep the tool away from your ear or other persons.** The loud audio signal can cause hearing damage.
- **Protect the tool against moisture and direct sun light.**
- **Do not subject the tool to extreme temperatures or variations in temperature.** As an example, do not leave it in vehicles for longer periods. In case of large variations in temperature, allow the tool to adjust to the ambient temperature before putting it into operation. In case of extreme temperatures or variations in temperature, the accuracy of the tool can be impaired.
- **Avoid heavy impact or dropping of the tool.** After heavy exterior impact on the tool, an accuracy check should always be carried out before continuing to work (see "Leveling Accuracy").
- **Switch the tool off during transport.** When switching off, the leveling unit, which can be damaged in case of intense movement, is locked.

Switching On and Off

⚠ WARNING Do not leave the switched on tool unattended and switch the tool off after use.

⚠ WARNING Do not point the laser beam at persons or animals and do not look into the laser

beam yourself, not even from a large distance.

To **switch on** the tool, slide the On/Off switch **7** to the "**on**" position (when working without automatic leveling) or to the "**on**" position (when working with automatic leveling). Immediately after switching on, the tool sends laser beams out of the exit openings **1**.

To **switch off** the tool, slide the On/Off switch **7** to the "**off**" position. When switching off, the leveling unit is locked.

When exceeding the maximum permitted operating temperature of 104°F, the tool switches off to protect the laser diode. After cooling down, the tool is ready for operation and can be switched on again.

Automatic Shut-off

When no button on the tool is pressed for approx. 120 minutes, the tool automatically switches off to save the batteries.

To switch on the tool after automatic shut-off, either slide the On/Off switch **7** to the "**off**" position and then switch the tool on again or press the operating mode button **6** once or press the receiver mode button **4** once.

Deactivating the Automatic Shut-off

To deactivate the automatic shut-off, keep the operating mode button **6** pressed for at least 3 s (while the tool is switched on). Deactivation of the automatic shut-off is confirmed by brief flashing of the laser beams.

Activating the Automatic Shut-off

To activate the automatic shut-off, switch the tool off and then on again.

Deactivating the Signal Tone

After the tool has been switched on, the audio signal is always activated.

To deactivate/activate the audio signal, press and hold the operating mode button **6** and the receiver mode button **4** at the same time for at least 3 s.

The audio signal activation and deactivation are both confirmed by three short beeps.

Operating Modes

The tool has several operating modes between which you can switch at any time:

- Generating a horizontal laser plane,
- Generating a vertical laser plane,
- Generating two vertical laser planes,
- Generating a horizontal laser plane as well as two vertical laser planes.

After switching on, the tool generates a horizontal laser plane. To change the operating mode, press the operating mode button **6**.

All operating modes can be selected with or without automatic leveling.

Receiver mode

Receiver mode must be activated to work with the laser receiver **16** – regardless of which operating mode is selected. In receiver mode the laser lines flash at a very high frequency, enabling them to be detected by the laser receiver **16**.


To switch on receiver mode, press button **4**. Indicator **5** will light up green.

When receiver mode is switched on, the laser lines are less visible to the human eye. For this reason, switch receiver mode off by pressing button **4** again to work without a laser receiver. Indicator **5** will extinguish.

Automatic Leveling

Working with Automatic Leveling

Position the tool on a level and firm support, attach it to the BM 1 positioning device **15** or to the tripod **22**.

When working with automatic leveling, push the On/Off switch **7** to the “ on” position.

After switching on, the leveling function automatically compensates irregularities within the self-leveling range of $\pm 4^\circ$. The leveling is finished as soon as the laser beams do not move any more.


If automatic leveling is not possible, e.g. because the surface on which the tool stands deviates by more than 4° from the horizontal plane, the laser lines begin to flash rapidly.

When the audio signal is activated, a fast-beat signal sounds for 30 s (maximum). This alarm is deactivated within 10 s after switching on, in order to allow adjustment of the tool.

Set up the tool in level position and wait for the self-leveling to take place. As soon as the tool is within the self-leveling range of $\pm 4^\circ$, all laser beams light up continuously and the audio signal is switched off.

In case of ground vibrations or position changes during operation, the tool is automatically leveled in again. To avoid errors, check the position of the horizontal and vertical laser line with regard to the reference points upon releveling.

Working without Automatic Leveling

For working without automatic leveling, slide the On/Off switch **7** to the “ on” position.

When automatic leveling is switched off, indicator **6** lights up red and for the first 30 s laser beams flash slowly.

When the automatic leveling is switched off, the tool can be held by hand or placed on an inclined surface. In cross-line operation, the two laser lines do not necessarily run at a right angle to each other.

Working Advice

- **Always use the center of the laser line for marking.** The width of the laser line changes with the distance.

Leveling Accuracy

Influences on Accuracy

The ambient temperature has the greatest influence. Especially temperature differences occurring from the ground upward can divert the laser beam.

Because the largest difference in temperature layers is close to the ground, the tool should always be mounted on a tripod when distances exceeding 65 ft. If possible, also set up the tool in the center of the work area.

Apart from exterior influences, device-specific influences (such as heavy impact or falling down) can lead to deviations. Therefore, check the accuracy of the tool each time before starting your work.


Firstly, check the leveling accuracy of the horizontal laser line and then the leveling accuracy of the vertical laser line.

Should the tool exceed the maximum deviation during one of the tests, please have it repaired by a Bosch after-sales service.


Checking the Horizontal Leveling Accuracy.

A free measuring distance of 16 ft on a firm surface in front of two walls A and B is required for the check.


- Mount the tool onto a tripod, or place it on a firm and level surface close to the wall A. Switch the tool on. Select cross-line operation with automatic leveling. Select the operating mode in which a horizontal and vertical laser plane is generated in front of the tool.

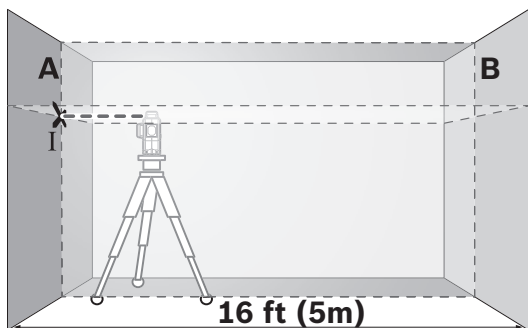


- Direct the laser against the close wall A and allow the tool to level in. Mark the center of the point where the laser lines cross each other on the wall (point I).

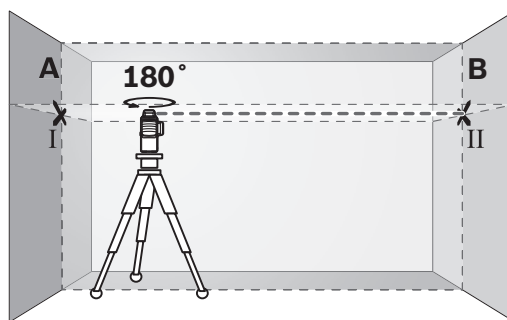

- Turn the tool by 180°, allow it to level in and mark the cross point of the laser lines on the opposite wall B (point II).
- Without turning the tool, position it close to wall B. Switch the tool on and allow it to level in.

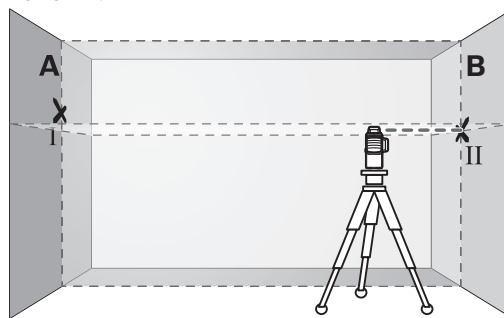

- Align the height of the tool (using a tripod or by underlaying, if required) in such a manner that the cross point of the laser lines is projected against the previously marked point II on the wall B.

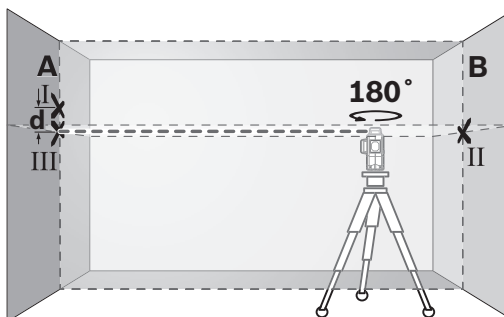

- Without changing the height, turn around the tool by 180°. Direct it against the wall A in such a manner that the vertical laser line runs through the already marked point I.
- Allow the tool to level in and mark the cross point of the laser lines on the wall A (point III).

- The difference **d** of both marked points I and III on wall A results in the actual height deviation of the tool alongside the lateral axis.

On the measuring distance of $2 \times 16 \text{ ft} = 32 \text{ ft}$, the maximum allowable deviation is:


$$32 \text{ ft} \times \pm 0.0024 \text{ in/ft} = \pm 5/64 \text{ (0.078 in)}$$

Thus, the difference **d** between points I and III must not exceed 5/64 in (max.).


Checking the Leveling Accuracy of the Vertical Line

For this check, a door opening is required with at least 8 ft of space (on a firm surface) to each side of the door.

- Position the tool on a firm, level surface (not on a tripod) 8ft away from the door opening. Allow the tool to level in while in vertical operation with automatic leveling, and direct the laser beam at the door opening.

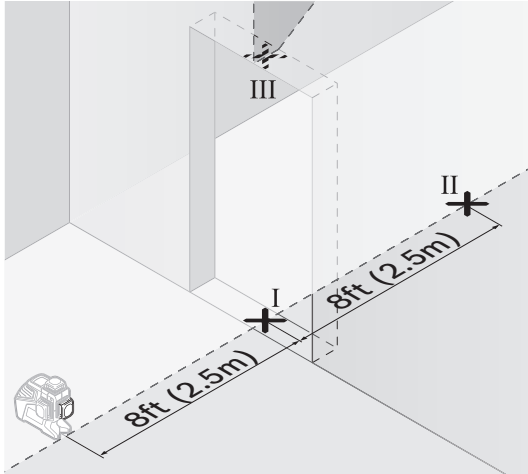

- Mark the center of the vertical laser line at the floor of the door opening (point I), at a distance of 8 ft beyond the other side of the door opening (point II) and at the upper edge of the door opening (point III).

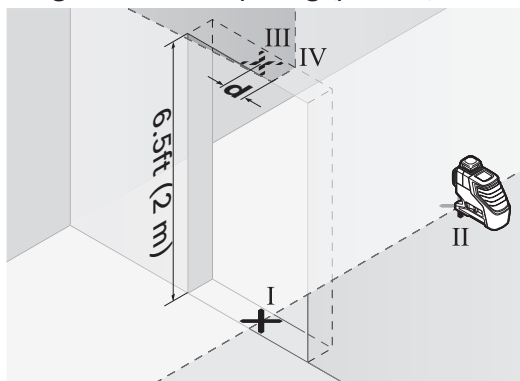

- Rotate the tool by 180° and position it on the other side of the door opening directly behind point II. Allow the tool to level in and align the vertical laser line in such a manner that its center runs exactly through points I and II.

- Mark the center of the laser line at the upper edge of the door opening as point IV.

- The difference **d** of both marked points III and IV results in the actual deviation of the tool to the plumb line.

- Measure the height of the door opening. The maximum admissible deviation is calculated as follows:

Repeat the measuring procedure for the second vertical laser plane. For this, select an operating mode in which a vertical laser plane is generated aside of the tool. Turn the tool 90° before beginning with the measuring procedure.

Doubled height of the door opening $\times 0.0024 \text{ in/ft}$

Example: For a door-opening height of 6.5 ft, the maximum deviation may be

$2 \times 6.5 \text{ ft} \times \pm 0.0024 \text{ in/ft} = \pm 1/32 \text{ (0.312 in)}$ Consequently, points III and IV may be no more than 1/32 in (max.) apart from each other.

Use with Attachments

Working with the laser target plate

The laser target plate **18** increases the visibility of the laser beam under unfavorable conditions and at large distances.

The reflective part of the laser target plate **18** improves the visibility of the laser line. Thanks to the transparent part, the laser line is also visible from the back side of the laser target plate.

Working with the Tripod (Optional Accessory)

A tripod offers a stable, height-adjustable measuring support. Position the tool with the 1/4-20 tripod mount **8** onto the thread of the tripod **22** or a commercially available camera tripod. For fastening to a commercially available construction tripod, use the 5/8-11 tripod mount **9**. Tighten the tool with the tripod mounting stud.

Fastening with the BM 1 Positioning Device (Accessory) (see figure D)

With the BM 1 positioning device **15**, you can fasten the tool, e.g., to vertical surfaces, pipes or magnetic materials. The BM 1 positioning device is also suitable for use as a ground tripod and makes the height adjustment of the tool easier. The clip attachment is suitable for drop ceiling applications.

Working with the Laser Receiver (Accessory) (see figure D)

Use the laser receiver **16** to improve detection of the laser lines in adverse lighting conditions (bright environment, direct sunlight) and over greater distances. Switch on receiver mode when working with the laser receiver (see “Receiver mode”, page 11).

Laser Viewing Glasses (Optional Accessory)

The laser viewing glasses filter out the ambient light. This makes the red light of the laser appear brighter for the eyes.

- **Do not use the laser viewing glasses as safety goggles.** The laser viewing glasses are used for improved visualization of the laser beam, but they do not protect against laser radiation.
- **Do not use the laser viewing glasses as sun glasses or in traffic.** The laser viewing glasses do not afford complete UV protection and reduce color perception.

Work Examples (see figures A–F)

Applicational examples for the tool can be found on the graphics pages.

Maintenance and Service

Store and transport the tool only in the supplied protective case.

Keep the tool clean at all times.

Do not immerse the tool into water or other fluids.

Wipe off debris using a moist and soft cloth. Do not use any cleaning agents or solvents.

Regularly clean the surfaces at the exit opening of the laser in particular, and pay attention to any fluff of fibers.

If the tool should fail despite the care taken in manufacturing and testing procedures, repair should be carried out by an authorized after-sales service center for Bosch power tools.

In all correspondence and spare parts orders, please always include the 10-digit article number given on the type plate of the tool.

In case of repairs, send in the tool packed in its protective pouch **21**.

ENVIRONMENT PROTECTION

Recycle raw materials & batteries instead of disposing of waste. The unit, accessories, packaging & used batteries should be sorted for environmentally friendly recycling in accordance with the latest regulations.



LIMITED WARRANTY OF BOSCH LASER AND MEASURING TOOL PRODUCTS

Robert Bosch Tool Corporation ("Seller") warrants to the original purchaser only, that all Bosch lasers and measuring tools will be free from defects in material or workmanship for a period of one (1) year from date of purchase. Bosch will extend warranty coverage to two (2) years when you register your product within eight (8) weeks after date of purchase. Product registration card must be complete and mailed to Bosch (postmarked within eight weeks after date of purchase), or you may register on-line. If you choose not to register your product, a one (1) year limited warranty will apply to your product.

30 Day Money Back Refund or Replacement -

If you are not completely satisfied with the performance of your laser and measuring tools, for any reason, you can return it to your Bosch dealer within 30 days of the date of purchase for a full refund or replacement. To obtain this 30-Day Refund or Replacement, your return must be accompanied by the original receipt for purchase of the laser or optical instrument product. A maximum of 2 returns per customer will be permitted.

SELLER'S SOLE OBLIGATION AND YOUR EXCLUSIVE REMEDY under this Limited Warranty and, to the extent permitted by law, any warranty or condition implied by law, shall be the repair or replacement of parts, without charge, which are defective in material or workmanship and which have not been misused, carelessly handled, or misrepaired by persons other than Seller or Authorized Service Center. To make a claim under this Limited Warranty, you must return the complete Bosch laser or measuring tool, transportation prepaid, to any BOSCH Factory Service Center or Authorized Service Center. Please include a dated proof of purchase with your tool. For locations of nearby service centers, please use our on-line service locator.

THIS WARRANTY PROGRAM DOES NOT APPLY TO TRIPODS AND RODS. Robert Bosch Tool Corporation ("Seller") warrants tripods and leveling rods for a period of one (1) year from date of purchase.

THIS LIMITED WARRANTY DOES NOT APPLY TO OTHER ACCESSORY ITEMS AND RELATED ITEMS. THESE ITEMS RECEIVE A 90 DAY LIMITED WARRANTY.

To make a claim under this Limited Warranty, you must return the complete product, transportation prepaid. For details to make a claim under this Limited Warranty.

ANY IMPLIED WARRANTIES SHALL BE LIMITED IN DURATION TO ONE YEAR FROM DATE OF PURCHASE. SOME STATES IN THE U.S., AND SOME CANADIAN PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO LIABILITY FOR LOSS OF PROFITS) ARISING FROM THE SALE OR USE OF THIS PRODUCT. SOME STATES IN THE U.S., AND SOME CANADIAN PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE IN THE U.S., OR PROVINCE TO PROVINCE IN CANADA AND FROM COUNTRY TO COUNTRY.

THIS LIMITED WARRANTY APPLIES ONLY TO PRODUCTS SOLD WITHIN THE UNITED STATES OF AMERICA, CANADA AND THE COMMONWEALTH OF PUERTO RICO. FOR WARRANTY COVERAGE WITHIN OTHER COUNTRIES, CONTACT YOUR LOCAL BOSCH DEALER OR IMPORTER.