

## HOBO® RH Sensor Replacement Kit (HUM-UPS-500)


---

For use with UX100-003 logger model


The internal RH sensor in the HOBO Temp/RH 3.5% data logger (UX100-003) may require replacement if it is damaged mechanically or by exposure to condensation or chemicals.

To replace the sensor:

1. Use a screwdriver to pop out the louvered door in the logger case.

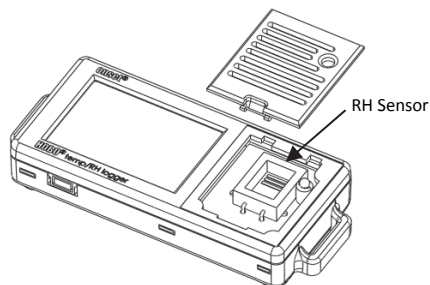

2. Use needle-nose pliers to remove the RH sensor from the board inside the logger case and discard it.
3. Insert the new sensor so that the pins are in the two holes on the board (shown here enlarged and without the logger case for illustrative purposes).

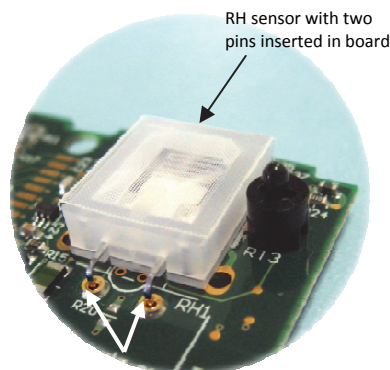

4. Snap the louvered door back into place in the logger.
5. Check logger status in HOBOWare® to verify the RH reading.