



DIGITAL INSULATION/CONTINUITY TESTERS KEW 3021A/3022A/3023A



KEW 3021A/3022A/3023A Specifications


		3021A				3022A				3023A			
sulation resistance													
Test voltage	125V	250V	500V	1000V	50V	100V	250V	500V	100V	250V	500V	1000V	
Measuring range (Auto range)	4.000/40.00/ 200.0MΩ 4.000/40.00/400.0/2000MΩ			4.000/40.00/ 200.0MΩ		4.000/40.00/ 400.0/2000MΩ		4.000/40.00/ 200.0MΩ					
First Effective Measuring range	0.2 - 20ΜΩ	0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 1000ΜΩ	0.2 - 2	20ΜΩ	0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 20ΜΩ	0.2 - 40ΜΩ	0.2 - 200ΜΩ	0.2 - 1000M	
Mid-scale value	5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ		5ΜΩ		50ΜΩ		
Accuracy	±2%rdg±6dgt			±2%rdg±6dgt			±2%rdg±6dgt						
Second effective measuring range	0.110 - 0.199ΜΩ												
	20.01 - 200.0MΩ	40.01 - 2000ΜΩ	200.1 - 2000ΜΩ	1001 - 2000ΜΩ	20.01 - 2	200.0ΜΩ	40.1 - 2000ΜΩ	200.1 - 2000ΜΩ	20.01 - 200.0MΩ	40.01 - 2000ΜΩ	200.1 - 2000ΜΩ	1001 - 2000ΜΩ	
Accuracy	±5%rdg±6dgt												
Rated current	DC1.0 - 1.2mA												
Short circuit current	DC1.5mA MAX												
1/Continuity													
Auto range	40.00/400.0 Ω												
Accuracy	±2%rdg±8dgt												
Output Voltage on	5V±20%												
open circuit													
Short circuit current	DC220±20mA												
Fuse	Quick acting ceramic fuse 0.5A/600V (ϕ 6.35 $ imes$ 32mm)												
oltage measurement													
Range	AC 20-600V(50/60Hz) DC ±20-600V												
Accuracy	±3%rdg±6dgt												
ther function				 Zero Ω ADJ. 		charge	 Bar graph 	, ,	Memor	,	 Comparator 		
	Live circuit warning		Auto power off		Battery a	larm	 Backlight 		Safety lock		Remote measurement		
eneral	1												
Safety standard	IEC 61010-1 CATⅢ 600V IEC61557-1,2,4 IEC61326-1、IEC 60529 (IP40)												
Dimensions / Weight	(
Power source		R6/LR6(AA)(1.5V) × 6											
Accessories		7150A (Test lead with remote control switch set), 8923 (Fuse 0.5A/600V), 9121 (Shoulder strap), R6 (AA) × 6, Instruction Manual											
Optional		7115 (Extension Probe), 8016 (Hook type prod), 9089 (Carrying case)											

Comparator Function

Select and set the standard resistance value in each measuring range, and compare it with readings.

Notice the result of comparison by the FAIL or PASS sign on the display, and by buzzer sound in same time.

Buzzer can be set either for FAIL or PASS at your choice.

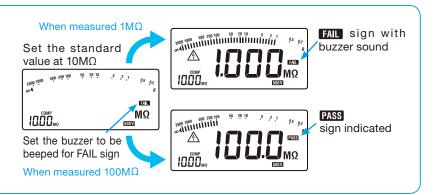

Optional

Accessories 7150A[Test lead with remote control swich set]





Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquires or orders:

