

LR5011

Instruction Manual

TEMPERATURE LOGGER



EN

Aug. 2018 Revised edition 3 LR5011B980-03 18-08H





www.calcert.com

Contents

Verifyi Safety Operat	ng Package Contents
Chap Overv	ter 1 view11
1.1	Product Overview and Features11
1.2	Part Names/Functions and Display Indicators12
1.3	Display Organization14
Chap	
	surement Preparations17
2.1	Installing (or Replacing) the Battery17
2.2 2.3	Connecting a Temperature Sensor20 Installing the PC Application Program21
2.3	instailing the PC Application Program21
Chap	
Settii	ngs27
3.1	Settings List27
3.2	Making Settings on the Logger28
3.3	Making Settings from the LR5000 Utility Program 32
Chap	
Meas	surement and Analysis39
4.1	Pre-Measurement Inspection39
4.2	Installing the Logger40
4.3	Starting and Stopping Recording42
4.4	Confirming Currently Measured Values and Data
4.5	Recording44 Automatically Importing (Saving) Recorded Data
7.5	to a Computer and Granh Display 44

LR5011B980-03

388.610.7664

4.6	Manually Importing (Saving) Recorded Data to a Computer, and Graph Display54
4.7	Displaying a Graph of Saved Recording Data 57
4.8	Printing Recorded Data59
Chap	ter 5
Proce	essing Recorded Data61
5.1	Scaling 63
5.2	Calculating Electric Power64
5.3	Calculating Energy Cost65
5.4	Calculating Operating Rate66
5.5	Integration 67
5.6	Calculating Dew-Point Temperature 68
5.7	Two-Data-Item Arithmetic Calculations 69
5.8	Converting Over-Threshold Data Values70
Chap	ter 6
	nizing Data71
6.1	Copying and Moving Data72
6.2	Deleting Data73
6.3	Combining Data74
6.4	Extracting Data75
Chap	ter 7
Optio	ns Settings (LR5000 Utility Program) 77
7.1	Changing the Saving Method for Imported Data . 78
7.2	Changing the Connection Monitoring Method, and Logger Settings Displays79
Chap	ter 8
	ifications 81
8.1	Measurement Specifications81
8.2	Functional Specifications82
8.3	Miscellaneous83
2/	I P5001 Communication Adapter Specifications 84

8.5	Temperature Sensors Specifications	87
Chap	ter 9	
Main ¹	tenance and Service	91
9.1	Cleaning	91
9.2	Disposing of the Logger	91
9.3	Troubleshooting	92
9.4	Error Displays	95
Appe	ndix	A1
Apper	ndix 1 About Recording Modes	A1
	ndix 2 Recording Intervals and Maximum	
	Recording Times	
Apper	ndix 3 Battery Life Approximation	A2
Index	C	_ Index 1


Introduction

Thank you for purchasing the HIOKI "Model LR5011 Temperature Logger." To obtain maximum performance from the instrument, please read this manual first, and keep it handy for future reference.

Registered Trade Marks

Windows is a registered trademark of Microsoft Corporation in the United States and/ or other countries.

Notation

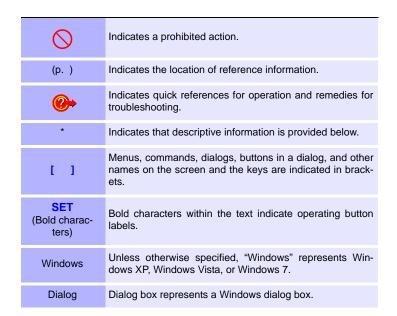

The screen of this instrument displays characters in the following manner.






Mouse Operation

Click	Press and quickly release the left button of the mouse.
Right-click	Press and quickly release the right button of the mouse.
Double click	Quickly click the left button of the mouse twice.
Drag	While holding down the left button of the mouse, move the mouse and then release the left button to deposit the chosen item in the desired position.
Activate	Click on a window on the screen to activate that window.

Verifying Package Contents


When you receive the instrument, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories, panel switches, and connectors. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

Quantities in parentheses ().

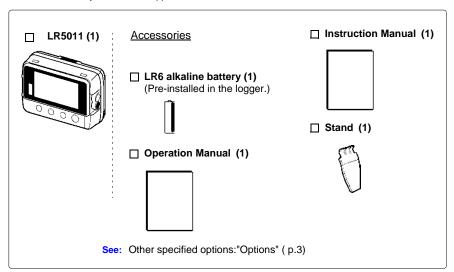

Options

The following logger options are available separately. Even if purchased previously, you may want to confirm that you have them at hand.

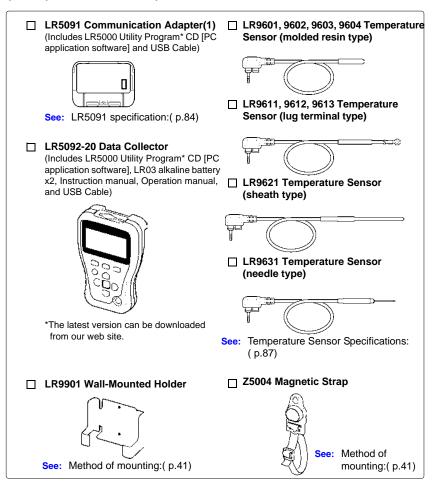

Transporting Precautions

Use the original packing materials when transporting the instrument, if possible. Pack the instrument so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.

Safety Information

This manual contains information and warnings essential for safe operation of the instrument and for maintaining it in safe operating condition. Before using it, be sure to carefully read the following safety precautions.



This instrument is designed to comply with IEC 61010 Safety Standards, and has been the dards, and has been thoroughly tested for safety prior to shipment. However, mishandling during use could result i n injury or death, as well a s damage to the instrument. However, using the instrument in a way not described in this manual may negate the provided safety features.

> Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from instrument defects.

Safety Symbols

Markings on the logger have the following meanings.



In the manual, the A symbol indicates particularly important information that the user should read before using the instrument.



The A symbol printed on the instrument indicates that the user should refer to a corresponding topic in the manual (marked with the symbol) before using the relevant function.



Indicates DC (Direct Current).

Symbols for Various Standards

Markings on the logger have the following meanings.



WEEE marking:

This symbol indicates that the electrical and electronic appliance is put on the EU market after August 13, 2005, and producers of the Member States are required to display it on the appliance under Article 11.2 of Directive 2002/96/EC (WEEE).



This symbol indicates that the product conforms to safety regulations set out by the EC Directive.

Danger Levels

The following symbols in this manual indicate the relative importance of cautions and warnings.

⚠ DANGER

Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.

^WARNING

Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user.

Indicates that incorrect operation presents a possibility of injury to the user or damage to the instrument.

NOTE

Indicates advisory items related to performance or correct operation of the instrument.

Operating Precautions

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

Installation Precautions

Operating temperature and humidity:

Logger: -20 to70°C (-4.0 to 158.0°F), 80%RH or less (non-condensating),

Temperature Sensor: As specified for each sensor

Storage temperature and humidity:

Logger: -20 to70°C (-4.0 to 158.0°F), 80%RH or less (non-condensating)

Temperature Sensor: As specified for each sensor

Avoid the following locations that could cause an accident or damage to the instrument.



Exposed to direct sunliaht Exposed to high temperature



In the presence of corrosive or explosive gases



Exposed to liquids Exposed to humidity or condensa-



Exposed to strong electromagnetic fields

Near electromagnetic radiators



Subject to vibration



Near induction heating systems (e.g., high-frequency induction heating systems and IH cooking utensils)





- CAUTION The protection rating for the enclosure of this device (based on EN60529) is *IP54.
 - Although this instrument is designed to resist the ingress of dust and water, it is not entirely water- or dust-proof, so to avoid shock or damage, do not use it in a wet or dusty environment.
 - If used outside the specified environmental ranges for operation (or storage), the operation of the unit cannot be guaranteed.
 - Temperature sensors other than Models LR9601 to LR9604 are not designed with ingress prevention against water and dust. Do not use it in an especially dusty environment, nor where it might be splashed with liquid. This may cause damage.
 - This temperature sensor is not drip-proof. Water droplets on the grip or connector may result in malfunctions.
 - *IP54 :This indicates the degree of protection provided by the enclosure of the device against use in hazardous locations, entry of solid foreign objects, and the ingress of water.
 - 5 : Protected against access to hazardous parts with wire measuring 1.0 mm in diameter. Dust-proof type (The penetration of dust cannot be prevented completely, but quantities of dust that may hinder the stated operation of equipment or safety cannot penetrate the enclosure.)
 - 4 : The equipment inside the enclosure is protected against the harmful effects of spraying water.

Avoiding Logger Damage



To avoid damage to the instrument, protect it from physical shock when transporting and handling. Be especially careful to avoid physical shock from dropping.

CD Handling



- Always hold the disc by the edges, so as not to make fingerprints on the disc or scratch the printing. Never touch the recorded side of the disc. Do not place the disc directly on anything hard.
- Do not wet the disc with volatile alcohol or water, as there is a possibility of the label printing disappearing.
- To write on the disc label surface, use a spirit-based felt pen. Do not use a ball-point pen or hard-tipped pen, because there is a danger of scratching the surface and corrupting the data. Do not use adhesive labels.
- Do not expose the disc directly to the sun's rays, or keep it in conditions of high temperature or humidity, as there is a danger of warping, with consequent loss of data.
- To remove dirt, dust, or fingerprints from the disc, wipe with a dry cloth, or use a CD cleaner. Always wipe from the inside to the outside. and do no wipe with circular movements. Never use abrasives or solvent cleaners.
- Hioki shall not be held liable for any problems with a computer system that arises from the use of this CD, or for any problem related to the purchase of a Hioki product.

Preliminary Checks

Before using the instrument the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.



Before using the instrument, make sure that the insulation on the sensor cables is undamaged and that no bare conductors are improperly exposed. Using the instrument in such conditions could cause an electric shock, so contact your dealer or Hioki representative for replacements.


Measurement Preparation to Data Analysis

The steps from measurement preparation to data analysis are illustrated with a typical measurement example.


Example Case: Record warehouse temperature at 10-minute intervals for one month, and store the data on a computer.


Required Items:


Quantities in parentheses ().

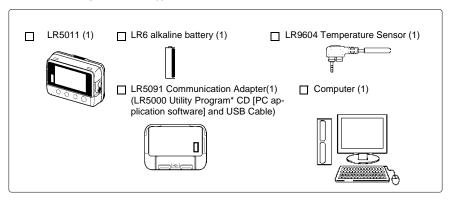

Procedure:

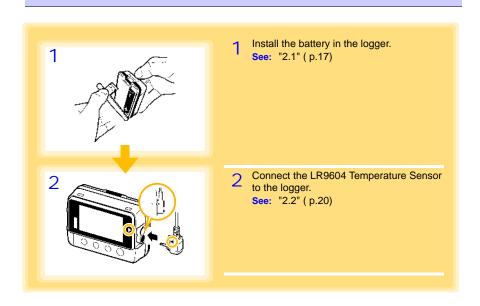

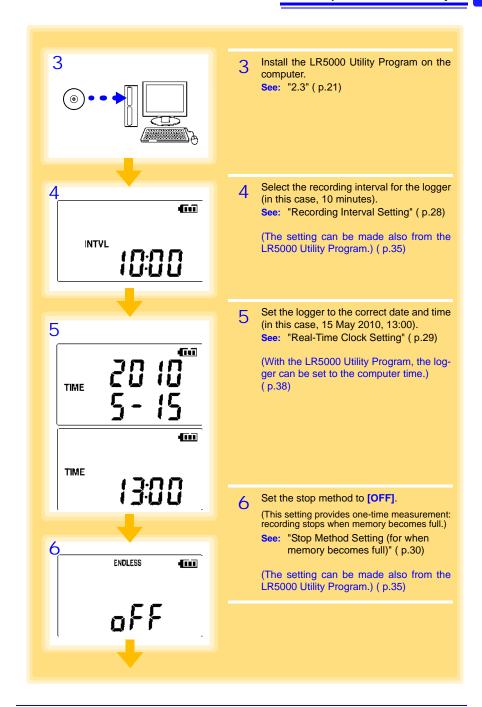

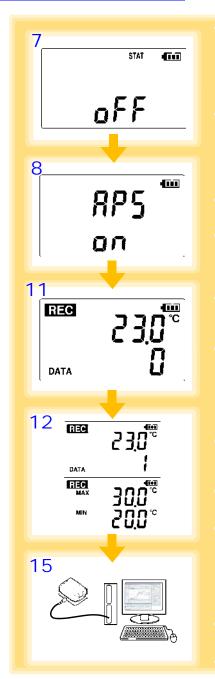

- Set the recording mode to [OFF]. (This setting provides instantaneous measurement.)
 - See: "Recording Mode Setting" (p.31) (The setting can be made also from the LR5000 Utility Program.) (p.35)
- Set the power save setting to [ON]. (The on (enabled) setting is recommended for long-term recording.)
 - See: "Power Save Setting" (p.31) (The setting can be made also from the LR5000 Utility Program.) (p.34)
- Pre-measurement inspection (p.39)
- Install the logger at the measurement site in the warehouse.

See: "4.2" (p.40) (It can be wall-mounted.)

Hold REC/STOP on the logger for two seconds to start recording.

See: "4.3" (p.42)

12 Press (+) and (-) on the logger to confirm that the recording count is incrementing, and that recording data (maximum and minimum values) are displayed.

(Confirm that recording is actually occurring.)

See: "4.4" (p.44)

- After a month, hold **REC/STOP** on the logger again for two seconds to stop recording. See: "4.3" (p.42)
- Retrieve the logger from the measure-14
- Import recorded data from the logger to a connected computer. For analysis, display the data in a graph.

See: "4.5" (p.44)

(The data is automatically saved when imported to the computer. By default, it is also automatically displayed in a graph.)

Print recorded data as needed.

See: "4.8" (p.59)

Overview

Chapter 1

Product Overview and Features

This instrument is a compact portable data logger for measuring, displaying, and recording temperature.

 
- Data can be imported while recording.
- Records up to 60,000 measurements

Splash-proof ingress protection (IP54)



Large display shows measured temperature value and recorded data count

Measures temperature on one channels.



Browse and manage data with LR5000 Utility Program on a PC.

The LR5000 Utility Program PC application is very easy to install.

After installation, data management and browsing is easy with auto-start, data display and saving.




- · Data is preserved independently of battery state
- Recording continues (for approx. 30 s) during battery replacement

Advanced functions included

- Record statistical values (p.30), (p.35)
- Scaling (p.36), (p.63)
- Alarm display (p.37)

For home, office, factory, and warehouse environment measurements


Suitable for ESCO, HACCP, and ISO environmental measurements.

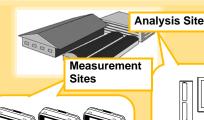







Part Names/Functions and Display Indicators

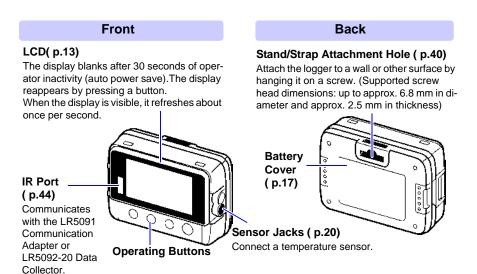

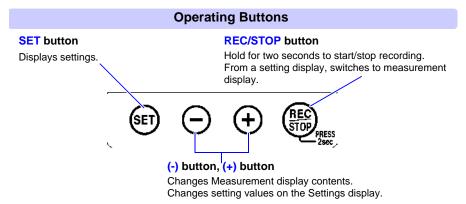


LR5091 Communication Adapter

 

Display Indicators

The display indicators provide the following information.

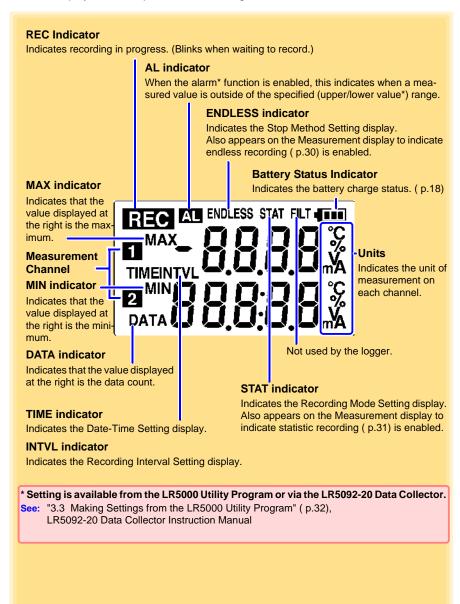


Display Organization

The logger has two general display types: Measurement and Settings.

Measuring display

The (+) and (-) buttons switch the display type.

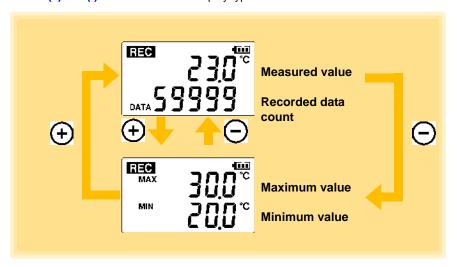


NOTE

- For instantaneous recording, the maximum and minimum values are obtained from all the data measured at each recording interval.
- For statistical recording, the maximum and minimum values are obtained from all the data measured every second.
- The maximum and minimum values are not displayed when the recorded data count is 0.

Setting Display

Select the display with the **SET** button. Press (+) and (-) to change a setting. Press the REC/STOP button to switch to the Measurement display from any other.

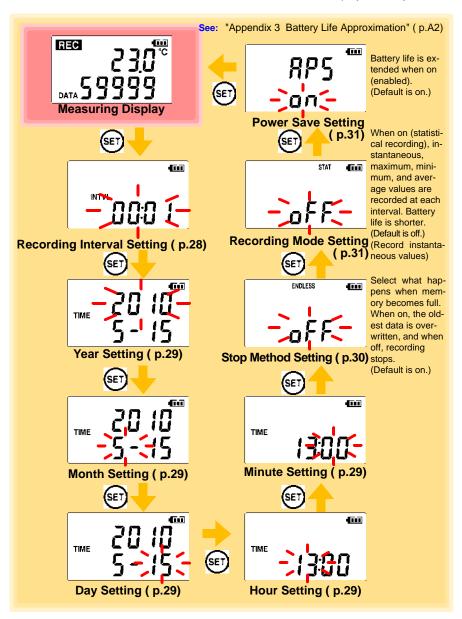

1.3 Display Organization

NOTE

- When no operation occurs for 30 seconds with the Settings display, automatically switches to Measurement display.
- When the T battery indicator appears, settings cannot be changed (although they can still be displayed).
- Settings cannot be changed while recording. However, settings can still be displayed by pressing the SET button from the Measurement display.

Measurement **Preparations**

Chapter 2

Installing (or Replacing) the Battery






- After replacing the battery, replace the cover before using the logger.
- Be sure to insert them with the correct polarity. Otherwise, poor performance or damage from battery leakage could result. Replace batteries only with the specified type.
- Battery may explode if mistreated. Do not short-circuit, recharge, disassemble or dispose of in fire.
- Handle and dispose of batteries in accordance with local regulations.

NOTE

- Data and settings stored in the logger are retained even when the battery is depleted, and during battery replacement.
- Once the **T** battery indicator appears, operation can still continue for about 30 seconds when the battery is removed during recording.
- Testing monitor batteries installed in the unit may possibly be weak. Replace batteries before extended measurement usage.
- Use only LR03 Alkaline batteries. Using manganese batteries may not result in accurate measurements or proper communication with the LR5091 Communication Adapter and LR5092-20 Data Collector.
- · After installing the batteries, the following displays appear, and the date and time need to be set. (p.29)

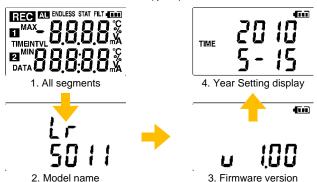

 When the battery indicator appears, settings cannot be changed (although they can still be displayed).

2.1 Installing (or Replacing) the Battery



• When battery voltage is too low to operate the logger, the following appears. Replace the battery to restore normal operation.



6866

Battery Status Indicator

This indicator is displayed at the top right corner.

4111	$\label{prop:control} \textbf{Battery charge remains. Fewer blocks within the indicator signify weaker battery charge.}$
	Replace the discharged battery as soon as possible.(Even when the battery is removed during recording, operation can continue for about 30 seconds.)
-	In this state, recording and communication with the LR5091 Communication Adapterr and LR5092-20 Data Collector are not possible.

Using a NiMH Battery

The battery status indicator does not accurately show the remaining battery capacity when using a NiMH battery. Moreover, the battery life will vary greatly with the capacity, charging conditions and repeated uses. Please take note of these points when using it.

The device's battery status display and battery life are based on the usage of a brandnew alkaline battery.


When the logger will not be used for long time



CAUTION To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

Battery Replacement

Required Items: LR6 alkaline battery (1)

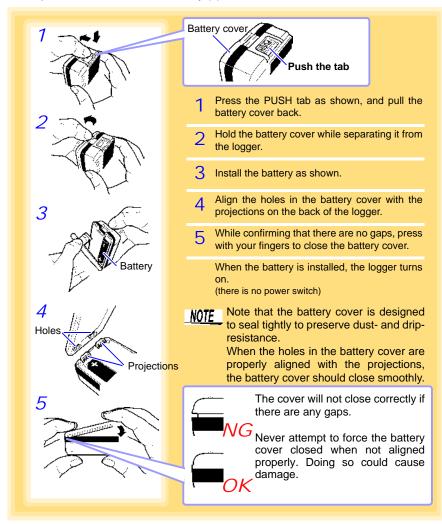

Connecting a Temperature Sensor




Connect a temperature sensor to the logger's sensor jacks.



- A temperature sensor is precision machined. Applying an excessively high voltage pulse or static electricity may damage the sensor.
 - · Avoid subjecting the temperature probe tip to physical shock, and avoid sharp bends in the leads. These may damage the probe or break a wire.
 - Take care that the temperature sensor does not exceed the specified temperature range.
 - To avoid breaking the sensor, do not bend or pull it.
 - Avoid stepping on or pinching cables, which could damage the cable insulation.
 - To avoid damage to the logger, do not apply voltage to sensor jacks.

Connection Method

Required Items: Hioki LR9601 to LR9631 Temperature Sensor

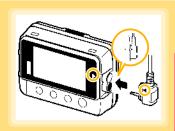

Align the triangle on the plug with the one in front of the sensor jacks, and insert the plug securely.

Values are not displayed correctly if the sensor plug is inserted incorrectly or not inserted far enough.



If values are not displayed correctly even when the plug is inserted properly, the logger or sensor may be damaged. Repair may be necessary.

See: "Requesting repairs" (p.91)

Compatible Sensors

LR9601 to LR9604 Temperature Sensor (molded resin type)

LR9611 to LR9613 Temperature Sensor (plug terminal type) Approx. length 1 m/5 m/10 m

Approx. length 1 m/5 m/10 m/45 mm

LR9621 Temperature Sensor (sheath type)

Approx. length 1 m

LR9631 Temperature Sensor (needle type)

Approx. length 1 m

Installing the PC Application Program 2.3

To save, browse, or print data, or to make logger settings from a computer, first install the "LR5000 Utility Program".

LR5000 Utility Program Operating Requirements

CPU	1 GHz or faster processor clock
RAM	At least 512 MB
os	Windows XP SP2 or later Windows Vista SP1 or later Windows 7
Library	.NET Framework 2.0/3.5
Interface	USB
Monitor Resolution	1024×768 or higher
Hard Disk	At least 30 MB free space (Additional space is required for storing recorded data. Another 500 MB may be required if .NET Framework 2.0 or 3.5 is not yet installed.)


Installation Procedure

Log in with an Administrator account.

Before installing, close any applications running on the computer.

Required Items: Supplied CD

(for Windows XP) LR5091 Communication Adapter, USB cable

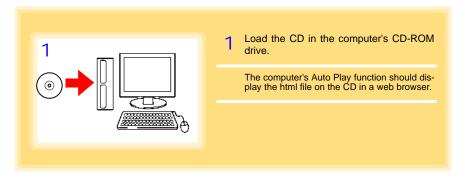


2.3 Installing the PC Application Program



Installation of the LR5000 Utility Program and device driver begins.

- 3 When the security warning window appears, click [Run].
- After installation, start the program by selecting [Programs]-[Hioki]-[LR5000 Utility Software]-[LR5000 Utility] from the Windows [Start] menu.

The main screen (p.24) appears.

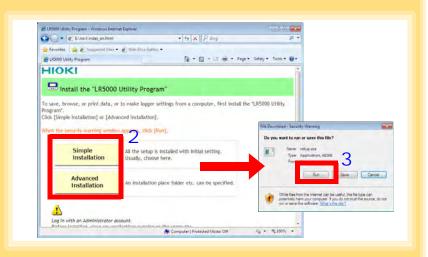



How to start the program?

The program starts automatically from the next Windows logon. (The icon appears in the task tray (notification area) (p.32).) Click the icon and click [Show Main Screen].



If the installation screen does not appear?

- Execute X:\English\Setup.exe, where X is the CD-ROM drive letter. After starting setup.exe, follow the on-screen instructions to complete installation. (If .NET FrameWork 2.0 or 3.5 is not already installed, it is installed first.)
- You may be prompted to reboot during installation. If installation does not resume after rebooting, execute setup.exe again.

NOTE

For setting and importing recorded data from loggers other than the LR5000 series, use the Communication Utility program supplied with the model 3911 or 3912 Communication Base. You can browse the recorded data by using LR5000 Utility Program also.




Settings and recorded data are not deleted when uninstalling or upgrading the program.

Uninstall Procedure

Follow this procedure to uninstall the LR5000 Utility Program.

- 1. Click [Start]-[Control Panel]. (The [Control Panel] dialog box appears.)
- 2. Click [Programs and Features]. (The [Programs and Features] screen appears.)
- 3. Select the [LR5000 Utility Program], and click the [Uninstall/ Change] button. (The [File Delete Confirmation] dialog box appears.)
- 4. Click [Yes]. (The program is uninstalled.)

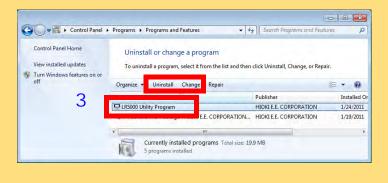



Version Upgrading


Download the latest version of the LR5000 Utility Program from our website (http:// www.hioki.com).

Follow the procedure on the download page to install the latest version. (The old version is uninstalled automatically.)

LR5000 Utility Program Screens

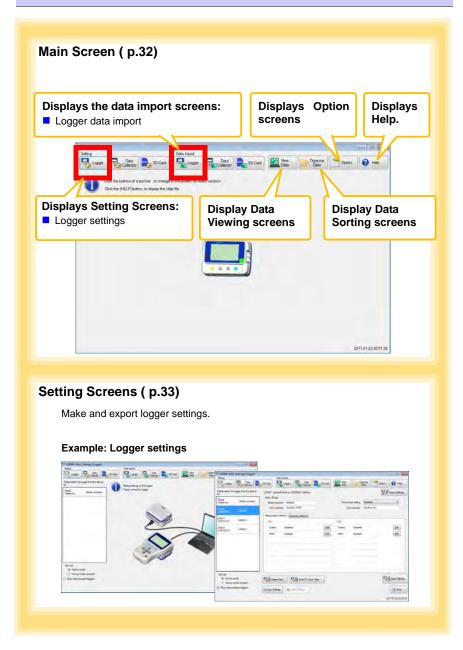

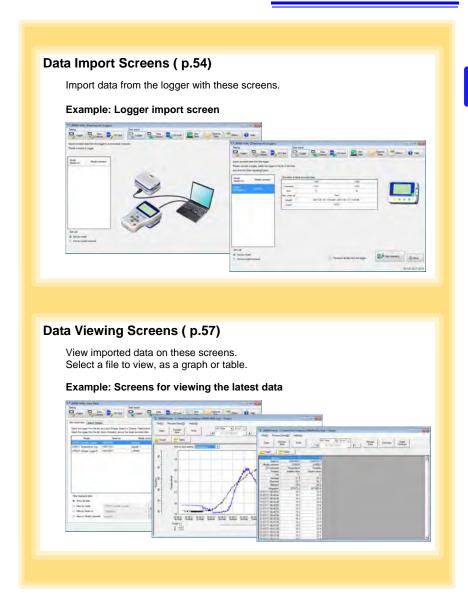

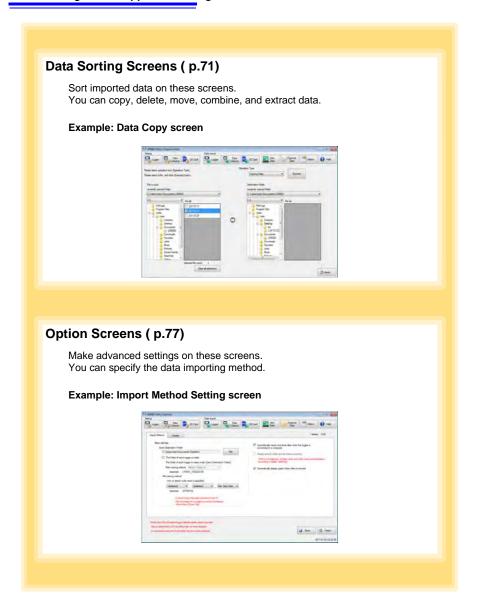

Settings

Chapter 3

Configure measurement settings before starting to record. Logger settings can also be made from a PC running the LR5000 Utility Program. (p.32)

3.1 **Settings List**

Following is a list of all settings.

Although all settings are available from the LR5000 Utility Program, some settings are limited when made from the logger.

	lade from the logger.				
Setting Item	Setting Options	Logger	Refer To	LR5000 Utility Program	Refer To
Recording Interval	Sets the recording interval.	Yes	(p.28)	Yes	(p.35)
Current Date and Time	Set the current year, month, day, hour, and minute. (The LR5000 Utility Program can set the logger's clock to match the computer's.)	Yes	(p.29)	Yes	(p.29)
Stop Method	Select the processing method when memory becomes full.	Yes	(p.30)	Yes	Included in the record- ing stop method
Recording Mode	Selects instantaneous or statistical value recording (measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved at each recording interval).	Yes	(p.31)	Yes	(p.35)
Power Save	Battery life is extended when on (enabled).	Yes	(p.31)	Yes	(p.34)
Model Comment	Enter a comment for the specified logger.	No	-	Yes	(p.34)
Channel Comment	Enter a comment for the specified measurement channel.	No	-	Yes	(p.34)
Recording Start Method	Select the recording start method. (The start time can be specified.)	No	-	Yes	(p.35)
Recording Stop Method	Select the recording stop method. (The stop time can be specified.)	No	-	Yes	(p.35)
Scaling	Use to scale measured values to display as adjusted values.	No	-	Yes	(p.36)
Alarm Thresholds	Set upper and lower threshold values to display the alarm indicator [AL] on the logger.	No	-	Yes	(p.37)

Making Settings on the Logger

To return to the Measurement display from any Settings display, press the REC/ STOP button.



- When the Last battery indicator appears, settings cannot be changed (although they can still be displayed).
- When no operation occurs for 30 seconds with Settings displayed, automatically switches to Measurement display.
- Settings cannot be changed while recording. However, settings can still be displayed by pressing the SET button from the Measurement display.

Recording Interval Setting



- Press the **SET** button to display the interval setting. (The [INTVL] indicator appears, and the setting blinks.)
- Press the (+) and (-) buttons to change the recording interval.


Example of configuration: 1sec 00:01, 1 minute 01:00

Press the **SET** button to accept the setting. (The year setting is displayed.)

Recording Interval

1(Default)/2/5/10/15/20/30 sec., 1/2 /5/10/15/20/30/60 min

Real-Time Clock Setting

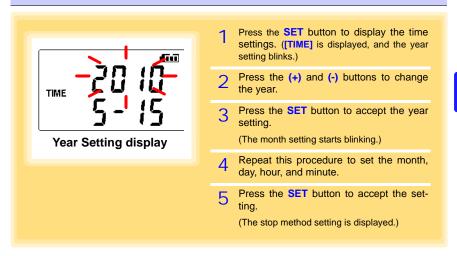


Setting Range 01/01/2010, 00:00 to 12/31/2039, 23:59

Note: Seconds are not settable. However, seconds are set to zero at the instant the display is switched away from the minute setting.



After the battery has been removed for a long time, or if the clock is incorrect, reset it.

Stop Method Setting (for when memory becomes full)

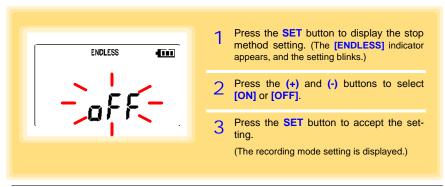

Setting Options	Descriptions
OFF	Recording stops when memory becomes full (One-Time Recording).
ON(Default)	The oldest data is overwritten when memory is full (Endless Recording).

NOTE

When memory becomes full during one-time recording, the recorded data count appears as follows.



(the Measurement display shows channel measurement value and recorded data count)

When memory becomes full during endless recording, the recorded data count (equal to the memory capacity) remains constant.




(instantaneous value recording display)



(statistical value recording display)

Recording Mode Setting

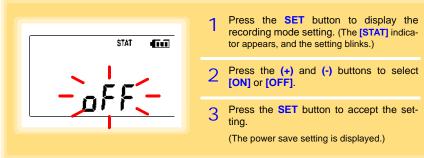


Setting Options	Descriptions
OFF (Default)	The instantaneous value is recorded at each recording interval (instantaneous recording).
ON	When on, measurements are taken once per second, and instantaneous, maximum, minimum, and average values are recorded at each recording interval. (statistical recording). (Up to 15,000 data values can be recorded.)



Statistical recording cannot be selected when the recording interval is set to one second.

Power Save Setting

The power save function turns off the display 30 seconds after the last button is pressed. The display reappears upon the next button press.

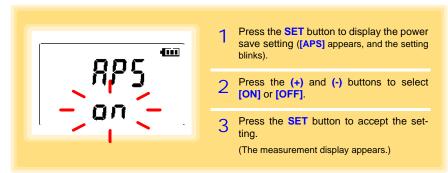

Setting Options	Descriptions
ON (Default)	Power save is enabled.
OFF	Power save is disabled (the display remains visible).

NOTE

The Auto Power Save feature consumes a small amount of current

See: "Appendix 3 Battery Life Approximation" (p.A2)


3.3 Making Settings from the LR5000 Utility **Program**

Logger settings can be made with the LR5000 Utility Program supplied with the LR5091 Communication Adapter and the LR5092-20 Data Collector. Install the Utility Program on the computer before connecting. (p.21)


Connecting the Logger, LR5091, and Computer


Connect to the computer using the supplied USB cable.

Required Items: Logger, LR5091 Communication Adapter, USB cable, Computer

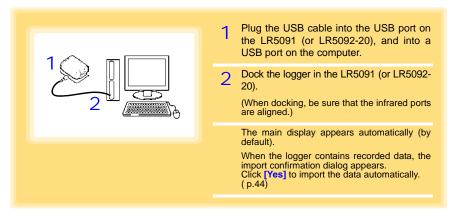

Logger Settings

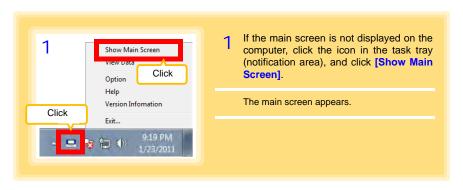

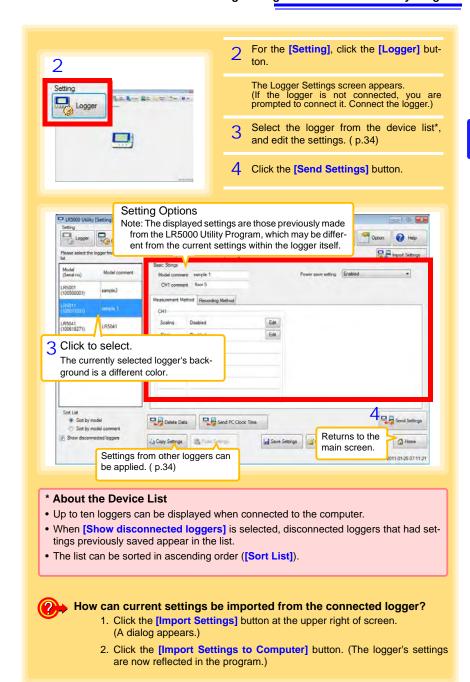


388.610.7664

3.3 Making Settings from the LR5000 Utility Program



How can the settings from one logger be copied to another?

- 1. From the device list, select a logger with settings to be copied, and click the [Copy Settings] button.
- 2. From the device list, select a logger as the destination for the settings, and click the [Paste Settings] button. (A dialog appears.)
- 3. Click the [Paste] button in the dialog box. (The settings are copied.)

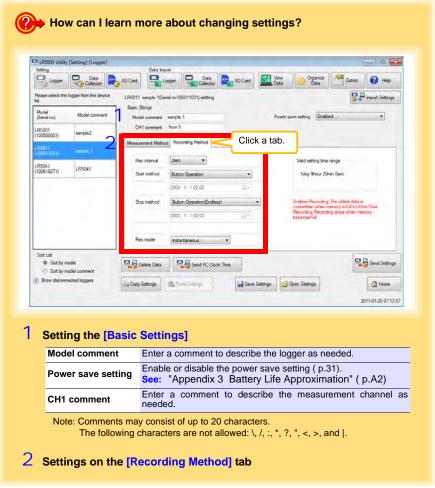

NOTE

The Auto Power Save feature consumes a small amount of current

Rec Interval

Sets the recording interval.

1/2/5/10/15/20/30 sec., 1/2 /5/10/15/20/30/60 min

Start Method

Select the recording start method.

When [Scheduled Time] is selected, specify the start date and time.

Setting Options	Descriptions	
Button Operation	Starts recording by pressing the button on the logger.	
Start After Sent	Starts recording by pressing the [Send Settings] button.	
Scheduled Time	Starts recording at the scheduled time after pressing the [Send Settings] button.	
Valid setting time range	01/01/2010, 00:00 to 12/31/2039, 23:59	



When the [Scheduled Time] start method is enabled, the [REC] indicator on the logger display blinks until the specified start time.

Stop Method

Select the recording stop method.

When [Scheduled Time (Endless)] or [Scheduled Time (One-Time)] is selected, the date and time need to be set.

Setting Options	Descriptions
Button Operation (endless)	Stops recording by pressing the button on the logger. The oldest data is overwritten when memory is full.
Button Operation (one-time)	Stops recording by pressing the button on the logger. Recording also stops when memory becomes full.
Scheduled Time (Endless)	Stops recording at the scheduled time. The oldest data is overwritten when memory is full.
Scheduled Time (One-Time)	Stops recording at the scheduled time. Recording also stops when memory becomes full.
Hold Data at Scheduled Time	Specify when setting [Scheduled Time (Endless)]. Select this check box to record the data at the scheduled time and stop recording.

Rec Mode

Select the recording mode.

Setting Options	Descriptions	
Instantaneous	The instantaneous value is recorded at each recording interval.	
Statistical	Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are recorded at each recording interval. (Up to 15,000 data values can be recorded.)	


Statistical recording results in shorter battery life.

See: "Appendix 3 Battery Life Approximation" (p.A2)




Statistical recording cannot be selected when the recording interval is set to one second.

3.3 Making Settings from the LR5000 Utility Program

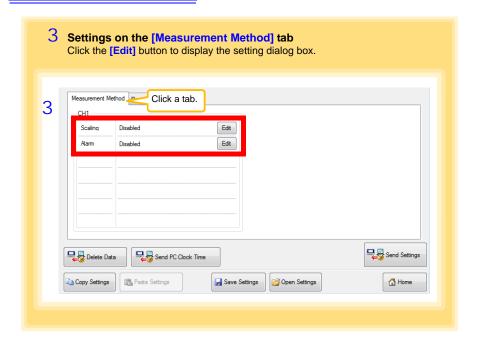

Scaling (set as needed) See: "What is Scaling?" (p.38)

The following scaling calculation is applied to measured values. Scaled Result = Raw data (measured value) x A + Bx SI prefix (multiplier) The scaled result is displayed on the logger.

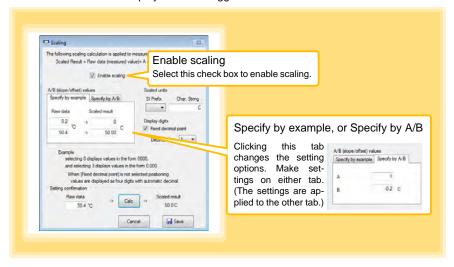

3.3 Making Settings from the LR5000 Utility Program

1. Set the following options.

Setting Options	Descriptions	
Specify by example	Enter two known conversion points (up to ten digits each).	
Specify by A/B	Enter the scaling coefficients (A and B, up to ten digits each).	
Scaled units	 Select the [SI Prefix]. ([p]=1E-12, [n]=1E-9, [μ]=1E-6, [m]=1E-3, blank =1E0, [k]=1E3, [M]=1E6, [G]=1E9, [T]=1E12) Enter the [Char. String] to identify the scaled units. (Up to five characters, except /, :, *, ?, ", <, >, and .) 	
Display digits	 Select [Fixed decimal point] and specify the [Decimal digits] to be displayed to the right of the decimal point. Valid settings are 0 to 3. (Examples: selecting 0 displays values in the form 0000, and selecting 3 displays values in the form 0.000) When [Fixed decimal point] is not selected, values are displayed as four digits (0.000 to ±9999) with automatic decimal positioning. 	

Confirm settings.


Setting	Confirm that scaling is performed properly. Enter any numerical value as raw
confirmation	data, and click the [Calc] button to display the scaled result.

Click the [Save] button.

(Scaling settings are saved, and the display returns to the Logger Settings screen.) Note: If you click the [Cancel] button without saving the settings, the display still returns to the Logger Settings screen.

Alarm Thresholds (set as needed)

Set the upper and lower alarm threshold values. When a measurement is outside of the specified area, the [AL] (alarm) indicator is displayed on the logger.

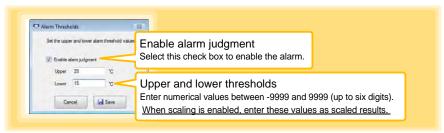

Click the [Save] button to save your settings.

(The display returns to the Logger Settings screen.)

Note: If you click the [Cancel] button without saving the settings, the display still returns to the Logger Settings screen.


Note: Alarm judgment is performed at every recording interval during instantaneous recording, and once per second during statistical recording.

Note: Alarm judgment is performed using measurement values with a larger number of digits than the values (4 digits) indicated in the LR5011 display.

Note: The [AL] indicator appears when the measured value is out of range (OF/UF displayed), and when a sensor anomaly occurs (- - - - displayed).





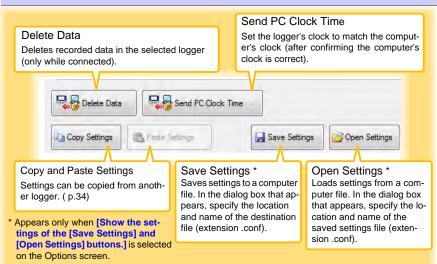


What is Scaling?

Scaling converts actual measurement values to their corresponding values in arbitrarily determined units for display. It is useful for reconciling the difference between values measured with the logger and those of a reference device.

For example, when two points of correspondence are known between values measured with the logger and those of the reference device, select [Specify by example].

 
(1) When the logger measures 0.2°C the reference device measures 0.0°C, and (2) when the logger measures 50.4°C the reference device measures 50.0°C



Alternatively, when one point of correspondence is known between the logger and reference device, select [Specify by A/B].

The logger measures 0.2°C and the reference device measures 0.0°C.

 Since only one point is known, set the slope to "1" and enter the offset only.




Measurement and **Analysis**

Chapter 4

Pre-Measurement Inspection

Inspect the following items before starting measurement.

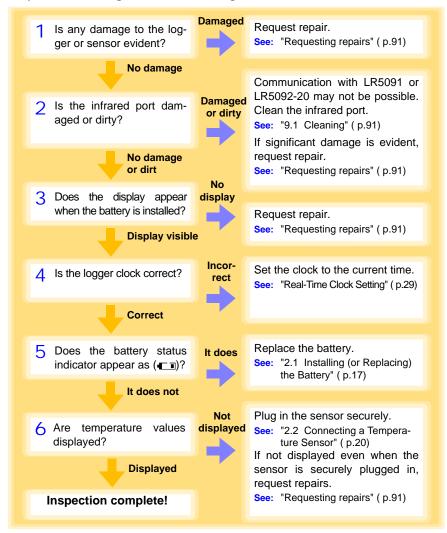

4.2 Installing the Logger

After inspection, install the logger at the measurement site. Be sure to read the" "Installation Precautions" (p.5) before installing. Install the logger as necessary according to the following procedure.



Persons wearing electronic medical devices such as a pacemaker should not use the Z5004 strap with magnet. Such persons should avoid even proximity to the Z5004, as it may be dangerous. Medical device operation could be compromised, presenting a hazard to human life.


CAUTION Do not apply heavy downward pressure with the stand extended. The stand could be damaged.

NOTE

- Avoid shocking the Z5004, such as by dropping. Shock can cause it to be chipped or cracked.
- Do not use the Z5004 where it may be subject to rain, dust, or condensation. Use in such conditions may cause corrosion or deterioration of the magnet.
- If the Z5004 is brought near a magnetic memory device such as a floppy disk, credit/debit card, or pre-paid card or ticket, the device may become unusable due to data corruption. It can also cause damage if brought near a precision electronic device such as a computer, TV, or electronic wristwatch.

Using the Stand

Required Items: Stand (Accessory)

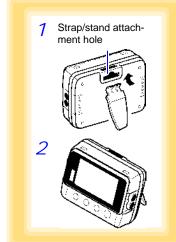


Attach the stand to the strap/stand attachment hole.

Stand up the logger.

Wall Mounting with the LR9901 Wall-Mounted Holder

Required Items: LR9901 (Option), 2 screws (supplied with the LR9901) screwdriver, etc. (as needed)

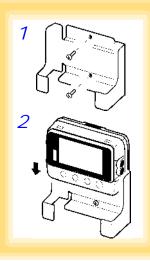


- Mount the LR9901 to the wall using the two
- Insert the logger into the LR9901.
- The logger can also be attached to a wall or other surface by hanging the strap or attachment hole on a screw. (Supported screw head dimensions: up to approx. 6.8 mm in diameter

and approx. 2.5 mm in thickness)

Wall Mounting with the Z5004 Magnetic Strap

Required Items: Z5004 (Option)

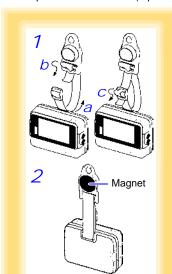


- Attach the Z5004 to the strap/stand attachment hole.
 - (feed the strap through a, b, and c)

Attach the magnet to the wall (ferrous material).

Starting and Stopping Recording

Start recording after installing the logger.

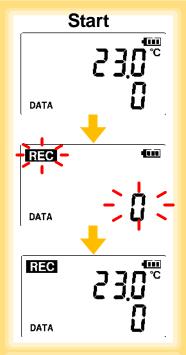

Stop

Start From the Measurement display, hold the **REC/STOP** button for two seconds.

> The [REC] indicator and the data count blink. Note: Continue pressing the button until the [REC] indicator changes from a blinking to on state.

When the blinking stops and the data count is zeroed, recording starts.

Logger memory contains the data for two recording sessions. (Be aware that old data is erased when starting recording after two recording sessions.)

After one second, the measurement display reappears.

Stop Hold the REC/STOP button for two seconds while recording (while [REC] is displayed).

[REC] blinks.

Note: Continue pressing the button until the [REC] indicator changes from a blinking to off state.

Data can be imported to a computer without stopping recording.

See: "4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display" (p.44)

[REC] disappears when recording stops.

If the stop method is set to [OFF] (one-time recording), recording stops automatically when memory becomes full. (p.30)



Recording cannot start when the battery is depleted. When the battery becomes exhausted during recording, recording stops.


See: "2.1 Installing (or Replacing) the Battery" (p.17)

Automatic Recording Start at Convenient Times

Depending on the selected recording interval, recording start is automatically delayed until the next convenient clock time.

Recording Interval	Recording Start Time
1 sec.	00 to 59 s (1-second interval)
2 sec.	00 to 58 s (2-seconds interval)
5 sec.	00 to 55 s (5-seconds interval)
10 sec.	00 to 50 s (10-seconds interval)
15 sec.	00 to 45 s (15-seconds interval)
20 sec.	00 to 40 s (20-seconds interval)
30 sec.	00 to 30 s (30-seconds interval)
1 min	00 min, 00 s to 59 min, 00 s (1-minute interval)
2 min	00 min, 00 s to 58 min, 00 s (2-minutes interval)
5 min	00 min, 00 s to 55 min, 00 s (5-minutes interval)
10 min	00 min, 00 s to 50 min, 00 s (10-minutes interval)
15 min	00 min, 00 s to 45 min, 00 s (15-minutes interval)
20 min	00 min, 00 s to 40 min, 00 s (20-minutes interval)
30 min	00 min, 00 s to 30 min, 00 s (30-minutes interval)
60 min	00 h, 00 min, 00 s to 23 h, 00 min, 00 s (1-hour interval)

Example: When the button is pushed to start recording at 12:01:00, and the recording interval is 10 minutes

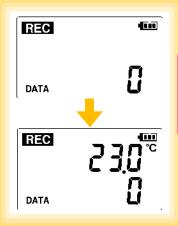

At 12:01:00, you press the REC button.

The [REC] indicator in the display turns on, but recording does not start yet.

If you try starting at 12:00 but are one minute late. Actual recording starts at 12:10, which is considered the next convenient time.

12:10:00 12:01:00 Recording Start Operation **Actual Recording Start**

> At 12:10:00 Recording starts.

In the case of instantaneous value recording, the number of data soon becomes 1.

In the case of statistical value recording, the number of data becomes 1 at 12:20:00.

4.4 **Confirming Currently Measured Values and Data Recording**

Confirm data recording on the Measurement display (p.14).

You can browse current measurement values (instantaneous), the count of recorded data items, and maximum and minimum values.

The (+) and (-) buttons select the type of value displayed.



How to switch from a Setting display to Measurement display?

To switch to the Measurement display from any other display, press REC/STOP.




- When power saving (p.31) is enabled, the display blanks after no operation occurs for 30 seconds. To browse measurement values (instantaneous) and verify each recorded data value, press any button to turn on the Measurement display.
- The currently displayed instantaneous measurement value is refreshed about once per second, regardless of the recording interval setting.

Automatically Importing (Saving) Recorded 4.5 Data to a Computer, and Graph Display


Data recorded in the logger can be imported to the computer. Install the LR5000 Utility Program on the computer beforehand. (p.21)

Required Items: Logger, LR5091 Communication Adapter (or LR5092-20 Data Collector), USB cable, Computer

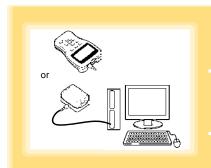


- Plug the USB cable into the USB port on the LR5091 (or LR5092-20), and into a USB port on the computer.
- Dock the logger in the LR5091 (or LR5092-

(When docking, be sure that the infrared ports are aligned.)

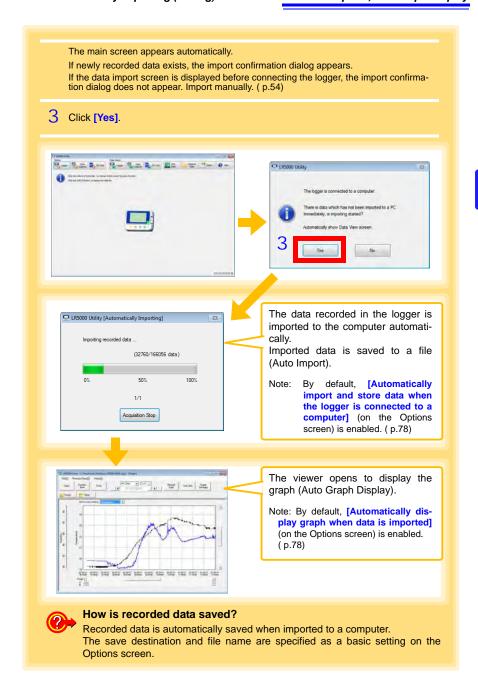

Viewer Screen

The viewer screen appears as follows.

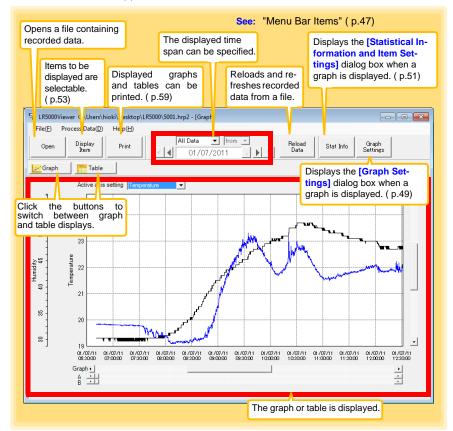


Menu Bar Items


Menu	Item	Contents
	Open	Opens a file containing recorded data.
	Recently opened recording files	Opens recently used files.
	Save recording file as	Currently displayed recording data is saved as a new file.
File	Print graph	Prints data in graphic format. (p.59)
	Paste to Microsoft Excel	Pastes displayed data into Microsoft Excel.
	Export CSV file	Exports displayed data as a CSV file.
	Exit	Closes the program.
	Scaling	Applies scaling to data on one channel. (p.63)
Process	Power Calculation	Performs approximate electric power calculation. (p.64)
	Energy Cost	Performs approximate energy cost calculation. (p.65)
	Operating Rate	Performs approximate operating rate calculation. (p.66)
Data	Integration	Performs data integration. (p.67)
	Dew Point	Performs dew-point temperature calculation. (p.68)
	Two-Data-Item Arithmetic	Performs approximate two-data-item arithmetic calculation. (p.69)
	OVER Data Revision	Converts data outside of the upper and lower threshold settings to specified values, and saves as new data. (p.70)
	Help	Displays the help file.
Help	Version	Displays LR5000 Utility Program version information.

4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

Main Graph Features

The main graph features are shown below.

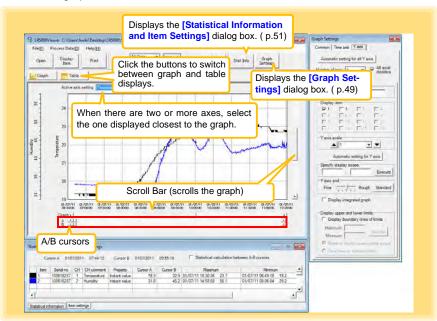

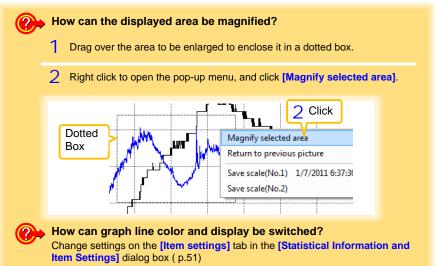

How can graph details be set?

Detailed settings are available in the [Graph Settings] dialog box. (p.49)

4

[Graph Settings] dialog box


Graph details can be set as follows. Click each tab to access various settings.

4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display


[Common] tab **Graph Settings** Common Time axis Yaxis Automatic setting 2 Display grid 3 Graph background color 4 Copy graph to clipboard

- Automatically sets the time axis and Yaxis to the optimum scale.
- Select to display the grid.
- Changes the graph background color.
- Copies the graph to the clipboard. The graph can then be pasted into Microsoft Word etc.

[Time axis] tab

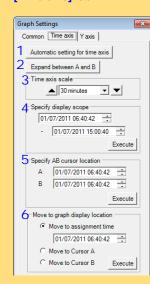

- Automatically sets the time axis to the optimum scale.
- Zooms the display to show only the time span between A/B cursors.
- Changes the time base scale.
- Specifies the displayed time span on the time axis. Click [Execute] to apply the settings.
- Specifies cursor positions. Click [Execute] to apply the settings.
- Specifies the graph start position (time). Click [Execute] to apply the settings.

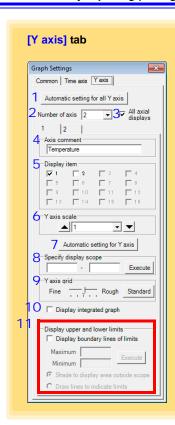

- Automatically sets all Y-axes to the optimum scale.
- When the Y-axis is different for each item, set the number of axes to a value other than one. The axes can be set to the number of displayed items (up to 16).
- Displays all axes.
- A comment can be entered for each axis. 4
- Select the item assigned to each axis.
- 6 Sets the Y-axis scale for each axis.
- Automatically sets the currently selected Y-axis to the optimum scale.
- Specifies the display span on the Y-axis. Click [Execute] to apply the settings.
- 9 Sets the Y-axis grid spacing.
- 10 Display the items selected in [Display item] on an integrated graph.
- 11 Upper and lower thresholds can be displayed as solid lines on the graph, or outof-range areas can be filled with a solid color.


4

[Statistical Information and Item Settings] dialog box

The following items appear on the [Statistical information] tab.


4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

- Item no.
- Serial no.
- Channel no.
- Channel comments
- Property (Type of measurement value)
- Measured values at A/B cursors
- Statistical data
- Units

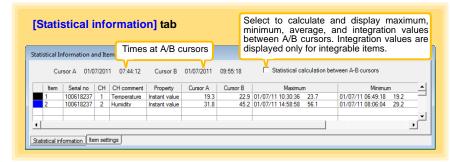


The following items appear on the [Item settings] tab.

- Display on/off
- Graph line colors and thickness
- Bar graph display on/off

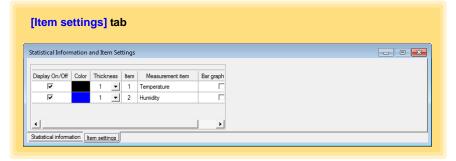

Main Table Features

The main table features are shown below.

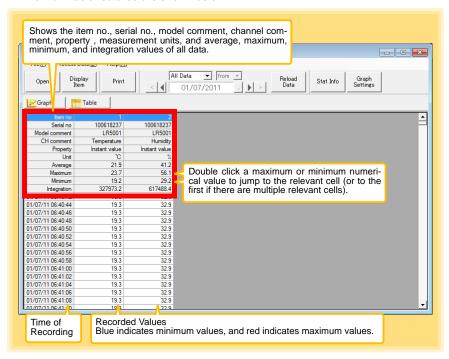


Convenient Table Functions

Use the following operations to scroll the table and copy data to the clipboard.

Item	Contents
Press Ctrl and Home keys simultaneously	Moves to the upper left corner of the table.
Press Ctrl and End keys simultaneously	Moves to the lower right corner of the table.
Home key	Scrolls to display the left edge of the table.
End key	Scrolls to the right edge of the table.
Press Ctrl and C keys simultaneously	Copies the value of the currently selected cell to the clip-board.

Selecting Items for Display

Click the [Display Item] button in the viewer to display the [Select Items for Display] screen.

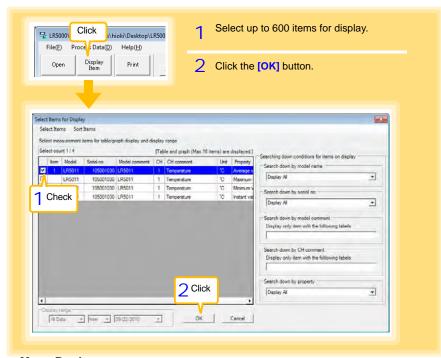



Menu Bar Items


Menu	Items	Contents
	Check selection range Clear checks of selection range	Add and clear selection of multiple items (display in blue) selected with the mouse.
	Select all selections Clear all selections	When there are 600 item in the above list, click to select or clear all items.
Select Items	Select all instant values	Select all items (up to 600) of the same property.
Sort Items	Sort by model name Sort by serial no Sort by model comment	Sort by model name, serial no., or model comment.
	Move selected item up Alt+Up Move selected item down Alt+Down	Move blue mouse-selected items up or down.
	Restore original order	Restore original order.


Manually Importing (Saving) Recorded Data 4.6 to a Computer, and Graph Display

You can manually import (save) recorded data to a computer, and display it in a graph.

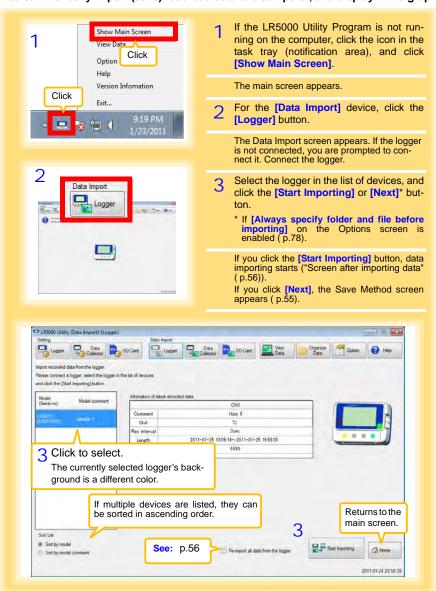

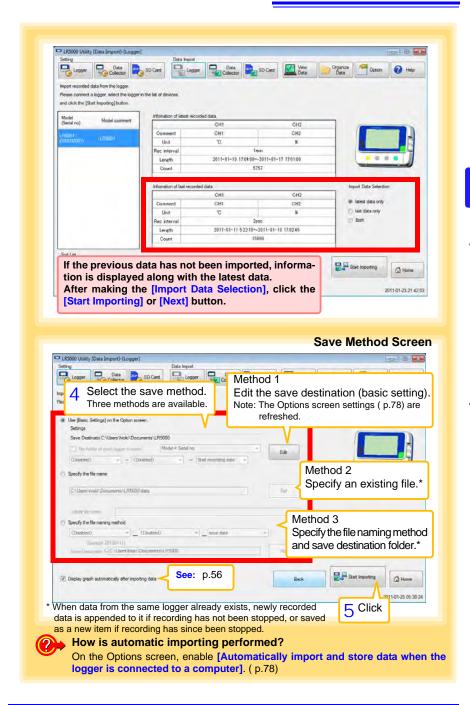


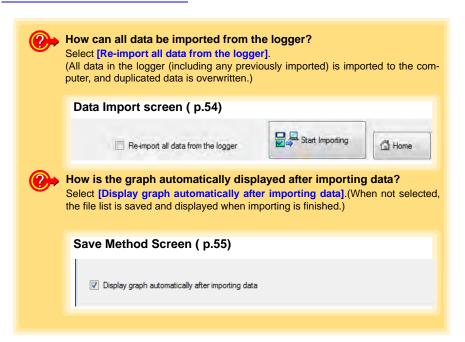

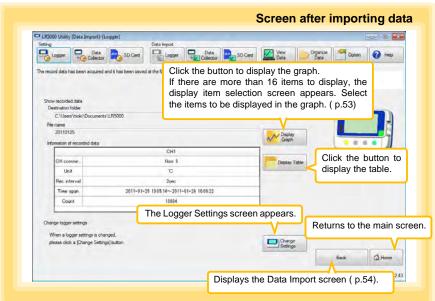



Displaying a Graph of Saved Recording Data

Use the LR5000 Utility Program to display saved recording data as a graph.

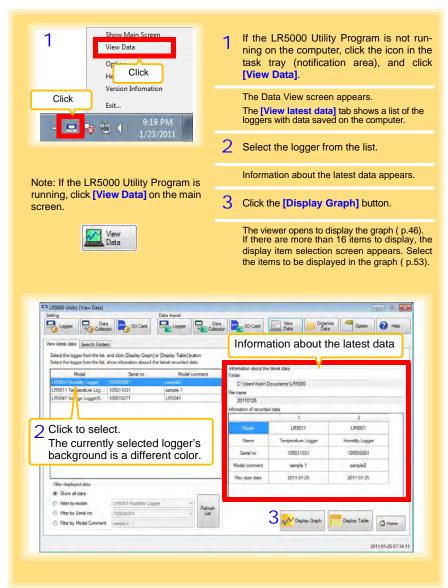

Other Data Viewing Screen Functions

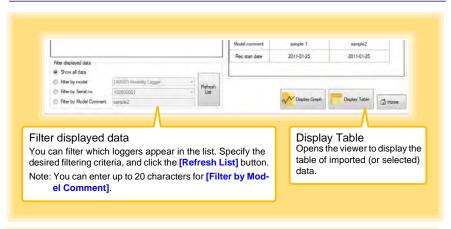

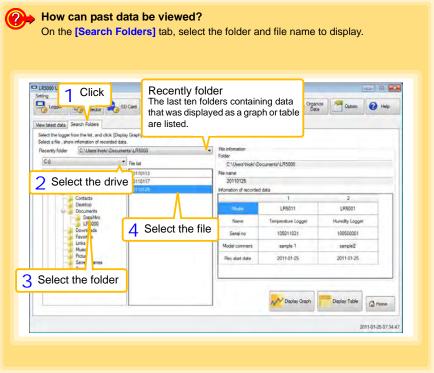


4.8 **Printing Recorded Data**

Saved recording data can be printed as a graph. Graphs displayed in the LR5000 Utility Program can be printed on A3, A4, or B4-size paper.

With the desired graph displayed, click the [Print] button.

See:Graph Display Methods: "4.5" (p.44), "4.6" (p.54), and "4.7" (p.57)

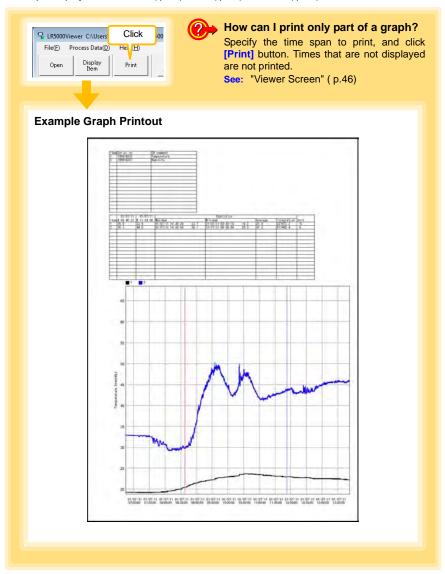



Chapter 5 Processing Recorded Data

Processing Recorded Data

Chapter 5

Recorded data saved on the computer can be processed by scaling, electric power calculation, energy cost calculation, operating rate calculation, integration, dewpoint temperature calculation, two-item arithmetic calculation, and out-of-range data revision. The LR5000 Utility Program performs the calculations.

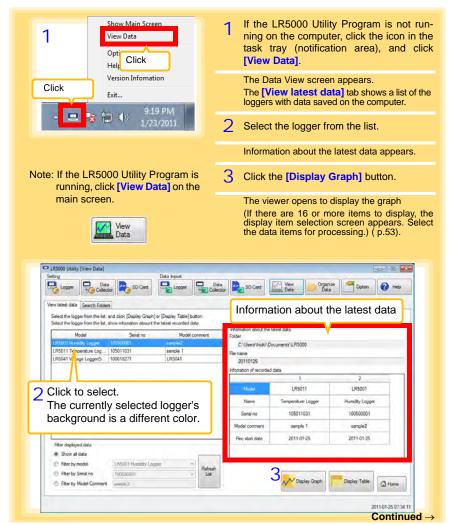

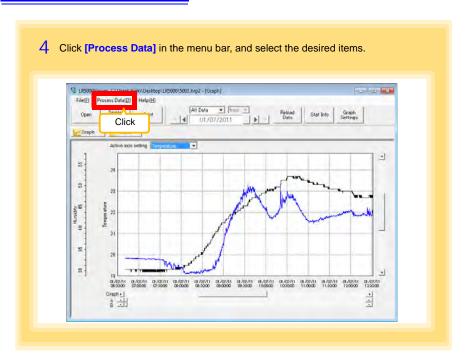


[Process Data] Items

Items	Contents	See
Scaling	Performs scaling on the data of one channel.	(p.63)
Power Calculation	Performs approximate electric power calculation.	(p.64)
Energy Cost	Performs approximate energy cost calculation.	(p.65)
Operating Rate	Performs approximate operating rate calculation.	(p.66)
Integration	Integrates displayed data.	(p.67)
Dew Point	Performs dew-point temperature calculation.	(p.68)
Two-Data-Item Arithmetic	Performs approximate two-data-item arithmetic calculation.	(p.69)
OVER Data Revision	Converts data outside of the upper and lower threshold settings to specified values, and saves as new data items.	(p.70)

5.1 Scaling

The following scaling calculation is applied to measured values. Scaled Result = Raw data (measured value) \times A + B \times SI prefix (multiplier) Scaled results are saved as a new item in the recording file.

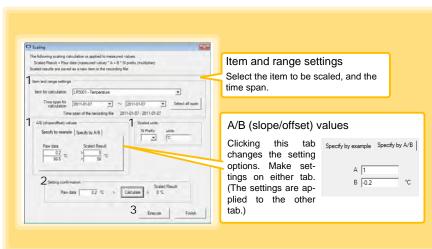

1. Select the items, time span, and the following options.

Setting Options	Descriptions	
Specify by example *	Enter two known conversion points (up to ten digits each).	
Specify by A/B *	Enter the scaling coefficients (A and B, up to ten digits each).	
Scaled units	 Select the [SI Prefix]. ([p]=1E-12, [n]=1E-9, [μ]=1E-6, [m]=1E-3, blank =1E0, [k]=1E3, [M]=1E6, [G]=1E9, [T]=1E12) Enter a character string to identify the scaled units. (Up to five characters, except /, :, *, ?, ", <, >, and .) 	

^{*} Set either one.

Confirm settings.

Setting	Confirm that scaling is performed properly. Enter any numerical value as raw
confirmation	data, and click the [Calculate] button to display the scaled result.

Click the [Execute] button.

(The scaled results are saved.)

Note: Click the [Finish] button to close the [Scaling] dialog box.


Calculating Electric Power

Approximate electric power is calculated using current measurement data from a clamp logger.

Calculation results are saved as a new item in the recording file.



- Electric power calculations are only approximate, so results do not always equal the true electric power value. Use a wattmeter if accurate power measurements are required.
- There is no way to confirm that a specified data item is really a current value. Calculation occurs regardless of data type.

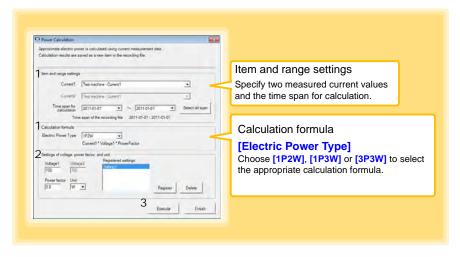

- 1. Select the items, time span, and calculation formula to be used.
- 2. Specify the voltage, power factor, and units.
 - •To save the settings, click the [Register] button.
 - •To apply a registered setting, double click it ("Setting1" in the above screenshot).
 - •To delete a setting, click it then click the [Delete] button.
- Click the [Execute] button. (Calculation results are saved.)


Note: Click the [Finish] button to close the [Power Calculation] dialog box.

Calculating Energy Cost

Approximate energy cost is calculated using current measurement data from a clamp logger.

NOTE

- Energy cost calculations are only approximate, so results do not always equal the true energy cost.
- There is no way to confirm that a specified data item is really an electric power value. Calculation occurs regardless of data type.

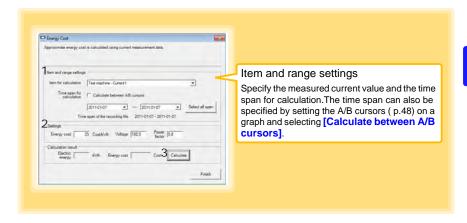


- 1. Select the item and time span.
- Specify the cost per kWh, voltage, and power factor.
- Click the [Calculate] button. (Electric power consumption and energy cost values are calculated and displayed.) Note: Click the [Finish] button to close the [Energy Cost] dialog box.

Calculating Operating Rate

The approximate operating rate of the measured value is calculated.


The total amount of time during which data exceeds the [Upper threshold] is considered operating time, and the operating rate is calculated as the ratio of the operating time to the total calculation time span.

 Example: The time during which a device consumes 20 A or more is considered the operating time.



The sum of the times depicted by is the operating time. (In the above diagram, operating time is 1.5 hours.)

Operating time (1.5 h) \div calculation time span (2.5 h) \times 100 = 60% operating rate

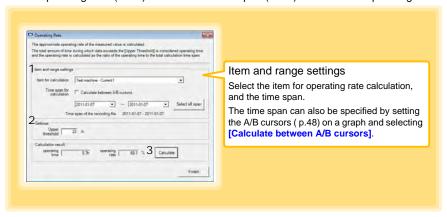

- Select the item and time span.
- Set the upper threshold.
- Click the [Calculate] button. (Operating hours and operating rate values are calculated and displayed.) Note: Click the [Finish] button to close the [Operating Rate] dialog box.

5.5 Integration

Measurement data can be integrated over a specified time span. Integration results are saved as a new item in the recording file.



- 1. Select the item and time span.
- 2. Click the [Execute] button. (Integration results are saved.) Note: Click the [Finish] button to close the [Integration] dialog box.


5.6 **Calculating Dew-Point Temperature**

Dew-point temperature is calculated from the temperature and humidity measurement data from the logger.

Calculation results are saved as a new item in the recording file.

NOTE

- There is no way to confirm that a specified data item is really a temperature or humidity value. Dew-point calculation occurs regardless of data type.
- Only the specified temperature and humidity data measured during the specified recording time span is applied to calculations and saved.
- The valid range for calculation input measurement data is -100 to 100 degrees, and 0 to 100% humidity. Values outside of these ranges are replaced with the maximum or minimum value within the valid range.

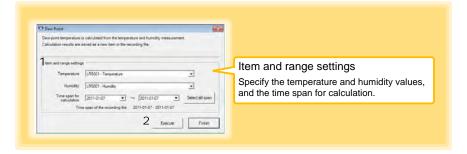

- 1. Select the items and time span.
- Click the [Execute] button. (Calculation results are saved.)


Note: Click the [Finish] button to close the [Dew Point] dialog box.

Two-Data-Item Arithmetic Calculations

Simple arithmetic operations (+, -, *, and /) can be applied to two data items. Calculation results are saved as a new item in the recording file.

NOTE

Only the values of data items measured during the specified recording time span are applied to calculations and saved.

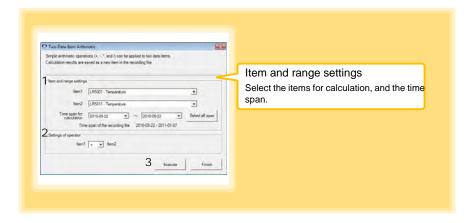


- 1. Select the items and time span.
- 2. Select the calculation operator.
- Click the [Execute] button. (Calculation results are saved.) Note: Click the [Finish] button to close the [Two-Data-Item Arithmetic] dialog box.

Converting Over-Threshold Data Values 5.8

Data values larger than the upper threshold and smaller than the lower threshold can be converted to specified values.

Converted results are saved as new data items in the recording file.

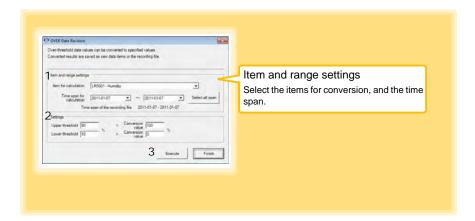


- 1. Select the items and time span.
- 2. Set the upper and lower threshold values, and their corresponding conversion values.
- 3. Click the [Execute] button. (Conversion results are saved.)

Note: Click the [Finish] button to close the [OVER Data Revision] dialog box.

Organizing Data

Chapter 6


The LR5000 Utility Program can reorganize (copy, delete, move, combine, and extract) imported data.

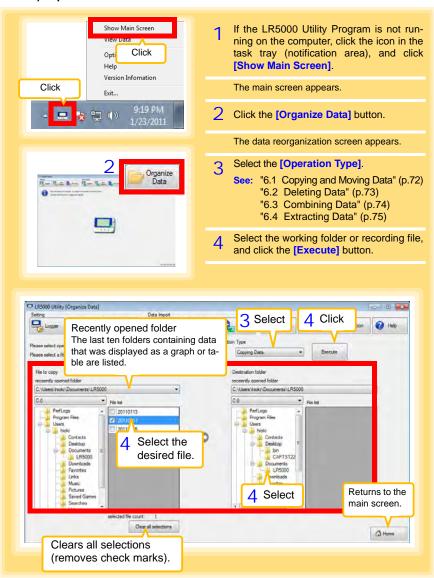

388.610.7664


Copying and Moving Data 6.1

The selected logger recording files can be copied or moved to any folder.

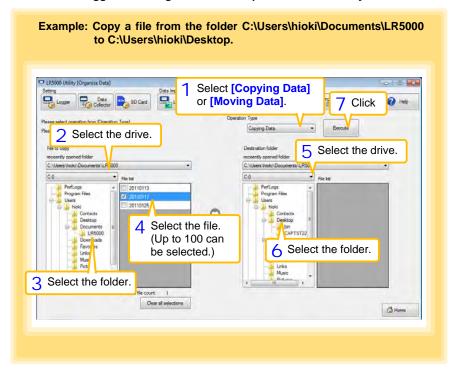


6.2 **Deleting Data**

Select and delete logger recording files as follows.

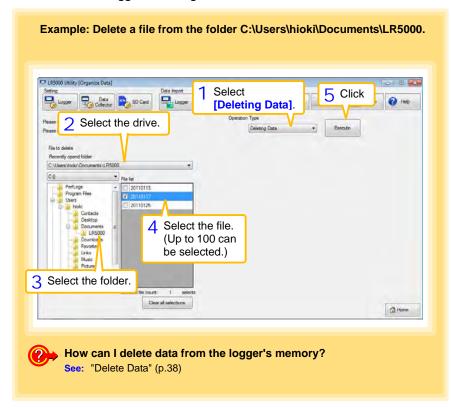


6.3 **Combining Data**

Separate logger recording files can be combined into one set of recording data.

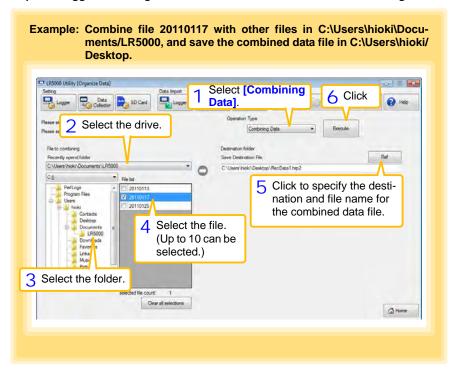


6.4 **Extracting Data**

Data in a logger recording file can be extracted to a specified time span and saved with a different file name.

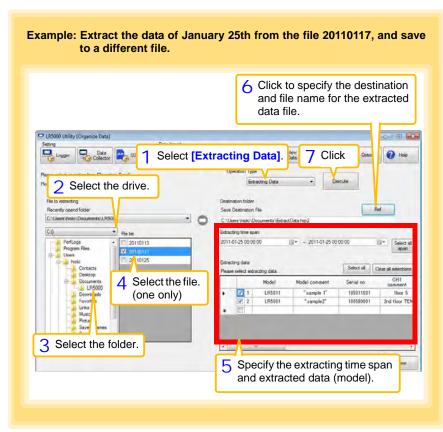


Options Settings (LR5000 Util-Chapter 7 ity Program)

These settings determine the saving method for imported logger data, device connection monitoring, and logger setting display functions.

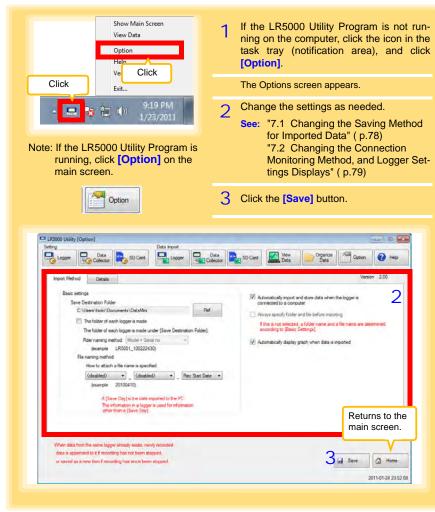


7.1 Changing the Saving Method for Imported Data

The saving method for imported logger data can be changed as follows.

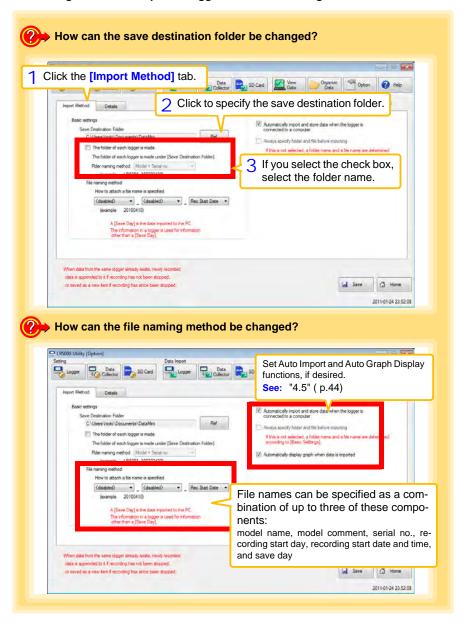

7.2 **Changing the Connection Monitoring** Method, and Logger Settings Displays

Change the device connection monitoring settings and the functions on the logger settings displays as follows.

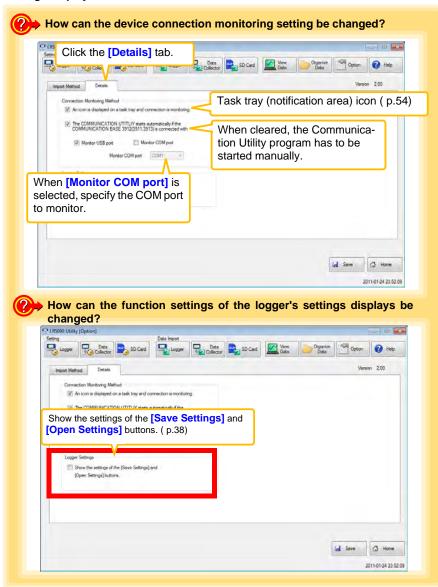

Specifications

Chapter 8

8.1 **Measurement Specifications**

External temperature sensor 1channel (Thermistor) Sensor • Temperature: -40.0°C to 180.0°C (-40.0°F to 356.0°F) Note 1: Measurement range is limited according to sensor type. Measurement ranges Note 2: "UF" or "OF" indicates out-of-range measurement. Temperature: between -40.0°C (-40.0°F) and 0.0°C (32.0°F) : ±1.0°C (±1.8°F) between 0.0°C (32.0°F) and 35.0°C (95.0°F) : ±0.5°C (±0.9°F) between 35.0°C (95.0°F) and 70.0°C (158.0°F) : ±1.0°C (±1.8°F) between 70.0°C (158.0°F) and 120.0°C (248.0°F) : ±2.0°C (±3.6°F) 120.0 to 180.0°C (248.0 to 356.0°F) : ±5.0°C (±9.0°F) ±5 Measurement error [°C] Measurement accuracy ±4 (logger + sensor) ±3 0 120 180 Measurement temperature [°C]

Accuracy guarantee for • Temperature: -20.0°C to 70.0°C (-4.0°F to 158.0°F) (logger) temperature and humidity • Humidity: 80%RH or less (logger) non-condensating

Guaranteed accuracy period

3 years

Functional Specifications

Display type	LCD
Display contents	Measured value, units (°C), recording (REC), endless recording (END-LESS), statistical recording (STAT), recording interval (INTVL), date and time (TIME), alarm (AL), battery status, recorded data count (DATA), maximum value (MAX), minimum value (MIN), auto power saving (APS)
Operation key	Four ("SET", "REC/STOP", "+", "-")
Recording interval	1/2/5/10/15/20/30 sec., 1/2/5/10/15/20/30/60 min.
Recording modes	 Instantaneous recording: The instantaneous value is recorded at each recording interval Statistical recording: Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved at each recording interval (cannot be selected when the recording interval is set to one second).
Recording capacity	 Instantaneous recording: 60,000 values Statistical recording: 15,000 instantaneous, maximum, minimum, and average values
Recording start method	Logger button operationInstant or scheduled time (set by computer/Data Collector)
Recording stop method	 Logger button operation (endless recording) Logger button operation (one-time recording) Scheduled time (endless recording) Scheduled time (one-time recording) Scheduled time is set by computer/Data Collector
Retained recording sessions	Two sessions (each from recording start to stop)
Alarm	Indicates when measured values are outside of the range defined by upper and lower thresholds set from a computer or the Data Collector
Scaling	Scales and displays measured values according to settings made from a computer or the Data Collector
Power save setting	The measurement data display turns off about 30 seconds after the last button operation (cancel power save for continuous display)
Real-time clock	Provided

8.3 **Miscellaneous**

Clock accuracy	±50ppm (@25°C (77°F)) ±4.32 s/day	
Backup	Recorded data and settings (independent of battery)	
Interface	Half-duplex start/stop synchronous infrared serial communication between the logger and Communication Adapter or Data Collector	
Power supply	Rated supply voltage: 1.5 VDC One LR6 alkaline battery Recording and clock operation, and maximum and minimum values are retained for about 30 seconds during battery replacement	
Maximum rated power	0.1 VA	
Battery life	 Approx. 2 year (instantaneous recording, with 1-minute recording interval and auto power saving, @20°C (68°F)) Approx. 2 month (with 1-second recording interval, @20°C (68°F)) 	
Dimensions	Approx. 79W×57H×28D mm (3.11"W×2.24"H×1.10"D)	
Mass	Approx. 105 g (3.7 oz.) (w/battery)	
Dust and water protection rating	IP54 (EN60529) (with sensor connected, but not including sensor tip)	
Accessories	• LR6 alkaline battery 1(Internal in the logger) • Instruction Manual 1 • Operation Manual 1 • Stand 1	
Options	 LR5091 Communication Adapter LR5092-20 Data Collector LR9601 Temperature Sensor LR9602 Temperature Sensor LR9603 Temperature Sensor LR9604 Temperature Sensor LR9611 Temperature Sensor LR9612 Temperature Sensor LR9613 Temperature Sensor LR9621 Temperature Sensor LR9621 Temperature Sensor LR9631 Temperature Sensor LR9631 Temperature Sensor LR9901 Wall-Mounted Holder Z5004 Magnetic Strap 	
Environmental conditions	 Operating environment: indoors, pollution degree 2, up to 2000 m ASL Operating temperature and humidity: -20°C to 70°C (-4.0°F to 158.0°F), 80%RH or less (non-condensating) Storage temperature and humidity: -20°C to 70°C (-4.0°F to 158.0°F), 80%RH or less (non-condensating) 	
Applicable Standards	• Safety: EN61010 • EMC : EN61326	

8.4 LR5091 Communication Adapter **Specifications**

Main Unit General Specifications

Functions	Converts between the logger's infrared signals and USB signals to support communications between the logger and a computer (USB port).	
Compatible loggers	LR5001 Humidity Logger, LR5011 Temperature Logger, LR5031 Instrumentation Logger, LR5041 Voltage Logger (50 mV), LR5042 Voltage Logger (5 V), LR5043 Voltage Logger (50 V), LR5051 Clamp Logger Note: Communication with models LR5031 is supported by PC Utility version 1.05 and later. LR5051 is supported by PC Utility version 1.01 and later.	
Operating temperature and humidity	Temperature: 0°C to 40°C (32.0°F to 104.0°F), Humidity: 80%RH or less (non-condensating)	
Storage temperature and humidity	Temperature: -10°C to 50°C (14.0°F to 122.0°F), Humidity: 80%RH or less (non-condensating)	
Operating environment	Indoors, pollution degree 2, up to 2000 m ASL	
Power supply	5 VDC (USB bus-powered)	
Maximum rated power	0.5 VA	
Dimensions	Approx. 83Wx61Hx19D mm (3.27"Wx2.40"Hx0.75"D) (without projections)	
Mass	Approx. 43 g (1.5 oz.) (without USB cable)	
Applicable Standards	Safety: EN61010EMC: EN61326	
USB standard	USB 2.0 compliant, Full Speed support	
Connector	Mini B series receptacle	
Connectable device	Computer	
Communication speed	115,200bps	
Communication method	Half-duplex start/stop synchronous infrared serial communication	
Communication speed	115,200bps	

Accessories

USB cable (1 m)1	
LR5000 Utility Program (CD)1	

Supplied LR5000 Utility Program Specifications

Supplied medium	CD1
Operating environment	Personal computer meeting the following specifications • CPU: 1 GHz or faster processor clock • RAM: at least 512 MB • Operating system: Windows XP SP2 or later, Vista SP1 or later, or Windows 7 • Runtime library: .NET Framework 2.0/3.5 • Interface: USB (or COM port for models 3910, 3911, or 9612) • Monitor resolution: 1024 x 768 or higher • Hard disk: At least 30 MB free space (Another 500 MB may be required if .NET Framework 2.0 or 3.5 is not yet installed. Additional space is required for storing recorded data.)
Model communication support	All LR5000-series loggers Note1: Communication with models LR5031 is supported by PC Utility version 1.05 and later. LR5051 is supported by PC Utility version 1.01 and later. Note2: The COMMUNICATION UTILITY program supports the following models' settings and data import functions. A computer COM port and 9612 RS-232C cable are required when using the model 3910 or 3911 Communication Base. • All "Data Logger" models 363x to 364x • Communication Base models 3910, 3911, and 3912
Communication connections	Communication with LR5000-series loggers: Computer, USB cable, LR5091 Communication Adapter, and LR5000-series logger Computer, USB cable, LR5092-20 Data Collector, and LR5000-series logger Communication with the LR5092-20 Data Collector: Computer, USB cable, and LR5092-20 Data Collector
Setting functions	 Export/import settings by communication with the LR5000 series Settings exported from each LR5000 are stored on the computer (the following functions are supported by the supplied PC Utility version 2.00, or later) Export/import settings by communication using the LR5092-20 Data Collector Import and save logger settings using the LR5092-20 Data Collector via communication or SD memory card Settings exported to the LR5092-20 Data Collector are stored on the computer
Auto-start function	A small resident program (icon in the task tray/notification area) detects when a logger or the Data Collector is connected to the computer, and automatically starts the LR5000 Utility Program.

8.4 LR5091 Communication Adapter Specifications

-	
Data import functions	Communicates with the LR5000-series loggers, and imports recorded data Combines recorded data Incorporates new data when an LR5000-series logger holds data not previously imported (the following functions are supported by the supplied PC Utility version 2.00, or later) Communicates with the LR5092-20 Data Collector, and imports recorded data saved in the Data Collector Imports data saved to an SD memory card in the LR5092-20 Data Collector
Graph display functions	 Displays up to 16 channels in a graph Displays up to 16 Y-axes Displays one time base axis Set line colors for each channel, and display/hide lines and bar graphs for each channel Auto setting of time base and vertical axis Display/hide Y-axis grid lines, and set grid display density Select display background color Copy graph images to the clipboard A/B cursor functions Displays statistical data (maximum, minimum, and average)
Data list display functions	 Browse recorded data in tabular format Displays up to 600 channels Displays statistical data (maximum, minimum, and average)
Export functions	 Export all recorded data displayed in a table in CSV format Paste to Excel all recorded data displayed in a data table Export all recorded data between A/B cursors in CSV format Paste to Excel all recorded data between A/B cursors
Import functions	Import text files from the 3169 Clamp-On Power HiTester Note: Only electric energy data recorded at one-second or longer inter- val can be imported
Printing functions	Prints graphs and statistical dataSupports A3, A4, and B4 paper sizes
Data processing functions	Scaling (y=axx+b), electric power calculation, energy cost calculation, operating rate calculation, integration, dew-point temperature calculation, arithmetic calculations, out-of-range data revision
File management functions	 Copy and delete data saved on the computer (the following functions are supported by the supplied PC Utility version 2.00, or later) Delete data saved to an SD memory card in the LR5092-20 Data Collector
Help function	Displays helpful operating instructions

8.5 **Temperature Sensors Specifications**

General Specifications LR9601, LR9602, LR9603, LR9604 (molded resin type)

· ·	
Sensor type	Thermistor
Operating temperature	-40°C to 180°C (-40.0°F to 356.0°F) (with no condensation on connectors) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Storage temperature	-40°C to 180°C (-40.0°F to 356.0°F) (with no condensation on connectors) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Response time	Approx. 100 sec. Note: 90% response time for temperature (reference value)
Dust and water protection rating	Water ingress protection (JIS C 0920) When connected to LR5011 Temperature Logger $$
Operating environment	Indoors
Materials	Cable: Silicone Sensor: Silicone
Dimensions	 Cable length (including sensor): Approx. 1000 mm (39.37") (LR9601), Approx. 5000 mm (196.85") (LR9602), Approx. 10000 mm (393.70") (LR9603), Approx. 45 mm (1.77") (LR9604) Sensor element: Approx. 6 mm (0.24") diameter, and 28 mm (1.10") long
Mass	Approx. 16 g (0.6 oz.) (LR9601), Approx. 60 g (2.1 oz.) (LR9602), Approx. 115 g (4.1 oz.) (LR9603), Approx. 6 g (0.2 oz.) (LR9604)

LR9611, LR9612, LR9613 (lug terminal type)

•	()
Sensor type	Thermistor
Operating temperature and humidity	-30°C to 180°C (-22.0°F to 356.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Storage temperature and humidity	-30°C to 180°C (-22.0°F to 356.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Response time	Approx. 45 sec. Note: 90% response time for temperature (reference value)
Dust and water protection rating	No
Operating environment	Indoors
Dimensions	 Cable length (including metal tip): Approx. 1000 mm (39.37") (LR9611), Approx. 5000 mm (196.85") (LR9612), Approx. 10000 mm (393.70") (LR9613) Metal tip: Outside diameter Approx. 7 mm (0.28"), Inside diameter Approx. 3.2 mm (0.13"), Thickness Approx. 0.5 mm (0.02")
Mass	Approx. 17 g (0.6 oz.) (LR9611), Approx. 61 g (2.2 oz.) (LR9612), Approx. 116 g (4.1 oz.) (LR9613)

8.5 Temperature Sensors Specifications

LR9621 (sheath type)


Sensor type	Thermistor
Operating temperature and humidity	e -40°C to 120°C (-40.0°F to 248.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Storage temperature and humidity	I -40°C to 120°C (-40.0°F to 248.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Response time	Approx. 90 sec. Note: 90% response time for temperature (reference value)
Dust and water protection rating	No
Operating environment	Indoors
Materials	Cable: Silicone Metal tip: SUS304
Dimensions	 Cable length (including metal tip): Approx. 1000 mm (39.37") Metal tip: Outside diameter Approx. 4 mm, Length Approx. 180 mm
Mass	Approx. 23 g (0.8 oz.)

LR9631 (needle type)


Sensor type	Thermistor
Operating temperature and humidity	-40°C to 120°C (-40.0°F to 248.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Storage temperature and humidity	-40°C to 120°C (-40.0°F to 248.0°F), 80%RH or less (non-condensating) Note: -20°C to 70°C (-4.0°F to 158.0°F) at connectors
Response time	Approx. 20 sec. Note: 90% response time for temperature (reference value)
Dust and water protection rating	No
Operating environment	Indoors
Materials	Cable: Silicone Metal tip: SUS304
Dimensions	 Cable length (including metal tip): Approx. 1000 mm (39.37") Metal tip: Diameter Approx. 1.3 mm (0.05"), Length Approx. 25 mm (0.98")
Mass	Approx. 17 g (0.6 oz.)

Appearance molded resin type

 
LR9601 Temperature Sensor (Approx. length 1 m)



 
LR9602 Temperature Sensor (Approx. length 5 m)



 LR9603 Temperature Sensor (Approx. length 10 m)




 LR9604 Temperature Sensor (Approx. length 45 mm)




lug terminal type

 
LR9611 Temperature Sensor (Approx. length 1 m)



 LR9612 Temperature Sensor (Approx. length 5 m)




 LR9613 Temperature Sensor (Approx. length 10 m)




sheath type

 LR9621 Temperature Sensor (Approx. length 1 m)



needle type

 LR9631 Temperature Sensor (Approx. length 1 m)



Maintenance and Service

Chapter 9

Requesting repairs

- Use the original packing materials when transporting the instrument, if possible.
- Pack the instrument so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.
- Please contact your dealer or Hioki representative for information on where to submit products for repair.

When the logger will not be used for long time



To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

Cleaning

To clean the instrument, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.

NOTE

Wipe the LCD gently with a soft, dry cloth.

Disposing of the Logger

Obey local regulations for disposal of electronic equipment.

9.3 **Troubleshooting**

If damage is suspected, check the "Before requesting repairs" section before contacting your dealer or Hioki representative.

Before requesting repairs

Problem Symptom	Probable Causes	Remedies and References
The Utility Program cannot be installed.	 The computer operating environment may be incompatible. The installation procedure may be incorrect. 	Check the operating environment requirements, and try installing in (another) compatible computer. See: "LR5000 Utility Program Operating Requirements" (p.21) Refer to the installation procedure, and try again. Pay particular attention to the following: Be sure to log in with an Administrator account. Before installing, be sure to close any applications running on the computer. If the installation screen does not appear, execute X:\English\Setup.exe. See: "Installation Procedure" (p.21)
No measured value is displayed. DATA	The sensor plug is inserted incorrectly. The sensor plug is not inserted all the way in. NOTE The maximum and minimum values are not displayed when the recorded data count is 0.	Verify the correct plug orientation, and insert it as far as possible. If the values are not displayed despite these measures, the sensor and logger need to be inspected and repaired. Please contact your dealer or Hioki representative. See: "Requesting repairs" (p.91) [ERROR] is displayed when this (faulty) data is imported by the Utility Program.
The display is blank.	Power save is enabled.	Press any button or send a communication signal to turn on the display. See: "Part Names/Functions and Display Indicators" (p.12)
The battery is depleted too quickly.	 The battery supplied with the logger is still being used. A zinc-manganese battery is being used. 	battery.

Before requesting repairs

Problem Symptom	Probable Causes	Remedies and References
Logger settings cannot be changed.	Dead battery.	When the T battery indicator appears, settings cannot be changed (but only displayed). Replace the battery.
		See: "2.1 Installing (or Replacing) the Battery" (p.17)
How can the logger's memory be erased?		Logger memory can be erased using the LR5000 Utility Program.
		See: "Other Settings on the Logger Settings Screen" (p.38)
	-	Note that data recorded prior to the last recording is automatically erased whenever recording starts. (The logger retains the data from both current and most recent prior recording operation.)
		See: "4.3 Starting and Stopping Recording" (p.42)
How can recorded values		Enable scaling.
be reorganized?		See: "5.1 Scaling" (p.63)
	-	Scaling settings can be made before recording.
		See: "Scaling (set as needed)" (p.36)
Recorded data has disappeared.	Recording was restarted after stopping.	Note that if recording is accidentally restarted after stopping, data recorded prior to the last recording is automatically erased. (The logger retains the data from both current and most recent prior recording operations.)

Before requesting repairs

Problem Symptom	Probable Causes	Remedies and References
The [REC] indicator disappears even though recording has not been stopped.	The one-time recording stop method is selected.	With one-time recording, recording stops automatically when memory becomes full. Change the stop method to endless recording.
230°° FULL		See: Making Settings on the Logger: "Stop Method Setting (for when memory becomes full)" (p.30) See: Making Settings from the LR5000 Utility Program: "Stop Method" (p.35)
		(With endless recording, the oldest data is overwritten when memory is full, so be sure to save data to a computer periodically during long-term recording. Data can be saved to a computer without stopping recording.)
		See: "4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display" (p.44)
The logger cannot communicate with the new LR5091 (LR5092).	The installation of the device driver to the LR5091 (LR5092) failed.	For Window XP, the driver may be required to be installed to each LR5091 (LR5092). Open Windows Device Manager and re-install the driver.

9.4 Error Displays

The display appears as follows when an error occurs on the logger.

Logger Error Displays

Error Displays	Meaning	Remedies and References
Errit	Calibration data error: A fault occurred with the internal calibration data.	Inspection and repair is required. Please contact your dealer or Hioki representative.
Err2	Microcomputer error: A fault occurred in microcomputer ROM/RAM.	See: "Requesting repairs" (p.91)
Err3	Data recording error: A fault occurred in recording data or accessing settings.	
PBFF	Battery voltage is too low for normal logger operation.	Replace the battery. See: "2.1 Installing (or Replacing) the Battery" (p.17)
oF or UF	A measured value is out of range.	Out-of-range values cannot be displayed. [OF] or [UF] is displayed when this data is imported by the Utility Program.
DATA	 The sensor plug is inserted incorrectly. The sensor plug is not inserted all the way in. The sensor is damaged. The logger is damaged. 	Verify the correct plug orientation, and insert it as far as possible. If the values are not displayed despite these measures, the sensor and logger need to be inspected and repaired. Please contact your dealer or Hioki
		representative. See: "Requesting repairs" (p.91) [ERROR] is displayed when this (faulty) data is imported by the Utility Program.

LR5000 Utility Program Error Displays

Error Displays	Meaning	Remedies and References
OF	A measured value is out of range.	Out-of-range values cannot be displayed.
UF	7. modernou value le out el lange.	


Appendix

Appendix 1 About Recording Modes

The recording method depends on the selected recording mode. The recording modes are as follows.


Instantaneous Recording

Measurements are recorded in internal memory at each recording interval.

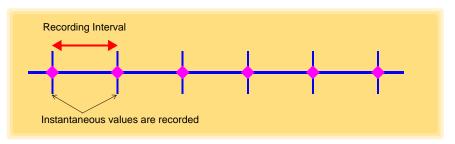

Statistical Recording

Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved to internal memory at each recording interval. Data at the recording start time is not recorded (in the following case, data at 10:00:00 is not recorded).

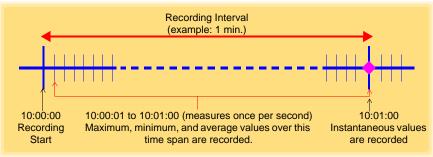

NOTE Statistical recording cannot be selected when the recording interval is set to one second.



Appendix 2 Recording Intervals and Maximum Recording Times

The recording time is calculated according to the recording capacity.

The maximum recording time is limited by the remaining battery capacity.

Instantaneous Recording

Up to 60,000 values can be recorded.

Recording Interval	Recording Time	Recording Interval	Recording Time
1 sec	16 h, 40 min	1 min	41 d, 16 h
2 sec	1 d, 9 h, 20 min	2 min	83 d, 8 h
5 sec	3 d, 11 h, 20 min	5 min	208 d, 8 h
10 sec	6 d, 22 h, 40 min	10 min	416 d, 16 h
15 sec	10 d, 10 h	15 min	625 d
20 sec	13 d, 21 h, 20 min	20 min	833 d, 8 h
30 sec	20 d, 20 h	30 min	1250 d
		60 min	2500 d

Statistical Recording

Up to 15,000 values can be recorded.

Recording Interval	Recording Time	Recording Interval	Recording Time
1 sec (Cannot be set)	-	1 min	10 d, 10 h
2 sec	8 h, 20 min	2 min	20 d, 20 h
5 sec	20 h, 50 min	5 min	52 d, 2 h
10 sec	1 d, 17 h, 40 min	10 min	104 d, 4 h
15 sec	2 d, 14 h, 30 min	15 min	156 d, 6 h
20 sec	3 d, 11 h, 20 min	20 min	208 d, 8 h
30 sec	5 d, 5 h	30 min	312 d, 12 h
		60 min	625 d

Appendix 3 Battery Life Approximation

Battery life depends on the recording interval.

The following table shows battery life when power saving (p.31) is enabled. Battery life is approximately two months when power saving is disabled or when the statistical recording mode is enabled.

Recording Interval	Battery Life	Recording Interval	Battery Life
1 sec	Approx. 60 days	30 sec	Approx. 1.5 year
10 sec	Approx. 1 year	1 min or more	Approx. 2 year

Index

Symbols	Data view screen (PC application program)
(-) button12	
(+) button12	Device connection monitoring setting 79
	Display Graph61
A	Display indicators13
AL indicator13, 37	Display refresh time12
Alarm function	Display the graph56
Alarm thresholds	Displaying a graph of saved recording data
APS	57
Auto graph display45, 56	Disposing91
Auto import45, 78	_
Auto power save12	E
7 tato powor davo	ENDLESS indicator
В	Endless recording
	Error displays95
Battery is depleted too quickly92	Extracting
Battery status indicator13, 18	
С	F
Calculating days point temporature CO	Features11
Calculating electric power	
Calculating electric power	G
Calculating operating rate	Cranh dianless
CD Handling7	Graph display
Changing the saving method78	Graph settings49
Cleaning91	Н
Clock setting	1.1
Combining74	How can past data be viewed? 58
Connect to the computer32	How can the displayed area be magnified?
•	48
D	How can the file naming method be
Demose	changed?
Damage92 Data	How can the function settings of the log-
Combine74	ger's settings displays be changed? 79
Copy	How can the logger's memory be erased?
Delete	93
Extract	How can the save destination folder be
Move	changed?
Data import screen (PC application pro-	How can the settings from one logger be copied to another?34
gram)54	How to switch from a Setting display to
DATA indicator	Measurement display? 44
	Wieder of Horit display:

Index 2

Index

I.	77	
Importing recorded data to a computer44	Organizing data	
Installation21	Overview	11
Installation precautions5	Р	
Installation screen does not appear22		
Installing the battery17	Package contents	2
Installing the logger40	Part names/functions	
Instantaneous recording31, A1	PC application program	
Integration 51, 52, 67	Installation	21
INTVL indicator	Operating requirements	
2, 2	Screens	24
L	Start the program	22
	Uninstall	23
Logger settings screen (PC application pro-	Version upgrading	
gram)33	Power save setting15, 31,	
Lower thresholds	Battery life	
LR5091 Communication Adapter12	Power saving	
LR5091 Communication Adapter specifica-	Preliminary checks	
tions84	Pre-measurement inspection	
M	Printing	
IVI	Product overview	11
Magnet41	D	
Main screen24	R	
Maintenance91	REC indicator13,	42
Markings on the logger4	REC indicator disappears	
MAX indicator13	REC/STOP button	
Maximum recording times A2	Recorded data count	
Maximum value14	Recording Interval	
Measured value14	Recording interval15, 28,	
Measurement39	Recording Mode	
Measurement channel13	Recording mode15,	31
Measurement preparations17	Recording modes	Α1
Measuring display (logger)14	Recording Start Method	35
MIN indicator13	Recording Stop Method	
Minimum value14	Recording time	A2
Model comment34	Repair91,	
Moving72	•	
N.I.	S	
N	Cofety information	_
No measured value is displayed92	Safety information	⁴
110 measured value is displayed92	, , , ,	
0	gram)	
	Saving recorded data to a computer	
One-Time recording30, 42	Scaling36, 38,	
One-time recording35	Scheduled Time	
Operating buttons12	Sensor	
Operation flow8	Sensors specifications	
Option41	Service	
Options 3, 83	SET button	
Ontions settings (PC application program)	Setting (PC application program)	30



Setting display (logger) 15 Settings list 27 Show Main Screen 71 Show main screen 54
Specifications 81 Stand 40 Starting and stopping recording 42 STAT indicator 13, 31 Statistical recording 31, 35, A1
Stop method
T
Temperature sensor Connecting
U
Uninstall
V
Version upgrading 23 View Data 61 View data 57 View latest data 57, 61 Viewer 45, 46, 57, 58, 61
W
Wall-mounted holder41 When the logger will not be used for long time91
Υ
Year, month, day, and hour setting15, 29

Warranty Certificate



Model	Serial number	Warranty period Three (3) years from date of purchase (/
Customer name: Customer address:		

Important

- · Please retain this warranty certificate. Duplicates cannot be reissued.
- Complete the certificate with the model number, serial number, and date of purchase, along with your name and address. The personal information you provide on this form will only be used to provide repair service and information about Hioki products and services.

This document certifies that the product has been inspected and verified to conform to Hioki's standards.

Please contact the place of purchase in the event of a malfunction and provide this document, in which case Hioki will repair or replace the product subject to the warranty terms described below.

Warranty terms

- The product is guaranteed to operate properly during the warranty period (three [3] years from the date of purchase).
 If the date of purchase is unknown, the warranty period is defined as three (3) years from the date (month and year) of manufacture (as indicated by the first four digits of the serial number in YYMM format).
- 2. If the product came with an AC adapter, the adapter is warrantied for one (1) year from the date of purchase.
- The accuracy of measured values and other data generated by the product is guaranteed as described in the product specifications.
- 4. In the event that the product or AC adapter malfunctions during its respective warranty period due to a defect of workmanship or materials, Hioki will repair or replace the product or AC adapter free of charge.
- 5. The following malfunctions and issues are not covered by the warranty and as such are not subject to free repair or replacement:
 - -1. Malfunctions or damage of consumables, parts with a defined service life, etc.
 - -2. Malfunctions or damage of connectors, cables, etc.
 - -3. Malfunctions or damage caused by shipment, dropping, relocation, etc., after purchase of the product
 - -4. Malfunctions or damage caused by inappropriate handling that violates information found in the instruction manual or on precautionary labeling on the product itself
 - -5. Malfunctions or damage caused by a failure to perform maintenance or inspections as required by law or recommended in the instruction manual
 - -6. Malfunctions or damage caused by fire, storms or flooding, earthquakes, lightning, power anomalies (involving voltage, frequency, etc.), war or unrest, contamination with radiation, or other acts of God
 - -7. Damage that is limited to the product's appearance (cosmetic blemishes, deformation of enclosure shape, fading of color, etc.)
 - -8. Other malfunctions or damage for which Hioki is not responsible
- 6. The warranty will be considered invalidated in the following circumstances, in which case Hioki will be unable to perform service such as repair or calibration:
 - -1. If the product has been repaired or modified by a company, entity, or individual other than Hioki
 - -2. If the product has been embedded in another piece of equipment for use in a special application (aerospace, nuclear power, medical use, vehicle control, etc.) without Hioki's having received prior notice
- 7. If you experience a loss caused by use of the product and Hioki determines that it is responsible for the underlying issue, Hioki will provide compensation in an amount not to exceed the purchase price, with the following exceptions:
 - -1. Secondary damage arising from damage to a measured device or component that was caused by use of the product
 - -2. Damage arising from measurement results provided by the product
 - -3. Damage to a device other than the product that was sustained when connecting the device to the product (including via network connections)

8. Hioki reserves the right to decline to perform repair, calibration, or other service for products for which a certain amount of time has passed since their manufacture, products whose parts have been discontinued, and products that cannot be repaired due to unforeseen circumstances.

HIOKI E.E. CORPORATION

7 EN-3