

PROFITEST PVsUN and PVsUN MEMO

Test Instruments for Testing PV Modules
and Strings per DIN EN 62446 (VDE 0126-23)

3-349-672-15
11/3.16



1	Scope of Delivery	2
2	Significance of Symbols	2
3	Introduction	3
4	Transport and Storage	3
5	Safety Precautions	3
6	Use for Intended Purpose	3
7	Operating and Display Elements	3
8	Initial Start-Up	4
9	Measurements	4
9.1	Testing Protective Conductor Continuity per EN 62446 (VDE 0126-23) (> 200 mA)	4
9.2	Polarity Test / Measuring Open Circuit Voltage U_0 per EN 62446 (VDE 0126-23)	4
9.3	Measuring Short-Circuit Current I_{SC} per EN 62446	5
9.4	Testing Insulation Resistance per EN 62446	5
9.5	General Insulation Resistance Measurement	6
9.6	Ground Fault Test	6
10	Data Storage with PROFITEST PVsun memo	7
10.1	Operating and Display Elements	7
10.2	Function Description	7
11	Application of PC Software	8
11.1	System Requirements	8
11.2	Installation	8
11.3	Initial Startup of the Device	8
11.4	Creation of Structures and Transfer to the Test Instrument	8
11.5	Reading Out and Exporting Test Data	8
12	Measurement of irradiation, temperature and inclination with PROFITEST PVsun-sor (optional)	9
13	Characteristic Values	9
14	Maintenance	10
14.1	Battery Replacement	10
14.2	Housing	10
15	Repair and Replacement Parts Service Calibration Center* and Rental Instrument Service	10
16	Product Support	10

1 Scope of Delivery

- 1 PROFITEST PVSUN or PROFITEST PVSUN MEMO
- 4 Batteries, 1.5 V IEC LR6 (AA)
- 3 Safety measurement cables, 1.5 m, red, blue and yellow:
banana plug – banana plug
- 1 Solar plug adapter, red: MC3 socket – banana socket
- 1 Solar plug adapter, red: MC4 socket – banana socket
- 1 Solar plug adapter, blue: MC3 plug – banana socket
- 1 Solar plug adapter, blue: MC4 socket – banana socket
- 1 Plug-on safety test probe with socket, red
- 1 Plug-on safety alligator clip with socket, yellow-gray
- 1 Carrying case with foam insert
- 1 Set of operating instructions

Meanings of Symbols on the Instrument



Warning concerning a point of danger
(attention: observe documentation!)



Protection class II device
(continuous, doubled or reinforced insulation)



This device may not be disposed of with the trash. Fur-



EC mark of conformity

Meanings of Symbols in the Operating Instructions



Caution! Dangerous Voltage



Attention!

While performing measurements in the presence of dangerous voltages, the **PROFITEST PVSUN/ PROFITEST PVSUN MEMO** should only be operated with PPE safety gloves as it involves the risk of hazardous contact.



Warning!

Warning concerning a source of danger



Attention!

Non-observance may result in distorted measurement results.



Note

Please observe!

Opening of Equipment / Repair

The equipment may be opened only by authorized service personnel to ensure the safe and correct operation of the equipment and to keep the warranty valid.

Even original spare parts may be installed only by authorized service personnel.

In case the equipment was opened by unauthorized personnel, no warranty regarding personal safety, measurement accuracy, conformity with applicable safety measures or any consequential damage is granted by the manufacturer.

Measuring Categories and their Significance per IEC 61010-1

CAT	Definition
0	Measurements in other electrical circuits which are not directly connected to the mains: <i>e.g. electrical systems in motor vehicles and aircraft, batteries etc.</i>
II	Measurements in electrical circuits which are electrically connected to the low-voltage mains: <i>via plug, e.g. in household, office and laboratory applications</i>
III	Measurements in building installations: <i>Stationary consumers, distributor terminals, devices connected permanently to the distributor</i>
IV	Measurements at power sources for low-voltage installations: <i>meters, mains terminals, primary overvoltage protection devices</i>

3 Introduction

These operating instructions contain information and directions which are necessary for safe operation and use of the instrument. Before using the instrument, the operating instructions must be carefully read and all points contained therein must be followed correctly. Non-observance of the operating instructions, as well as warnings and directions included therein, may result in severe injury to the user or damage to the instrument.

The **PROFITEST PVSUN** is used for simple testing of solar cells and modules. The terms used in these operating instructions to designate systems for generating electrical power from sunlight include: solar system, photovoltaic system, PV system and the like.

Scope of Functions

- Voltage measurement to 1000 V DC
- Short circuit current measurement to 20 A DC
- Selection of insulation test voltage: 250, 500 or 1000 V DC
- Insulation measurement to 20 M Ω with display of limit value
- Testing of protective conductor continuity
- Earth fault measurement
- Polarity check
- Backlit LCD panel
- Optional temperature measurement

4 Transport and Storage

Please retain the original packaging for subsequent shipment of the instrument. Transport damages due to inadequate packaging are excluded from the guarantee.

The instrument may only be stored in dry, closed rooms.

If the instrument is subjected to extreme temperature during transport, it requires at least 2 hours for acclimatization before it is switched on.

5 Safety Precautions

The instrument has been manufactured and tested in accordance with IEC/EN 61010-1, "Safety requirements for electrical equipment for measurement, control and laboratory use", and has been shipped from the factory in flawless technical safety condition. In order to assure that this condition is retained, the user must observe the safety precautions included in these operating instructions.



Caution! Dangerous Voltage

In order to prevent electrical shock, corresponding safety precautions must be implemented when working with voltages of greater than 120 V (60 V) DC or 50 V (25 V) AC TRMS. In accordance with DIN VDE, these values specify the limit for exposed (touchable) voltages (the values in parentheses apply to, for example, the fields of medicine and agriculture).

Before each measurement, make sure that the measurement cables and the measuring instrument are in flawless condition. The measuring instrument may only be used within the specified measuring ranges.

If the safety of the user is no longer assured, the instrument must be removed from service and secured against unintentional use.

Safety of the user is no longer assured if the instrument:

- Demonstrates apparent damage
- No longer performs the desired measurements
- Has been stored for too long under unfavorable conditions
- Has been subjected to mechanical stressing during transport

The instrument may not be opened, dismantled or modified in any way. The instrument may only be used with recommended accessories. The use of unsuitable accessories is impermissible.

Trade association accident prevention regulations for electrical systems and operating equipment must be adhered to during all work with the instrument.

Do not allow the **instrument to warm up** due to exposure to direct sunlight. Flawless functioning and a long service life cannot otherwise be assured.



Attention!

The **internal warming of the test instrument** is measured electronically. An impermissible overheating is signalled by I_{SC} and $^{\circ}C$ in the display while further measurements are being disabled. Allow the test instrument to cool down before continuing measurements.

6 Use for Intended Purpose

The instrument may only be used under the conditions and for the purposes for which it has been designed. In this respect, special attention must be given to safety precautions, technical data regarding ambient conditions and use in a dry environment.



Warning!


The instrument may not be operated at measuring category II, III and IV mains power circuits.

In accordance with EN 61010-1:2010, the instrument has been designed without a rated measuring category, and may only be used at direct voltage circuits with up to 1000 V without transient overvoltages.

Operating safety is no longer assured in the event of modification or alteration. The instrument may only be opened by authorized service technicians.

Never operate the instrument at a higher voltage than specified in the technical data! The instrument may otherwise be destroyed or permanently damaged.

7 Operating and Display Elements

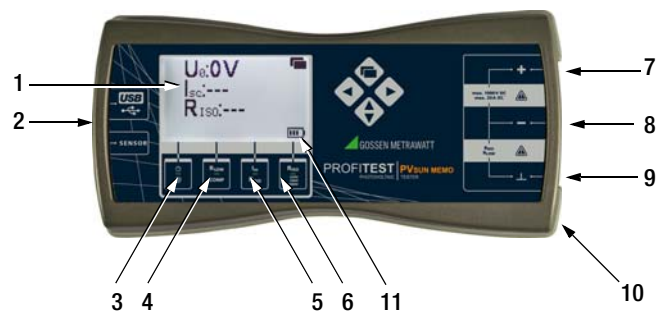

- 1 LCD panel with background illumination
- 2 Sensor socket for temperature measurement (optional)
- 3 On/Off switch / background illumination
- 4 Low-resistance measurement R_{Low} / measurement cable compensation **COMP**
- 5 Short-circuit measurement I_{SC} / insulation resistance measurement R_{ISO} per EN 62446
- 6 General insulation resistance measurement R_{ISO} / selection of insulation test voltage
- 7 Measurement input +
- 8 Measurement input - / insulation measurement / continuity test
- 9 Measurement input ground terminal / insulation measurement / continuity test
- 10 Back: battery compartment
- 11 Battery level indicator

8 Initial Start-Up

The **PROFITEST PVSUN** is supplied with power from four AA batteries (1.5 V IEC LR6). The batteries must be inserted before the instrument can be used.

- Remove the battery compartment lid on the back of the instrument by loosening the two Phillips head screws.
- Insert the batteries. Be sure to observe the polarity symbols which are embossed into the floor of the battery compartment.
- Replace the battery compartment lid and retighten the screws.



Attention!

The test instrument may only be operated with installed battery compartment lid.

9 Measurements



Warning!


The photovoltaic system's plug connectors may not be disconnected under load. Please observe warnings and instructions provided by the plug manufacturer.



Caution! Dangerous Voltage

Solar modules continuously generate current, even when shaded. Regulations for working with live voltage must be adhered to during all work.


Switching the PROFITEST PVSUN On

- The test instrument is switched on by pressing the  key.
- After the test instrument has been switched on, background illumination can be switched on by briefly pressing the same key once again.
- Briefly pressing the key a third time switches background illumination back off.
- The test instrument can be switched off by pressing and holding the key for longer than 2 seconds.

9.1 Testing Protective Conductor Continuity per EN 62446 (VDE 0126-23) (> 200 mA)

If a protective conductor or an equipotential bonding conductor is included at the DC side of the photovoltaic system, its electrical connection must be tested for continuity.

The connection to the main grounding terminal must also be tested.

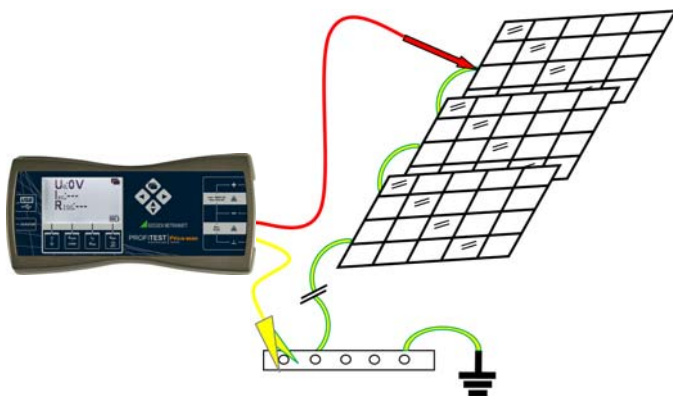


Warning!


Disconnect all solar modules from the system before performing the measurement.

Compensation for Measurement Cable Resistance

 Ohmic measurement cable resistance can be subtracted from the measurement results automatically. Proceed as follows in order to determine the resistance offset value:

- Switch the **PROFITEST PVSUN** test instrument on.
- Connect the measurement cables to the (–) and (⊥) sockets and short-circuit the plug-on test probes.
- Press and hold the **COMP** key for at least 2 seconds in order to trigger offset resistance measurement. Symbol  briefly appears. The following display appears after completion of the measurement: **R_{LOW}: 0.0 Ω**.

 The measured **ROFFSET** value is not displayed, but is permanently stored internally and is subtracted from the actual result of all subsequent **R_{LOW}** measurements, until a new offset resistance value is acquired.


If the measured value of the connected cable is > 5 Ω the symbol  briefly appears. Compensation of measurement cable resistance is not possible.

Protective Conductor Resistance Measurement

- Connect the (–) socket to a protective conductor terminal at the solar module and the (⊥) socket to the equipotential bonding busbar.
- Briefly press the **R_{LOW}** key.

Measurement is started. The **R_{LOW}** resistance value measured for the protective conductor system appears at the display:

Example

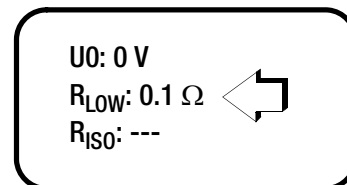

Attention!


Measurement results may be distorted due parallel connected impedances at load current circuits, as well as equalizing current.

9.2 Polarity Test / Measuring Open Circuit Voltage U_0 per EN 62446 (VDE 0126-23)




Warning!

Disconnect the solar module under test from the system before performing measurement.

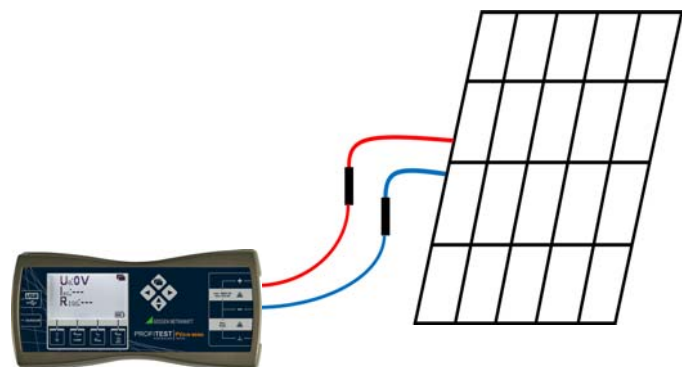

- Connect the **PROFITEST PVSUN** test instrument to the module with the help of suitable solar pliers.


- Switch the **PROFITEST PVsUN** test instrument on.
The module's open circuit voltage U_0 appears at the display.
Example

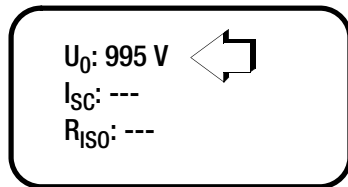

Note

In the case of incorrect polarity, a warning symbol appears to the right of the voltage display.

Example

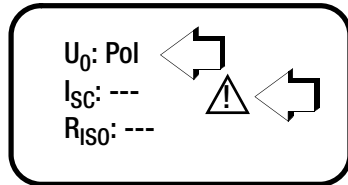


- Reverse polarity at the solar module and start testing over again.

9.3 Measuring Short-Circuit Current I_{SC} per EN 62446




Warning!

Disconnect the solar module under test from the system before performing the measurement.

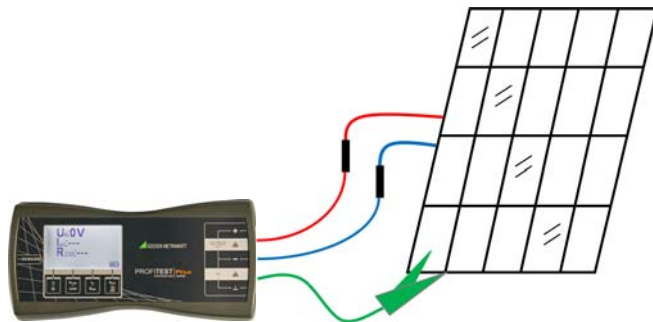

- Connect the **PROFITEST PVsUN** test instrument to the module with the help of suitable solar plugs.
- Switch the **PROFITEST PVsUN** test instrument on.
The module's open circuit voltage U_0 appears at the display.
- Press the I_{SC} key.
Open circuit voltage U_0 and short-circuit current I_{SC} appear at the display:
Example

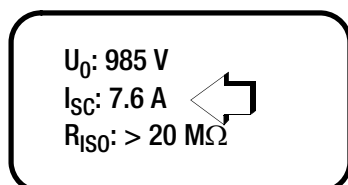


The (+) and (-) terminals at the solar module are short circuited during the measurement, and momentary short-circuit current is measured. Insulation resistance is measured at the same time (see section 9.4).

9.4 Testing Insulation Resistance per EN 62446



Warning!

Disconnect the solar module under test from the system before performing measurement.

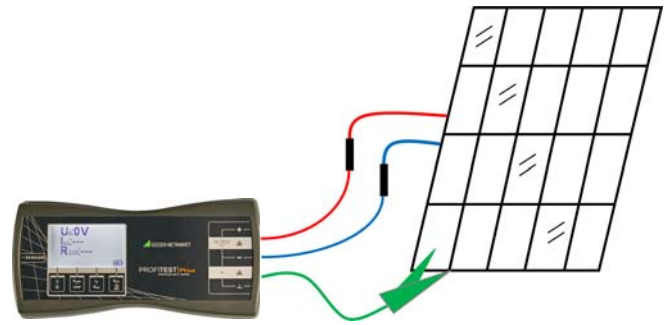


Attention!

Insulation measurement per EN 62446 is executed between short circuited (+) / (-) and (L) terminals.

- Connect the **PROFITEST PVsUN** test instrument to the module with the help of suitable solar plugs.
- Connect the ground terminal at the **PROFITEST PVsUN** to the module frame.
- Switch the **PROFITEST PVsUN** test instrument on.
The module's open circuit voltage U_0 appears at the display.

Selecting the Test Voltage

- Press and hold the **RISO/250V/500V/1000V** key for at least 2 seconds.
The currently selected test voltage appears the display.
- Select the required insulation test voltage by briefly and repeatedly pressing the **RISO/250V/500V/1000V** key.
The last selected value is saved after a short period of time, and is then cleared from the display.
Example

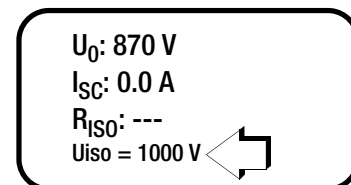

Executing the Insulation Resistance Measurement

- Press the I_{SC}/R_{ISO} key and read the measured value from the display.

The (+) and (-) terminals at the solar module are short circuited during the measurement, and momentary short-circuit current is measured. Insulation resistance is measured at the same time.

Minimum Permissible Limit Values for Insulation Resistance Relative to Insulation Test Voltage per EN 62446


System Voltage (U_0 x 1.25)	Test Voltage	Limit Value
< 120 V	250 V	0.5 M Ω
120 to 500 V	500 V	1 M Ω
> 500 V	1000 V	1 M Ω



Note

If the limit value is fallen short of,
< 1 M Ω or < 0.5 M Ω appears for R_{ISO} .

Example

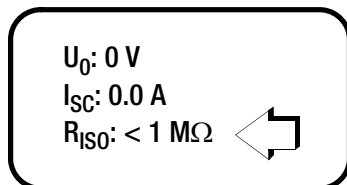


9.5 General Insulation Resistance Measurement

The **PROFITEST PVSUN** test instrument is additionally equipped with system-independent insulation testing. This is helpful, for example, when testing systems or supply lines when no modules have yet been installed. All insulation tests known to date can be performed.



Warning!

The test object must be potential-free. Assure absence of voltage with the help of a suitable measuring instrument, for example the METRAVOLT 12D+L voltage tester.

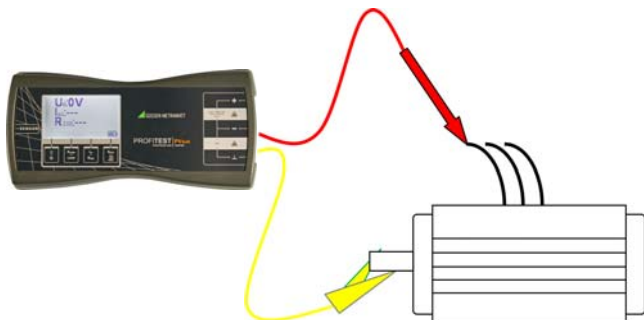

Note

General insulation measurement is executed between short circuited (–) and (L) terminals.

- Connect the (–) and (L) terminals at the **PROFITEST PVSUN** to the device under test.
- Switch the **PROFITEST PVSUN** test instrument on.

Selecting the Test Voltage


- Press and hold the **RISO/250V/500V/1000V** key for at least 2 seconds.

The currently selected test voltage appears at the display.

- Select the required insulation test voltage by briefly and repeatedly pressing the **RISO/250V/500V/1000V** key.

The last selected value is saved after a short period of time, and is then cleared from the display.

Example

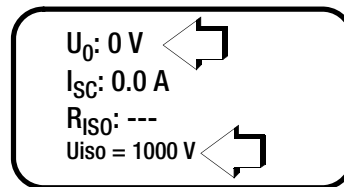

Executing the Insulation Resistance Measurement

- Press the **RISO/250V/500V/1000V** key and read the measured value from the display.

Example



Note

If the minimum permissible limit value is fallen short of,
< 1 M Ω or < 0.5 M Ω appears for R_{ISO} .

9.6 Ground Fault Test


If the test instrument recognizes an inadmissible, low insulation value during I_{SC}/R_{ISO} measurement, the instrument tests for possible ground fault.

If a ground fault occurs within the system, the error can be narrowed down on the basis of the voltage ratio.



Warning!

Disconnect all solar modules from the system before performing the measurement.

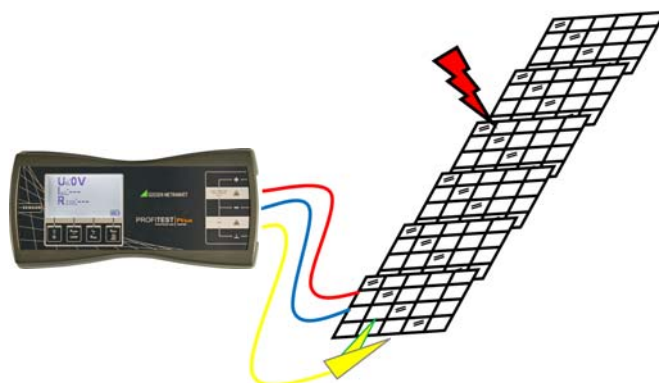


- Connect the **PROFITEST PVSUN** to the module with the help of suitable solar plugs.
- Connect the ground terminal at the **PROFITEST PVSUN** to the module frame.
- Switch the **PROFITEST PVSUN** test instrument on.

Momentary open circuit voltage is displayed.

At the same time, a second voltage (U_e) appears in the event of a ground fault.


Example

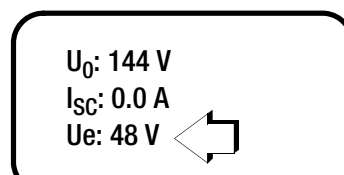

10 Data Storage with PROFITEST PVSUN MEMO

The **PROFITEST PVSUN MEMO** test instrument is equipped with an internal memory for the storage of 10,240 data records. The stored data can be read out via a USB port for subsequent evaluation from a PC. Furthermore, the included PC software allows for the creation of individual test structures.

10.1 Operating and Display Elements

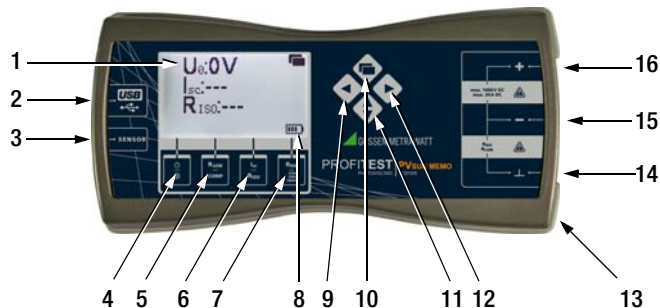

- 1 LCD panel with background illumination
- 2 USB interface
- 3 Sensor socket for temperature measurement (optional)
- 4 ON/OFF switch / background illumination
- 5 Low-resistance measurement R_{LOW} / measurement cable compensation **COMP**
- 6 Short-circuit measurement I_{SC} / insulation resistance measurement R_{ISO} per EN 62446
- 7 General insulation resistance measurement R_{ISO} / selection of insulation test voltage
- 8 Battery level indicator
- 9 Selection of objects or strings
- 10 Switch between display / activation of storage function
- 11 Switch between objects and strings
- 12 Selection of objects or strings
- 13 Back: battery compartment
- 14 Measuring input ground terminal (\perp) / insulation measurement / continuity test
- 15 Measuring input – / insulation measurement / continuity test
- 16 Measuring input +



Battery full



Battery weak

10.2 Function Description




Switch between standard measurement display and storage display




Switch to previous object or string



Switch to next object or string. If the last object or string is reached, a new object or a new string can be created by pushing this key (> 2 s).

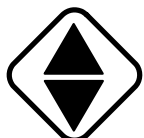


Switch between objects and strings. Symbol ► indicates whether objects or strings are active (e. g.: ►OBJ:Object1).

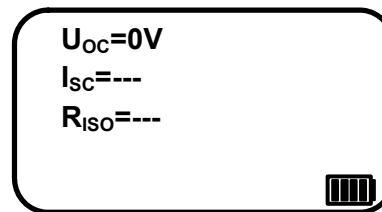

Standard measurement display without memory function

The storage function is not activated before switch-over to storage display, see screenshot below.

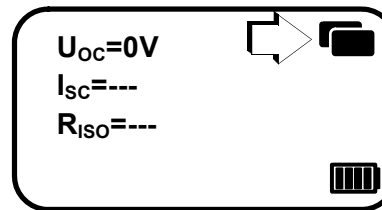


Standard measurement display with activated storage function.

If a measurement is performed, the measured values are stored under the object and string selected before.



Note

Stored values are overwritten in the activated object / string.

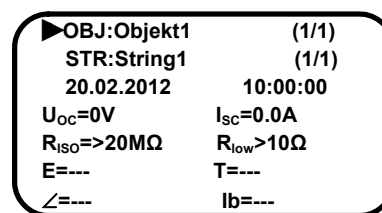


Storage display

►OBJ:Object1 / STR:String1 are active. Presently, one object (1/1) and one string (1/1) have been created.

Date / time

Measured values currently stored (meaning of abbreviations):

U_{OC}	Open-circuit voltage
I_{SC}	Short-circuit voltage
R_{ISO}	Insulation resistance
R_{LOW}	Low-resistance measurement
E	Solar irradiation (optional with PROFITEST PV SUN-SOR)
T	Module temperature (optional with PROFITEST PVSUN-SOR)
\angle	Inclination angle of module (optional with PROFITEST PVSUN-SOR)
I_b	Operating current (optional with current clamp)

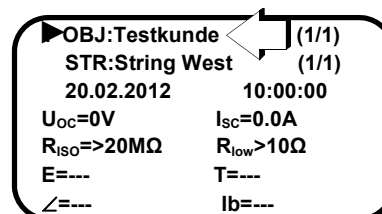

(Alphanumeric) names can be assigned to objects and strings with the PC software (e. g. OBJ: test client).



Note

If objects and strings are extended in the test instrument, it is not possible to assign alphanumeric characters. There is only an incrementation instead (gradual increase by one character each).

11 Application of PC Software

Individual test structures can be created at the PC with the included software. This structure makes it possible to assign measurements to the objects and strings of different units and buildings. For use at the construction site, the respective test structures are first transferred to the test instrument via the USB interface. After performing the measurements, the test instrument is read out and the structures are represented together with the measured values in tabular form.

11.1 System Requirements

Hardware

- Processor and RAM see minimum requirements of the respective operating system
- VGA monitor with a resolution of at least 1024 x 768 pixels
- Hard disc with at least 12 MB available memory
- Both input devices (mouse / keyboard)
- One or several USB interfaces

Operating System – Software

- Windows XP, Windows Vista, Windows 7 or 8

11.2 Installation

The latest version of the PC software PV SUN MEMO Control Center is available for free download as a zip file from our homepage:

→ Products → Electrical Testing → Testing of Electr. Installations
→ PROFITEST PVSUN MEMO

The zip file must be unpacked and stored in a directory. The setup file has been placed in this directory. Double-click on the setup to launch the installation routine. An assistant guides you through the complete installation.

The installation directory and the program file can be selected at your own discretion.

11.3 Initial Startup of the Device

- Switch on the test instrument and connect it with your PC. Windows announces that a device has been connected and that the driver must be installed.
- Select manual installation „Install software from a list or a specific source“.
- Click on „Search“ in the next menu and select directory „C:\Programme\PVSUN MEMO Control Center\USB Driver“ (unless you have changed the installation path).
- Ignore the message regarding unknown provenance of the software.
- Complete the driver installation.
- Please check: „PVSUN MEMO Memory (COMxx)“ should be displayed in the device manager under Connections.
- Start the installed program „PVSUN MEMO Control Center“.
- Click on icon „Search device“.

11.4 Creation of Structures and Transfer to the Test Instrument

Create a new structure by clicking on icon „New“ under „Measuring Data“.



Attention!

Clicking on „New“ deletes the structures and measuring data indicated before.

You can freely extend a structure by clicking on icon „+Object“ or „+String“. Repeat these steps until you have created the requested structure. By clicking on the object or string denomination you can change the name at your discretion (alphanumeric).

The number of possible data records = objects which can be transferred to the test instrument, amounts to approx. 10,000. Click on the „Write“ icon for transferring the data records to the test instrument.

Setting of Date/Time

Date/time in the test instrument are synchronized automatically upon importing the file (structure) from the PC.

11.5 Reading Out and Exporting Test Data

After performing the measurements, click on icon „Read“ for reading out the data records (structures and measured values) from the test instrument. The structures are presented in tabular form together with the measuring data. The column width of the header elements can be adjusted by dragging the column border lines to the right or to the left.

Object	String	Datum / Uhrzeit	Uoc	Isc	Pmax	Uoc	Ue	Pmax	E	T	N	Is
Objekt1	String1	00.00.2000 00:00:00	---	---	>20M	1000V	0V	>100mA	100W/m²	21°C	0.2"	---
Objekt2	String1	00.00.2000 00:00:00	0V	0.0A	>20M	1000V	0V	---	---	---	---	---
Objekt2	String2	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt2	String3	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt3	String1	00.00.2000 00:00:00	0V	0.0A	>20M	1000V	0V	>100mA	---	---	---	---
Objekt4	String1	00.00.2000 00:00:00	0V	0.0A	>20M	1000V	0V	---	---	---	---	---
Objekt5	String1	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String1	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String2	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String3	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String4	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String5	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String6	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String7	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Objekt5	String8	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Obj7	String1	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Obj7	String2	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---
Obj7	String3	00.00.2000 00:00:00	---	---	---	---	---	---	---	---	---	---

For storage and subsequent evaluation of the measuring data, press icon „Export“. The data are written into a csv file so that they can be exported to other programs, such as Microsoft Excel.

Deleting of Structures

The structural contents are automatically deleted when an empty structure is transmitted to the test instrument.

12 Measurement of irradiation, temperature and inclination with PROFITEST PVSUN-SOR (optional)




Warning!

Hot surfaces may cause burns.

- ⇒ Connect the **PROFITEST PVSUN-SOR** to the sensor socket.
 - ⇒ Place the **PROFITEST PVSUN-SOR** onto the surface of the photovoltaic module.
 - ⇒ Switch the **PROFITEST PVSUN** / **PROFITEST PVSUN MEMO** on.
- The display shows the momentary irradiation, the surface temperature and the inclination angle of the modules.

Example:

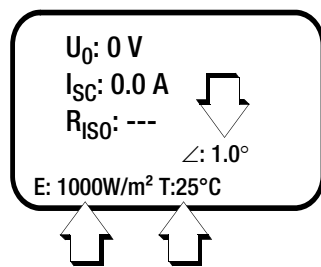

Characteristic Values PROFITEST PVSUN-SOR

Irradiance	Measuring range 0 ... 2000 W/m ² Resolution 1 W/m ² Cell monocrystalline, approx. 27 x 16 mm Accuracy ±15% (T = 25 °C)
Temperature Measurement	Measuring range -55...99 °C Resolution 1 °C Accuracy ±1 °C
Inclination Angle	Measuring range 0 ... 90° Resolution 0,1° Accuracy ±1°
Cable length	approx. 10 m
Power Supply	via PROFITEST PVSUN / PROFITEST PVSUN MEMO approx. 3,3 V / 3,1 mA
Dimensions	approx. 120 x 65 x 27 mm
Weight	approx. 150 g

13 Characteristic Values

Voltage Measurement U0

Measuring range	0 to 100 V to 1000 V DC (no transient voltages)
Resolution	1 V
Accuracy	±(2% rdg. + 1 d)

Current (direct)

Measuring range	0 to 20 A DC
Voltage range	2 to 1000 V DC
Resolution	0.1 A
Accuracy	±(1% rdg. + 1 d)
Overcurrent protection	Max. 24 A (shutdown of internal circuit)

Insulation Resistance Measurement RISO

Test voltage	250 V DC	500 V DC	1000 V DC
Measuring range	0.5 MΩ to 1 MΩ	1 MΩ to 20 MΩ	1 MΩ to 20 MΩ
Resolution	0.1 MΩ	1 MΩ	1 MΩ
Accuracy	±(1% rdg. + 1 d)	±(1% rdg. + 2 d)	±(1% rdg. + 2 d)
Limit value	> 0.5 MΩ	> 1 MΩ	> 1 MΩ
No. of measurements	Approx. 1000 (with battery set per IEC LR6)		

Earth Fault Measurement

Measuring range	0 to 1000 V DC
Resolution	1 V
Accuracy	±(5% rdg. + 1 d)

Low-Resistance Measurement

Measuring range	0 to 10 Ω
Test current	> 200 mA
Resolution	0.1 Ω
Accuracy	±(1% rdg. + 1 d)
No. of measurements	Approx. 500 low-resistance measurements (batteries: 1.5 V per IEC LR6)

Display

LCD	Backlit multiple display Dot matrix: 128 x 64 pixels
-----	---

Reference Conditions

Ambient temperature	+23 °C ±2 K
Relative humidity	40 to 75%
Battery voltage	6 V ± 1 V

Ambient Conditions

Operating temperature	0 to +40 °C
Storage temperature	-10 °C to 60 °C
Relative humidity	< 80%, no condensation allowed
Elevation	Max. 2000 m above sea level

Power Supply

Batteries	4 ea. 1.5 V IEC LR6, AA, AM3, MN1500
Consumption	Approx. 20 µA when switched off Approx. < 30 mA during normal operation Approx. 190 mA with backgr. illumination

Electrical Safety

Voltage range	1000 V
---------------	--------

Electromagnetic Compatibility (EMC)

EMC directive	EMC 2004/108/EC
Basic standard	EN 61326-1:2006

Data Memory (PROFITEST PVSUN MEMO only)

Storage capacity	max. 10,240 data records
Memory type	non-volatile flash memory (data are pre-served even if batteries are depleted)

Data Interface (PROFITEST PVSUN MEMO only)

Type	USB 2.0 (USB 2.0 full speed (12 Mbps) compatible)
Connection	mini-USB type B (5-pin)
Cable	USB 2.0 cable (A plug Mini-B-)

Mechanical Design

Protection	Housing: IP 42 per DIN VDE 0470 part 1/EN 60529
Dimensions	209 x 98 x 35 mm
Weight	Approx. 500 g with batteries

