




PAL Refractometer

How to Use

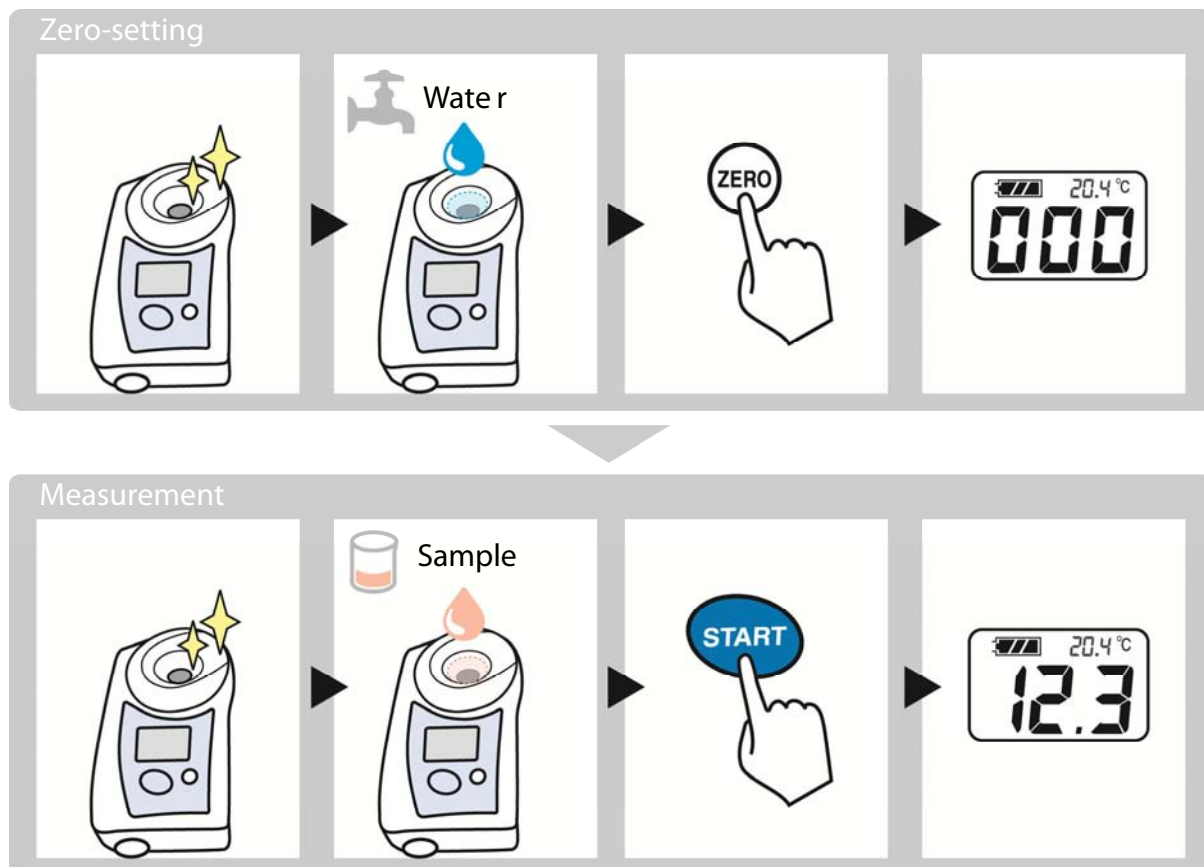

Error Messages

 Low Battery	 Zero Set Fault	 Too low / Sample not enough	 Out of range (too high)
 Too bright	 Temp. error (too low)	 Temp. error (too high)	 Malfunction

Attention

*Thoroughly wash and dry after use.

*Clean oily residues with alcohol or soap.