



TREND NETWORKS

LanTEK IV

The Future of
Cable Certification

Quick Reference
Guide



LanTEK IV

Quick Reference Guide

163819 rev2 2020

TREND NETWORKS



© TREND NETWORKS 2020

The information contained in this document is the property of TREND NETWORKS and is supplied without liability for errors and omissions. No part of this document may be reproduced or used except as authorized by contract or other written permission from TREND NETWORKS. The copyright and all restrictions on reproduction and use apply to all media in which this information may be placed. TREND NETWORKS pursues a policy of continual product improvement and reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service. All rights reserved.

English

Depend On Us

3



INTRODUCTION


The LanTEK IV and TREND AnyWARE are a Cable Certification System. This guide will give you an overview of the key features of LanTEK IV and how to start using AnyWARE to manage your project and test results.

EN


GETTING STARTED

Before you start using your LanTEK IV follow the steps below to ensure you can take advantage of all the features your LanTEK IV has to offer.


1. Fully charge the display and remote units using the power supply included in your case. This can be connected to the main charging port on the LanTEK IV or the quick charge port on the battery. The quick charge port reduces the charging time by 50%. To access the quick charge port the battery must first be removed by releasing the retaining screw.

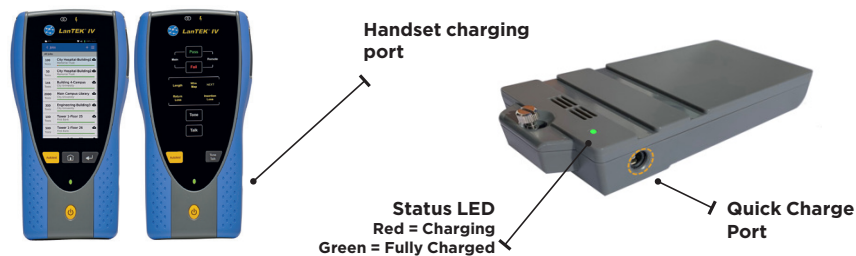


2. Select the language by selecting the setup gear at the top left of the screen.

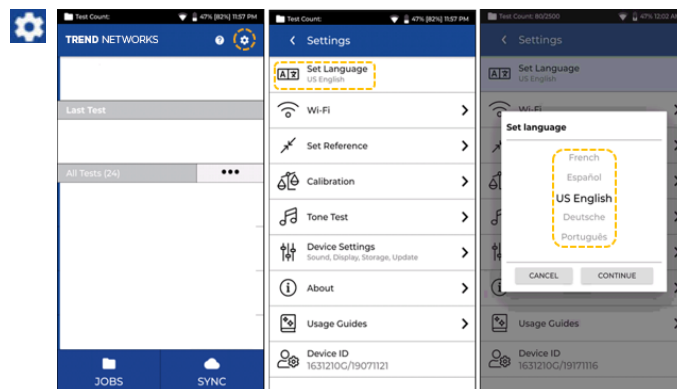

3. Visit anyware.trend-networks.net to setup your free TREND AnyWARE account to Manage, Share, Edit and Pre-configure your projects. Select; sign up for cloud based software or download for the desktop version.

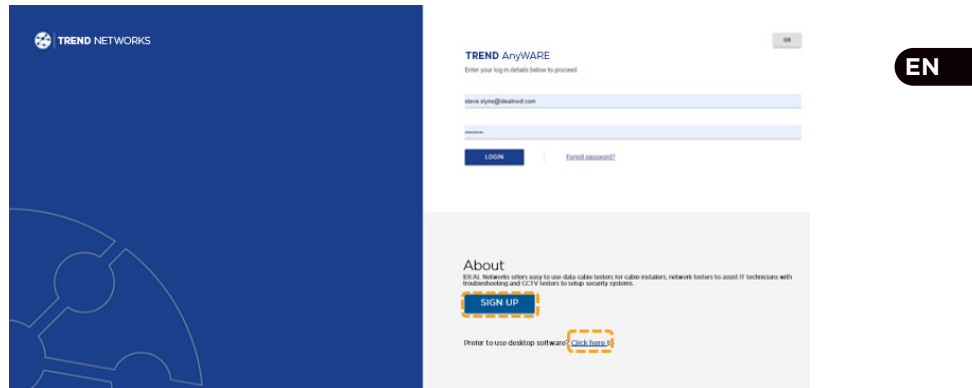

4. Link your LanTEK IV to your TREND AnyWARE Account by logging into your TREND AnyWARE account.
 - Select Menu:  Click Devices:  Devices Add Device: 
 - Enter your Device ID and select submit. The LanTEK IV device ID is found in the settings menu (below).

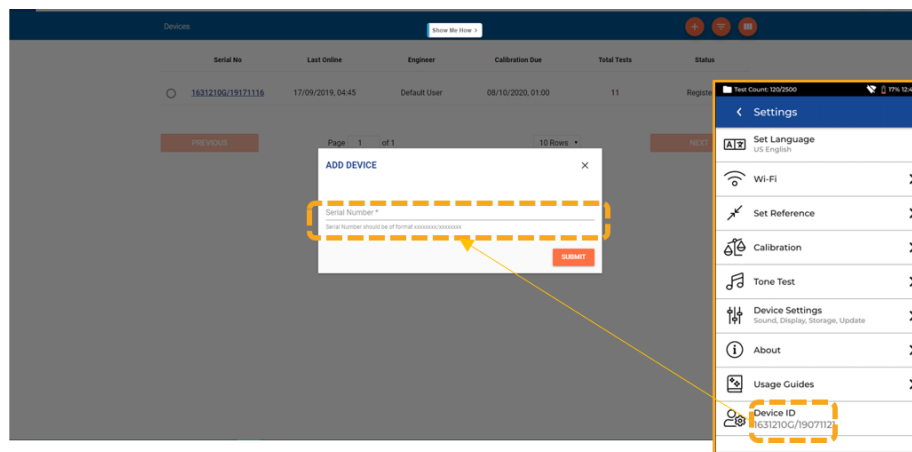

HELP OPTIONS

LanTEK IV and AnyWARE cloud have a comprehensive on-board help which will guide you through how to use the features. This can be accessed as follows;

EN

Help on the LanTEK IV



Icon on the Menu Bar



Or click Settings - Usage

Guides: Usage Guides >

Help on the AnyWARE Cloud

AnyWARE Cloud assistance can be accessed by the Walk Me Through tab located on the bottom right-hand side.

Walk Me Through ^

Return to home screen

Create new job

Multiple job select


List of all jobs saved to your LanTEK IV

Long press job for short cut options

Total number of tests within each project

View test results
Edit test
Print label
Delete test results

KEY FUNCTIONS LanTEK IV

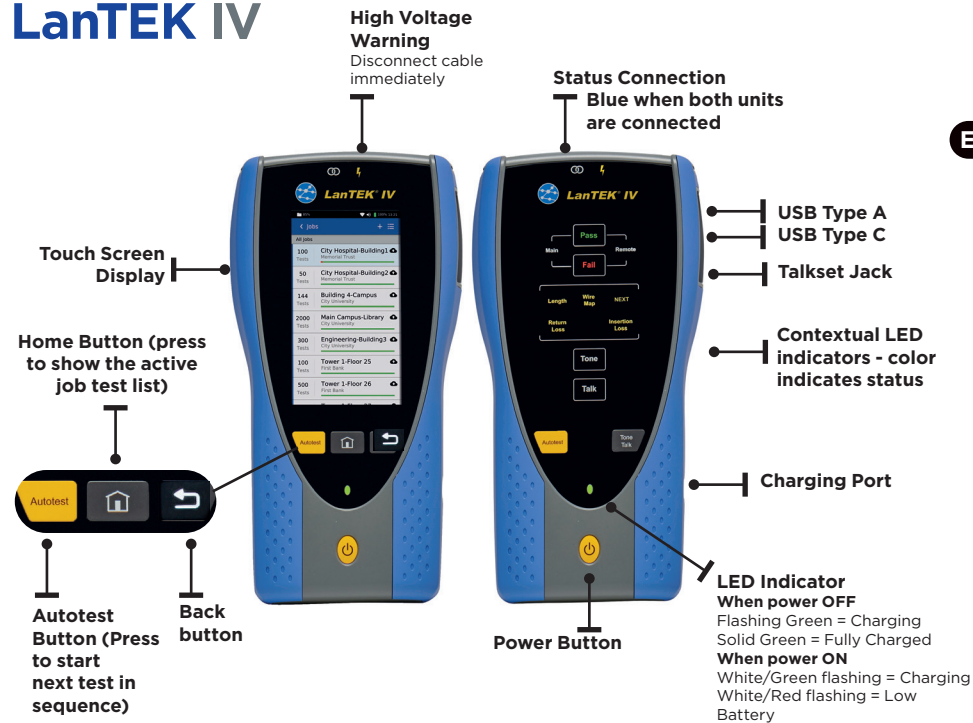


EN



VisiLINQ™ incorporates a multi-color LED indicator and action button to initiate tests and report the status independent of the tester handsets.



Field Replaceable Tip

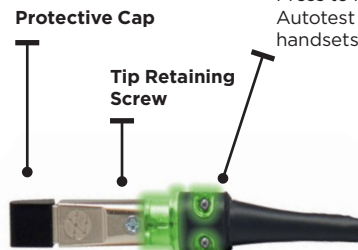

Action button;
Press to activate white torch when not linked.
Press to initiate Autotest when handsets are linked

LED Indicator
Blue = Display and Remote connected
Green = Pass
Red = Fail
Amber = Marginal Pass/Fail
White = Torch mode

Depend On Us

7

HOME SCREEN

The LanTEK IV home screen has been designed to display the details of the current project.

EN

Test Count is the number of tests saved/total memory capacity

Test Count: 80/2500

Settings and Help

Active job name, total number of tests and progress bar
 Red = Fail
 Green = Pass
 Grey = Untested

Last test completed

List of tests in the current job:
 Green = Pass
 Red = Fail
 Amber = Marginal
 Tap to view test results

Test list display options

Start test

Long press to access test options:

JOBS menu displays all jobs stored on the tester

SYNC to upload/download tests to AnyWARE Cloud or export to USB drive

Tap to view test results

Legend:
 Yellow = Next test execute when VisiLINQ action/Autotest button pressed

Test list display options menu:

- Live Wiremap
- ☐ Insertion Loss
- ☒ NEXT
- ☐ ACRF
- ☐ Return Loss


Test options menu:

- All Tests (24)
- Port13
- Class EA PL3
- View test results
- Edit test
- Print label
- Delete test results
- Set as next test
- Selected standard: ISO IEC > PL > EA > Class EA PL3



	End	Margin dB	Freq MHz	
WIREMAP	-	-	-	✓
NEXT	📶	5.5	500	✓
RL	📶	12.0	11.6	✓
IL	📶	2.9	1.0	✓
PSNEXT	📶	6.5	499	✓

SETTINGS

The settings can be accessed from the settings menu on the home screen.

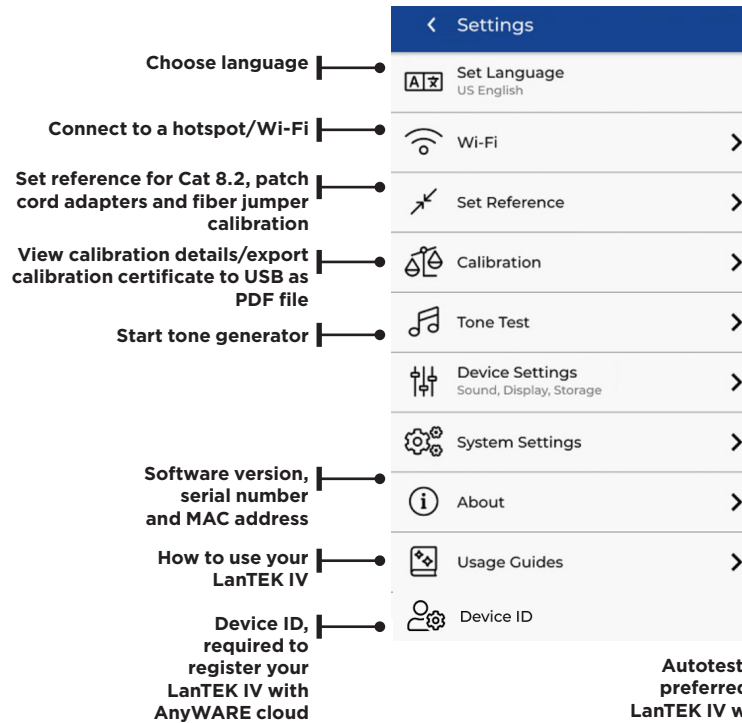

Autotest settings are your preferred set-up for a Job. LanTEK IV will use these settings as default for all new jobs to reduce set-up time

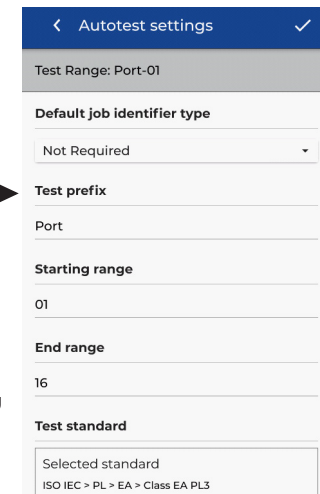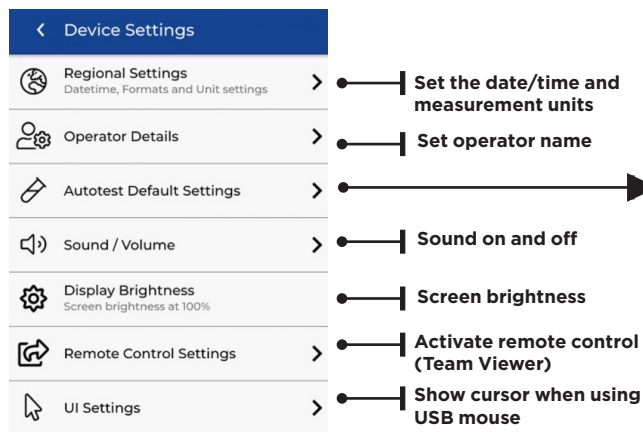

Depend On Us

9

CREATING A JOB

To create a job, select JOBS from the menu bar and then select: 

EN

1

< Create Job

Please enter information

Enter job name

My Job


Select job identifier

Not Required

q w e r t y u i o p

2

Select the newly created job from the jobs screen.

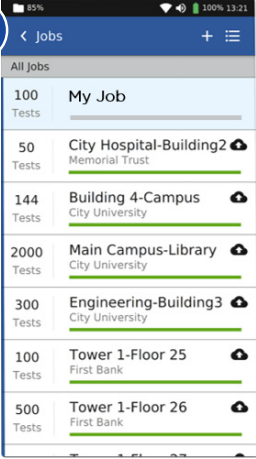

3

< Create Job

Please enter information

Enter job name


Select test mode

Copper

Fiber

4

Select + to add tests to the job, then choose Copper or Fiber

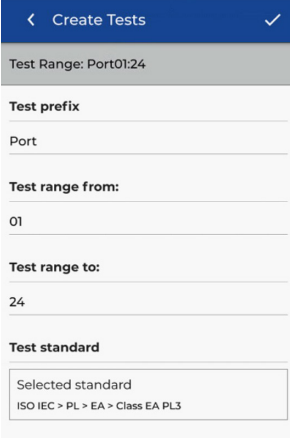

In Create Tests, enter the prefix (optional) and the test range.

Test Ranges

Enter an alpha-numeric value in Test Range from: that is the first test ID of a sequence. Then enter the last value of the sequence in Test range to: generate the list of test ID's. A red warning will be shown if the from and to ranges cannot create a continuous series.

10

163819 Rev 2.

1.888.610.7664

 www.calcert.com

sales@calcert.com

CREATING A JOB

< Create Tests ✓

Test Range: Port01:24

Test prefix

Port

Test range from:

01

Test range to:

24

Test standard

Selected standard
ISO IEC > PL > EA > Class EA PL3

5 Select standard

< Cable Standard ✓

Select a group

TIA

ISO IEC

Cenelec

Custom

AS NZ 3080

China

Japan

Korea

6 Choose the appropriate standard

< Cable Standard ✓

< ISO IEC
Standard

< PL
Link model

< EA
Grade

< Class EA PL3
Cable type

Cable details

Cable
Cat6a-STP

Connector brand (Near)
Generic

Connector brand (Far)
Generic

EN

7 Choose type of link

Cable details

Cable
Cat6a-STP

Connector brand (Near)
Generic

Connector brand (Far)
Generic

NVP ☒ Cable shielded
0.75

8

Optional Step, During the set-up the Cable and Connector manufacture can be selected to add more detail to the finished report

< Pick a brand

Select Manufacturer

3M >

BKS >

Belden >

BlackBox >

Commscope >

Connectix >

DRAKA >

Datwyler >

Datwyler Uninet >

< Create Tests ✓

Test Range: Port01:24

Test prefix

Port

Test range from:

01

Test range to:

24

Test standard

Selected standard
ISO IEC > PL > EA > Class EA PL3

9 Select ✓ when completed

Depend On Us


11

CONNECTING TO WI-FI


To connect LanTEK IV to Wi-Fi, firstly select the Settings menu: 



Select Wi-Fi from the Settings menu and switch toggle to turn on Wi-Fi.

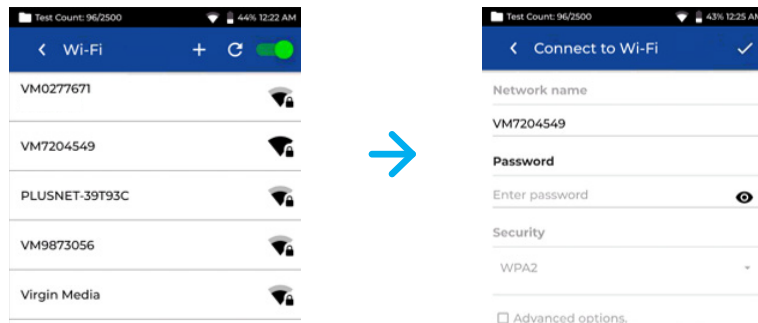


Select your chosen Network and enter password (if required).

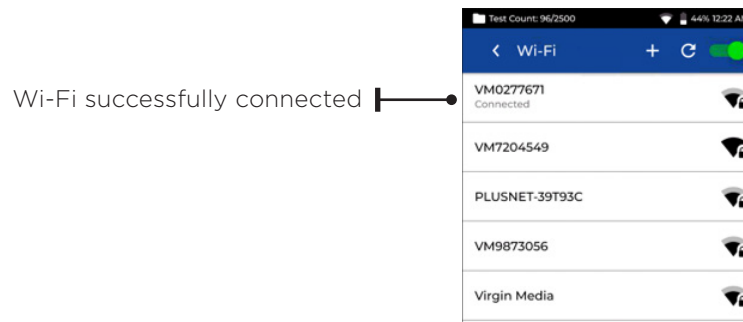

EN


Select SYNC

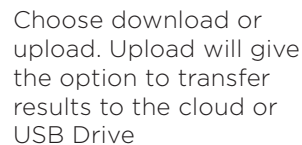

Jobs that have been uploaded to the cloud or USB are marked with cloud


To activate Live Wiremap in free mode. Swipe down from the top of the screen.

Activate Live Wiremap in a job select the test list options menu.

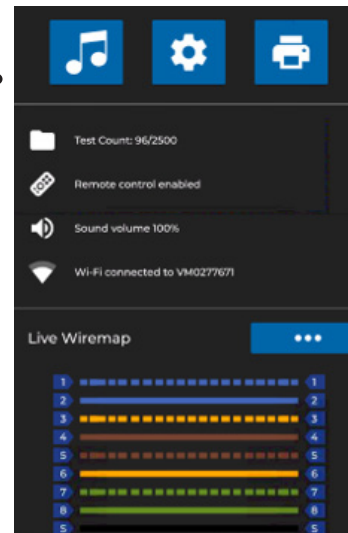

CREATING A TEST REPORT

Jobs can be reviewed and edited using TREND AnyWARE Cloud or Desktop, Jobs synced via Wi-Fi will automatically be added to jobs menu of the cloud.

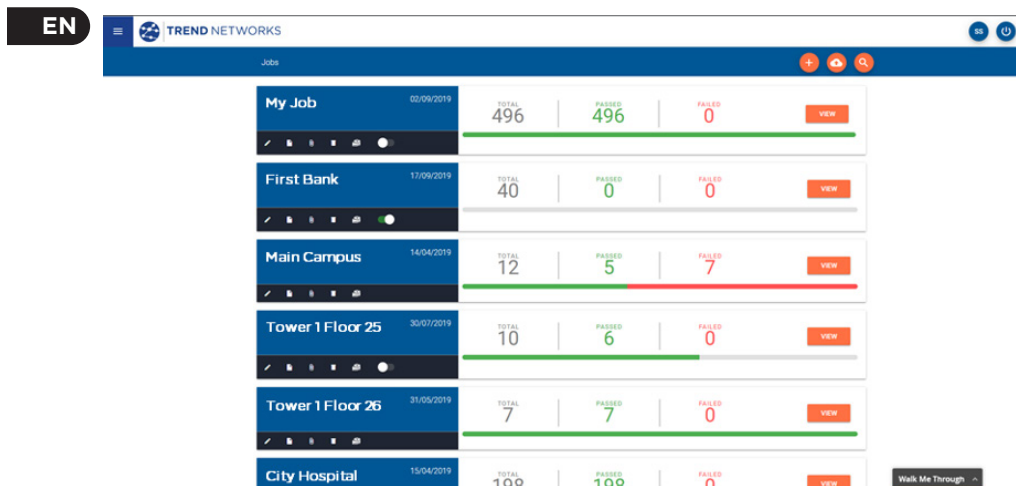

Key:



Upload jobs from USB using the Cloud and Desktop Swipe down from the top of the screen



View, download and email PDF reports



Download report



Generate a PDF test report



Share the report via an email link where the recipient can view and save the report

Reports						
	Name	Type	Status	Customer Name	Total Tests	File Size
☐	My Job	Brief	Completed	Radio Controls LTD	25	8968KB
☐	Main Campus	Brief	Completed	Amazon	25	8971KB
☐	First Bank	Brief	Completed	Amazon	25	8971KB
Created At						
						15/10/2019, 09:22
						15/10/2019, 09:21
						15/10/2019, 09:20



TREND NETWORKS, LanTEK, FiberTEK,
VisiLINO and the TREND AnyWARE
logos are trademarks or registered
trademarks of TREND NETWORKS

Specification subject to change without notice.
E&OE
© TREND NETWORKS 2020
Publication no.: 163819, Rev 2.