



Reveal Series User Manual

Welcome to the Reveal Series. Let's take a few minutes to quickly walk through the basics and learn how to use your device.

seek
thermal

Reveal



- Available with 9Hz frame rate or $\geq 15\text{Hz}$ (FF).

At a Glance:

- 36° Field Of View
- 400ft detection distance
- 206x156 professional sensor
- 330 Lumen flashlight

Great For:

Accurately and safely inspecting any job site.

Reveal XR



- Available with 9Hz frame rate or $\geq 15\text{Hz}$ (FF).

At a Glance:

- 20° Field Of View
- 900ft detection distance
- 206x156 professional sensor
- 300 Lumen flashlight

Great For:


Hunters, safety and security professionals.



Available Colors:

- Pure Black
- TrueTimber©
- Kanati Camouflage

Menu

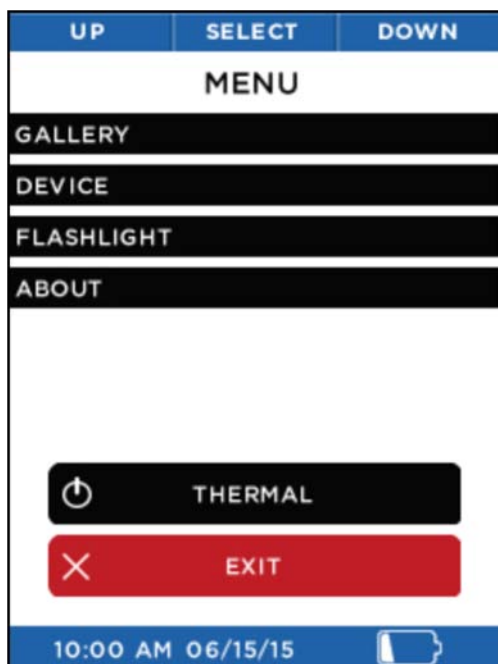

- View captured images.
- Set date, time, language, and auto power off settings.
- Control high and low flashlight intensity.
- Access device serial# and firmware version.

- Power off your device.
- Exit the menu.
- View time, date and battery Status.

Change reticle and temperature units by navigating to **Device** → **General**

To fully reset back to factory settings, choose **Device** then **Restore**.

Fast Frame (FF)

Reveal and RevealXR Fast Frame devices operate at $\geq 15\text{Hz}$ for smooth scanning on the go.



Navigation

Capture an image to be stored in the gallery

Power On/Off

Change the current display palette.

Use the reticle to measure a specific temperature.

Temperature display

Charge battery and access integrated microSD





RevealPRO User Manual

Seek
thermal

Welcome to RevealPRO. Let's take a few minutes to quickly walk through the basics and learn how to use your device.

Benefits of Registration:

By sharing your name, email, and serial number, you enable us to send you product updates and tips and techniques. We can also expedite your warranty inquiries by knowing when and where you purchased. Country information helps us to provide better local product support.

UP	SELECT	DOWN
PRODUCT/WARRANTY		
Registration provides you many benefits including faster support and software updates for your device.		
REGISTER		
BENEFITS		
REMIND ME LATER		
DECLINE, NO THANKS		
< BACK		

Registration

UP	SELECT	DOWN
3 EASY STEPS		
30 second registration on our website:		
1- Visit thermal.com/register		
2- Enter your name, email, serial number, and purchase information		
3- Receive an email confirming your registration		
Serial #		
DONE		

Changing your Registration:

Go to thermal.com and login to make changes to your user account.

Set Date and Time:

Set date, time and language on first startup.

PREV	SELECT	NEXT	UP	SELECT	DOWN
SET DATE AND TIME			LANGUAGE		
MM DD YYYY			ENGLISH		
DATE 11 01 2016			FRANCAIS		
TIME 10 30 AM			DEUTSCH		
			PORTUGUES		
			繁體中文		
			ESPANOL		
			NEDERLANDS		
			ITALIANO		
			日本語		
< BACK					

Navigation

Use buttons to navigate through menus.

Select -

Down -

Up



Turn on the 300 Lumen LED flashlight.



The left two buttons have a quick navigation dropdown when selected.



Zoom

UP	SELECT	DOWN
ZOOM		

Controls the digital zoom factor of the thermal image

x2.0

< BACK

While imaging, press and hold the left button to continuously zoom up to 4X. You can also set the zoom factor manually in settings.

Filters

UP	SELECT	DOWN
SPECTRA		
PRISM		
IRON		
TYRIAN		
WHITE		
BLACK		
AMBER		
HI		
HI-LO		

$\epsilon = 0.97$ x1.0

Explore the various filters- from standard grayscale to spectra high contrast.

Menu

SELECT	DOWN
GALLERY	
MODES	
ZOOM x1.0	
RETICLE	
EMISSION	
SETTINGS	
CANCEL	

Quickly access common settings from the dropdown menu.

View captured images.
Change the thermal imaging mode.
Zoom in up to 4x.
Toggle reticle on or off.
Adjust emissivity.
Access more settings and features.


Capture

FILTERS	MENU	CAPTURE
$\epsilon = 0.97$ x1.0		


Press the **Up** button to capture images. Hold to capture multiple images.

Modes


Optional, more advanced modes, that display all temperature data for maximum clarity.

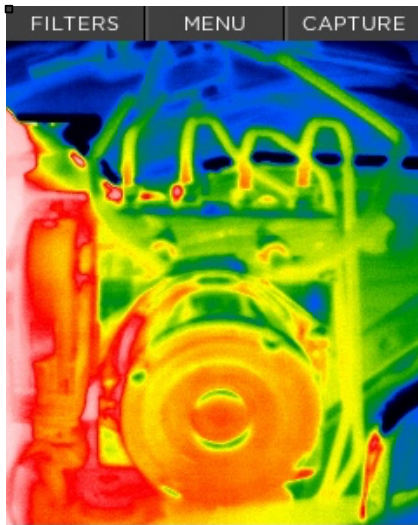

Default mode that maximizes thermal image consistency using auto exposure control.

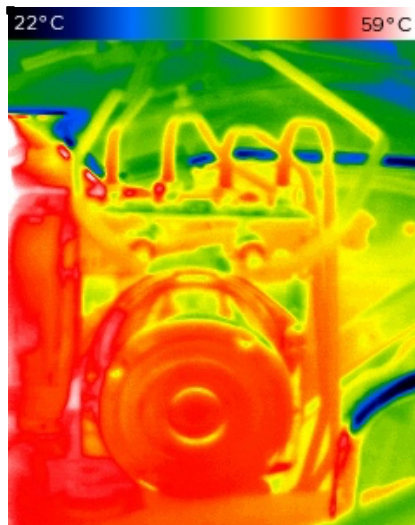


Displays all temperature data for maximum clarity.

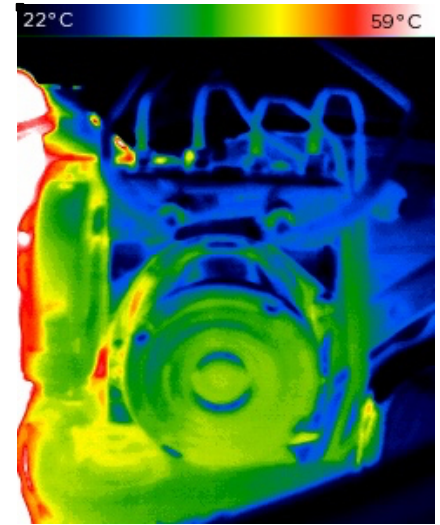

Allows you to set and lock a temperature range to display the maximum thermal information of any object or scene.

Settings

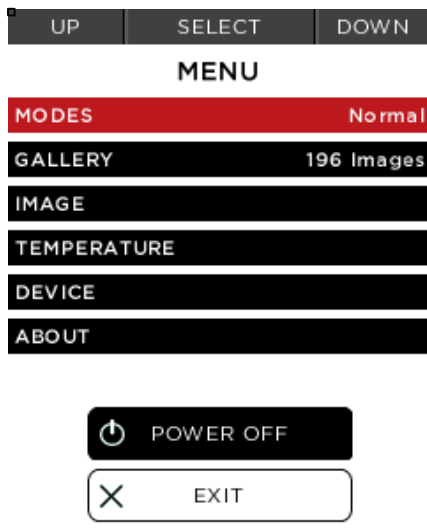

- Change the thermal imaging mode.
- View captured images.
- Control zoom, watermark and banner settings.
- Adjust units (°C, °F, K), emissivity and reticle.
- Set date and time, language, auto power off, and flashlight settings.
- Access device serial#, firmware version and registration information.

To fully reset back to factory settings, choose **Device** then **Restore**.

Thermal Span and Level

 
Individually adjust Span and Level range to meet your requirements. Choose reset to return to the default range.



Emissivity Control

Emissivity is a material property that defines how much IR light is emitted from a particular surface. Calibrate for emissivity through four pre-defined settings to ensure accurate temperature readings and reporting.

Current emissivity (ϵ) setting is visible in the lower banner.



Reticle

Enable the reticle for precise spot temperature readings.



-40 to 626°F (-40 to 330°C)
Detection Range

