

PanelPilot^B

Low-cost Configurable E-paper Displays



Configuring your display

1

to download PanelPilot B software onto your PC.

b




2


Connect the device to your PC using the USB CABLE A-SIL5 (not supplied) as shown.

3

Open up the software on your PC and follow step-by-step instructions for configuring your display.

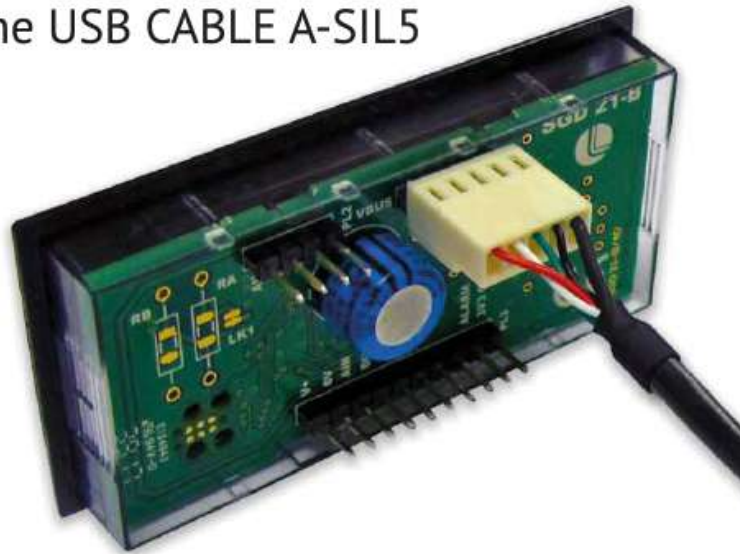

Installing your display

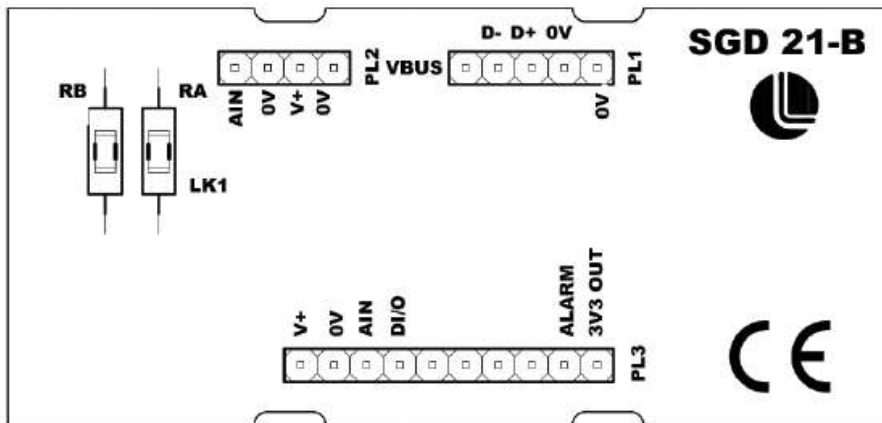

- 1 Fit scaling resistors if applicable (resistor values specified in the software).
- 2 Connect 4V-9V power supply to either PL2 or PL3.
- 3 Connect analogue input to either PL2 or PL3.
- 4 If used then connect alarm and digital pins on PL3.

- Fit scaling resistors **RA** and **RB** if applicable.
- Connect 4V-9V power supply to **V+** and **0V** on PL2 or PL3
- Connect analogue input to **AIN** and **0V** on PL2 or PL3
- If used, then connect alarm and digital pins to **ALARM** and **DI/O** pins on PL3

What's in the box?

- Panel meter
- Fixing kit
- Quick start guide



Accessories

- USB CABLE A-SIL5

