

OPERATING INSTRUCTIONS

Normal display shows inside and outside temp in 1/10 degree.



1. One point temp control

a. High Temp Alert "▲"

 
— Slide switch to temp "Alert" position, press "Alert Select" to select High Temp Alert "▲" mode.

- Press "Hi Set" to set desired High Temp Alert.
- Press "Alert On/Off" to turn on the High Temp Alert. ("Alert" flag appears on display.)
- Alarms and LCD flashes 5 sec every one min when the sensed temp is higher than the set temp.

b. Low Temp Alert "▼"

— Slide switch to temp "Alert" position, press "Alert Select" to select Low Temp Alert "▼" mode.

- Press "Lo set" to set desired Low Temp Alert.
- Press "Alert On/Off" to turn on the Low Temp Alert. (Alert flag appears on display.)
- Alarms and LCD flashes 5 sec every one mm when the sensed temp is lower than the set temp.



FITTING THE OUTSIDE SENSOR: LOCATE OUTSIDE SENSOR AWAY FROM DIRECT SUNLIGHT AND HEAVY SATURATION.

 


2. Two point temp control

a. Inside Temp Alert "Σ"

— Slide switch to temp "Alert" position, press "Alert Select" to select Inside Temp Alert "Σ" mode.

- Press "Hi set" to set the desired upper temp alert value.
- Press "Lo set" to set the desired lower temp alert value.
- Press "Alert on/off" to turn, on the Inside Temp Alert. ("Alert" flag appears on display).
- Alarms and LED flashes 5 sec every one mm when the sensed temp is within the set temp.



b. Outside Temp Alert "◆"

— Slide switch to temp "Alert" position, press "Alert select" to select Outside Temp Alert "◆" mode.


- Press "Hi set" to set the desired upper temp alert value.
- Press "Lo set" to set the desired lower temp alert value.
- Press "Alert on/off" to turn on the Outside Temp Alert. ("Alert" flag appears on display)
- Alarms and LED flashes 5 sec every one mm when the sensed temp is outside the set temp.

3. Slide switch to "Temp" position after setting temp alert.

4. Alert off

Press "Alert on/off" in temp "Alert" position, "Alert" flag disappears on display.


BATTERY REPLACEMENT:

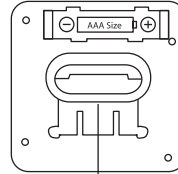

Folding stand for counter top display

- 1 Pc "AAA" or "UM4" battery
- Insert the battery as direction indicated.

Use fingernail to lift up battery cover and insert battery as to indicated direction.

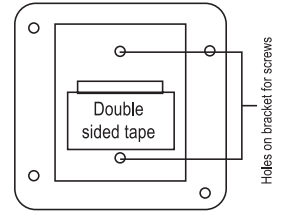

EASY MOUNTING OF BRACKET ON WALL BY:

- Double-sided tape or
- Screws

Holes on bracket for screws

**TRACEABLE®
BIG-DIGIT
4-ALERT ALARM
THERMOMETER
°C/°F
INSTRUCTIONS**

©2014 92-4142-40 Rev. 0 050914