

Introduction

The PosiTector Infrared Thermometer (IRT) is a hand-held electronic instrument that measures surface temperature quickly and accurately. It consists of a body (Standard or Advanced) and probe (pg. 3).

Basic Operation


Press the button to power up the Gage. To conserve battery life, the gage will automatically go to sleep after 5 minutes of inactivity. While in Sleep Mode, the gage powers up significantly faster— convenient when moving between parts or locations. The gage will completely power off after 4 hours of inactivity. Alternatively, select Power Off from the main menu. All settings are retained.

- 1. Remove the protective rubber cap from the probe.
- 2. Power-up Gage by pressing the center navigation


 button.
- 3. Verify emissivity setting and adjust if necessary (pg. 4).

The infrared temperature sensor immediately begins measuring. Press the
 button to pause the measurement. Press
 again to resume.

Typical Display

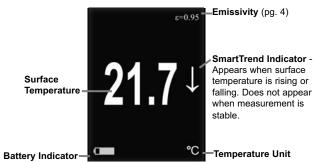

Button Functions — Normal Operation

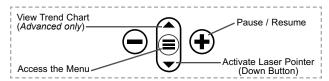

Laser Pointer

Press the ▼ button to toggle the laser pointer on/off. The laser helps aim the infrared temperature sensor. The 📤 symbol is displayed on the screen when the laser is active.




Laser Radiation. Do not stare into beam. Class 2 laser product.

Laser Parameters: Wavelength: 652 nm



Laser power for classification: <1.0 mW Beam diameter: <2 mm at aperture

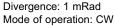

EN/IEC 60825-1:2014 (2007 USA)



Menu Operation

To access the Menu, power-up the gage, then press the center navigation button ■. Either the keypad or touch screen can be used to navigate the menu. If desired, touch screen functionality can be disabled within the Setup menu (See Touch, pg. 7).

Select a menu option by touching it, or use the ▲ and ▼ buttons to highlight the desired option and press = to select it.

On menus longer than one page, the current page number is displayed below the menu name. Navigate between pages using ▲ when the first menu item is selected, or ▼ when the last press item is sollected. Stubing touch retaying a previous pages. BENEULA THE PASSIFIED UP or down.





When a Menu option is highlighted, the icon indicates on-gage help is available. Press • or touch the • icon to display the

Update your gage to ensure that you have the latest on-gage help information.

tes that a sub-menu exists for the Menu option. Select the option to display its sub menu.

Probes

When powered-up, the PosiTector automatically determines which probe is attached and does a selfcheck.

To disconnect a probe from a body, slide the plastic probe connector horizontally (in the direction of the arrow) away from the body. Reverse these steps to attach a different probe. It is not necessary to powerdown the Gage when switching probes.



The PosiTector gage body accepts a wide variety of probe types

including magnetic, eddy current and ultrasonic coating thickness, environmental, surface profile, shore hardness durometer, salt contamination, and ultrasonic wall thickness probes.

Emissivity

Emissivity refers to a material's ability to emit infrared energy, compared to an ideal black surface at the same temperature. The ratio varies from 0 to 1, and each material has a specific emissivity associated with it. The PosiTector IRT has built in emissivity settings for certain materials as well as a user-adjustable emissivity option (pg. 6).

Most organic and painted surfaces have an emissivity of around 0.95, and are ideal surfaces for accurate infrared temperature readings. Shiny or reflective surfaces can be difficult to measure with an infrared thermometer, as they tend to reflect ambient infrared energy instead of their own. To compensate for this, cover such surfaces with flat paint or a piece of electrical tape. Allow the paint or tape to acclimate to the surface's temperature, and take a measurement over the paint or tape.

Distance to Spot Ratio (D:S)



The distance to spot ratio refers to the relationship between the diameter of the area being measured compared to the instrument's distance from the area. As the distance (D) from the target increases, the spot size (S) of the area being measured by the unit becomes larger. The D:S ratio of the PosiTector IRT is 5.7:1. For example, when the instrument is 100 cm (40 inches) from the target, the spot size will be about 18 cm (7 inches) in diameter.

Setup Menu

Units

Converts the display from Celsius (°C) to Fahrenheit (°F) and vice

Reset

Reset (menu reset) restores factory settings and returns the Gage to a known condition. The following occurs:

- All batches and stored readings, batch names and screen captures are erased.
- Menu settings are returned to the following:

Memory = OFF Bluetooth & Stream = OFF Statistics = OFF WiFi & Access Point = OFF HiLo Alarm = OFF USB Keyboard & Stream = OFF Trend Chart = None **BLE Keyboard** = OFF Display = None

Perform a more thorough Hard Reset as follows:

- Power down the Gage and wait 5 seconds.
- Simultaneously press and hold the ⊕ and ≡ buttons until the **Reset** symbol 💍 appears.

This returns the Gage to a known, "out-of-the-box" condition. It performs the same function as a menu Reset with the addition of:

- Bluetooth pairing info is cleared.
- Menu settings are returned to the following:

Units = Celsius Emissivity = 0.95 Touch = ON Battery Type = Alkaline Flip Lock = OFF Backlight = Normal Bluetooth Smart = OFF Auto Sync .net = ON Sound = Medium USB Drive= ON

Language = English

NOTE:

Date, Time and WiFi settings are not affected by either Reset.

Gage Info

Displays information on the gage body and attached probe.

Turns the trend chart on. The trend chart can also be turned on by pressing the **Up** navigation button from the main screen.

Emissivity


Sets the emissivity ratio for the PosiTector IRT infrared temperature sensor.

Select Custom to manually adjust the emissivity value or to adjust to a known temperature. Emissivity is automatically calculated when adjusting to a temperature. See NOTE below.

Alternatively, use one of the following preset options:

Aluminum (rough) = 0.07Zinc (Galvanized) = 0.25 Concrete = 0.54 **Paint =** 0.96

Plastics = 0.94Steel (Oxidized) = 0.95**Wood** = 0.95

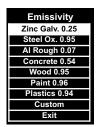





Depending on surface treatment, metals such as blasted steel can have a broad range of emissivity values. Adjusting to a known temperature (measured by a direct contact surface temperature probe) on a representative sample will assist in obtaining an accurate emissivity value.

Sound

Adjusts the volume of built-in speaker (Off, Low, Medium, High).

Flip Lock

Disables the Auto Rotate feature by locking the display in its current orientation.

Touch

Allows the touch screen functionality to be disabled. All gage functions can also be controlled using the navigation buttons.


Set Clock

All measurements are date and time stamped (24-hour format) when stored into memory. It is therefore important to set the correct date and time. Use the ▲ and ▼ buttons to select a value, and the and buttons to adjust it. The current date and time setting can also be viewed at the top of the main menu.

Battery Type


Selects the type of batteries used in the Gage from a choice of "Alkaline", "Lithium" or "NiMH" (nickel-metal hydride rechargeable). The battery state indicator symbol is calibrated for the selected battery type. No damage will occur if the battery type used in the Gage does not match the selected battery type.

Statistics Mode

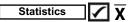

A statistical summary will appear on the display. Reset Statistics by pressing the $lue{}$ button. Press • to pause statistics.

X - Average **O**– Standard Deviation - Maximum Value ↓ – Minimum Value

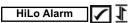

Allows Gage to visibly and audibly alert the user when readings exceed user-specified




Memory Management

The **PosiTector** *IRT* has internal memory storage for recording measurement data. Stored readings can be reviewed on-screen or accessed via computers, tablets and smart phones. Each reading is date and time-stamped. Press the ① button to store a measurement.

The 🔚 symbol appears when the Gage is set to store readings.

Standard models store up to 1,000 readings in one batch.

<u>Advanced models</u> store 250,000 readings in up to 1,000 batches. "New Batch" closes any open batch and creates a new batch name using the lowest available number. New batch names are date stamped when they are created.

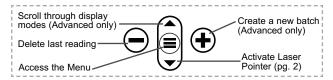

Screen Capture

Press both \bigcirc and + buttons simultaneously to save an image of the current display. The last 100 screen captures are stored in memory and can be accessed when connected to a computer (see **PosiSoft USB Drive** below).

Accessing Stored Measurement Data

DeFelsko offers the following free solutions for viewing, analyzing and reporting data:

PosiSoft USB Drive - Connect the Gage to a PC/Mac using the supplied USB-C cable. View and print readings and graphs using universal PC/Mac web browsers or file explorers. No software or internet connection required.

PosiSoft Desktop - Powerful desktop software (PC/Mac) for downloading, viewing, printing and storing measurement data. Includes a customizable, templated PDF Report Generator. No internet connection required.

(1) WiFi (Advanced models only) USB When **USB Drive** is enabled , the **PosiTector** gage uses a USB mass storage device class which provides users with a simple interface to retrieve stored data in a manner similar to USB flash drives and digital cameras. USB Drive is also required to import stored measurements into PosiSoft Desktop software (pg. 9). NOTE: While connected, power is supplied through the included USB-C cable. The batteries are not used and the body will not automatically power down. Keyboard (Advanced models only) When enabled and connected to a computer, the PosiTector will be recognized as a Keyboard. Readings are sent to the computer as they are taken, emulating keystrokes, followed by a carriage return. (Advanced models only) Stream individual readings to a USB connected computer via a serial protocol. Ideal for use with serial compatible SPC data collection software.

NOTE:

The above WiFi, USB and Bluetooth menus contain a Sync .net Now option. When selected, the Gage immediately synchronizes stored measurement data via its respective communication method (internet connection required). Alternatively, select Auto Sync .net from within the USB connect menu to automatically synchronize upon connection to a PC. Additional measurements added to memory while connected are synchronized only when the USB cable is disconnected and reconnected, or when the Sync .net Now option is selected. WiFi connected gages automatically attempt synchronization upon power-up.

NOTE: PosiSoft Desktop is required when using a USB connection to synchronize measurements with PosiSoft.net.

Bluetooth

(Advanced models only)

Bluetooth

Bluetooth Smart (Advanced models only)

Bluetooth*

Allows communication with a smart device running the PosiTector App (pg. 9) via auto-pairing Bluetooth Smart (BLE) wireless technology.

Sync Batches

Select batches to flag them for synchronization to the PosiTector App. Sync Batches is useful when connecting a new device to a gage with pre-existing batches, since only batches created while Bluetooth Smart is enabled are automatically selected.

Selected batches are synchronized when the next reading is taken in a batch flagged for synchronization, or when the Sync Batches option is selected at the bottom of the list of selected batches.

NOTE: If Bluetooth Smart is disabled or disconnected, data from batches selected in the Sync Batches menu are held in a queue until communication with the PosiTector App is reestablished.

Send Batches

Transfers selected batches to the PosiTector App. **Send Batches** is useful when switching between devices, as only readings and batches that have yet to be synchronized with any smart device are synchronized automatically.

The **Send Batches** option is visible in the menu when the Gage is connected to a smart device running the PosiTector App.

BLE Keyboard (Advanced models only)

When enabled and connected to a computer, the PosiTector will be recognized as a wireless **Keyboard**. Readings are sent to the computer as they are taken, emulating keystrokes, followed by a carriage return.

WARNING: The Gage will perform a Hard Reset (pg. 5) after an

update. All stored measurements will be erased from memory.

Specifications	Range	Accuracy	Resolution
Temperature Range	-70° to 380° C	± 1°C + 1% @ 23° C ambient	0.1° C
	-94° to 716° F		0.1° F

Laser Pointer	Class 2 < 1mW	
Distance to Spot Ratio (D:S)	5.7:1	
Emissivity	Adjustable	
Response Time	<500 µs (95% response)	
Spectral Response	2 - 14 µm	

Product Labeling





LASER LIGHT DO NOT STARE INTO BEAM Class 2 laser product

652 nm < 1mW CW EN/IEC 60825-1-2014 (2007 USA)





Manufacturer's Identification and certification label

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

DeFelsko Corporation 800 Proctor Avenue Ogdensburg, New York 13669-2205 USA

Laser Precautions:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not open or modify the product. There are no user serviceable components within the product; any service or repair is to be performed only by DeFelsko Corporation personnel. No scheduled maintenance is necessary to maintain product in compliance with laser safety standards.

To prevent eye damage and personal injury:

- Read all safety information before you use the product.
- Do not use the product if it operates incorrectly.
- Do not use the product if the housing appears cracked or otherwise damaged.
- Use the product only as specified.
- Do not look into the laser. Do not point the laser directly or indirectly (off reflective surfaces) at persons.