

# DICKSON

KT6P1 / KT6P2 / KT6P5  
Remote Sensing Temperature Recorder

## GETTING STARTED

7-day chart rotation  
0 to 100°F

## QUICK START

1. Remove the protective pen cap.
2. Connect Probe: Make sure the KTC probe is connected firmly to the Replaceable Sensor and that the Replaceable Sensor is plugged in firmly to the chart recorder.
3. Insert 4AA batteries and plug in AC adapter (See Figure 3). Unit will power on.
4. The instrument will move pen to the appropriate readings.
5. Install the chart that matches the Dip Switch settings (See p.4).

Press the **PEN HOME** key to move the pen to the outside of the chart. The pen is automatically raised off the chart.

Remove the old chart, place the new chart on the Chart Hub being certain that the edge of the chart slides under the Chart Guide Clip located at the outside of the chart.

6. Set the appropriate time. There are two ways to adjust the chart and set the appropriate time:
  - a. Set the chart time manually by inserting a coin into the groove in the chart hub and turning clockwise until the correct hour (and day if applicable) on the chart is referenced to the timing arrow (just to the right of the pen tip on the dial). Press **Pen Home** to move the pen(s) back onto the chart.

*The following feature should be used for fine adjustments only.*

- b. To adjust the chart time, press and hold **Adjust-Up** and **Adjust-Down** buttons located on the back of the unit next to the dip switch (see Figure 3).

The green LED will blink rapidly for about five seconds, then the LED will remain solid green. While in this state the **Adjust-Up** button will move the chart backward (counter clockwise) and the **Adjust-Down** button will move the chart forward (clockwise).

Rotate the chart until the correct hour (and day if applicable) on the chart is referenced to the timing arrow. Once you have set your chart, press the **Pen Home** button to exit Chart Adjust Mode. The unit will take one minute to exit the Chart Adjust Mode once **Pen Home** is pressed. Press **Pen Home** to move the pen(s) back onto the chart.

- c. Place the KT6 recorder on a flat vibration-free surface. Be sure it is in a vertical position and level. For best performance and longevity, the location should be a clean environment, free from dust and corrosive fumes. Do not exceed temperature specifications. **Wall Mount:** Keyhole slots are provided on the KT6 recorder for wall mounting.


## DISPLAY SYMBOLS KT6

Figure 1



Figure 2

Figure 3

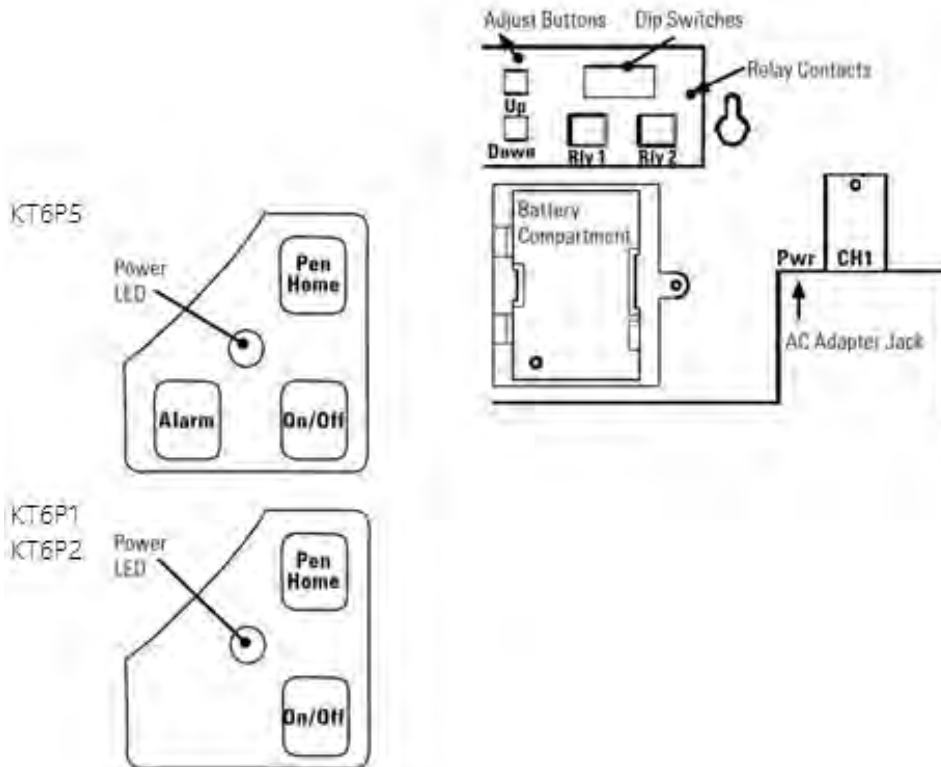

### Keypad and Button Functions

#### **On/Off**

The On/Off key turns the unit on and off.

#### **Pen Home**

If the pen is located on the outside edge of the chart, press **Pen Home** to move pen to recording position. If the pen is located on the chart, press **Pen Home** to move the pen to the outside edge of the chart.

#### **Alarm (KT6P5)**

1. To set the alarm, make sure unit is on and press and hold the **Alarm** button. The LED will blink red rapidly for about five seconds, then the LED will turn solid green. Release the **Alarm** button and the LED will turn solid red. At this point the display will show "On" or "Off".

Pressing either the **Adjust-Up** or **Adjust-Down** buttons, located on the back of the unit next to the dip switch, will toggle the alarm on or off.

2. Pressing **PEN HOME** will scroll to the next alarm option. The options are as follows:  
Alarm on or off

Pen 1 alarm minimum  
 Pen 1 alarm maximum


- In order to set pen alarm minimum and maximum, pressing **Adjust-Up** will increase the alarm value, and pressing **Adjust-Down** will decrease the alarm value. There is acceleration if the **Adjust-Up** button is held down.

Repetitively pressing the **Pen Home** button will scroll through the three options until the **Alarm** button is pressed to exit from alarm adjust. Each press of the **Pen Home** or **Alarm** button will store the new settings. The unit will take one minute to exit Alarm Set Mode once the **Alarm** button is pressed.

- If the alarm is triggered, the LED will show as solid red and the alarm will sound. Press the **Alarm** button to silence the audible alarm.

### Alarm Relays (KT6P5)


The SPST 24V 500mA relay contacts are normally open and will close on alarm conditions when the alarms are enabled. Relay contacts are always functional when the alarm is enabled. The relay will close only during minimum and maximum alarm conditions. Relays will not operate under battery only power conditions



### DIP SWITCH SETUP

To setup the KT6 recorder for your specific application, you might need to change some of the Dip Switches. The Dip Switches are located on the back of the unit. (Figure 3)

Use a pen or small screw driver to flip the switches. Remember to install the correct chart to match the corresponding Dip Switch setting.

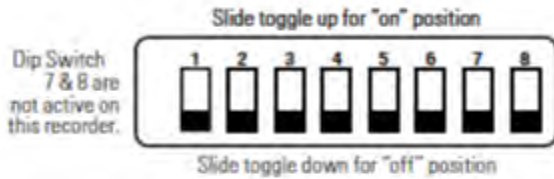

<b>Recording Time:</b> The KT6 recorder has two different recording time options	
7 Day	#2 Down
24 Hour	#2 Up
<b>F/C:</b> Record in degrees F or C	
F	#3 Down
C	#3 Up
<b>Temperature Range:</b> Select the temperature ranges that matches the chart paper	
0 to +100 F/C	#4 Down #5 Down #6 Down
-50 to 0 F/C	#4 Down #5 Down #6 Up
-100 to 0 F	#4 Down #5 Up #6 Up
-50 to 50 F/C	#4 Up #5 Down #6 Down
0 to 50 F/C	#4 Down #5 Up

	#6 Down
+50 to 100 F/C	#4 Up #5 Up #6 Up
0 to 500 F/C	#4 Up #5 Up #6 Down
0 to 250 F/C	#4 Up #5 Down #6 Up

### **POWER**

The KT6 operates on AC power with an optional 4AA battery backup. Depending on chart rotation selected and model; battery backup will last approximately 3 days.

Note: Alarm and relays will not operate under battery only power.

### **LED Indicators**

- AC Power with Battery Backup - Solid Green
- AC Power with Low Battery or No Battery - Blinks Red
- Battery Only - Blinks Green
- Battery Only (Low Battery) - Solid Red

### **PEN HOME ADJUST**

If over time the pen location does not match the display, you may need to adjust the pen location on the chart. A Pen Home Adjustment will not affect calibration of the sensor, but rather corrects for the natural drift that occurs with mechanical moving parts over time.

1. While the unit is on, press and hold both **Pen Home** and **On/Off** buttons until the LED is solid green. Release the **Pen Home** and **On/Off** buttons. The LED will flash amber and green for one second then the LED will turn off.  
**Note:** Press **Pen Home** first so the unit will not turn off
2. The pen will move to the outer edge of the chart, and then the **red** pen will move to the outer chart ring (maximum temperature line).
3. If the red pen tip does not line up with the outer chart ring, use the **Adjust-Up** and **Adjust-Down** buttons (on the back of the unit) to move the red pen so that the pen tip is on top of the outer chart ring.
4. Once set press **On/Off** to save and exit Pen Home Adjust.

Note: Pressing the On/Off button will exit the adjustment and return the unit to normal operation. Each time the Pen Home or On/Off button is pressed, the adjustment currently in progress will be stored. The unit will take one minute to exit Pen Adjust Mode once the On/Off button is pressed.

### **CALIBRATION**

The R400 Replaceable Sensor was carefully tested and calibrated before being shipped from the factory. For greatest accuracy, we recommend replacing the sensor every 6-12 months.

When your new Replaceable Sensor arrives, simply turn off the recorder, remove and discard the old sensor, plug in the new one and power the recorder back on. Your recorder will continue to record temperature and humidity without interruption.

### **USER CALIBRATION**

If you have an accurate standard to compare against, the Replaceable Sensor calibration can be adjusted at one point. This will not adjust the span and is not as accurate as replacing the Replaceable Sensor with a newly calibrated one.

1. To activate Calibration mode, turn the unit on and press and hold both the **On/Off** and the **Adjust-Down** button until the LED is solid green. The LED will then blink amber and at which point only the pen being adjusted will show on the display.

**Note:** Make sure to press the Adjust-Down button first so the unit will not turn off

2. To raise the unit of measurement, press the **Adjust-Down** button. To lower the unit of measurement, press the **Adjust-Up** button.
3. When Calibration is complete, press the **On/Off** button. The adjustment is stored in memory even after you turn the unit off or if AC power fails.

**Note:** After two hours, if no buttons are pressed, the unit will time out of Calibration mode and resume normal operation. If you wish to cancel the Calibration, simply enter Calibration mode and toggle through the steps without adjusting displayed readings. Exit by pressing the **On/Off** button. You have now restored factory calibration settings.

**Note:** It is recommended that you use a controlled chamber when determining if Calibration is necessary. Adjusting the pen in an open room is not recommended as air flow can vary greatly within a very small area.

### **TROUBLE SHOOTING**

#### **Why isn't the chart keeping time or running slow?**

- The chart may be hung up or restricted, possibly caused by a rip on the outer edge of the chart or the chart hub, or the chart may be caught between the arm and pen(s) arm platform.
- Incorrect chart installed for the selected chart speed.

#### **Why did the chart stop turning?**

- Chart hung up or restricted, (ripped chart)
- Unit may be "locked up", this can be confirmed by pressing any of the buttons on the keypad, if the unit is locked up there will be no response to button presses and the Chart Recorder may appear to be working, but the readings won't change, also the chart will not rotate. Remove power and battery, and then re-power.

#### **Why don't the display and chart match?**

- Dip switches set for a specific range, but using chart for another range, or vice versa.
- Pen(s) not inserted on pen arm(s) all the way
- To adjust pen(s) to match chart see "Pen Home Adjust" in the "Need to Know" section of this manual.

#### **Why does the display read PROB?**

- Check the sensor pod and KTC probe(s). Make sure it is properly plugged into the unit.
- Is the unit locked up? This can be confirmed by pressing any of the buttons on the keypad, if the unit is locked up there will be no response to button presses and the unit may appear to be working, but the readings won't change, also the chart will not rotate. Remove power and battery, and then re-power.

#### **Why does calibration seem to be off?**

- What is the tolerance of the unit it's being compared to?
- It's ok if the unit is within the sum of the two tolerances.
- Has an outside calibration house attempted calibration? It may not have been adjusted properly.
- Walk through calibration adjustment, found in the manual

#### **Why won't the battery back-up work?**

- Are there good batteries in the Chart Recorder?
- Keep in mind that battery backup varies significantly depending on temperature, pen movement and chart rotation speed.
- If there was a momentary power outage (Brown out), the unit may not have had enough time to recognize this and switch to battery mode. (The Chart Recorder may lock up or shut off in this situation) This situation may also occur if the unit is plugged into an outlet that shares the circuit with other machinery that has phase motors or compressors that cycle periodically. As these other machines cycle, they momentarily have a high current draw, therefore drawing from the unit.

#### **Why won't the chart recorder respond to changes?**

- Is the unit locked up? This can be confirmed by pressing any of the buttons on the keypad, if the unit is locked up there will be no response to button presses and the unit may appear to be working, but the readings won't change, also the chart will not rotate. Remove power and batteries, and then re-power.

#### **Why won't the unit power up?**

- Remove the batteries and power adapter for a minute or two, this will reset the unit. The unit should respond when the adapter is plugged in.

#### **WARRANTY**

Dickson warrants that this line of instruments will be free from defects in material and workmanship under normal use and service for a period of twelve months after delivery.

This warranty does not cover routine calibration and battery replacement.

## Replaceable Sensor Certificate of Validation

Dickson ensures that the Replaceable Sensors / Instruments listed below were developed, tested and validated together.

Replaceable Sensor Model: R400

Instrument Model: KT6P1, KT6P2, KT6P5

**Operation:** The Instruments and Replaceable Sensor models listed above were specifically designed to work together. No other sensors will work with the Instrument models listed. No other Instrument will work with the Replaceable Sensors listed. The Replaceable Sensor must be connected to the Instrument for the Instrument to operate properly.

**Calibration:** Only the Replaceable Sensor is calibrated. The sensor, and all calibration defaults and adjustments are stored on the Replaceable Sensor. Accuracy is strictly controlled by the sensor – no adjustments are made by the Instrument. Readings are sent from the Replaceable Sensor to the Instrument for storage purposes only. Certificates of Calibration / NISTs are only supplied for the Replaceable Sensor for this reason.

**Recalibration:** When a Replaceable Sensor is due for recalibration the existing Replaceable Sensor can be replaced with a new Replaceable Sensor thus eliminating the need to return the entire instrument for recalibration. Replaceable Sensors can be returned for recalibration as well.