

# PROVu PD6363 Dual Pulse Input Rate/Totalizer Instruction Manual



**PROVu®**  
**SERIES**

**MeterView Pro**

USB Install 



**Rate/Totalizer**

- Two (2) Pulse, Open Collector, NPN, PNP, TTL, Switch Contact, Sine Wave (Coil), Square Wave Inputs
- Displays Two Flow Inputs Simultaneously
- Displays Rate and Total Simultaneously
- Math Functions Capabilities
- 5, 10, or 24 V Flowmeter Power Supply
- Count Up or Down, Total & Grand Total
- Gate Function for Rate Display of Slow Pulse Rates
- K-Factor, Internal Scaling, or External Calibration
- Non-Resettable Grand Total
- Dual-Line Display
- NEMA 4X and IP65 Rated Front Panel
- UL Listed & CE Marked
- Display Features 0.6" & 0.46" Digits
- Six Full Digits on Each Line
- Optional Superluminous Sunlight Readable Display
- Free USB Programming Software & Cable
- 2 or 4 Relays + Isolated 4-20 mA Output Options
- Modbus® RTU Communication Protocol Standard

**PRECISION  
DIGITAL**

## Disclaimer

The information contained in this document is subject to change without notice. Precision Digital makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.



**CAUTION:** *Read complete instructions prior to installation and operation of the meter.*



**WARNING:** *Risk of electric shock or personal injury.*



### **Warning!**

***This product is not recommended for life support applications or applications where malfunctioning could result in personal injury or property loss. Anyone using this product for such applications does so at his/her own risk. Precision Digital Corporation shall not be held liable for damages resulting from such improper use.***

## Limited Warranty

Precision Digital Corporation warrants this product against defects in material or workmanship for the specified period under "Specifications" from the date of shipment from the factory. Precision Digital's liability under this limited warranty shall not exceed the purchase value, repair, or replacement of the defective unit.

## Registered Trademarks

PROVu® and MeterView® Pro are registered trademarks of Precision Digital Corporation. Modbus® is a Registered Trademark of Schneider Automation Inc. All other trademarks mentioned in this document are the property of their respective owners.

© 2017 Precision Digital Corporation. All rights reserved.

# Table of Contents

|                                                               |           |
|---------------------------------------------------------------|-----------|
| <b>Table of Contents</b>                                      | <b>3</b>  |
| <b>Table of Figures</b>                                       | <b>4</b>  |
| <b>Introduction</b>                                           | <b>4</b>  |
| <b>Ordering Information</b>                                   | <b>5</b>  |
| <b>Specifications</b>                                         | <b>6</b>  |
| General                                                       | 6         |
| Dual Pulse Inputs                                             | 6         |
| Dual Rate/Totalizer                                           | 7         |
| Relays                                                        | 8         |
| Isolated 4-20 mA Transmitter Output                           | 8         |
| Modbus® RTU Serial Communications                             | 8         |
| MeterView Pro                                                 | 8         |
| <b>Compliance Information</b>                                 | <b>9</b>  |
| Safety                                                        | 9         |
| Electromagnetic Compatibility                                 | 9         |
| <b>Safety Information</b>                                     | <b>10</b> |
| <b>Installation</b>                                           | <b>10</b> |
| Unpacking                                                     | 10        |
| Panel Mounting Instructions                                   | 10        |
| Mounting Dimensions                                           | 11        |
| Transmitter Supply Voltage Selection (P+, P-) ----            | 11        |
| Connections                                                   | 12        |
| Connectors Labeling                                           | 12        |
| Power Connections                                             | 12        |
| Signal Connections                                            | 13        |
| Configure Input Type and Level Switches                       | 13        |
| Modbus RTU Serial Communications                              | 14        |
| Relay Connections                                             | 14        |
| Switching Inductive Loads                                     | 14        |
| F4 Digital Input Connections                                  | 15        |
| 4-20 mA Output Connections                                    | 15        |
| Analog Output Transmitter Power Supply                        | 15        |
| External Relay, Analog Output, & Digital I/O                  | 16        |
| Connections                                                   | 16        |
| Interlock Relay Feature                                       | 16        |
| <b>Setup and Programming</b>                                  | <b>17</b> |
| Front Panel Buttons and Status LED Indicators --              | 17        |
| MeterView® Pro Software                                       | 18        |
| MeterView Pro Installation                                    | 18        |
| Display Functions & Messages                                  | 19        |
| Main Menu                                                     | 22        |
| Setting Numeric Values                                        | 23        |
| Setting Up the Meter (SEtUP)                                  | 23        |
| Setting the Input Signal ( InPUt)                             | 24        |
| Setting the Totalizer Features (tAtRL)                        | 24        |
| Setting the Dual-Input Mode (nAdE)                            | 24        |
| Setting the Rate, Total, & Grand Total Units/Tags (un tS)     | 26        |
| Setting the Decimal Point (dEc Pt)                            | 26        |
| Programming the Rate/Totalizer (PrdG)                         | 27        |
| Input Calibration Method ( InCAL)                             | 27        |
| K-Factor Calibration (FRct-R, FRct-b)                         | 27        |
| Scaling the Meter without a Signal Source (SCAL - R, SCAL -b) | 28        |
| Scaling the Meter for Channel A (SCAL -R)                     | 28        |
| Error Message (Error)                                         | 28        |
| Calibrating the Meter with External Source (CAL - R, CAL -b)  | 29        |
| Totalizer Setup (tSEtUP)                                      | 30        |
| Total & Grand Total Reset (tRtSEt)                            | 30        |
| Setting the Display Parameters & Intensity (dSPtRY)           | 31        |
| Setting the Relay Operation (rELRY)                           | 32        |
| Setting the Relay Assignment (RSS n)                          | 32        |
| Setting the Relay Action (Rct)                                | 33        |
| Programming Set and Reset Points                              | 33        |
| Setting Fail-Safe Operation                                   | 33        |
| Programming Time Delay                                        | 33        |
| <b>Relay and Alarm Operation Diagrams</b>                     | <b>34</b> |
| High Alarm Operation (Set > Reset)                            | 34        |
| Low Alarm Operation (Set < Reset)                             | 34        |
| High Alarm with Fail-Safe Operation (Set > Reset)             | 34        |
| Low Alarm with Fail-Safe Operation (Set < Reset)              | 34        |
| Pump Alternation Control Operation                            | 35        |
| Relay Sampling Operation                                      | 35        |
| Total Relay Sampling Operation                                | 36        |
| Time Delay Operation                                          | 36        |
| <b>Relay Operation Details</b>                                | <b>37</b> |
| Overview                                                      | 37        |
| Relays Auto Initialization                                    | 37        |
| Fail-Safe Operation                                           | 37        |
| Front Panel LEDs                                              | 37        |
| Latching and Non-Latching Relay Operation                     | 38        |
| Non-Latching Relay (Rctb)                                     | 38        |
| Non-Latching Relay (R-nn Rn)                                  | 38        |
| Latching Relay (LRctH)                                        | 38        |
| Latching Relay (LR-CLR)                                       | 38        |
| Acknowledging Relays                                          | 39        |
| Setting Up the Interlock Relay (Force On) Feature             | 39        |
| <b>Scaling the 4-20 mA Analog Output (Rout)</b>               | <b>39</b> |
| <b>Reset Menu (rESEt)</b>                                     | <b>40</b> |
| <b>Control Menu (Contrl)</b>                                  | <b>40</b> |
| <b>Setting Up the Password (PR55)</b>                         | <b>40</b> |
| Protecting or Locking the Meter Functions                     | 40        |
| Total Reset Password & Non-Resettable Total                   | 41        |
| Making Changes to a Password Protected Meter                  | 41        |
| Disabling Password Protection                                 | 41        |
| <b>Advanced Features Menu</b>                                 | <b>42</b> |
| Advanced Features Menu & Display Messages                     | 42        |
| Gate Function (GRtE)                                          | 44        |
| Contact De-Bounce Filter (F nLEr)                             | 45        |
| Rounding Feature (round)                                      | 45        |
| Modbus RTU Serial Communications (SEr nRL)                    | 45        |
| Select Menu (SELEct)                                          | 46        |
| Signal Input Conditioning (FuncEn)                            | 46        |
| Multi-Point Linearization (L nERr)                            | 46        |
| Math Function (nRtH)                                          | 47        |
| Math Constants (ConSt)                                        | 47        |
| Low-Flow Cutoff (LctOFF)                                      | 48        |
| Totalizer Count Up/Down (Count)                               | 48        |
| Analog Output Programming (RoutPr)                            | 48        |
| Programmable Function Keys User Menu (uSEr)                   | 49        |
| <b>Meter Operation</b>                                        | <b>51</b> |
| <b>Function Keys Operation</b>                                | <b>51</b> |

|                                        |    |                                        |    |
|----------------------------------------|----|----------------------------------------|----|
| F4 Operation .....                     | 51 | Reset Meter to Factory Defaults .....  | 52 |
| Front Panel Buttons Operation .....    | 51 | Factory Defaults & User Settings ..... | 53 |
| Maximum/Minimum Readings .....         | 52 | Troubleshooting Tips .....             | 55 |
| Troubleshooting .....                  | 52 | EU Declaration of Conformity .....     | 57 |
| Diagnostics Menu ( <i>d Rb</i> ) ..... | 52 |                                        |    |
| Determining Software Version .....     | 52 |                                        |    |

## Table of Figures

|                                                                 |    |                                                                        |    |
|-----------------------------------------------------------------|----|------------------------------------------------------------------------|----|
| Figure 1. 1/8 DIN Panel Cutout Dimensions .....                 | 10 | Figure 13: Switch Input Connections .....                              | 13 |
| Figure 2. Panel Mounting Details .....                          | 10 | Figure 14. Relay Connections .....                                     | 14 |
| Figure 3. Meter Dimensions - Side View .....                    | 11 | Figure 15. AC and DC Loads Protection .....                            | 14 |
| Figure 4. Meter Dimensions - Top View .....                     | 11 | Figure 16. Low Voltage DC Loads Protection .....                       | 14 |
| Figure 5. Transmitter Supply Voltage Selection .....            | 11 | Figure 17. F4 Digital Input Connections .....                          | 15 |
| Figure 6. Connector Labeling for Fully Loaded<br>PD6363 .....   | 12 | Figure 18. 4-20 mA Output Connections .....                            | 15 |
| Figure 7. Power Connections .....                               | 12 | Figure 19. Interlock Connections .....                                 | 16 |
| Figure 8: Flowmeter Powered by Internal Power<br>Supply .....   | 13 | Figure 20. Dual Input Mode ( <i>ud Rb</i> ) .....                      | 24 |
| Figure 9: Flowmeter Powered by External Supply ...              | 13 | Figure 21. Dual Input Mode ( <i>ud R l</i> ) .....                     | 24 |
| Figure 10: Self-Powered Magnetic Pickup Coil<br>Flowmeter ..... | 13 | Figure 22. Dual Input Mode ( <i>ud b l</i> ) .....                     | 25 |
| Figure 11: NPN open Collector Input .....                       | 13 | Figure 23. Dual Input Mode ( <i>quRd l</i> ) .....                     | 25 |
| Figure 12: PNP Sensor Powered by Internal Supply                | 13 | Figure 24. Dual Input Mode ( <i>quRd 2</i> ) .....                     | 25 |
|                                                                 |    | Figure 25. Dual Input Mode ( <i>quRd 4</i> ) .....                     | 25 |
|                                                                 |    | Figure 26. Acknowledge Relays w/Function Key or<br>Digital Input ..... | 39 |

## Introduction

The PROVU® PD6363 is a multipurpose, easy to use digital dual pulse input rate/totalizer ideal for flow rate, total, and flow control applications. Its superluminous LED digits make it easily readable in smoke, dust, fog, and, with the optional SunBright® display, even direct sunlight.

It accepts two pulse (e.g. 40 mVp-p to 8 Vp-p), square wave (0-5 V, 0-12 V, or 0-24 V), open collector, NPN, PNP, TTL or switch contact signals. Various math functions may be applied to the rate, total, or grand totals of the two channels; including addition, difference, average, minimum, maximum, draw, ratio and more.

The displays, relays, and the analog output may be assigned to the rate, total, or grand total of input channels A or B; or math result channel C. Three of the front panel buttons can be custom-programmed for a specific operation.

The basic model includes an isolated 24 VDC transmitter power supply that can be used to power the input transmitters or other devices. An additional isolated 24 VDC power supply is included with the 4-20 mA output option. A digital input is standard.

Meter capabilities may be enhanced with external expansion modules. External serial communication adapters are also available for use with MeterView Pro or Modbus RTU.

## Ordering Information

### Standard Models

| 85-265 VAC Model                           | 12-24 VDC Model | Options Installed                   |
|--------------------------------------------|-----------------|-------------------------------------|
| PD6363-6R0                                 | PD6363-7R0      | No options                          |
| PD6363-6R2                                 | PD6363-7R2      | 2 relays (PD1102*)                  |
| PD6363-6R3                                 | PD6363-7R3      | 4-20 mA output (PD1103*)            |
| PD6363-6R4                                 | PD6363-7R4      | 4 relays (PD1104*)                  |
| PD6363-6R5                                 | PD6363-7R5      | 2 relays & 4-20 mA output (PD1105*) |
| PD6363-6R7                                 | PD6363-7R7      | 4 relays & 4-20 mA output (PD1107*) |
| *Model number for replacement option card. |                 |                                     |

### SunBright Display Models

| 85-265 VAC Model                           | 12-24 VDC Model | Options Installed                   |
|--------------------------------------------|-----------------|-------------------------------------|
| PD6363-6H0                                 | PD6363-7H0      | No options                          |
| PD6363-6H2                                 | PD6363-7H2      | 2 relays (PD1102*)                  |
| PD6363-6H3                                 | PD6363-7H3      | 4-20 mA output (PD1103*)            |
| PD6363-6H4                                 | PD6363-7H4      | 4 relays (PD1104*)                  |
| PD6363-6H5                                 | PD6363-7H5      | 2 relays & 4-20 mA output (PD1105*) |
| PD6363-6H7                                 | PD6363-7H7      | 4 relays & 4-20 mA output (PD1107*) |
| *Model number for replacement option card. |                 |                                     |

### Accessories

| Model     | Description                                               |
|-----------|-----------------------------------------------------------|
| PDA1002   | DIN rail mounting kit for two expansion modules           |
| PDA1004   | 4 SPST (Form A) relays                                    |
| PDA1011   | Dual isolated 4-20 mA output expansion module             |
| PDA1044   | 4 digital inputs & 4 digital outputs (2 may be connected) |
| PDA1232   | RS-232 serial adapter                                     |
| PDA1485   | RS-485 serial adapter                                     |
| PDA7485-I | RS-232 to RS-422/485 isolated converter                   |
| PDA7485-N | RS-232 to RS-422/485 non-isolated converter               |
| PDA8232-N | USB to RS-232 non-isolated converter                      |
| PDA8485-I | USB to RS-422/485 isolated converter                      |
| PDA8485-N | USB to RS-422/485 non-isolated converter                  |
| PDX6901   | Suppressor (snubber): 0.01 $\mu$ F/470 $\Omega$ , 250 VAC |

# Specifications

Except where noted all specifications apply to operation at +25°C.

## General

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Display</b>             | Line 1: 0.60" (15 mm) high, red LEDs<br>Line 2: 0.46" (12 mm) high, red LEDs<br>6 digits each (-99999 to 999999), with lead zero blanking                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Display Intensity</b>   | Eight user selectable intensity levels                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Display Update Rate</b> | Rate: 10 per second; up to 1 per 100 seconds (and is a function of Low Gate setting); Total: 10 per second (fixed)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Overrange</b>           | Display flashes 999999                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Display Assignment</b>  | Display lines 1 & 2 may be assigned to show:<br>One or more rate/math channels:<br>Channel A (Ch-A), B (Ch-B), or C (Ch-C)<br>Toggle rate/math channels: Ch-A & Ch-B, Ch-A & Ch-C, Ch-B & Ch-C, and Ch-A, Ch-B, & Ch-C<br>Total or grand total: Ch-A or Ch-B<br>Rate and total or grand total: Ch-A or Ch-B<br>Relay set points<br>Max and/or min values: Ch-A, Ch-B, or Ch-C<br>Toggle between any rate/math channel & units<br>Total and units: Ch-A or Ch-B<br>Toggle between totals: Ch-A & Ch-B;<br>Ch-A, Ch-B, and sum of Ch-A and Ch-B<br>Modbus input<br>The lower display may also be set to show engineering units or be off, with no display. |
| <b>Programming Methods</b> | Four front panel buttons, digital inputs, PC and MeterView Pro software, or Modbus registers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Max/Min Display</b>     | Max/min readings reached by the process are stored until reset by the user or until power to the meter is cycled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Password</b>            | Three programmable passwords restrict modification of programmed settings and two prevent resetting the totals.<br>Pass 1: Allows use of function keys and digital inputs<br>Pass 2: Allows use of function keys, digital inputs and editing set/reset points<br>Pass 3: Restricts all programming, function keys, and digital inputs.<br>Total: Prevents resetting the total manually<br>Gtotal: Prevents resetting the grand total manually                                                                                                                                                                                                            |
| <b>Recalibration</b>       | All ranges are calibrated at the factory. Recalibration is recommended at least every 12 months.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Non-Volatile Memory</b> | All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Power Options</b>       | 85-265 VAC 50/60 Hz, 90-265 VDC, 20 W max or 12-24 VDC $\pm$ 10%, 15 W max<br>Powered over USB for configuration only                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

|                                          |                                                                                                                                                                                                                                |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Fuse</b>                              | Required external fuse: UL Recognized, 5 A max, slow blow; up to 6 meters may share one 5 A fuse                                                                                                                               |
| <b>Isolated Transmitter Power Supply</b> | Terminals P+ & P-: 24 VDC $\pm$ 10%.<br>Selectable for 24, 10, or 5 VDC supply (internal jumper J4).<br>85-265 VAC models rated @ 200 mA max, 12-24 VDC powered models rated @ 100 mA max, @ 50 mA max for 5 or 10 VDC supply. |
| <b>Isolation</b>                         | 4 kV input/output-to-power line<br>500 V input-to-output or output-to-P+ supply                                                                                                                                                |
| <b>Overvoltage Category</b>              | Installation Overvoltage Category II:<br>Local level with smaller transient overvoltages than Installation Overvoltage Category III.                                                                                           |
| <b>Environmental</b>                     | Operating temperature range: -40 to 65°C<br>Storage temperature range: -40 to 85°C<br>Relative humidity: 0 to 90% non-condensing                                                                                               |
| <b>Connections</b>                       | Removable screw terminal blocks accept 12 to 22 AWG wire, RJ45 for external modules and adapters.                                                                                                                              |
| <b>Enclosure</b>                         | 1/8 DIN, high impact plastic, UL 94V-0, color: black                                                                                                                                                                           |
| <b>Mounting</b>                          | 1/8 DIN panel cutout required:<br>3.622" x 1.772" (92 mm x 45 mm)<br>Two panel mounting bracket assemblies are provided.                                                                                                       |
| <b>Tightening Torque</b>                 | Screw terminal connectors: 5 lb-in (0.56 Nm)                                                                                                                                                                                   |
| <b>Overall Dimensions</b>                | 4.68" x 2.45" x 5.64" (119 mm x 62 mm x 143 mm)<br>(W x H x D)                                                                                                                                                                 |
| <b>Weight</b>                            | 9.5 oz (269 g)                                                                                                                                                                                                                 |
| <b>Warranty</b>                          | 3 years parts & labor                                                                                                                                                                                                          |

## Dual Pulse Inputs

|                                |                                                                                                                                                                                                                                      |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Two Inputs</b>              | Field selectable: Pulse or square wave 0-5 V, 0-12 V, or 0-24 V @ 30 kHz; TTL; open collector 4.7 k $\Omega$ pull-up to 5 V @ 30 kHz; NPN or PNP transistor, switch contact 4.7 k $\Omega$ pull-up to 5 V @ 40 Hz; Modbus PV (Slave) |
| <b>Channels</b>                | Channel A, Channel B, Channel C (Math channel)                                                                                                                                                                                       |
| <b>Programmable Constants</b>  | Constant P (Adder): -99.999 to 999.999, default: 0.000<br>Constant F (Factor): 0.001 to 999.999, default: 1.000                                                                                                                      |
| <b>Low Voltage Mag Pickup</b>  | Sensitivity: 40 mVp-p to 8Vp-p                                                                                                                                                                                                       |
| <b>Minimum Input Frequency</b> | 0.001 Hz<br>Minimum frequency is dependent on high gate setting.                                                                                                                                                                     |
| <b>Maximum Input Frequency</b> | 30,000 Hz (10,000 for low voltage mag pickup)                                                                                                                                                                                        |
| <b>Input Impedance</b>         | Pulse input: Greater than 300 k $\Omega$ @ 1 kHz.<br>Open collector/switch input: 4.7 k $\Omega$ pull-up to 5 V.                                                                                                                     |

# Math Functions

| Name               | Function                  | Setting |
|--------------------|---------------------------|---------|
| Addition           | $(A+B+P)*F$               | Sum     |
| Difference         | $(A-B+P)*F$               | d.F     |
| Absolute diff.     | $((\text{Abs}(A-B))+P)*F$ | d.FRb5  |
| Average            | $((A+B)/2+P)*F$           | RU      |
| Multiplication     | $((A*B)+P)*F$             | rruLt   |
| Division           | $((A/B)+P)*F$             | d.UdE   |
| Max of A or B      | $((AB-Hi)+P)*F$           | H.-Rb   |
| Min of A or B      | $((AB-Lo)+P)*F$           | Lo-Rb   |
| Draw               | $((A/B)-1)*F$             | drRU    |
| Weighted avg.      | $((B-A)*F)+A$             | u RU    |
| Ratio              | $(A/B)*F$                 | rRt     |
| Ratio 2            | $((B-A)/A)+P)*F$          | rRt     |
| Concentration      | $A/(A+B)*F$               | ConcEn  |
| Total Addition     | $(tA+tB+P)*F$             | Sum t   |
| G. Tot. Addition   | $(GtA+GtB+P)*F$           | SumRt   |
| Total Difference   | $(tA-tB+P)*F$             | d.F t   |
| G. Tot. Difference | $(GtA-GtB+P)*F$           | d.F Rt  |
| Total Ratio        | $(tA/tB)*F$               | tRt     |
| Total Ratio 2      | $((tB-tA)/tA)*F$          | t-rRt   |
| Total Percent      | $(tA/(tA+tB))*100$        | t Pct   |

Note: The F constant can be any value from 0.001 to 999.999. If the value is less than 1, it will have the same effect as a divider. For example, the average could also be derived by using  $(A+B)*F$ , where  $F = 0.500$ .

|                                                     |     |                                                                                                             |
|-----------------------------------------------------|-----|-------------------------------------------------------------------------------------------------------------|
| <b>Sequence of Operations for Input Programming</b> | 1.  | Select Input for A and B                                                                                    |
|                                                     | 2.  | Set up the rate, total, and grand total engineering units for channels A & B, and units for math channel C  |
|                                                     | 3.  | Set up rate, total, and grand total decimal points for channels A & B, and decimal point for math channel C |
|                                                     | 4.  | Program channel A & B rate parameters                                                                       |
|                                                     | 5.  | Program channel A & B total and reset parameters                                                            |
|                                                     | 6.  | Set up display lines 1 & 2 and display intensity                                                            |
|                                                     | 7.  | Select the transfer function for A & B (e.g. Linear)                                                        |
|                                                     | 8.  | Select Math function for Channel C                                                                          |
|                                                     | 9.  | Program constants for Factor (F) and Adder (P).                                                             |
|                                                     | 10. | Program cutoff values for A and B                                                                           |

|                                  |                                                                                                                                        |
|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Accuracy</b>                  | $\pm 0.03\%$ of calibrated span $\pm 1$ count                                                                                          |
| <b>Temperature Drift</b>         | Rate display is not affected by changes in temperature.                                                                                |
| <b>Multi-Point Linearization</b> | 2 to 32 points for channel A and B                                                                                                     |
| <b>Low-Flow Cutoff</b>           | 0-999999 (0 disables cutoff function)                                                                                                  |
| <b>Decimal Point</b>             | Up to five decimal places or none:<br>dddddd, dddddd, dddd, ddd, dd, or dddddd                                                         |
| <b>Calibration</b>               | May be calibrated using K-factor, internal calibration, or by applying an external calibration signal.                                 |
| <b>K-Factor</b>                  | Field programmable K-factor converts input pulses to rate in engineering units. May be programmed from 0.00001 to 999,999 pulses/unit. |

|                                      |                                                                                                                                                                                                                                                      |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Calibration Range</b>             | Input 1 signal may be set anywhere in the range of the meter; input 2 signal may be set anywhere above or below input 1 setting.<br>Minimum input span between any two inputs is 10 Hz. An error message will appear if the input span is too small. |
| <b>Filter</b>                        | Programmable contact de-bounce filter: 40 to 999 Hz maximum input frequency allowed with low speed filter.                                                                                                                                           |
| <b>Time Base</b>                     | Second, minute, hour, or day                                                                                                                                                                                                                         |
| <b>Gate</b>                          | Low gate: 0.1-99.9 seconds<br>High gate: 2.0-999.9 seconds                                                                                                                                                                                           |
| <b>F4 Digital Input Contacts</b>     | 3.3 VDC on contact. Connect normally open contacts across F4 to COM.                                                                                                                                                                                 |
| <b>F4 Digital Input Logic Levels</b> | Logic High: 3 to 5 VDC<br>Logic Low: 0 to 1.25 VDC                                                                                                                                                                                                   |

# Dual Rate/Totalizer

|                                           |                                                                                                                                                                                                                                                                                    |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rate Display Indication</b>            | -99999 to 999999, lead zero blanking.                                                                                                                                                                                                                                              |
| <b>Total Display &amp; Total Overflow</b> | 0 to 999,999; automatic lead zero blanking. Up to 999,999,999 with total-overflow feature. "OF" is displayed to the left of total overflow and $\blacktriangle$ LED is illuminated.                                                                                                |
| <b>Total Decimal Points</b>               | Up to five decimal places or none:<br>dddddd, dddddd, dddd, ddd, dd, or dddddd<br>Total decimal point is independent of rate decimal point. Channel A and B decimal points programmed independently.                                                                               |
| <b>Dual Totalizer</b>                     | Calculates total for channels A and B based on rate and field programmable multiplier to display total in engineering units. Time base must be selected according to the time units in which the rate is displayed. Channel A and B totalizer parameters programmed independently. |
| <b>Totalizer Rollover</b>                 | Totalizer rolls over when display exceeds 999,999,999. Relay status reflects display.                                                                                                                                                                                              |
| <b>Total Overflow Override</b>            | Program total A or B total reset for automatic with 0.1 second delay and set point 1 for 999,999                                                                                                                                                                                   |
| <b>Totalizer Alarm Presets</b>            | Up to eight, user selectable under setup menu. Any set point can be assigned to channel A or B total or grand total (or C) and may be programmed anywhere in the range of the meter for total alarm indication.                                                                    |
| <b>Total &amp; Grand Total Reset</b>      | Via front panel button, external contact closure on digital inputs, automatically via user selectable preset value and time delay, or through serial communications. Channel A and B total and grand total reset parameters programmed independently.                              |
| <b>Total Reset Password</b>               | Total and grand total passwords may be entered to prevent resetting the totals or grand totals from the front panel.                                                                                                                                                               |

|                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Programmable Delay On Release</b> | 0.1 and 999.9 seconds; applied to the first relay assigned to total or grand total.<br>If the meter is programmed to reset total to zero automatically when the preset is reached, then a delay will occur before the total is reset.                                                                                                                                                                                                |
| <b>Non-Resettable Total</b>          | The grand totals can be programmed as non-resettable totals by entering the password "050873". Both channels are set to non-resettable when this password is entered.<br><br><div style="text-align: center;">  <p><b>Caution!</b> Once the Grand Totals have been programmed as "non-resettable" the feature <u>cannot</u> be disabled.</p> </div> |

## Relays

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Rating</b>              | 2 or 4 SPDT (Form C) internal and/or 4 SPST (Form A) external; rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP ( $\approx 50$ W) @ 125/250 VAC for inductive loads                                                                                                                                                                                                                                                                                                                            |
| <b>Noise Suppression</b>   | Noise suppression is recommended for each relay contact switching inductive loads; see page 14 for details.                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Relay Assignment</b>    | Relays may be assigned to channel A or B rate, total, or grand total; channel C; or Modbus control.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Deadband</b>            | 0-100% of span, user programmable                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>High Or Low Alarm</b>   | User may program any alarm for high or low trip point.<br>Unused alarm LEDs and relays may be disabled (turn off).                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Relay Operation</b>     | Automatic (non-latching)<br>Latching (requires manual acknowledge)<br>Sampling (based on time)<br>Pump alternation control (2 to 8 relays)<br>Off (disable unused relays and enable Interlock feature)<br>Manual on/off control mode                                                                                                                                                                                                                                                                     |
| <b>Relay Reset</b>         | User selectable via front panel buttons, digital inputs, or PC <ol style="list-style-type: none"> <li>Automatic reset only (non-latching), when the input passes the reset point.</li> <li>Automatic + manual reset at any time (non-latching)</li> <li>Manual reset only, at any time (latching)</li> <li>Manual reset only after alarm condition has cleared (L)</li> </ol> <p><i>Note: Front panel button or digital input may be assigned to acknowledge relays programmed for manual reset.</i></p> |
| <b>Time Delay</b>          | 0 to 999.9 seconds, on & off relay time delays<br>Programmable and independent for each relay                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Fail-Safe Operation</b> | Programmable and independent for each relay.<br><i>Note: Relay coil is energized in non-alarm condition.<br/>In case of power failure, relay will go to alarm state.</i>                                                                                                                                                                                                                                                                                                                                 |

|                            |                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------|
| <b>Auto Initialization</b> | When power is applied to the meter, relays will reflect the state of the input to the meter. |
|----------------------------|----------------------------------------------------------------------------------------------|

## Isolated 4-20 mA Transmitter Output

|                                   |                                                                                                                                                                                                                                   |              |               |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------|
| Output Source                     | Input channels A or B, rate, total, or grand total; channel C; max or min for channel A or B; highest or lowest max or min of A and B; set points 1-8; Modbus input; or manual control mode                                       |              |               |
| Scaling Range                     | 1.000 to 23.000 mA for any display range                                                                                                                                                                                          |              |               |
| Calibration                       | Factory calibrated: 4.000 to 20.000 = 4-20 mA output                                                                                                                                                                              |              |               |
| Analog Out Programming            | 23.000 mA maximum for all parameters: Overrange, underrange, max, min, and break                                                                                                                                                  |              |               |
| Accuracy                          | $\pm 0.1\%$ of span $\pm 0.004$ mA                                                                                                                                                                                                |              |               |
| Temperature Drift                 | 0.4 $\mu\text{A}/^{\circ}\text{C}$ max from 0 to $65^{\circ}\text{C}$ ambient, 0.8 $\mu\text{A}/^{\circ}\text{C}$ max from $-40$ to $0^{\circ}\text{C}$ ambient<br><i>Note: Analog output drift is separate from input drift.</i> |              |               |
| Isolated Transmitter Power Supply | Terminals I+ & R: 24 VDC $\pm 10\%$ . May be used to power the 4-20 mA output or other devices. Refer to Figure 6 on page 12 and Figure 18 on page 15.<br>All models rated @ 40 mA max.                                           |              |               |
| External Loop Power Supply        | 35 VDC maximum                                                                                                                                                                                                                    |              |               |
| Output Loop Resistance            | Power supply                                                                                                                                                                                                                      | Minimum      | Maximum       |
|                                   | 24 VDC                                                                                                                                                                                                                            | 10 $\Omega$  | 700 $\Omega$  |
|                                   | 35 VDC (external)                                                                                                                                                                                                                 | 100 $\Omega$ | 1200 $\Omega$ |

## Modbus® RTU Serial Communications

|                             |                                          |
|-----------------------------|------------------------------------------|
| <b>Slave Id</b>             | 1 – 247 (Meter address)                  |
| <b>Baud Rate</b>            | 300 – 19,200 bps                         |
| <b>Transmit Time Delay</b>  | Programmable between 0 and 199 ms        |
| <b>Data</b>                 | 8 bit (1 start bit, 1 or 2 stop bits)    |
| <b>Parity</b>               | Even, Odd, or None with 1 or 2 stop bits |
| <b>Byte-To-Byte Timeout</b> | 0.01 – 2.54 second                       |
| <b>Turn Around Delay</b>    | Less than 2 ms (fixed)                   |

## MeterView Pro

|                            |                                         |
|----------------------------|-----------------------------------------|
| <b>System Requirements</b> | Microsoft® Windows® XP/Vista/7/8/10     |
| <b>Communications</b>      | USB 2.0 (Standard USB A to Micro USB B) |
| <b>Configuration</b>       | Configure meters one at a time          |

## Compliance Information

### Safety

|                              |                                                                                     |
|------------------------------|-------------------------------------------------------------------------------------|
| <b>UL &amp; c-UL Listed</b>  | USA & Canada<br>UL 508 Industrial Control Equipment                                 |
| <b>UL File Number</b>        | E160849                                                                             |
| <b>Front Panel</b>           | UL Type 4X, NEMA 4X, IP65; panel gasket provided                                    |
| <b>Low Voltage Directive</b> | EN 61010-1:2010<br>Safety requirements for measurement, control, and laboratory use |

### Electromagnetic Compatibility

|                                |                                                                                                                                          |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Emissions</b>               | EN 55022:2010<br>Class A ITE emissions requirements                                                                                      |
| Radiated Emissions             | Class A                                                                                                                                  |
| AC Mains Conducted Emissions   | Class A                                                                                                                                  |
| <b>Immunity</b>                | EN 61326-1:2013<br>Measurement, control, and laboratory equipment<br>EN 61000-6-2:2005<br>EMC heavy industrial generic immunity standard |
| RFI - Amplitude Modulated      | 80 -1000 MHz 10 V/m 80% AM (1 kHz)<br>1.4 - 2.0 GHz 3 V/m 80% AM (1 kHz)<br>2.0 - 2.7 GHz 1 V/m 80% AM (1 kHz)                           |
| Electrical Fast Transients     | ±2kV AC mains, ±1kV other                                                                                                                |
| Electrostatic Discharge        | ±4kV contact, ±8kV air                                                                                                                   |
| RFI - Conducted                | 10V, 0.15-80 MHz, 1kHz 80% AM                                                                                                            |
| AC Surge                       | ±2kV Common, ±1kV Differential                                                                                                           |
| Surge                          | 1KV (CM)                                                                                                                                 |
| Power-Frequency Magnetic Field | 30 A/m 70%V for 0.5 period                                                                                                               |
| Voltage Dips                   | 40%V for 5 & 50 periods<br>70%V for 25 periods                                                                                           |
| Voltage Interruptions          | <5%V for 250 periods                                                                                                                     |

**Note:**

Testing was conducted on PD6300 Series meters installed through the covers of grounded metal enclosures with cable shields grounded at the point of entry representing installations designed to optimize EMC performance.

## Safety Information



**CAUTION:** Read complete instructions prior to installation and operation of the meter.



**WARNING:** Risk of electric shock or personal injury.



**WARNING!**  
Hazardous voltages exist within enclosure. Installation and service should be performed only by trained service personnel.

## Installation

There is no need to remove the meter from its case to complete the installation, wiring, and setup of the meter for most applications.

Instructions are provided for changing the transmitter power supply to output 5 or 10 VDC instead of 24 VDC, see page 11.

## Unpacking

Remove the meter from box. Inspect the packaging and contents for damage. Report damages, if any, to the carrier.

If any part is missing or the meter malfunctions, please contact your supplier or the factory for assistance.

## Panel Mounting Instructions

- Prepare a standard 1/8 DIN panel cutout – 3.622" x 1.772" (92 mm x 45 mm). Refer to Figure 1 below, for more details.
- Clearance: allow at least 6.0" (152 mm) behind the panel for wiring.
- Panel thickness: 0.04" - 0.25" (1.0 mm - 6.4 mm).  
Recommended minimum panel thickness to maintain Type 4X rating: 0.06" (1.5 mm) steel panel, 0.16" (4.1 mm) plastic panel.
- Remove the two mounting brackets provided with the meter (back-off the two screws so that there is 1/4" (6.4 mm) or less through the bracket. Slide the bracket toward the front of the case and remove).
- Insert meter into the panel cutout.
- Install mounting brackets and tighten the screws against the panel. To achieve a proper seal, tighten the mounting bracket screws evenly until meter is snug to the panel along its short side. **DO NOT OVER TIGHTEN**, as the rear of the panel may be damaged.

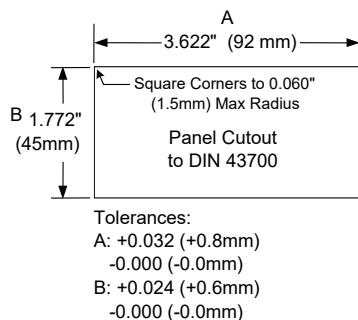


Figure 1. 1/8 DIN Panel Cutout Dimensions

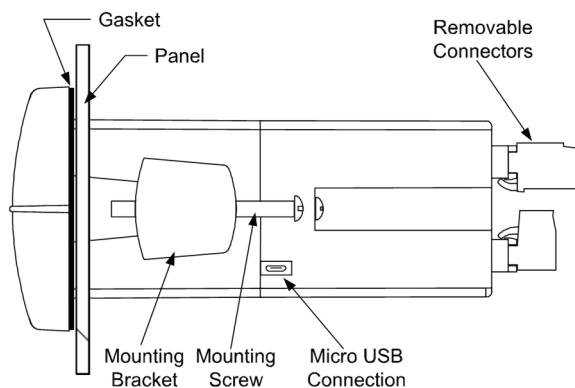


Figure 2. Panel Mounting Details

## Mounting Dimensions

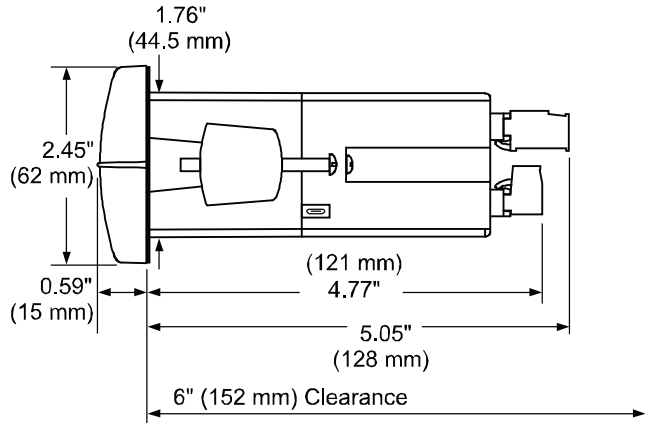


Figure 3. Meter Dimensions - Side View

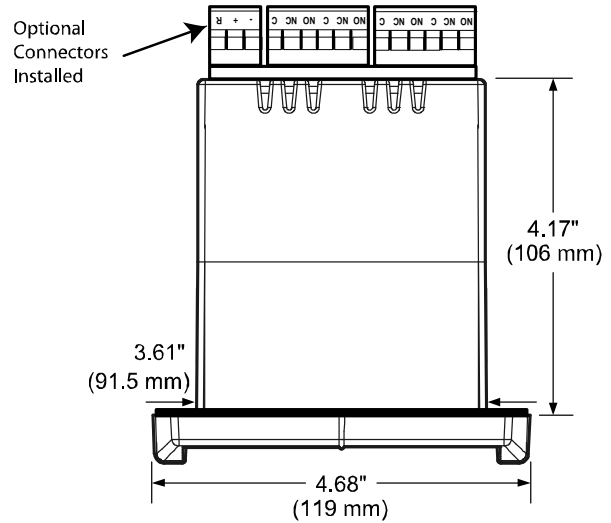


Figure 4. Meter Dimensions - Top View

## Transmitter Supply Voltage Selection (P+, P-)

All meters, including models equipped with the 12-24 VDC power option, are shipped from the factory configured to provide 24 VDC power for the transmitter or sensor.

If the transmitter requires 5 or 10 VDC excitation, the internal jumper J4 must be configured accordingly.

To access the voltage selection jumper:

1. Remove all the wiring connectors.
2. Unscrew the back cover.
3. Slide out the back cover by about 1 inch.
4. Configure the J4 jumper, located behind the input signal connector, for the desired excitation voltage as shown.

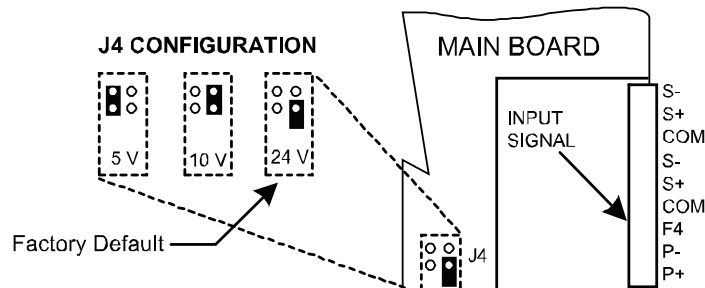


Figure 5. Transmitter Supply Voltage Selection

## Connections

All connections are made to removable screw terminal connectors located at the rear of the meter.




**Caution!** Use copper wire with 60°C or 60/75°C insulation for all line voltage connections. Observe all safety regulations. Electrical wiring should be performed in accordance with all applicable national, state, and local codes to prevent damage to the meter and ensure personnel safety.

## Connectors Labeling

The connectors' label, affixed to the meter, shows the location of all connectors available with requested configuration.




**Warning!** Do not connect any equipment other than Precision Digital's expansion modules, cables, or meters to the RJ45 M-LINK connector. Otherwise damage will occur to the equipment and the meter.

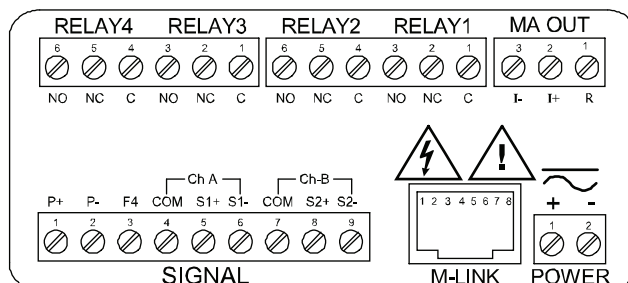

**Figure 6. Connector Labeling for Fully Loaded PD6363**

## Power Connections

Power connections are made to a two-terminal connector labeled POWER on Figure 6. The meter will operate regardless of DC polarity connection. The + and - symbols are only a suggested wiring convention.

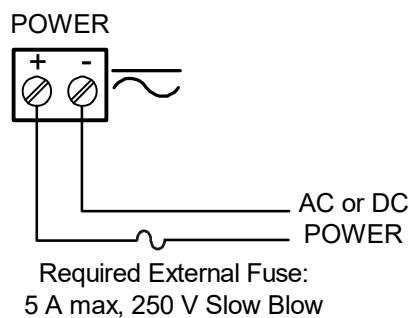


**Figure 7. Power Connections**


## Signal Connections

Signal connections are made to a nine-terminal connector labeled SIGNAL on Figure 6. The COM (common) terminals are the return for certain input signals. The two COM terminals connect to the same common return, and are not isolated.


The following figures show examples of signal connections.

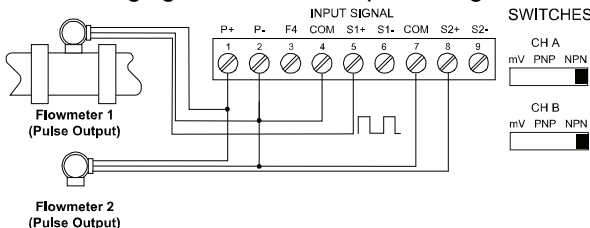


**Figure 8: Flowmeter Powered by Internal Power Supply**

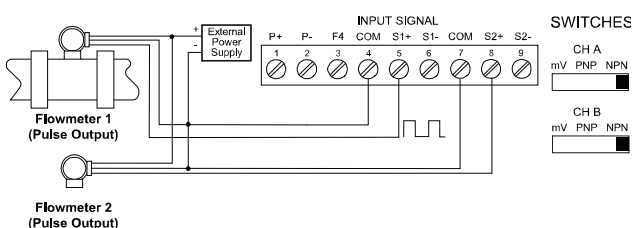


**Figure 9: Flowmeter Powered by External Supply**

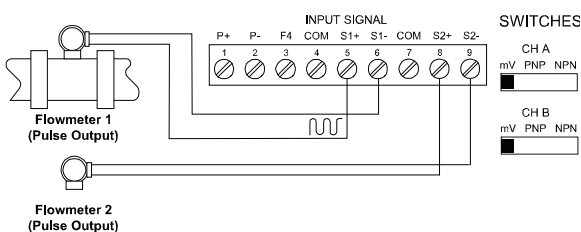


**Figure 10: Self-Powered Magnetic Pickup Coil Flowmeter**

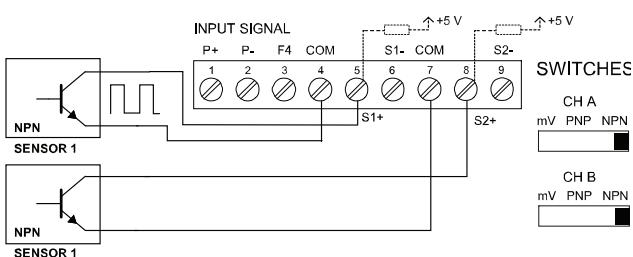

**Figure 11: NPN open Collector Input**

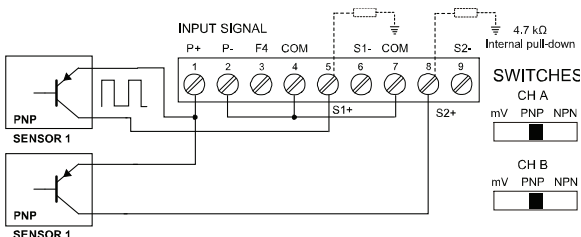

**Figure 12: PNP Sensor Powered by Internal Supply**

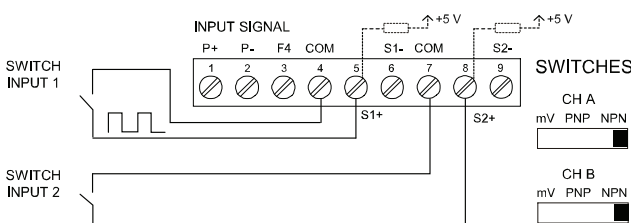

**Figure 13: Switch Input Connections**

## Configure Input Type and Level Switches

Channel A and B each have an internal input type configuration switch. These switches must be set to the correct input type and level. Each switch can be set for mV, PNP, or NPN. For details on what input type to select, see Signal Connections starting on page 13.

To configure the meter for 12 VDC power:

1. Remove all the connectors.
2. Unscrew the back cover.
3. Remove the back cover.
4. Configure the input selection switches for channel A and B, located behind the input connector on the far left, as needed.
5. Slide rear cover back onto the meter.
6. Screw the back cover on. Do not over tighten.
7. Replace all connectors.

## Modbus RTU Serial Communications

Serial communications connection is made to an RJ45 connector labeled M-LINK on Figure 6. For interfacing to the PROVu®, use the PDA1232 for RS-232 or the PDA1485 for RS-485. The same port is used for interfacing with all expansion modules (e.g. external relays, additional 4-20 mA outputs, digital I/O).

## Relay Connections

Relay connections are made to two six-terminal connectors labeled RELAY1 – RELAY4 on Figure 6. Each relay's C terminal is common only to the normally open (NO) and normally closed (NC) contacts of the corresponding relay. The relays' C terminals should not be confused with the COM (common) terminal of the INPUT SIGNAL connector.

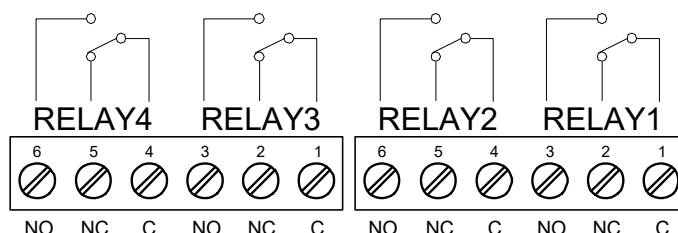


Figure 14. Relay Connections

## Switching Inductive Loads

The use of suppressors (snubbers) is strongly recommended when switching inductive loads to prevent disrupting the microprocessor's operation. The suppressors also prolong the life of the relay contacts. Suppression can be obtained with resistor-capacitor (RC) networks assembled by the user or purchased as complete assemblies. Refer to the following circuits for RC network assembly and installation:

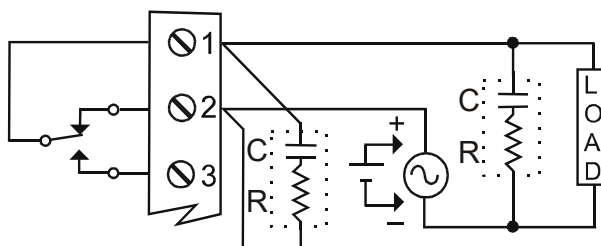


Figure 15. AC and DC Loads Protection


Choose R and C as follows:

R: 0.5 to 1  $\Omega$  for each volt across the contacts

C: 0.5 to 1  $\mu\text{F}$  for each amp through closed contacts

Notes:

1. Use capacitors rated for 250 VAC.
2. RC networks may affect load release time of solenoid loads. Check to confirm proper operation.
3. Install the RC network at the meter's relay screw terminals. An RC network may also be installed across the load. Experiment for best results.

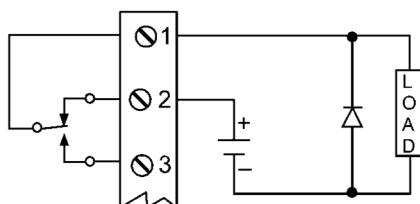

Use a diode with a reverse breakdown voltage two to three times the circuit voltage and forward current at least as large as the load current.

Figure 16. Low Voltage DC Loads Protection

### RC Networks Available from Precision Digital

RC networks are available from Precision Digital and should be applied to each relay contact switching an inductive load. Part number: PDX6901.

*Note: Relays are de-rated to 1/14th HP (50 watts) with an inductive load.*

### F4 Digital Input Connections

A digital input, F4, is standard on the meter. This digital input connected with a normally open closure across F4 and COM, or with an active low signal applied to F4.

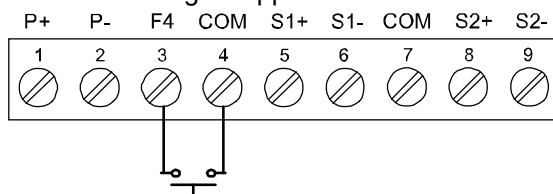


Figure 17. F4 Digital Input Connections

### 4-20 mA Output Connections

Connections for the 4-20 mA transmitter output are made to the connector terminals labeled MA OUT. The 4-20 mA output may be powered internally or from an external power supply.

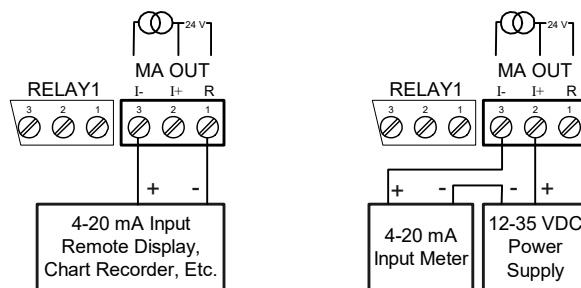


Figure 18. 4-20 mA Output Connections

### Analog Output Transmitter Power Supply

The internal 24 VDC power supply powering the analog output may be used to power other devices, if the analog output is not used. The I+ terminal is the +24 V and the R terminal is the return.

## External Relay, Analog Output, & Digital I/O Connections

The relay, analog out, and digital I/O expansion modules PDA1004, PDA1011, and PDA1044 are connected to the meter using a CAT5 cable provided with each module. The two RJ45 connectors on the expansion modules are identical and interchangeable; they are used to connect additional modules to the system.


*Note: The jumper located between the RJ45 connectors of the PDA1044 must be removed on the second digital I/O module in order for the system to recognize it as module #2.*



**Warning!** *Do not connect or disconnect the expansion modules with the power on! More detailed instructions are provided with each optional expansion module.*

## Interlock Relay Feature

As the name implies, the interlock relay feature reassigns one, or more, alarm/control relays for use as interlock relay(s). Interlock contact(s) are wired to digital input(s) and trigger the interlock relay. This feature is enabled by configuring the relay, and relative digital input(s) (see page 39). In one example, dry interlock contacts are connected in series to one digital input which will be used to force on (energize) the assigned interlock power relay when all interlock contacts are closed (safe). The interlock relay front panel LED flashes when locked out. The interlock relay would be wired in-series with the load (N/O contact). See below.

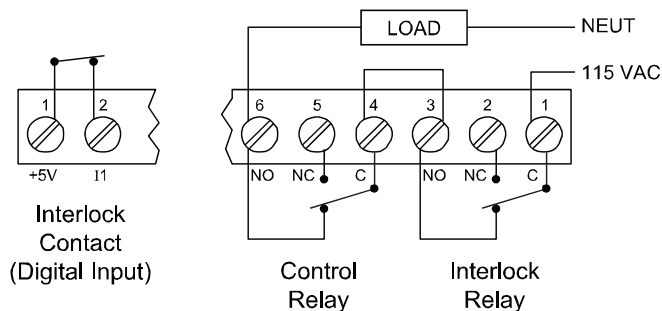

**Figure 19. Interlock Connections**

## Setup and Programming

- The meter has been factory calibrated to read input frequency in Hz (pulses/sec). The calibration equipment is certified to NIST standards.
- Use the *K-Factor* menu to match the rate/totalizer with a flowmeter's k-factor (pulse/unit of measure).
- Or use the *Scale* menu to scale the pulse input (pulse/sec) without a signal source.
- **Or use *Cal* menu to calibrate the rate/totalizer using a signal source.**

### Overview

There are no jumpers to set for the meter input selection.

Setup and programming is done through the front panel buttons.

After power and input signal connections have been completed and verified, apply power to the meter.

### Front Panel Buttons and Status LED Indicators



| Button Symbol                                                                                                | Description    | LED                                                                                            | Status                                 |
|--------------------------------------------------------------------------------------------------------------|----------------|------------------------------------------------------------------------------------------------|----------------------------------------|
|                           | Menu           | 1-8                                                                                            | Alarm 1-8 indicator                    |
|                           | Right arrow/F1 | 1-8<br>M                                                                                       | Flashing: Relay in manual control mode |
|                           | Up arrow/F2    | A<br>B<br>C                                                                                    | Channel displayed                      |
|                           | Enter/F3       | 1-4                                                                                            | Flashing: Relay interlock switch open  |
| <b>Notes:</b><br><i>F4 is a digital input. Alarms 5-8 are enabled when relay expansion module installed.</i> |                | <b>Note:</b><br><i>LEDs for relays in manual mode flash with the "M" LED every 10 seconds.</i> |                                        |

- Press the Menu button to enter or exit the Programming Mode at any time.
- Press the Right arrow button to move to the next digit during digit or decimal point programming.
- Press or hold the Up arrow button to scroll through the menus, decimal point, or to increment the value of a digit.
- Press the Enter button to access a menu or to accept a setting.
- Press and hold the Menu button for three seconds to access the advanced features of the meter.

## MeterView® Pro Software


The meter can also be programmed using the PC-based MeterView Pro software included with the meter. This software can be installed on any Microsoft® Windows® (XP/Vista/7/8/10) computer by connecting the meter's onboard USB. The meter is powered by the USB connection, so there is no need to wire anything prior to programming the meter, though USB is intended only for meter configuration.

### MeterView Pro Installation





1. Connect one end of the provided USB cable to the meter and the other end to the computer. The computer will automatically install the driver software it needs to talk to the meter.

**Only one meter may be connected at a time.**

**Attaching multiple meters will cause a conflict with the meter software.**

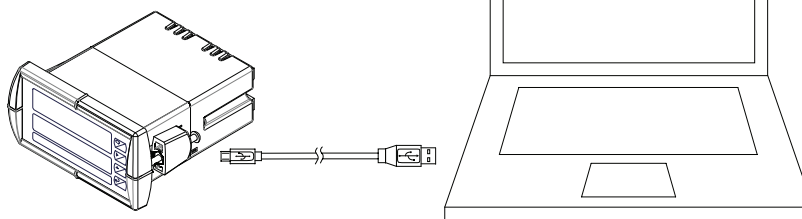

2. Once the driver is installed, an AutoPlay dialog should appear for the drive "MAINSTAL." Click "Open folder to view files." If the computer does not display an AutoPlay dialog for the drive "MAINSTAL," you should open My Computer and double-click on the drive labeled "MAINSTAL."
3. Double-click on the file named "MAStart." The program will open a few windows and install two programs on your computer. Simply follow the onscreen instructions until you see one of the dialogs below. If you receive a "User Account Control" warning, click "Yes."
4. If there is an update available, click the "Update" button to install the new version. Otherwise, click "Configure" to begin programming your meter.

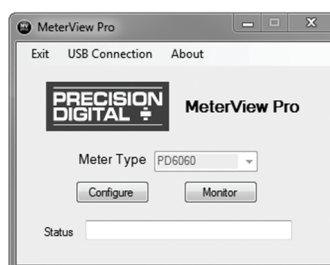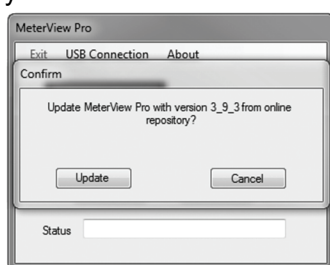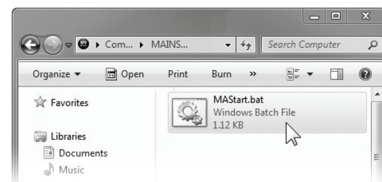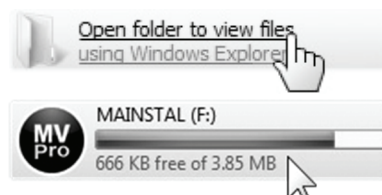

**Note:** If you decide to update your MeterView Pro software, once the installation has completed, you will be asked if you want to update the setup files located on the meter itself. This way, you will always have the most current version on the meter for future installs.



**Warning!**

**Do not unplug the meter while the new installation files are being written to it. The meter will display  $\mu\text{A}$  during the process and you will receive an onscreen notification once the process is complete.**

Data logging for one meter at a time is available with MeterView Pro software. More advanced data acquisition may be accomplished by using any Modbus RTU compliant software. Additional information regarding configuration and monitoring of the meter using MeterView Pro software is available online.

## Display Functions & Messages

The following table shows the main menu functions and messages in the order they appear in the menu.

| Display | Parameter        | Action/Setting Description                                                          |
|---------|------------------|-------------------------------------------------------------------------------------|
| SEtUP   | Setup            | Enter <i>Setup</i> menu                                                             |
| INPUt   | Input            | Enter <i>Input</i> selection menu                                                   |
| Ch-R*   | Input            | Set input operation for channel A (*or B)                                           |
| toLR    | Total            | Enable/disable totalizer functions                                                  |
| YES     | Yes              | Enable totalizer functions                                                          |
| no      | No               | Disable totalizer functions                                                         |
| ModE    | Mode             | Select dual-input operation mode                                                    |
| duRL    | Dual             | Set independent dual input mode                                                     |
| ud Ab   | Up/Down AB       | Set channel A total add/subtract based on the state of channel B                    |
| ud Ai   | Up/Down AI       | Set channel A total add/subtract based on the state of a digital input              |
| ud Bi   | Up/Down BI       | Set channel B total add/subtract based on the state of a digital input              |
| ud Bi   | Up/Down ABI      | Set channel A & B total add/subtract based on the state of a digital input for each |
| QuAd 1  | Quadrature 1     | Set type 1 quadrature operation                                                     |
| QuAd 2  | Quadrature 2     | Set type 2 quadrature operation                                                     |
| QuAd 4  | Quadrature 4     | Set type 4 quadrature operation                                                     |
| un tS   | Unit             | Select the display units/tags                                                       |
| Ch-R*   | Rate unit        | Set rate unit or tag for channel A (*or B)                                          |
| Ch-C    | Math unit        | Set unit or tag for math channel C                                                  |
| toLR*   | Total unit       | Set total unit or tag for channel A (*or B)                                         |
| toLR*   | Grand total unit | Set grand total unit or tag for channel A (*or B)                                   |
| dEc Pt  | Decimal point    | Set decimal point                                                                   |

| Display | Parameter         | Action/Setting Description                                                     |
|---------|-------------------|--------------------------------------------------------------------------------|
| Ch-R*   | Decimal point     | Set decimal point for channel A (*or B or C)                                   |
| rLR*    | Rate              | Set rate decimal point (*channel A and B only)                                 |
| toLR*   | Total             | Set total decimal point (*channel A and B only)                                |
| toLR*   | Grand total       | Set grand total decimal point (*channel A and B only)                          |
| ProG    | Program           | Enter the <i>Program</i> menu                                                  |
| inLR    | Input calibration | Enter the <i>Input Calibration</i> menu                                        |
| Ch-R    | Channel A         | Enter channel A input setup                                                    |
| FRct-R  | K-factor A        | Enter channel A k-factor                                                       |
| SLRL-R  | Scale A           | Enter the <i>Scale</i> menu for channel A                                      |
| LR-R    | Calibrate A       | Enter the <i>Calibration</i> menu for channel A                                |
| INP 1   | Input 1           | Calibrate input 1 signal or program input 1 value                              |
| dis 1   | Display 1         | Program display 1 value                                                        |
| INP 2   | Input 2           | Calibrate input 2 signal or program input 2 value (up to 32 points)            |
| dis 2   | Display 2         | Program display 2 value (up to 32 points)                                      |
| Error   | Error             | Error, calibration or scaling not successful, check signal or programmed value |
| Ch-b    | Channel B         | Enter channel B input setup                                                    |
| FRct-b  | K-factor B        | Enter channel B k-factor                                                       |
| SLRL-b  | Scale B           | Enter the <i>Scale</i> menu for channel B                                      |
| LR-b    | Calibrate B       | Enter the <i>Calibration</i> menu for channel B                                |
| SEtUP   | Total setup       | Enter the <i>Total Setup</i> menu                                              |
| Ch-R*   | Channel A         | Setup the total for channel A (*or B)                                          |
| tbRSE   | Time base         | Program total time base                                                        |

| Display             | Parameter                     | Action/Setting Description                     |
|---------------------|-------------------------------|------------------------------------------------|
| $\Sigma CF$         | Total conversion factor       | Program total conversion factor                |
| $\Sigma \Sigma CF$  | Grand total conversion factor | Program grand total conversion factor          |
| $\Sigma RESEt$      | Total reset                   | Program total reset mode: auto or manual       |
| $\Sigma h-R^*$      | Channel A                     | Set total reset modes for channel A (*or B)    |
| $\Sigma rSt$        | Total reset                   | Program total reset mode: auto or manual       |
| $\Sigma \Sigma rSt$ | Grand total reset             | Program grand total reset mode: auto or manual |
| $\Sigma dLY$        | Time delay                    | Program automatic reset time delay             |
| dSPLY               | Display                       | Enter the Display menu                         |
| $\Sigma nE 1$       | Display Line 2                | Assign the upper display parameter             |
| $\Sigma nE 2$       | Display Line 2                | Assign the lower display parameter             |
| $d \Sigma h-R$      | Display Ch-A                  | Assign display to channel A                    |
| $d \Sigma h-b$      | Display Ch-B                  | Assign display to channel B                    |
| $d \Sigma h-\Sigma$ | Display Ch-C                  | Assign display to channel C (math)             |
| $d Rb$              | Display AB                    | Alternate display of channels A & B            |
| $d R\Sigma$         | Display AC                    | Alternate display of channels A & C            |
| $d b\Sigma$         | Display BC                    | Alternate display of channels B & C            |
| $d Rb\Sigma$        | Display ABC                   | Alternate display of channels A, B, & C        |
| $d \Sigma-R$        | Display total A               | Assign display to channel A total              |
| $d \Sigma-b$        | Display total B               | Assign display to channel B total              |
| $d \Sigma \Sigma-R$ | Display grand total A         | Assign display to channel A grand total        |
| $d \Sigma \Sigma-b$ | Display grand total B         | Assign display to channel B grand total        |
| $d r\Sigma-R$       | Display rate and total A      | Alternate display of channel A rate and total  |

| Display             | Parameter                         | Action/Setting Description                           |
|---------------------|-----------------------------------|------------------------------------------------------|
| $d r\Sigma-b$       | Display rate and total B          | Alternate display of channel B rate and total        |
| $dr\Sigma \Sigma-R$ | Display rate and grand total A    | Alternate display of channel A rate and grand total  |
| $dr\Sigma \Sigma-b$ | Display rate and grand total B    | Alternate display of channel B rate and grand total  |
| $dSEt 1^*$          | Display Set 1*                    | Displays relay 1(*through 8) set point.              |
| $d H \Sigma-R$      | Display high A                    | Display high value of channel A                      |
| $d L \Sigma-R$      | Display low A                     | Display low value of channel A                       |
| $d H L-R$           | Display high/low A                | Alternate between high/low value of channel A        |
| $d H \Sigma-b$      | Display high B                    | Display high value of channel B                      |
| $d L \Sigma-b$      | Display low B                     | Display low value of channel B                       |
| $d H L-b$           | Display high/low B                | Alternate between high/low value of channel B        |
| $d H \Sigma-\Sigma$ | Display high C                    | Display high value of channel C                      |
| $d L \Sigma-\Sigma$ | Display low C                     | Display low value of channel C                       |
| $d H L-\Sigma$      | Display high/low C                | Alternate between high/low value of channel C        |
| $d R-\Sigma$        | Display A and units/tags          | Alternate display of channel A and the unit/tag      |
| $d b-\Sigma$        | Display B and units/tags          | Alternate display of channel B and the unit/tag      |
| $d \Sigma-\Sigma$   | Display C and units/tags          | Alternate display of channel C and the unit/tag      |
| $d \Sigma R-\Sigma$ | Display total A and total A units | Alternate display of channel A total and total units |

| Display             | Parameter                                     | Action/Setting Description                                                            |
|---------------------|-----------------------------------------------|---------------------------------------------------------------------------------------|
| <i>d tB-u</i>       | <i>Display total B and total B units</i>      | Alternate display of channel B total and total units                                  |
| <i>d tAb</i>        | <i>Display total A and B</i>                  | Alternate display of channel A total and channel B total                              |
| <i>d tAbC</i>       | <i>Display total A, B, and sum of A and B</i> | Alternate display of channel A total, channel B total, and sum of totals as channel C |
| <i>rr bus</i>       | <i>Display Modbus</i>                         | Display Modbus input register                                                         |
| <i>d oFF</i>        | <i>Display off</i>                            | Display blank line 2                                                                  |
| <i>d un t</i>       | <i>Display unit</i>                           | Display line 1 channel units                                                          |
| <i>d- ln tY</i>     | <i>Display intensity</i>                      | Set display intensity level from 1 to 8                                               |
| <i>rELAY</i>        | <i>Relay</i>                                  | Enter the <i>Relay</i> menu                                                           |
| <i>RSS un</i>       | <i>Assignment</i>                             | Assign relays to channels or Modbus                                                   |
| <i>RS un i*</i>     | <i>Assign 1</i>                               | Relay 1 (*through 8) assignment                                                       |
| <i>Ch-A*</i>        | <i>Channel A*</i>                             | Assign relay to channel A (*or B or C)                                                |
| <i>rAtE*</i>        | <i>Rate</i>                                   | Assign relay to rate (*channel A and B only)                                          |
| <i>totAL*</i>       | <i>Total</i>                                  | Assign relay to total (*channel A and B only)                                         |
| <i>Grand total*</i> | <i>Grand total</i>                            | Assign relay to grand total (*channel A and B only)                                   |
| <i>rr bus</i>       | <i>Modbus</i>                                 | Assign relay to Modbus register                                                       |
| <i>rLY i*</i>       | <i>Relay 1</i>                                | Relay 1 (*through 8) setup                                                            |
| <i>Rct i</i>        | <i>Action 1</i>                               | Set relay 1 action                                                                    |
| <i>Ruto</i>         | <i>Automatic</i>                              | Set relay for automatic reset                                                         |
| <i>SEt i</i>        | <i>Set 1</i>                                  | Enter relay 1 set point                                                               |
| <i>rSEt i</i>       | <i>Reset 1</i>                                | Enter relay 1 reset point                                                             |
| <i>R-rrRn</i>       | <i>Auto-manual</i>                            | Set relay for auto or manual reset any time                                           |
| <i>LAtCH</i>        | <i>Latching</i>                               | Set relay for latching operation                                                      |

| Display              | Parameter                   | Action/Setting Description                                                                |
|----------------------|-----------------------------|-------------------------------------------------------------------------------------------|
| <i>Lt-CLr</i>        | <i>Latching-cleared</i>     | Set relay for latching operation with manual reset only after alarm condition has cleared |
| <i>RLtErn</i>        | <i>Alternate</i>            | Set relay for pump alternation control                                                    |
| <i>SPn PL</i>        | <i>Sample</i>               | Set relay for sample time trigger control                                                 |
| <i>OFF</i>           | <i>Off</i>                  | Turn relay off                                                                            |
| <i>FR iLSF</i>       | <i>Fail-safe</i>            | Enter <i>Fail-safe</i> menu                                                               |
| <i>FLS i*</i>        | <i>Fail-safe 1</i>          | Set relay 1 (*through 8) fail-safe operation                                              |
| <i>on</i>            | <i>On</i>                   | Enable fail-safe operation                                                                |
| <i>oFF</i>           | <i>Off</i>                  | Disable fail-safe operation                                                               |
| <i>dELAY</i>         | <i>Delay</i>                | Enter relay <i>Time Delay</i> menu                                                        |
| <i>dLY i*</i>        | <i>Delay 1</i>              | Enter relay 1 (*through 8) time delay setup                                               |
| <i>On i</i>          | <i>On 1</i>                 | Set relay 1 On time delay                                                                 |
| <i>OFF i</i>         | <i>Off 1</i>                | Set relay 1 Off time delay                                                                |
| <i>Rout</i>          | <i>Analog output</i>        | Enter the <i>Analog output</i> scaling menu                                               |
| <i>Rout i*</i>       | <i>Aout Channel</i>         | Analog Output source channel (*1-3)                                                       |
| <i>d iS i</i>        | <i>Display 1</i>            | Program display 1 value                                                                   |
| <i>Out i</i>         | <i>Output 1</i>             | Program output 1 value (e.g. 4.000 mA)                                                    |
| <i>d iS 2</i>        | <i>Display 2</i>            | Program display 2 value                                                                   |
| <i>Out 2</i>         | <i>Output 2</i>             | Program output 2 value (e.g. 20.000 mA)                                                   |
| <i>rESEt</i>         | <i>Reset</i>                | Press Enter to access the <i>Reset</i> menu                                               |
| <i>rSEt H i</i>      | <i>Reset high</i>           | Press Enter to reset max display                                                          |
| <i>rSEt Lo</i>       | <i>Reset low</i>            | Press Enter to reset min display                                                          |
| <i>rSEt HL</i>       | <i>Reset high &amp; low</i> | Press Enter to reset max & min displays                                                   |
| <i>tot A</i>         | <i>Reset total A</i>        | Press Enter to reset channel A total                                                      |
| <i>tot B</i>         | <i>Reset total B</i>        | Press Enter to reset channel B total                                                      |
| <i>Grand total A</i> | <i>Reset grand total A</i>  | Press Enter to reset channel A grand total                                                |


| Display | Parameter                  | Action/Setting Description                                        |
|---------|----------------------------|-------------------------------------------------------------------|
| Grnd b  | Reset grand total B        | Press Enter to reset channel B grand total                        |
| tot Ab  | Reset totals A and B       | Press Enter to reset channels A and B totals                      |
| Gr Ab   | Reset grand totals A and B | Press Enter to reset channels A and B grand totals                |
| ContrL  | Control                    | Enter Control menu                                                |
| Auto    | Automatic                  | Press Enter to set meter for automatic operation                  |
| Man     | Manual                     | Press Enter to manually control relays or analog output operation |
| PRSS    | Password                   | Enter the Password menu                                           |

| Display | Parameter                  | Action/Setting Description                |
|---------|----------------------------|-------------------------------------------|
| PRSS 1  | Password 1                 | Set or enter Password 1                   |
| unLoc   | Unlocked                   | Program password to lock meter            |
| Locd    | Locked                     | Enter password to unlock meter            |
| PRSS 2  | Password 2                 | Set or enter Password 2                   |
| PRSS 3  | Password 3                 | Set or enter Password 3                   |
| totAL   | Total reset password       | Set or enter a total reset password       |
| GrndAL  | Grand total reset password | Set or enter a grand total reset password |
| 999999  | Flashing                   | Overrange condition                       |

## Main Menu

The main menu consists of the most commonly used functions: *Reset*, *Control*, *Setup*, and *Password*.


- Press Menu button to enter Programming Mode then press the Up arrow button to scroll main menu.
- Press Menu, at any time, to exit and return to Run Mode. Changes made to settings prior to pressing Enter are not saved.
- Changes to the settings are saved to memory only after pressing Enter.
- The display moves to the next menu every time a setting is accepted by pressing Enter.

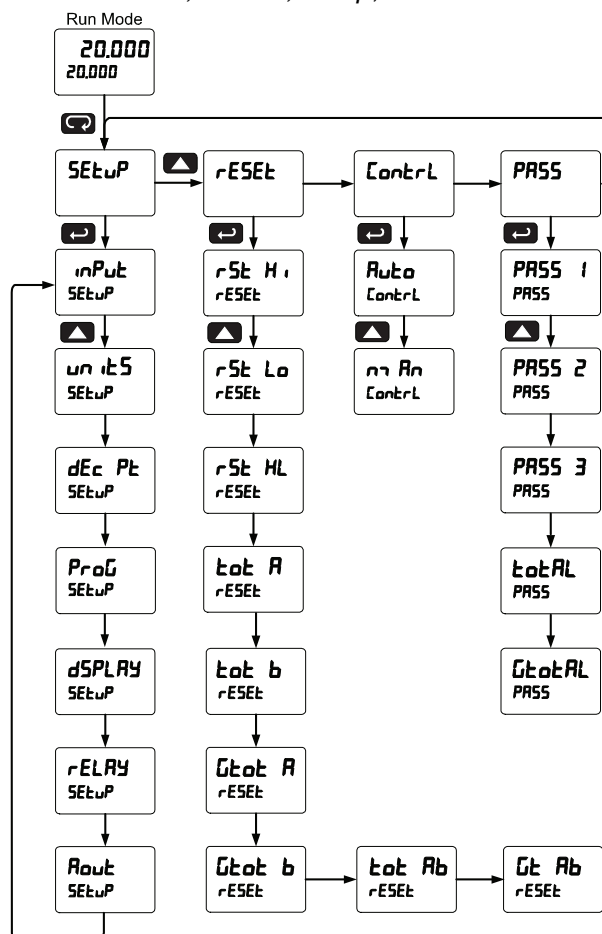

## Setting Numeric Values

The numeric values are set using the Right and Up arrow buttons. Press Right arrow to select next digit and Up arrow to increment digit value. The digit being changed is displayed brighter than the rest. Press and hold Up to auto-increment the display value. If negative numbers are allowed, the first digit position will include a negative symbol (-) after the 9.

Press the Enter button, at any time, to accept a setting or Menu button to exit without saving changes.

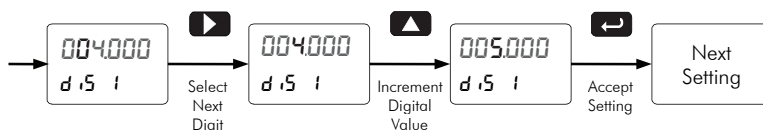


## Setting Up the Meter (SEtUP)

The *Setup* menu is used to select:

1. Total enable/disable and channel A and B input modes
2. Units for A & B rate, total & grand total, and C
3. Decimal positions for A & B rate, total, and grand total, and C
4. Program the K-factor (or scale or calibrate) & total functions
5. Display parameters and intensity
6. Relay assignments and operation
7. 4-20 mA analog output scaling


Press the Menu button to exit at any time.

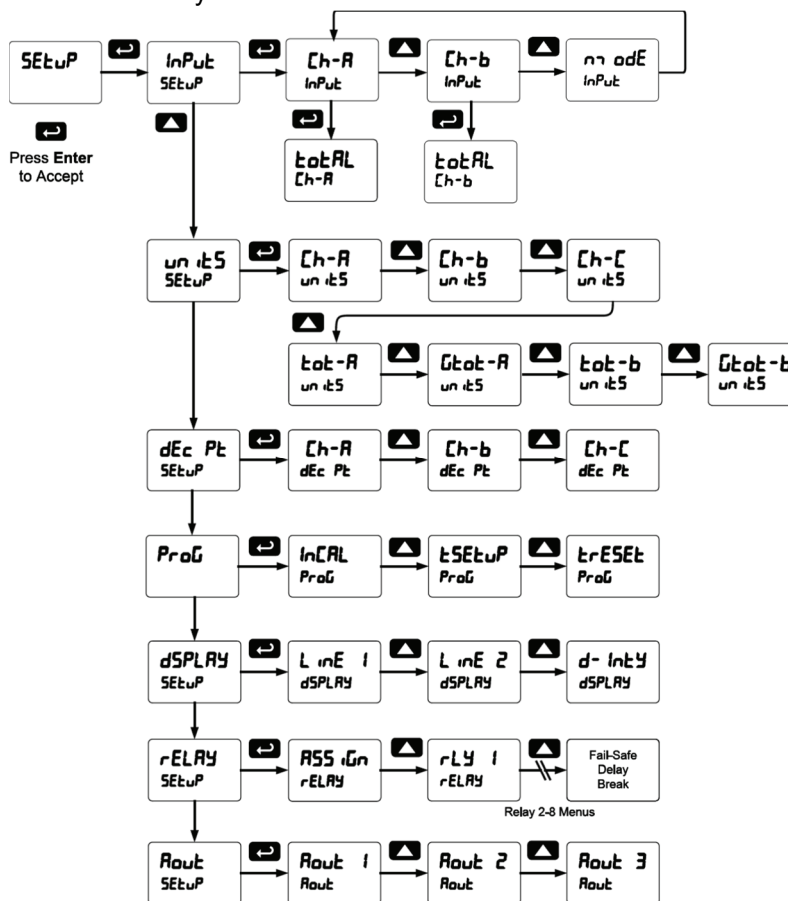

## Setting the Input Signal (InPut)

There are two internal slide switches, located inside the rear meter housing to the left of the input connector, which must be configured according to the input levels and types. See Configure Input Type and Level Switches on page 13 for details.

Enter the Input menu to enable or disable the totalizer features.

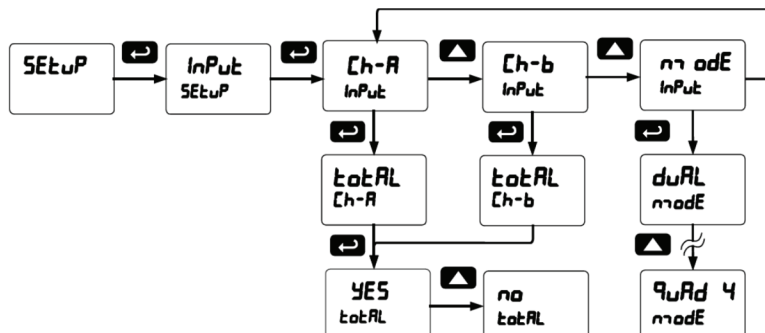

## Setting the Totalizer Features (tOtAL)

To simply not display the total, select alternative display parameters in the display (dSPLY) menu.

Enable or disable the totalizer features by selecting “YES” or “no” after the input type has been set up. If the totalizer features are disabled, most totalizer features and functions are hidden from the menus.

*Note: The totalizer continues working in the background.*

## Setting the Dual-Input Mode (modE)

The Mode menu is used to set the functions of the dual input and total. The inputs may be configured for independent one-directional total operation, bi-directional total count with the use of another input or a digital input, or for quadrature input modes.

### Independent Dual Totalizers (dUAL)

Total A and B are one-directional and independent, only counting up or down depending on Count settings.

### Ch-A Totalizer Add/Subtract by Ch-B Input (ud Ab)

Total of channel A will add or subtract as determined by the state of input channel B. Channel A total will add at each falling edge if input B is high, and subtract at each rising edge if input B is low.

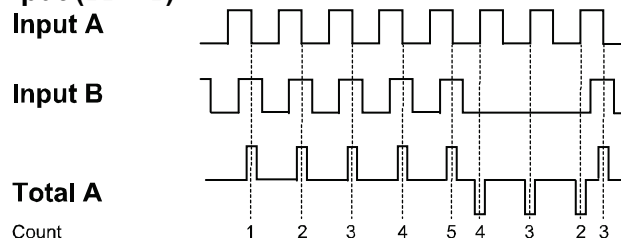


Figure 20. Dual Input Mode (ud Ab)

### Ch-A Totalizer Add/Subtract by Digital Input (ud A I)

Total of channel A will add or subtract as determined by the state of a digital input. Channel A total will add at each falling edge if an assigned digital input is high, and subtract at each rising edge if an assigned digital input is low.

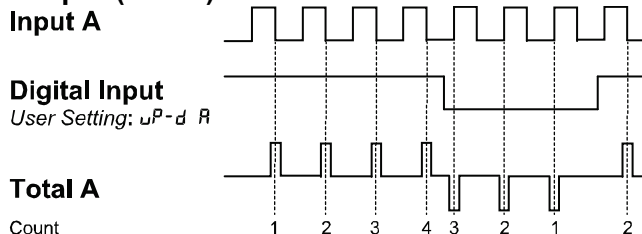


Figure 21. Dual Input Mode (ud A I)

### Ch-B Totalizer Add/Subtract by Digital Input ( $\mu d b l$ )

Total of channel B will add or subtract as determined by the state of a digital input. Channel B total will add at each falling edge if an assigned digital input is high, and subtract at each rising edge if an assigned digital input is low.

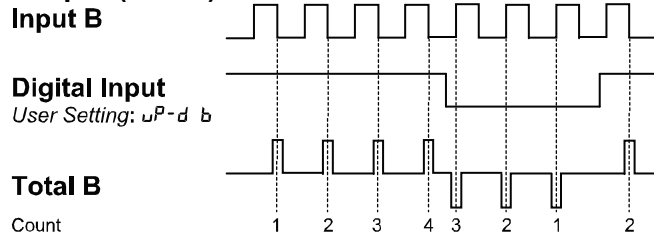


Figure 22. Dual Input Mode ( $\mu d b l$ )

### Ch-A & Ch-B Totalizer Add/Subtract by Digital Input ( $\mu d Rb$ )

Totals of channel A and B will add or subtract as determined by the state of a digital input assigned to each channel. This mode combines the features of  $\mu d R l$  and  $\mu d b l$ .

This setting requires the use of a digital input expansion module (see Accessories on page 5). The F4 digital input will only support one channel.

### Quadrature Input Type 1 ( $\mu R d l$ )

Quadrature modes are used to accept inputs that are  $\pm 90$  degrees out of phase, from quadrature output devices. Total of channel A will add or subtract as determined by the state of input channel B. Channel A total will add at each rising edge if channel B is high, and subtract at each rising edge if channel B is low.

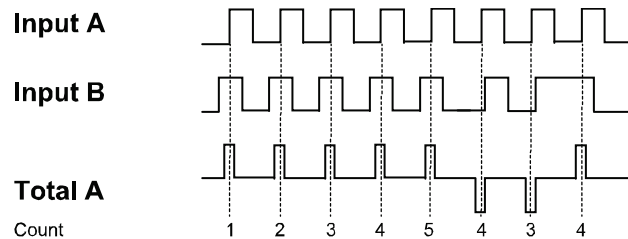


Figure 23. Dual Input Mode ( $\mu R d l$ )

### Quadrature Input Type 2 ( $\mu R d 2$ )

Quadrature modes are used to accept inputs that are  $\pm 90$  degrees out of phase, from quadrature output devices. Total of channel A will add or subtract as determined by the state of input channel B. Channel A total will add at each rising edge if channel B is high, and at each falling edge if channel B is low. Channel A total will subtract at each rising edge if channel B is low, and at each falling edge if channel B is high.

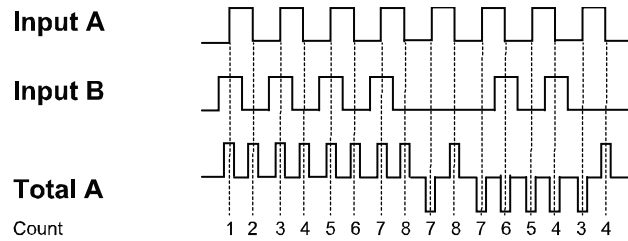


Figure 24. Dual Input Mode ( $\mu R d 2$ )

### Quadrature Input Type 4 ( $\mu R d 4$ )

Quadrature modes are used to accept inputs that are  $\pm 90$  degrees out of phase, from quadrature output devices. Totals of channel A and B will add at each rising and falling edge of that channel.

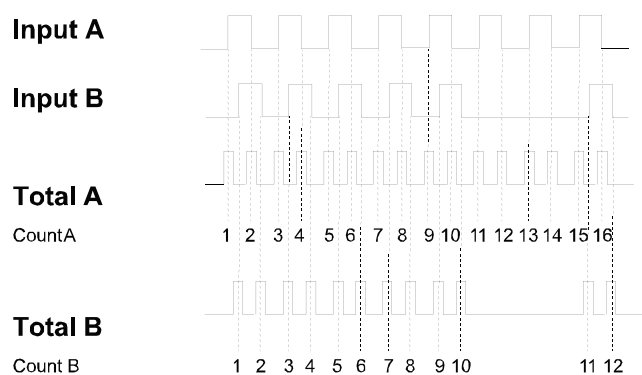


Figure 25. Dual Input Mode ( $\mu R d 4$ )

## Setting the Rate, Total, & Grand Total Units/Tags (un t5)

Enter the channel A and B rate, total, grand total, and math channel C units (or custom tags) that will be displayed if alternating units is selected in the un t5 menu, or d un t is selected as the lower display parameter.

See the flow chart on page 23 for details on accessing the *Units* menu and parameters. Ch-R and Ch-b set the rate units, tot-R and tot-b the total units, and Gtot-R and Gtot-b the grand total units. Ch-C sets the units for the math channel C.

See the flow chart on page 31 to access the display menu to show the unit or tag on the lower display.

The engineering units or custom legends can be set using the following 7-segment character set:

| Display | Character | Display | Character | Display | Character | Display | Character |
|---------|-----------|---------|-----------|---------|-----------|---------|-----------|
| 0       | 0         | C       | C         | K       | K         | v       | V         |
| 1       | 1         | c       | c         | L       | L         | w       | w         |
| 2       | 2         | d       | d         | m       | m         | X       | X         |
| 3       | 3         | E       | E         | n       | n         | Y       | Y         |
| 4       | 4         | F       | F         | O       | O         | Z       | Z         |
| 5       | 5         | G       | G         | o       | o         | -       | -         |
| 6       | 6         | g       | g         | P       | P         | /       | /         |
| 7       | 7         | H       | H         | q       | q         | [       | ]         |
| 8       | 8         | h       | h         | r       | r         | ]       | [         |
| 9       | 9         | I       | I         | S       | S         | =       | =         |
| A       | A         | i       | i         | t       | t         | °       | Degree(<) |
| b       | b         | J       | J         | u       | u         |         | Space     |

*Notes: Degree symbol represented by (<) if programming with MeterView® Pro. The letters “m” and “w” use two 7-segment LEDs each; when selected the characters to the right are shifted one position.*

*Press and hold up arrow to auto-scroll the characters in the display.*


## Setting the Decimal Point (dEc Pt)

The decimal point for any channel, rate, total, or grand total, may be set with up to five decimal places or with no decimal point at all.

Pressing the Right arrow moves the decimal point one place to the right until no decimal point is displayed, and then it moves to the leftmost position. Pressing the Up arrow moves the decimal point one place to the left.

There are seven decimal points to set up for three channels: Ch-A rate, total, and grand total; Ch-B rate, total, and grand total; and Ch-C.

After the decimal points are set up, the meter moves to the *Program* menu.

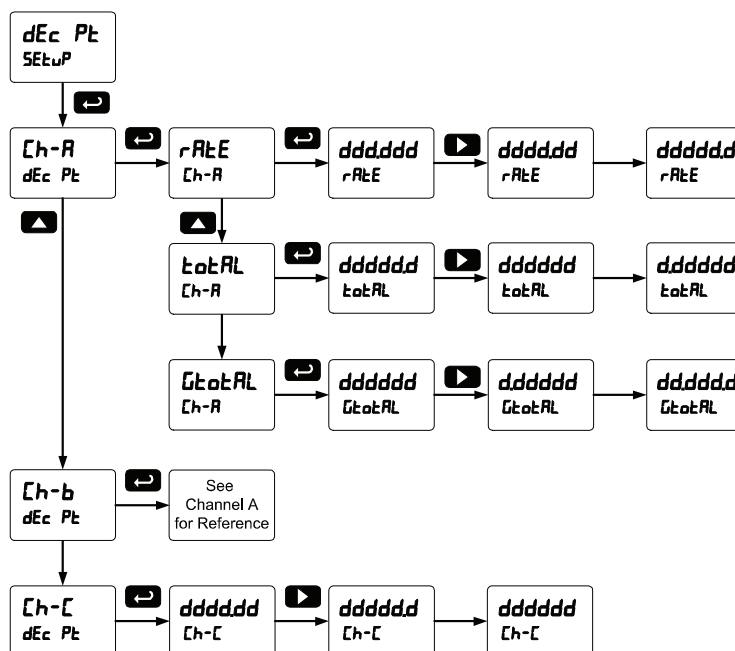

## Programming the Rate/Totalizer (Prog)

It is **very important** that one reads the following information before programming the meter:


- The meter has been factory calibrated to read input frequency in Hz (pulses/sec). The calibration equipment is certified to NIST standards.
- Use the *K-Factor* menu to match the rate/totalizer with a flowmeter's k-factor (pulse/unit of measure).
- Or use the *Scale* menu to scale the pulse input (pulse/sec) without a signal source.
- Or use *Cal* menu to calibrate the rate/totalizer using a signal source.

The *Program* menu contains the following menus for each channel A and B:

1. K-Factor calibration
2. Scale without a signal source
3. Calibrate with a calibrated signal source
4. Total time base & conversion factor
5. Grand total time base & conversion factor
6. Reset modes for total & grand total

The pulse inputs may be calibrated or scaled to any display value within the range of the meter.

Additional parameters, not needed for most applications, are found in the *Advanced Features* menu; see *Advanced Features Menu*, page 42.

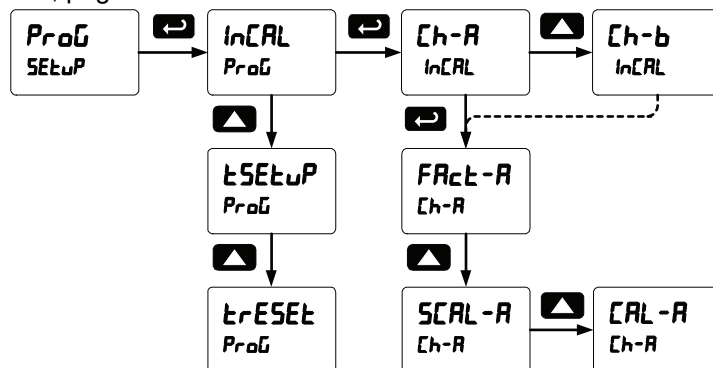

## Input Calibration Method (InCAL)

There are three methods of calibrating (or scaling) the display for each input channel to show the correct engineering units.

- Use the *Factor* menu to enter the k-factor of a flowmeter in units/pulse
- Use the *Scale* menu to enter the scaling without a signal source.
- Use the *Calibrate* menu to apply a signal from a signal source.


*Note: The Scale, Calibrate, and K-Factor functions are exclusive of each other. The meter uses the last function programmed. Only one of these methods can be employed at a time.*

## Multi-Point Calibration & Scaling

The Scale and Calibrate functions can use up to 32 points (default is 2). The number of points should be set in the Advanced menu under the Multi-Point Linearization (Linear) menu selection prior to scaling and calibration of the meter, see page 46 for details.

## K-Factor Calibration (FRct-A, FRct-b)

The meter may be calibrated using the *K-Factor* function. Most flowmeter manufacturers provide this information with the device. Enter the *K-Factor* (FRct-A, FRct-b) menu and select the decimal point with highest resolution possible and program the k-factor value (i.e. pulses/gal). The meter will automatically calculate the flow rate using the k-factor and the time base selected.




## Scaling the Meter without a Signal Source (SCAL-A, SCAL-B)

The inputs can be scaled to display the process variables in engineering units.

A signal source is not needed to scale the meter; simply program the inputs and corresponding display values.

From the *InCAL* menu, select channel A or B, followed by *SCAL-A* or *SCAL-B*, and then set the signal input value and display value for each of the scaling points (default is two). Enter the signal input values in pulses/second (Hz), and the corresponding display values in appropriate engineering units. Channel B is scaled similarly to Channel A, shown below.

### Scaling the Meter for Channel A (SCAL-A)

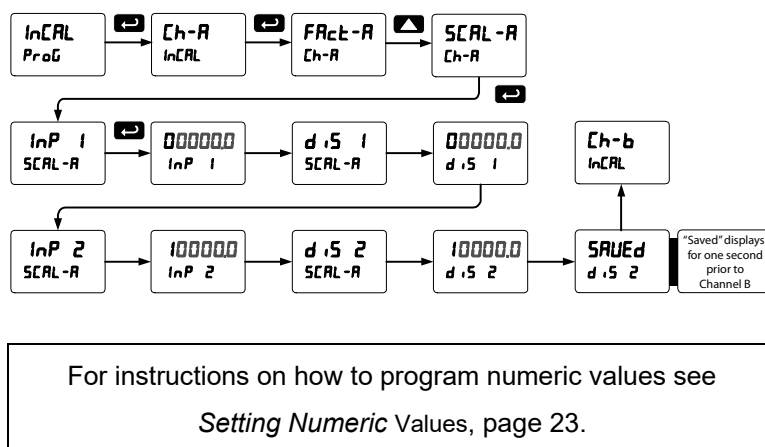

**Note:** The display values (*d,5 1* and *d,5 2*) need to be in units of measure per second.

**For example:** If the rate at 1000 Hz is 13.2 gal/min, this must be converted to gal/sec. In this scenario, the numbers input into the *SCALE* menu would be as follows:

InP 1: 0.0  
d,5 1: 0.000  
InP 2: 1000.0  
d,5 2: 0.220

Set the time base set to minutes (see page 30) and the meter will display 13.2 gal/min at 1000 Hz

## Error Message (Error)

An error message indicates that the calibration or scaling process was not successful.

After the error message is displayed, the meter reverts to input 2 during calibration or scaling and to input 1 during internal calibration, allowing the appropriate input signal to be applied or programmed.

The error message might be caused by any of the following conditions:

1. Input signal is not connected to the proper terminals or it is connected backwards.
2. Minimum input span requirements not maintained.
3. Input 1 signal inadvertently applied to calibrate input 2.

### Minimum Input Span

The minimum allowed input span is 1.0 Hz, which is the minimum difference between input 1 and input 2 signals required to complete the calibration or scaling of the meter.

## Calibrating the Meter with External Source (CAL -A, CAL -b)

To scale the meter without a signal source, refer to Scaling the Meter without a Signal Source (SCAL -A, SCAL -b), page 28.


Warm up the meter for at least 15 minutes before performing calibration to ensure specified accuracy.

The meter can be calibrated to display the process variables in engineering units by applying the appropriate input signal and following the calibration procedure.

The use of a calibrated signal source is strongly recommended to calibrate the meter.

Channel B is calibrated similarly to Channel A, shown below.

### Calibrating the Meter for Channel A (CAL -A)

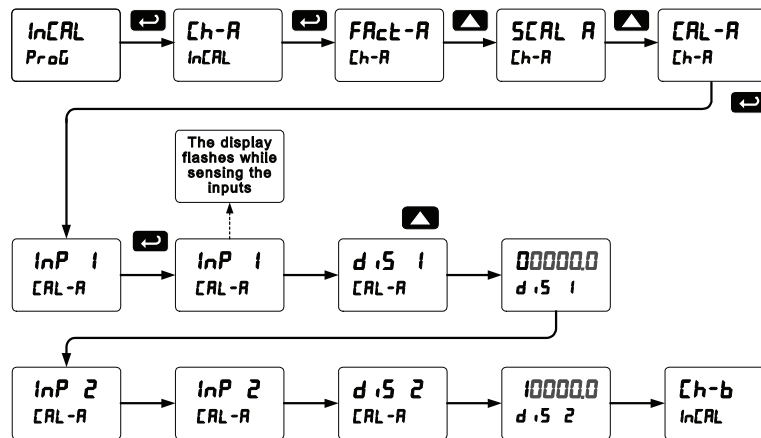


**Note:** The display values (d 15 1 and d 15 2) need to be in units of measure per second.

## Totalizer Setup (tSEtUP)

The time base and total and grand total conversion factors for input channels A and B are located in the *Totalizer Setup* menu.


The time base is determined by the rate programming. Enter the time unit of the programmed rate scale. *For example: A rate display scaled in engineering units of gallons per minute would use a time base of minutes.*

Total & grand total conversion factors for channel A and B are programmed independently. This means that one total or grand total can be displaying the value in gallons while another displays in million gallons, liters, m<sup>3</sup>, etc.

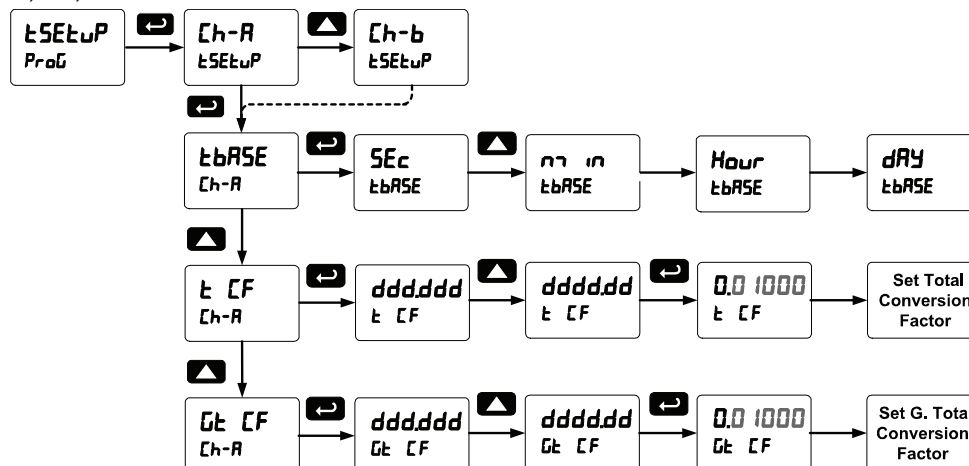

## Total & Grand Total Reset (tRESEt)

Total reset menus are located in the *Program* menu. The totals can be programmed for manual or automatic reset. In the automatic reset mode, a programmable time delay (t dLY) in seconds is available to reset the total or grand total after the assigned preset is reached.

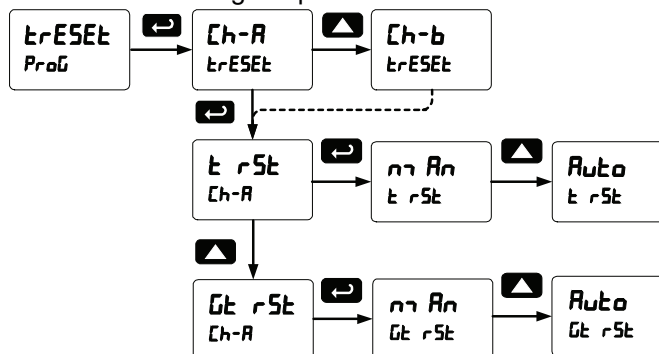



## Setting the Relay Operation (rELAY)


This menu is used to set up the assignment and operation of the relays.



**Caution!**

During setup, the relays do not follow the input and they will remain in the state found prior to entering the Relay menu.


1. Relay assignment
  - a. Channel A rate, total, or grand total
  - b. Channel B rate, total, or grand total
  - c. Channel C (Math channel)
  - d. Modbus
2. Relay action
  - a. Automatic reset only (non-latching)
  - b. Automatic + manual reset at any time (non-latching)
  - c. Latching (manual reset only)
  - d. Latching with Clear (manual reset only after alarm condition has cleared)
  - e. Pump alternation control (automatic reset only)
  - f. Sampling (the relay is activated for a user-specified time)
  - g. Off (relay state controlled by Interlock feature)
3. Set point
4. Reset point
5. Fail-safe operation
  - a. On (enabled)
  - b. Off (disabled)
6. Time delay
  - a. On delay (0-999.9 seconds)
  - b. Off delay (0-999.9 seconds)

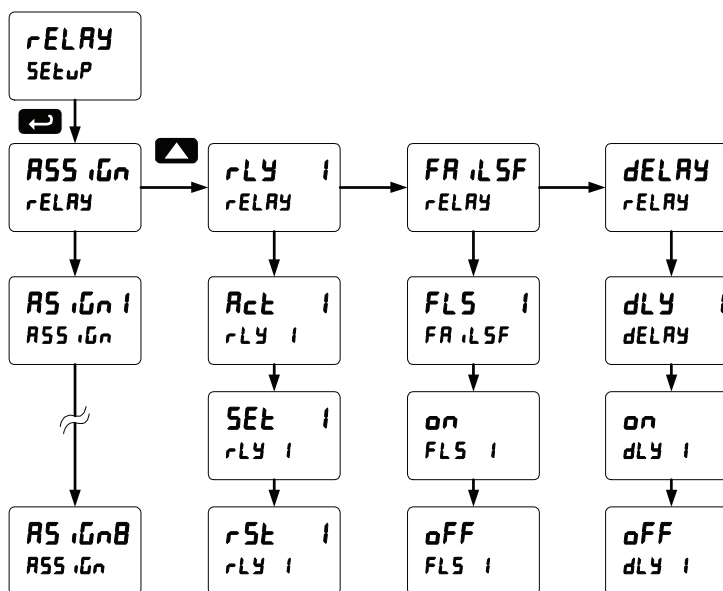

Note: The setup for relays 2-8 follows the same pattern shown here for relay 1.

## Setting the Relay Assignment (ASSIGN)

Relays may be assigned to Channel A (rate, total, or grand total), Channel B (rate, total, or grand total), Channel C (Math channel), or Modbus input.

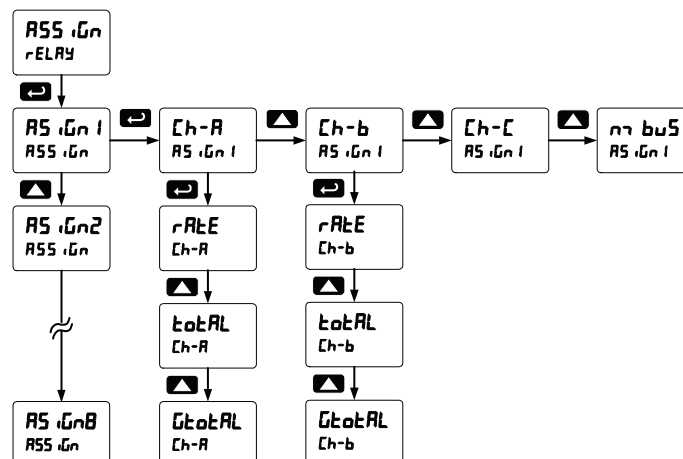


## Setting the Relay Action (Rct)


Operation of the relays is programmed in the *Action* menu. The relays may be set up for any of the following modes of operation:

1. Automatic reset (non-latching)
2. Automatic + manual reset at any time (non-latching)
3. Latching (manual reset only, at any time)
4. Latching with Clear (manual reset only after alarm condition has cleared)
5. Pump alternation control (automatic reset only)
6. Sampling (the relay is activated for a user-specified time)
7. Off (relay state controlled by Interlock feature)

The following graphic shows relay 1 action setup; relay 2-8 are set up in a similar fashion.

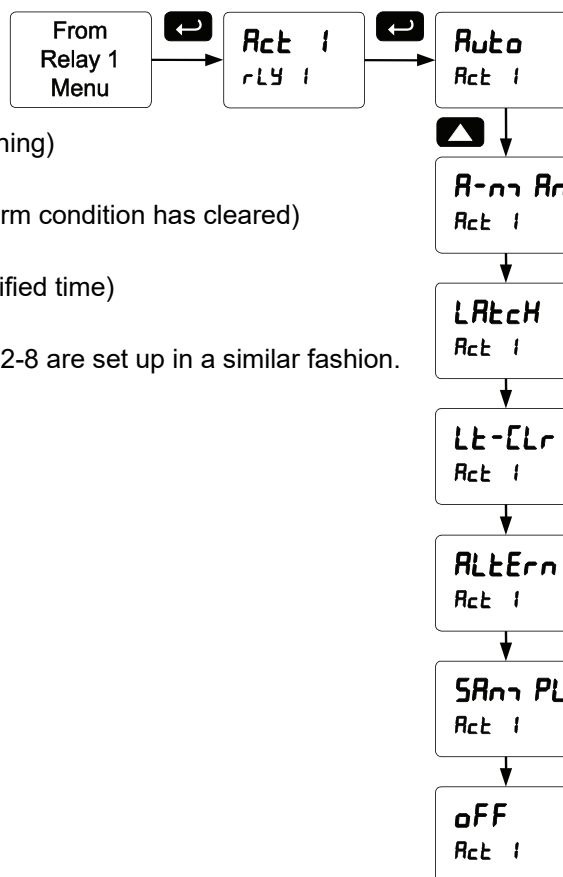

## Programming Set and Reset Points

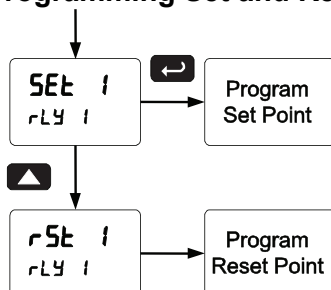

High alarm indication: program set point above reset point.

Low alarm indication: program set point below reset point.

The deadband is determined by the difference between set and reset points. Minimum deadband is one display count. If the set and reset points are programmed with the same value, the relay will reset one count below the set point.

*Note: Changes are not saved until the reset point has been accepted.*

## Setting Fail-Safe Operation

In fail-safe mode of operation, the relay coil is energized when the process variable is within safe limits and the relay coil is de-energized when the alarm condition exists. The fail-safe operation is set independently for each relay. Select **on** to enable or select **oFF** to disable fail-safe operation.

## Programming Time Delay

The *On* and *Off* time delays may be programmed for each relay between 0 and 999.9 seconds. The relays will transfer only after the condition has been maintained for the corresponding time delay.


The *On* time delay is associated with the set point.

The *Off* time delay is associated with the reset point.

## Relay and Alarm Operation Diagrams


The following graphs illustrate the operation of the relays, status LEDs, and ACK button.

### High Alarm Operation (Set > Reset)

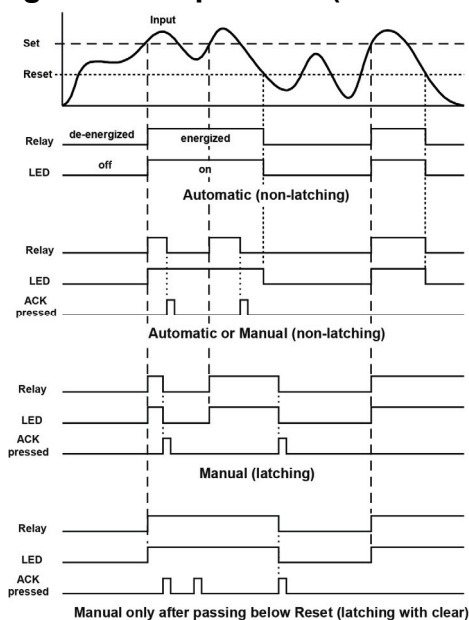


For Manual reset mode, ACK can be pressed anytime to turn "off" relay. To detect a new alarm condition, the signal must go below the set point, and then go above it.

### Low Alarm Operation (Set < Reset)

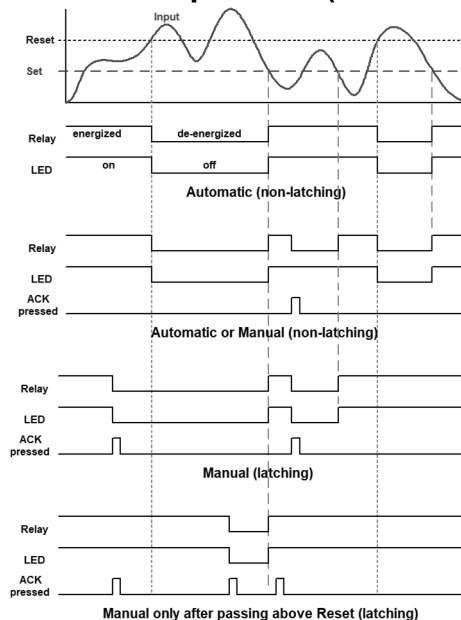


For Manual reset mode, ACK can be pressed anytime to turn "off" relay. For relay to turn back "on", signal must go above set point and then go below it.

### High Alarm with Fail-Safe Operation (Set > Reset)

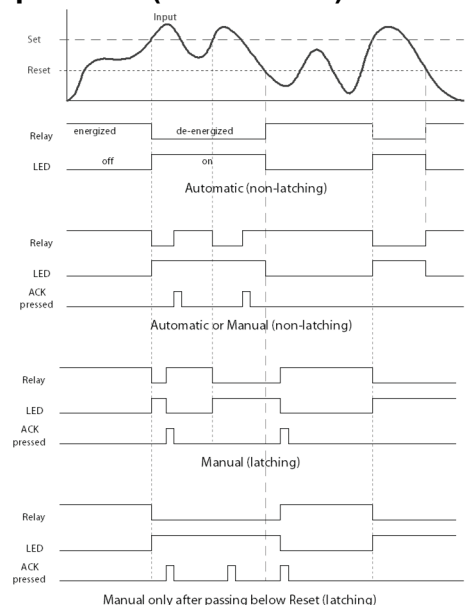


**Note:** Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.

### Low Alarm with Fail-Safe Operation (Set < Reset)

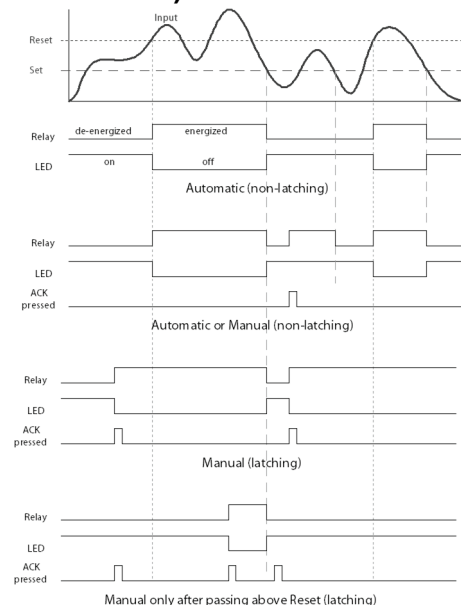


**Note:** Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.

## Pump Alternation Control Operation

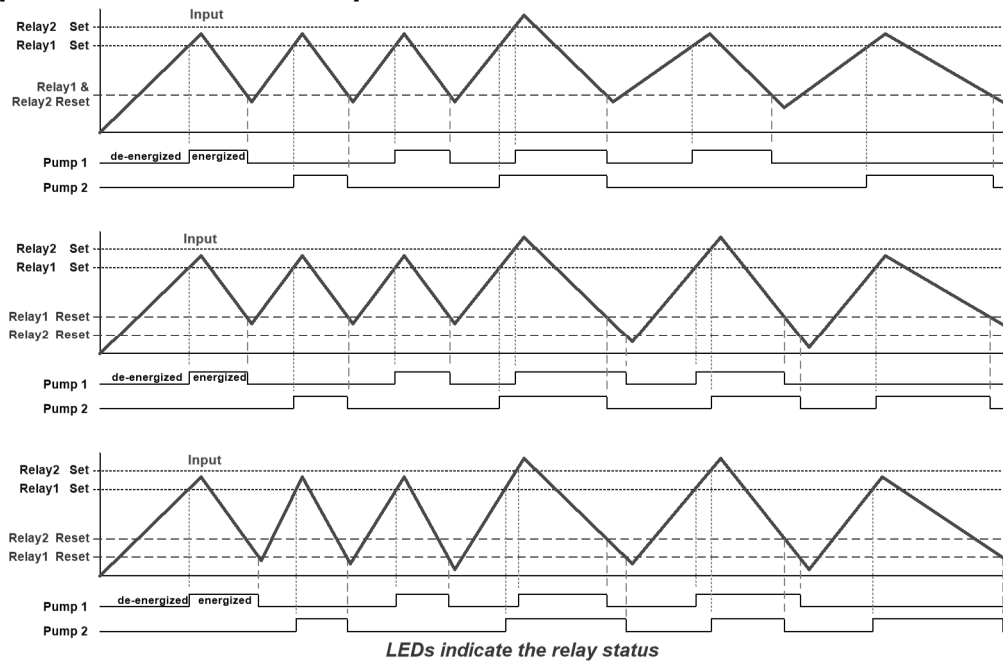


## Relay Sampling Operation

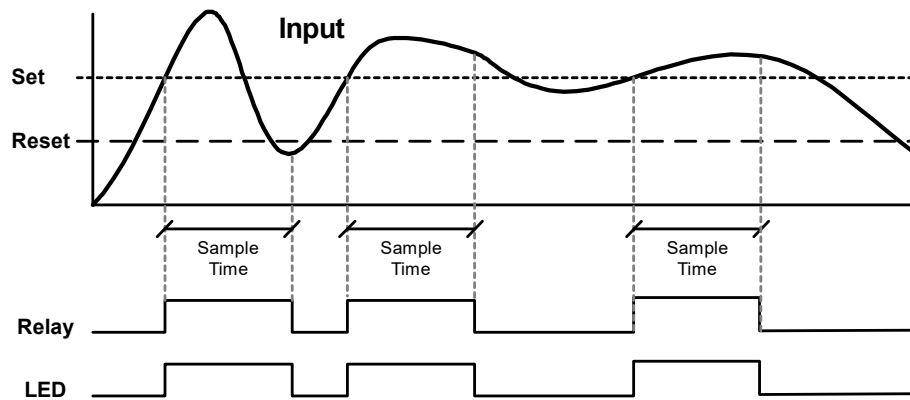

When the signal crosses the set point, the relay trips and the sample time starts. After the sample time has elapsed, the relay resets. The cycle repeats every time the set point is crossed, going up for high alarms and going down for low alarms.

The sample time can be programmed between 0.1 and 5999.9 seconds.



## Total Relay Sampling Operation

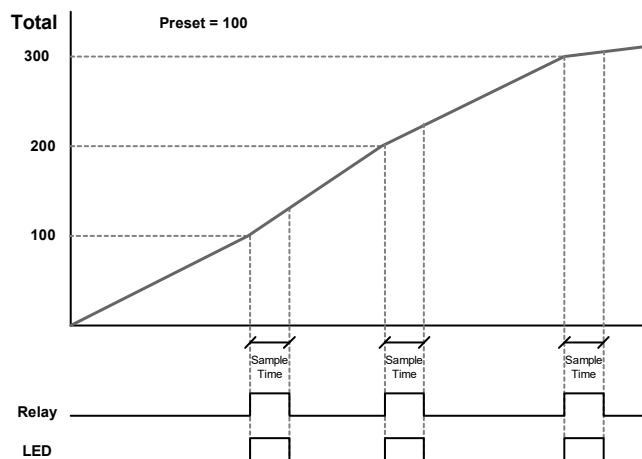

When the total reaches the preset, the relay trips and the sample time starts. After the sample time has elapsed, the relay resets. The cycle repeats every time the preset value is added to the total.

## Time Delay Operation

The following graphs show the operation of the time delay function.

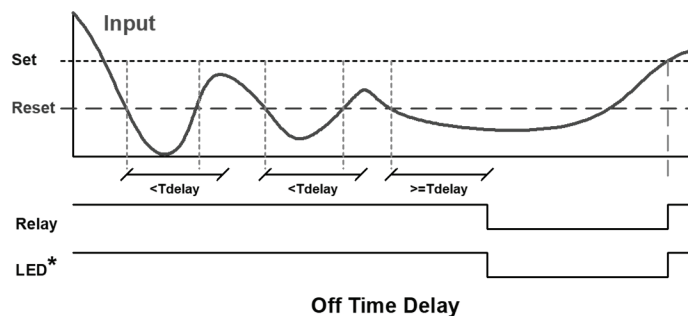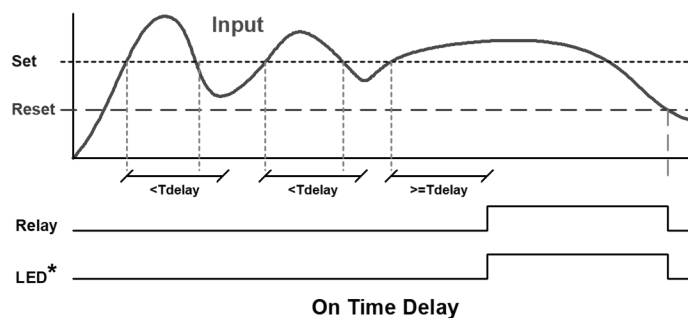

When the signal crosses the set point, the *On* time delay timer starts and the relay trips when the time delay has elapsed. If the signal drops below the set point (high alarm) before the time delay has elapsed, the *On* time delay timer resets and the relay does not change state. The same principle applies to the *Off* time delay.

*Note: If "Automatic or Manual (R-nn Rn)" reset mode is selected, the LED follows the reset point and not the relay state when the relay is acknowledged.*

## Relay Operation Details

### Overview

The relay capabilities of the meter expand its usefulness beyond simple indication to provide users with alarm and control functions. These capabilities include front panel alarm status LEDs as well as either 2 or 4 optional internal relays and/or 4 external relays expansion module. Typical applications include high or low temperature, level, pressure or flow alarms, control applications such as simple on/off pump control, and pump alternation control for up to 8 pumps. There are four basic ways the relays can be used:

1. High or Low Alarms with Latching or Non-Latching Relays
2. Simple On/Off Control with 100% Adjustable Deadband
3. Sampling (Based on Time)
4. Pump Alternation Control for up to 8 Pumps

### Relays Auto Initialization

When power is applied to the meter, the front panel LEDs and alarm relays will reflect the state of the input to the meter. The following table indicates how the alarm LEDs and relays will react on power-up based on the set and reset points.

| Alarm # | HI or LO Alarm | Set Point | Reset Point | Power-Up Reading | Relay & LED |
|---------|----------------|-----------|-------------|------------------|-------------|
| 1       | HI             | 1000      | 500         | 499              | Off         |
| 2       | LO             | 700       | 900         | 499              | On          |
| 3       | LO             | 250       | 400         | 499              | Off         |
| 4       | HI             | 450       | 200         | 499              | On          |

### Fail-Safe Operation

The following table indicates how the relays behave based on the fail-safe selection for each relay:

*Note: NO = Normally Open, NC = Normally Closed. This refers to the condition of the relay contacts when the power to the meter is off.*

| Fail-Safe Selection | Non-Alarm State |        | Alarm State |        | Power Failure                |
|---------------------|-----------------|--------|-------------|--------|------------------------------|
|                     | NO              | NC     | NO          | NC     |                              |
| Off                 | Open            | Closed | Closed      | Open   | Relays go to non-alarm state |
| On                  | Closed          | Open   | Open        | Closed | Relays go to alarm state     |

### Front Panel LEDs

The LEDs on the front panel provide status indication for the following:

The meter is supplied with four alarm points that include front panel LEDs to indicate alarm conditions. This standard feature is particularly useful for alarm applications that require visual-only indication. The LEDs are controlled by the set and reset points programmed by the user. When the display reaches a set point for a high or low alarm, the corresponding alarm LED will turn on. When the display returns to the reset point the LED will go off. The front panel LEDs responds differently for latching and non-latching relays.

| LED | Status  |
|-----|---------|
| 1   | Alarm 1 |
| 2   | Alarm 2 |
| 3   | Alarm 3 |
| 4   | Alarm 4 |

| LED | Status  |
|-----|---------|
| 5   | Alarm 5 |
| 6   | Alarm 6 |
| 7   | Alarm 7 |
| 8   | Alarm 8 |

For non-latching relays, the LED is always off during normal condition and always on during alarm condition, regardless of the state of the relay (e.g. Relay acknowledged after alarm condition).

For latching relays, the alarm LEDs reflects the status of the relays, regardless of the alarm condition. The following tables illustrate how the alarm LEDs function in relation to the relays and the acknowledge button (Default: F3 key assigned to ACK).

## Latching and Non-Latching Relay Operation

The relays can be set up for latching (manual reset) or non-latching (automatic reset) operation.

The On and Off terminology does not refer to the status of the relay's coil, which depends on the fail-safe mode selected.

| Relay terminology for following tables |                 |
|----------------------------------------|-----------------|
| Terminology                            | Relay Condition |
| On                                     | Alarm (Tripped) |
| Off                                    | Normal (Reset)  |
| Ack                                    | Acknowledged    |



**Warning!**

*In latching relay mode, latched relays will reset (unlatch) when power is cycled.*

### Non-Latching Relay (R-00 Rn)

In this application, the meter is set up for automatic reset (non-latching relay). Acknowledging the alarm while it is still present has no effect on either the LED or the relay. When the alarm finally goes away, the relay automatically resets and the LED also goes off.

| Automatic reset only |     |       |
|----------------------|-----|-------|
| Condition            | LED | Relay |
| Normal               | Off | Off   |
| Alarm                | On  | On    |
| Ack (No effect)      | On  | On    |
| Normal               | Off | Off   |

### Non-Latching Relay (R-01 Rn)

In this application, the meter is set up for automatic and manual reset at any time (non-latching relay). The LED and the relay automatically reset when the meter returns to the normal condition.

The next time an alarm occurs, the operator acknowledges the alarm manually while the alarm condition still exists. This causes the relay to reset, but the LED stays on until the meter returns to the normal condition.

| Automatic + manual reset at any time |     |       |
|--------------------------------------|-----|-------|
| Condition                            | LED | Relay |
| Normal                               | Off | Off   |
| Alarm                                | On  | On    |
| Normal                               | Off | Off   |
| Next Alarm                           | On  | On    |
| Ack                                  | On  | Off   |
| Normal                               | Off | Off   |

### Latching Relay (L-00 Rn)

In this application, the meter is set up for manual reset at any time. Acknowledging the alarm even if the alarm condition is still present resets the relay and turns off the LED.

| Manual reset any time |     |       |
|-----------------------|-----|-------|
| Condition             | LED | Relay |
| Normal                | Off | Off   |
| Alarm                 | On  | On    |
| Ack                   | Off | Off   |

### Latching Relay (L-01 Rn)

In this application, the meter is set up for manual reset only after the signal passes the reset point (alarm condition has cleared). Acknowledging the alarm while it is still present has no effect on either the LED or the relay. When the alarm is acknowledged after it returns to the normal state, the LED and the relay go off. Notice that the LED remains on, even after the meter returns to the normal condition. This is because, for latching relays, the alarm LED reflects the status of the relay, regardless of the alarm condition.


| Manual reset only after alarm condition has cleared |     |       |
|-----------------------------------------------------|-----|-------|
| Condition                                           | LED | Relay |
| Normal                                              | Off | Off   |
| Alarm                                               | On  | On    |
| Ack (No effect)                                     | On  | On    |
| Normal                                              | On  | On    |
| Ack                                                 | Off | Off   |

## Acknowledging Relays

There are two ways to acknowledge relays programmed for manual reset:

1. Via the programmable front panel function keys F1-F3 (Default: F3 assigned to ACK).
2. Remotely via a normally open pushbutton wired across one of the digital inputs and the +5 V terminals on the digital I/O modules, or using the F4 digital input, which is triggered with a contact closure to COM, or with an active low signal (see page 15).

When the ACK button or the assigned digital input is closed, all relays programmed for manual reset are acknowledged.

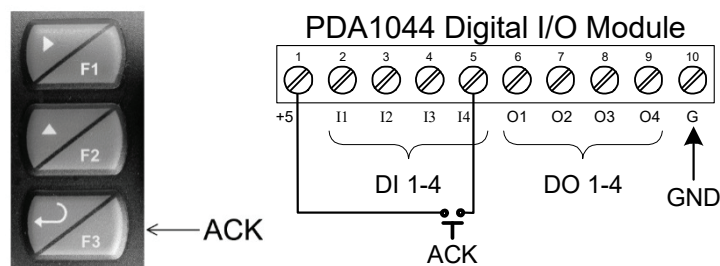

**Figure 26. Acknowledge Relays w/Function Key or Digital Input**

## Setting Up the Interlock Relay (Force On) Feature

Relays 1-4 can be set up as interlock relays. To set up the relays for the interlock feature:

1. Access the *Setup – Relay – Action* menu and set the action to off.
2. In the Advanced features – *User* menu program any of the digital inputs to *Force On* any of the internal relays (1-4).
3. Connect a switch or dry contact between the +5V terminal and the corresponding digital input (DI-1 to DI-4) terminal.


*Note: If multiple digital inputs are assigned to the same relay, then the corresponding logic is (AND) – i.e. both switches must be closed to trip the relay.*

## Scaling the 4-20 mA Analog Output (*Rout*)

The 4-20 mA analog outputs can be scaled to provide a 4-20 mA signal for any display range selected. To select the channel and source assignments the analog outputs are assigned to, see *Analog Output Source* on page 49.

No equipment is needed to scale the analog outputs; simply program the display values to the corresponding mA output signal.

The *Analog Output* menu is used to program the 4-20 mA outputs based on display values.

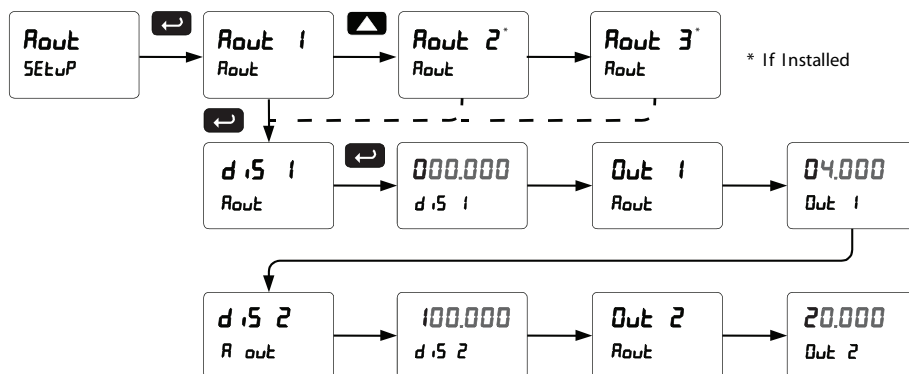


For instructions on how to program numeric values see *Setting Numeric Values*, page 23.

## Reset Menu (rESEt)

The *Reset* menu is used to reset the maximum (peak) value of Ch-A and Ch-B rate (r5t H i), minimum (valley) reading of Ch-A and Ch-B rate (r5t L o), both high and low value of Ch-A and Ch-B rate (r5t HL), Ch-A total (t o t A) or Ch-B total (t o t b), Ch-A grand total (G t o t A) or Ch-B grand total (G t o t b), both Ch-A and Ch-B totals (t o t A b), or both Ch-A and Ch-B grand totals (G t o t A b).

## Control Menu (C o n t r L)

The *Control* menu is used to control the 4-20 mA analog output (Aout 1 only) and the relays manually, ignoring the input. Each relay and analog output can be programmed independently for manual control. Selecting automatic control sets all relays and analog output for automatic operation.

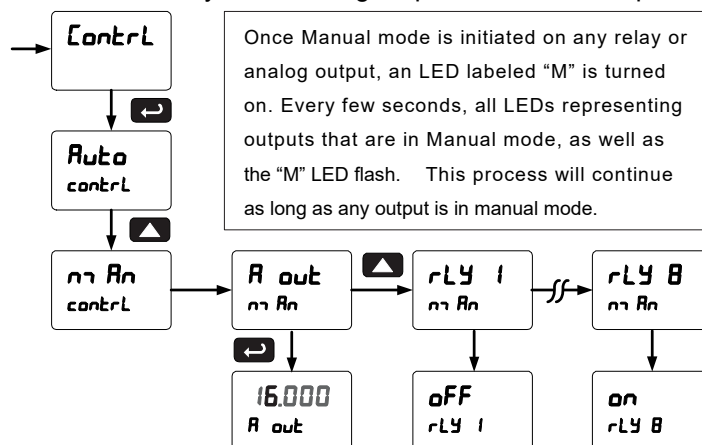

## Setting Up the Password (P A S S)

The *Password* menu is used for programming three levels of security to prevent unauthorized changes to the programmed parameter settings, to restrict the ability to reset the totals and grand totals, and to program the non-resettable totalizer.


Pass 1: Allows use of function keys and digital inputs  
 Pass 2: Allows use of function keys, digital inputs and editing set/reset points  
 Pass 3: Restricts all programming, function keys, and digital inputs.  
 Total: Prevents resetting the total manually  
 Gtotal: Prevents resetting the grand total manually

## Protecting or Locking the Meter Functions

Enter the *Password* menu and program a six-digit password.

For instructions on how to program numeric values see

*Setting Numeric Values*, page 23.

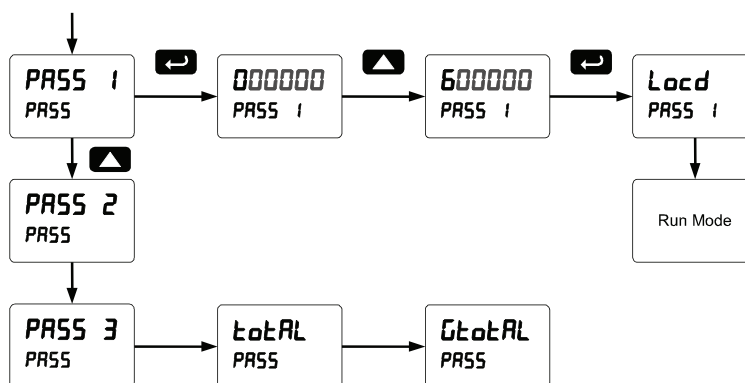

## Total Reset Password & Non-Resettable Total

The total and the grand total can be password-protected to prevent unauthorized total resets. The grand total can be programmed as a non-resettable total by entering the password "050873".



**Caution!**


Once the Grand Total has been programmed as "non-resettable" the feature **cannot** be disabled.

## Making Changes to a Password Protected Meter

If the meter is password protected, the meter will display the message *Locd* (Locked) when the Menu button is pressed. Press the Enter button while the message is being displayed and enter the correct password to gain access the menu. After exiting the programming mode, the meter returns to its password protected condition.

## Disabling Password Protection

To disable the password protection, access the *Password* menu and enter the correct password twice, as shown below. The meter is now unprotected until a new password is entered.

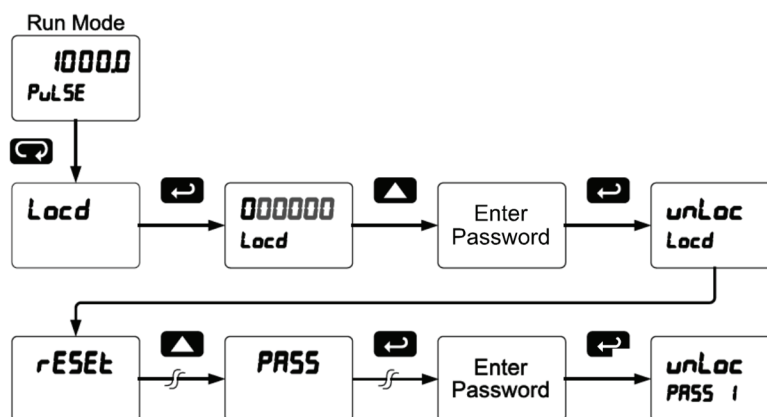

If the correct six-digit password is entered, the meter displays the message *unLoc* (unlocked) and the protection is disabled until a new password is programmed.

If the password entered is incorrect, the meter displays the message *Locd* (Locked) for about two seconds, and then it returns to Run Mode. To try again, press Enter while the *Locked* message is displayed.


### Did you forget the password?

The password may be disabled by entering a master password once. If you are authorized to make changes, enter the master password 508655 to unlock the meter.

## Advanced Features Menu

To simplify the setup process, functions not needed for most applications are located in the *Advanced Features* menu.

Press and hold the Menu button for three seconds to access the advanced features of the meter.

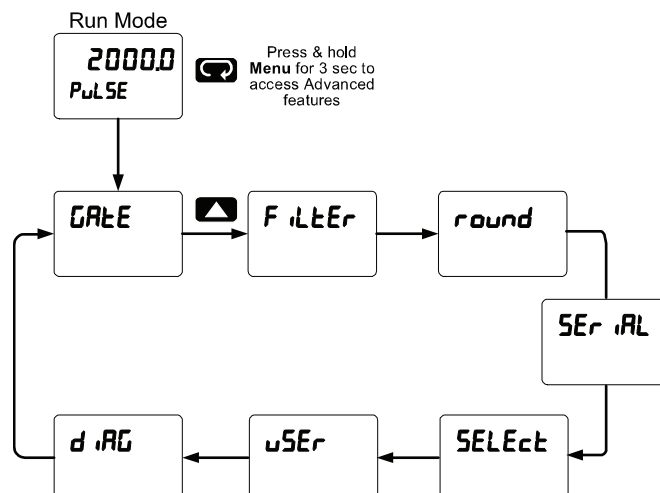

## Advanced Features Menu & Display Messages

The following table shows the functions and messages of the *Advanced Features* menu in the order they appear in the menu.

| Display   | Parameter      | Action/Setting                                                                    |
|-----------|----------------|-----------------------------------------------------------------------------------|
| GATE      | Gate           | Enter Gate function menu                                                          |
| Lo G      | Low gate       | Program Low gate value                                                            |
| Hi G      | High gate      | Program High gate value                                                           |
| Filter    | Filter         | Enter the Filter menu                                                             |
| Ch-A      | Channel A      | Set filter speed for channel A                                                    |
| Ch-B      | Channel B      | Set filter speed for channel B                                                    |
| Lo SPD    | Low speed      | Set the contact debounce filter value                                             |
| Hi SPD    | High speed     | Select high speed filter                                                          |
| round     | Round          | Set the rounding value for the display                                            |
| SERIAL    | Serial         | Set serial communication parameters                                               |
| SERIAL ID | Slave ID       | Set slave ID or meter address                                                     |
| baud      | Baud rate      | Select baud rate                                                                  |
| tr dLY    | Transmit delay | Set serial communication transmit delay                                           |
| PARITY    | Parity         | Select parity Even, Odd, or None with 1 or 2 stop bits                            |
| t-byt     | Time byte      | Set byte-to-byte timeout                                                          |
| SELECT    | Select         | Enter the Select menu (function, math, constant, cutoff, count, Aout programming) |

| Display        | Parameter                 | Action/Setting                                                          |
|----------------|---------------------------|-------------------------------------------------------------------------|
| Function       | Signal input conditioning | Select linear function parameters                                       |
| Ch-A           | Channel A                 | Select menu for channel A                                               |
| Ch-B           | Channel B                 | Select menu for channel B                                               |
| LINEAR         | Linear                    | Set meter for linear function and select number of linearization points |
| no Pts         | Number of points          | Set the number of linearization points (default: 2)                     |
| Math           | Math                      | Select the channel C math function                                      |
| Sum            | Sum                       | $C = (A+B+P)*F$                                                         |
| diff           | Difference                | $C = (A-B+P)*F$                                                         |
| diff Abs       | Abs difference            | $C = ((\text{Absolute value of } (A-B)) + P)*F$                         |
| Avg            | Average                   | $C = (((A+B)/2) + P)*F$                                                 |
| Multiplication | Multiplication            | $C = ((A*B) + P)*F$                                                     |
| Divide         | Divide                    | $C = ((A/B) + P)*F$                                                     |
| Max of A or B  | Max of A or B             | $C = ((\text{High value of channel A or B}) + P)*F$                     |
| Min of A or B  | Min of A or B             | $C = ((\text{Low value of channel A or B}) + P)*F$                      |

| Display                          | Parameter                 | Action/Setting                                                  |
|----------------------------------|---------------------------|-----------------------------------------------------------------|
| $\Delta R_{\text{sum}}$          | Draw                      | $C = ((A/B)-1)*F$                                               |
| $\Delta R_{\text{avg}}$          | Weighted avg.             | $C = ((B-A)*F)+A$                                               |
| $rR_{\text{ratio}}$              | Ratio                     | $C = (A/B)*F$                                                   |
| $rR_{\text{ratio2}}$             | Ratio 2                   | $C = ((B-A)/A)+P)*F$                                            |
| $\Sigma \text{concEn}$           | Concentration             | $C = (A/(A+B))*F$                                               |
| $\Sigma \text{sum total}$        | Sum total                 | $C = (tA+tB+P)*F$                                               |
| $\Sigma \text{sum grand total}$  | Sum grand total           | $C = (GtA+GtB+P)*F$                                             |
| $d \text{ } F \text{ } t$        | Diff. of total            | $C = (tA-tB+P)*F$                                               |
| $d \text{ } F \text{ } \Sigma t$ | Difference of grand total | $C = (GtA-GtB+P)*F$                                             |
| $tR_{\text{ratio}}$              | Total ratio               | $C = (tA/tB)*F$                                                 |
| $t-rR_{\text{ratio2}}$           | Total ratio 2             | $C = ((tB-tA)/tA)*F$                                            |
| $t \text{ } Pct$                 | Total percent             | $C = (tA/(tA+tB))*100$                                          |
| $\Sigma \text{const}$            | Constant                  | Enter math equation constants                                   |
| $RddEr$                          | Adder                     | Addition constant used in channel C math calculations (P)       |
| $FActoR$                         | Factor                    | Multiplication constant used in channel C math calculations (F) |
| $\Sigma \text{cutoff}$           | Cutoff                    | Set low-flow cutoff                                             |
| $\Sigma h-A$                     | Channel A                 | Set low-flow cutoff for Channel A                               |
| $\Sigma h-B$                     | Channel B                 | Set low-flow cutoff for Channel B                               |
| $\Sigma \text{count}$            | Count                     | Set total count direction                                       |
| $\Sigma h-A$                     | Channel A                 | Set total count direction for Channel A                         |
| $\Sigma h-B$                     | Channel B                 | Set total count direction for Channel B                         |
| $t \text{ } \Sigma$              | Total count               | Set direction of total count                                    |
| $\Sigma \text{total } \Sigma$    | G. total count            | Set direction of grand total count                              |
| $\Sigma P$                       | Count up                  | Count up                                                        |
| $\Sigma \text{down}$             | Count down                | Count down                                                      |
| $\Sigma \text{start}$            | Count start               | Enter count down start value                                    |

| Display                      | Parameter                 | Action/Setting                                                                 |
|------------------------------|---------------------------|--------------------------------------------------------------------------------|
| $R_{\text{outPr}}$           | Analog output programming | Program analog output parameters                                               |
| $R_{\text{out1}}$            | Analog output 1           | Program analog output 1 (*1-3) parameters                                      |
| $\Sigma \text{source}$       | Source                    | Select source for the 4-20 mA output                                           |
| $\Sigma R_{\text{cal}}$      | Calibrate                 | Calibrate 4-20 mA output                                                       |
| $4 \text{ } R_{\text{mA}}$   | 4 mA output               | Enter mA output value read by milliamp meter with at least 0.001 mA resolution |
| $20 \text{ } R_{\text{mA}}$  | 20 mA output              | Enter mA output value read by milliamp meter with at least 0.001 mA resolution |
| $\Sigma-rR_{\text{ov}}$      | Overrange                 | Program mA output for display overrange                                        |
| $\Sigma-rR_{\text{un}}$      | Underrange                | Program mA output for display underrange                                       |
| $R_{\text{max}}$             | Maximum                   | Program maximum mA output allowed                                              |
| $R_{\text{min}}$             | Minimum                   | Program minimum mA output allowed                                              |
| $\Sigma \text{user}$         | User I/O                  | Assign function keys and digital I/O                                           |
| $F1*$                        | F1* function key          | Assign F1 function key (*F1/F2/F3)                                             |
| $F4$                         | F4 digital input          | Assign F4 function (digital input)                                             |
| $d \text{ } 1$               | Digital input 1           | Assign digital input 1 – 8, if expansion modules are connected                 |
| $d \text{ } 1$               | Digital output 1          | Assign digital output 1 – 8, if expansion modules are connected                |
| $d \text{ } R_{\text{diag}}$ | Diagnostics               | Display parameter settings                                                     |
| $\Sigma \text{LED}$          | LED test                  | Test all LEDs                                                                  |
| $\Sigma \text{info}$         | Information               | Display software and S/N information                                           |
| $\Sigma \text{erase}$        | Erase                     | Erase MeterView Pro software stored in meter's memory                          |

## Gate Function (GATE)

The gate function (GATE) is the first option in the Advanced Features menu. There are two settings for the GATE, low gate (LOW) and high gate (HIGH). Channel A and B use the same gate settings.

The gate function is used for displaying slow pulse rates. Using the programmable gate, the meter is able to display pulse rates as slow as 1 pulse every 999.9 seconds (0.001 Hz). The gate function can also be used to obtain a steady display reading with a fluctuating input signal.

### Low Gate (LOW)

For most applications, low gate setting should be left at 1.0 second. Increase low gate setting to obtain a steadier rate display. The rate display will update in accordance with the low gate setting, for example if low gate is set at 10.0, the display will update every 10 seconds; changes in rate between updates will not be reflected until next display update.

### High Gate (HIGH)

Set the high gate value to correspond to the highest expected pulse period (lowest pulse rate). For instance if the meter must display a rate when there is 1 pulse coming into the meter every 10 seconds, set the high gate to 11.0 seconds. When the signal is removed from the meter, the display will show the last reading for 11 seconds; then it will read zero.

### Gate Settings

| Slow Pulse Rate                                                                                                                      |                 |                 |
|--------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------|
| Low Gate* (sec)                                                                                                                      | High Gate (sec) | Min Freq** (Hz) |
| 1.0                                                                                                                                  | 2.0             | 0.5000          |
| 1.0                                                                                                                                  | 10.0            | 0.1000          |
| 1.0                                                                                                                                  | 20.0            | 0.0500          |
| 1.0                                                                                                                                  | 100.0           | 0.0100          |
| 1.0                                                                                                                                  | 200.0           | 0.0050          |
| 1.0                                                                                                                                  | 400.0           | 0.0025          |
| 1.0                                                                                                                                  | 800.0           | 0.0012          |
| 1.0                                                                                                                                  | 999.9           | 0.0010          |
| *The low gate setting corresponds to the display update rate and is used to stabilize the display reading with a fluctuating signal. |                 |                 |
| **The minimum frequency is dependent on high gate setting.                                                                           |                 |                 |

## Contact De-Bounce Filter (F ILtEr)

The filter function (F ILtEr) is the second option in the Advanced Features menu. The filter function (F ILtEr) can be used for applications where the meter is set up to count pulses generated by switch contacts. The filter value can be set anywhere between 2 and 50, the higher the value, the greater the filtering. Channel A and B have independent settings.

There are two settings, H i SPd (high speed) and Lo SPd (low speed). After pressing **ENTER** to select Lo SPd, enter the desired filter setting based on the table below so that there are no extra counts when a contact closure is completed. Selecting H i SPd does not require a programmable filter value.

### Filter Settings

| Contact De-Bounce Filter |               |               |
|--------------------------|---------------|---------------|
| Filter Setting           | Speed Setting | Max Freq (Hz) |
| 2                        | Lo SPd        | 999           |
| 4                        | Lo SPd        | 499           |
| 8                        | Lo SPd        | 249           |
| 16                       | Lo SPd        | 124           |
| 32                       | Lo SPd        | 62            |
| 40                       | Lo SPd        | 50            |
| 50                       | Lo SPd        | 40            |
| N/A                      | Hi SPd        | 30,000        |

## Rounding Feature (round)

The rounding feature is used to give the user a steadier display with fluctuating signals. Rounding is used in addition to the filter function.

Rounding causes the display to round to the nearest value according to the rounding selected. This setting affects the last two digits, regardless of decimal point position.

## Modbus RTU Serial Communications (SEr iRL)

The meter is equipped with serial communications capability as a standard feature using Modbus RTU Serial Communication Protocol.

The meter may be connected to a PC for initial configuration via the onboard micro USB connection. For ongoing digital communications with a computer or other data terminal equipment, an RS-232, or RS-485 option is required; see *Ordering Information* on page 5 for details.




**Warning!**

**Do not connect any equipment other than Precision Digital's expansion modules, cables, or meters to the RJ45 M-LINK connector. Otherwise damage will occur to the equipment and the meter.**

*Note: More detailed instructions are provided with each optional serial communications adapter.*


When using more than one meter in a multi-drop mode, each meter must be provided with its own unique address. The meter address (Slave ID) may be programmed between 1 and 247. The transmit delay may be set between 0 and 199 ms. The parity can be set to even, odd, or none with 1 or 2 stop bits.

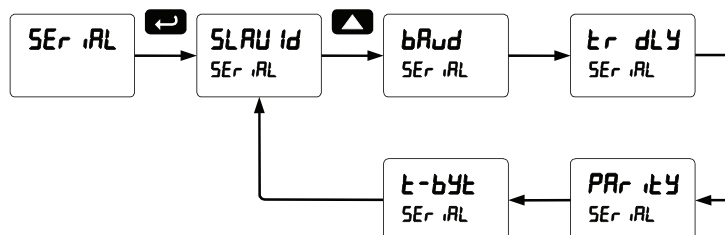

Changes made to the Serial menu are initialized after the MENU key is pressed or after navigating through the t-byte parameter.

## Select Menu (SELEct)

The *Select* menu is used to select the signal input conditioning function applied to the inputs, math function for A & B, constants, low-flow cutoff, total count direction (up or down from a preset amount), and analog output programming. Multi-point linearization is part of the linear function selection.

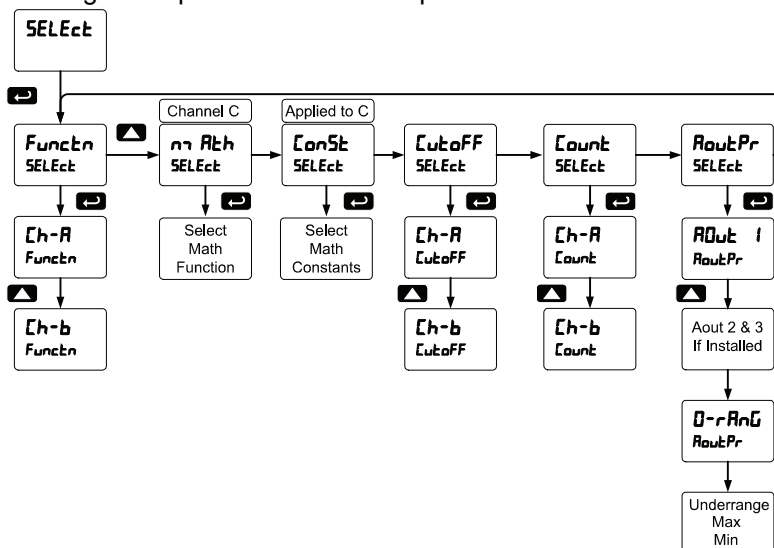


## Signal Input Conditioning (Functn)

The *Function* menu is used to condition the linear input signal. Multi-point linearization is part of the linear function selection. Each input channel signal input conditioning function is programmed independently.

### Multi-Point Linearization (L inERr)

Meters are set up at the factory for linear function with 2-point linearization. Up to 32 linearization points can be selected for each channel under the linear function. The multi-point linearization can be used to linearize the display for non-linear signals such as those from level transmitters used to measure volume in odd-shaped tanks or to convert level to flow using weirs and flumes with complex exponent.

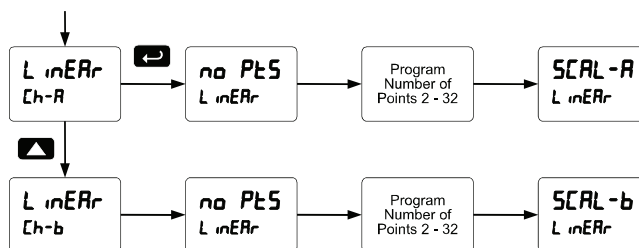

*Note: After Scale is displayed continue pressing the Enter button until the meter completes the scaling of the input and display values.*

## Math Function (מחשבים)

The **Math** menu is used to select the math function that will determine the channel C value. These math functions are a combination of input channels A and B, and will display when channel C is selected in the **Display** menu.

A and B refer to the rate of channel A and B. tA and tB refer to the totals of channel A and B. GtA and GtB refer to the grand totals of channel A and B. The following math functions are available.

| Function       | Display                   | Description                                       |
|----------------|---------------------------|---------------------------------------------------|
| סכום           | Sum                       | $C = (A+B+P)*F$                                   |
| הפרש           | Difference                | $C = (A-B+P)*F$                                   |
| הפרש מוחלט     | Abs difference            | $C = ((\text{Absolute value of } (A-B))+P)*F$     |
| מוצע           | Average                   | $C = (((A+B)/2)+P)*F$                             |
| כפל            | Multiplication            | $C = ((A*B)+P)*F$                                 |
| חילוק          | Divide                    | $C = ((A/B)+P)*F$                                 |
| המקסימום       | Max of A or B             | $C = ((\text{High value of channel A or B})+P)*F$ |
| המינימום       | Min of A or B             | $C = ((\text{Low value of channel A or B})+P)*F$  |
| גרירה          | Draw                      | $C = ((A/B)-1)*F$                                 |
| מוצע משוקלל    | Weighted avg.             | $C = ((B-A)*F)+A$                                 |
| יחס            | Ratio                     | $C = (A/B)*F$                                     |
| יחס 2          | Ratio 2                   | $C = ((B-A)/A)+P)*F$                              |
| ריכוז          | Concentration             | $C = (A/(A+B))*F$                                 |
| סכום כולל      | Sum total                 | $C = (tA+tB+P)*F$                                 |
| סכום כולל גדול | Sum grand total           | $C = (GtA+GtB+P)*F$                               |
| הפרש כולל      | Diff. of total            | $C = (tA-tB+P)*F$                                 |
| הפרש כולל גדול | Difference of grand total | $C = (GtA-GtB+P)*F$                               |
| יחס כולל       | Total ratio               | $C = (tA/tB)*F$                                   |
| יחס כולל 2     | Total ratio 2             | $C = ((tB-tA)/tA)*F$                              |
| אחוז כולל      | Total percent             | $C = (tA/(tA+tB))*100$                            |


## Math Constants (קבועים)

The **Math Constants** menu is used to set the constants used in channel C math. The math functions include adder constant P, and factor constant F.

The **Adder** constant (P) may be set from -99.999 to 999.999.

The **Factor** constant (F) may be set from 0.001 to 999.999.

The chart on page 47 details the math functions that may be selected in the **Math Function** menu.

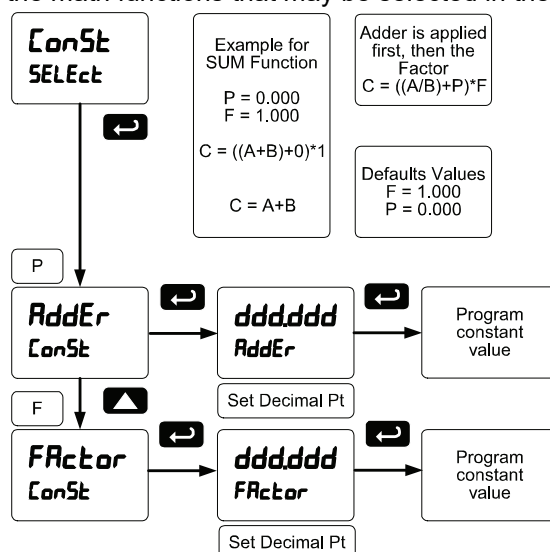


## Low-Flow Cutoff (Cutoff)

The low-flow cutoff feature allows the meter to be programmed so that the often-unsteady output from a differential pressure transmitter, at low flow rates, always displays zero on the meter. The low-flow cutoff for each channel is programmed independently.

The cutoff value may be programmed from 0 to 999999. The meter will display zero below the cutoff value. Programming the cutoff value to zero disables the cutoff feature.

## Totalizer Count Up/Down (Count)

The totalizer count up/down menu may be used to program the total and grand total to either count up from 0 when reset or count down from a programmed value when reset. Total and grand total may have their countdown numbers programmed individually from 0 to 999999.

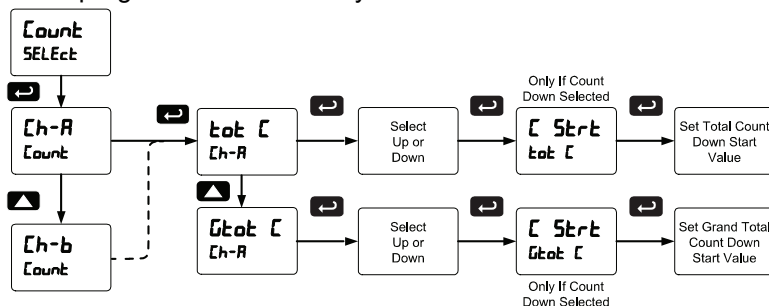


## Analog Output Programming (RoutePr)

The *Analog Output Programming* menu is used to program the behavior of the 4-20 mA outputs. The following parameters and functions are programmed in this menu for each analog output:


1. Source: Source for generating the 4-20 mA output
2. Overrange: Analog output value with display in overrange condition
3. Underrange: Analog output value with display in underrange condition
4. Max: Maximum analog output value allowed regardless of input
5. Min: Minimum analog output value allowed regardless of input

## Analog Output Source

The analog output source can be based on either of the input channel rate, total, or grand totals (Ch-A, Ch-B), the math channel (Ch-C), maximum stored value of either input channel (Hi-A, Hi-B), minimum stored value of either input channel (Lo-A, Lo-B), maximum or minimum of A and B (Hi-AB, Lo-AB), relay set points, or the Modbus input.

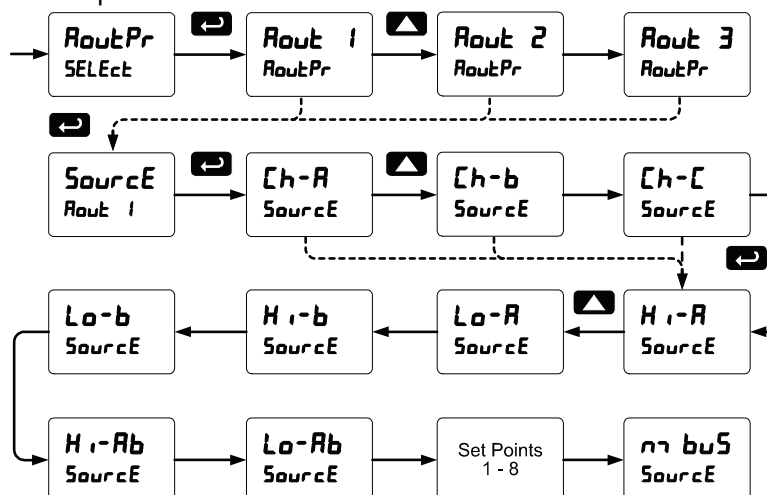


To base an analog output on the rate, total, or grand total of channels A or B, select the channel in the *Analog Output Source* menu. Then select the rate, total, or grand total as the source reference for the output, and program the output scale.

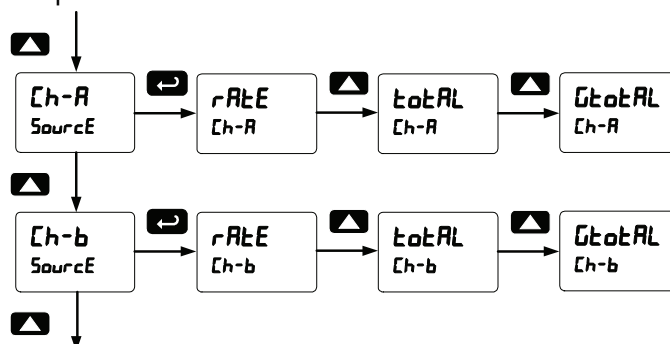

## Programmable Function Keys User Menu (uSEr)

The *User* menu allows the user to assign the front panel function keys F1, F2, and F3, the digital input F4 (a digital input located on the signal input connector), and up to eight additional digital inputs to access most of the menus or to activate certain functions immediately (e.g. reset max & min, hold relay states, etc.). This allows the meter to be greatly customized for use in specialized applications.

Up to eight digital outputs can be assigned to a number of actions and functions executed by the meter (i.e. alarms, relay acknowledgement, reset max, min, or max & min, tare, and reset tare). The digital outputs can be used to trigger external alarms or lights to indicate these specific events.

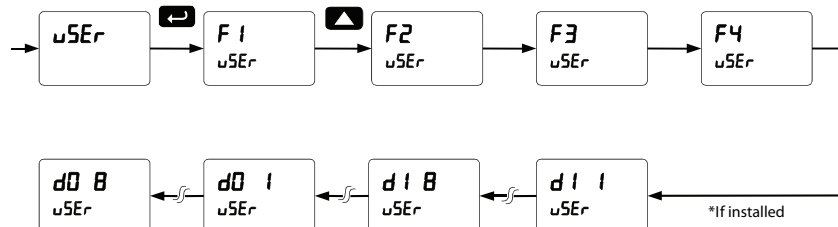

# Function Keys & Digital I/O Available Settings

Refer to the following table for descriptions of each available function key or digital I/O setting.

| Display | Description                                                                                                                                                                                                              | Display  | Description                                                                                                                                                                                                  |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| r5t H   | Reset the stored maximum display values for all channels                                                                                                                                                                 | Ln2 Lo   | Display minimum Channel B display value on line 2                                                                                                                                                            |
| r5t Lo  | Reset the stored minimum display values for all channels                                                                                                                                                                 | Ln2 HL   | Display maximum & minimum channel B display values on line 2                                                                                                                                                 |
| r5t HL  | Reset the stored maximum & minimum display values for all channels                                                                                                                                                       | Ln2 HC   | Display minimum channel C display value on line 2                                                                                                                                                            |
| rELRY   | Directly access the relay menu                                                                                                                                                                                           | Ln2 HC   | Display maximum & minimum channel C display values on line 2                                                                                                                                                 |
| SEt I□  | Directly access the set point menu for relay 1 (*through 8)                                                                                                                                                              | L tHLt   | Display maximum channel C display value on line 2                                                                                                                                                            |
| rLY d   | Disable all relays until a button assigned to <i>enable relays</i> (rLY E) is pressed                                                                                                                                    | F On I□  | Force relay 1 (*through 4) into the on state. This function is used in conjunction with a digital input expansion module to achieve interlock functionality. See page 39 for details about interlock relays. |
| rLY E   | Enable all relays to function as they have been programmed                                                                                                                                                               | Control  | Directly access the control menu                                                                                                                                                                             |
| H Hold  | Hold current relay states and analog output as they are until a button assigned to <i>enable relays</i> (rLY E) is pressed                                                                                               | d sRbL   | Disable the selected function key or digital I/O                                                                                                                                                             |
| d Hold  | Hold the current display value, relay states, and analog output momentarily while the function key or digital input is active. The process value will continue to be calculated in the background.                       | uP-d R   | Total count mode direction control for channel A                                                                                                                                                             |
| d RbL   | Scrolls values for A, B & C when activated. Keeps the last value for 10 seconds and then it returns to its assignment. Values are displayed on display line 1 and the corresponding channel and units on display line 2. | uP-d b   | Total count mode direction control for channel B                                                                                                                                                             |
| d tot   | Scrolls through totals for channels A, B, and C (which is the sum of A and B). Values are displayed on display line 1.                                                                                                   | RcH      | Acknowledge all active relays that are in a manual operation mode such as auto-manual or latching                                                                                                            |
| d Gtot  | Scrolls through grand totals for channels A, B, and C (which is the sum of A and B). Values are displayed on display line 1.                                                                                             | rESEt    | Directly access the reset menu                                                                                                                                                                               |
| Ln1 H   | Display maximum channel A display value on line 1                                                                                                                                                                        | r5t t    | Reset totals for all channels                                                                                                                                                                                |
| Ln1 Lo  | Display minimum channel A display value on line 1                                                                                                                                                                        | r5t Gt   | Reset grand totals for all channels                                                                                                                                                                          |
| Ln1 HL  | Display maximum & minimum channel A display values on line 1                                                                                                                                                             | r5t tR   | Reset total for channel A                                                                                                                                                                                    |
| Ln2 H   | Display maximum channel B display value on line 2                                                                                                                                                                        | r5t GR   | Reset grand total for channel A                                                                                                                                                                              |
|         |                                                                                                                                                                                                                          | r5t tb   | Reset total for channel B                                                                                                                                                                                    |
|         |                                                                                                                                                                                                                          | r5t Gb   | Reset grand total for channel B                                                                                                                                                                              |
|         |                                                                                                                                                                                                                          | naEau    | Mimic the menu button functionality (digital inputs only)                                                                                                                                                    |
|         |                                                                                                                                                                                                                          | r rHt    | Mimic the right arrow/F1 button functionality (digital inputs only)                                                                                                                                          |
|         |                                                                                                                                                                                                                          | uP       | Mimic the up arrow/F2 button functionality (digital inputs only)                                                                                                                                             |
|         |                                                                                                                                                                                                                          | EntEr    | Mimic the enter/F3 button functionality (digital inputs only)                                                                                                                                                |
|         |                                                                                                                                                                                                                          | RLn r I□ | Provide indication when alarm 1 (*through 8) has been triggered (digital outputs only)                                                                                                                       |

## Meter Operation

The meter accepts two input channels (A and B) of either pulses (e.g.  $\pm 40$  mV to  $\pm 8$  V), square wave (0-5 V, 0-12 V, or 0-24 V), open collector NPN, PNP, TTL, or switch contact signals and displays these signals in engineering units from -99999 to 999999. (e.g. a 0-1000 Hz signal could be displayed as -50.000 to 50.000).

Digital inputs and quadrature inputs can be accepted for bi-directional flow on channel A and B. Quadrature inputs can also be accepted, using channels A and B to calculate a single bi-directional flow.

A totalizer can be programmed to count the scaled engineering units, interpreting it as count per second, minute, hour, or day. The scaled rate and total for each channel can be displayed on the top or bottom displays.

A math function channel (C) is available to perform operations on channel A and B rates or totals, with adder and factor constants, and display the results. Engineering units or tags may be displayed with these three channels.

The dual-line display can be customized by the user. Typically, display line 1 is used to display the math channel C, while line 2 is used to alternate between displaying input channels A and B rate or total.

Additionally, the meter can be set up to display any input or math channel on display line 1 and a unit or tag on line 2. The relays and analog output can be programmed to operate based on any input rate or total, or the math function channel.

## Function Keys Operation

During operation, the programmable function keys operate according to the way they have been programmed in the *Advanced Features – User* menu.

## F4 Operation

A digital input, F4, is standard on the meter. This digital input is programmed identically to function keys F1, F2, and F3. The input is triggered with a contact closure to COM, or with an active low signal. During operation, F4 operates according to the way it has been programmed in the *Advanced Features – User* menu.

## Front Panel Buttons Operation

| Button Symbol                                                                       | Description                                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  | Press to enter or exit Programming Mode, view settings, or exit max/min readings                                  |
|  | Press to reset max/min readings or other parameter/function assigned through the <i>User</i> menu                 |
|  | Press to display max/min readings for channel A or other parameter/function assigned through the <i>User</i> menu |
|  | Press to acknowledge relays or other parameters/function assigned through the <i>User</i> menu                    |

## Maximum/Minimum Readings

The max & min readings (peak & valley) reached by the process can be displayed either continuously or momentary:

1. Display briefly by assigning to the F1-F3 function keys or to the digital inputs in the *User* menu.
2. Display continuously by assigning either display to max/min through the *Display* menu.

Any of the F1-F3 function keys (buttons) and the digital inputs can be programmed to reset the max & min readings. The meters are set at the factory to display the max/min reading by pressing the Up arrow/F2 button and to use the Right arrow/F1 button to reset the max/min.

### To display max and min channel A reading using function key with factory defaults:

1. Press Up arrow/F2 button to display the maximum and minimum reading of channel A since the last reset/power-up.
2. To reset max/min press Right arrow/F1 button. The max & min displays are reset to actual values.
3. Press Menu to exit max/min display reading.

## Troubleshooting

The rugged design and the user-friendly interface of the meter should make it unusual for the installer or operator to refer to this section of the manual. However, due to the many features and functions of the meter, it's possible that the setup of the meter does not agree with what an operator expects to see.

If the meter is not working as expected, refer to the *Diagnostics* menu and recommendations below.

## Diagnostics Menu (d ,RC)

The *Diagnostics* menu is located in the *Advanced Features* menu. To access the *Diagnostics* menu see *Advanced Features Menu*, page 42.

For a description of the diagnostic messages, see *Advanced Features Menu & Display Messages*, page 42.

### Determining Software Version

To determine the software version of a meter:


1. Go to the *Diagnostics* menu (d ,RC) and press Enter button.
2. Press Up arrow button and scroll to Information menu (InFo).
3. Press Enter to access the software number (Sft) and version (Ver) information. Write down the information as it is displayed. Continue pressing Enter until all the information is displayed.
4. The meter returns to Run Mode after displaying all the settings.

## Reset Meter to Factory Defaults

When the parameters have been changed in a way that is difficult to determine what's happening, it might be better to start the setup process from the factory defaults.

### Instructions to load factory defaults:

1. Enter the *Advanced Features* menu. See *Advanced Features Menu*, page 42.
2. Press Up arrow to go to *Diagnostics* menu
3. Press and hold Right arrow for three seconds, press Enter when display flashes rESEt.  
Note: If Enter is not pressed within three seconds, the display returns to Run Mode.
4. The meter goes through an initialization sequence (similar as on power-up), and loads the factory default settings.

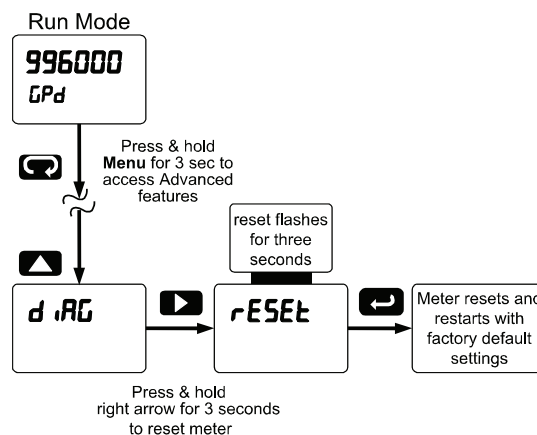

## Factory Defaults & User Settings

The following table shows the factory setting for most of the programmable parameters on the meter.

| Parameter                           | Display        | Default Setting | Parameter                           | Display       | Default Setting |
|-------------------------------------|----------------|-----------------|-------------------------------------|---------------|-----------------|
| Input type                          | <i>InPUL</i>   |                 | Total conversion factor, Ch-B       | <i>LCF</i>    | 1.000           |
| Total, channel A                    | <i>CH-A</i>    | Yes             | Grand total conversion factor, Ch-B | <i>GLCF</i>   | 1.000           |
| Total, channel B                    | <i>CH-b</i>    | Yes             | Total reset                         | <i>LRSEt</i>  |                 |
| Units                               | <i>UNIT5</i>   |                 | Total reset, channel A              | <i>LRSt</i>   | Manual          |
| Rate unit, channel A                | <i>CH-A</i>    | HZ-A            | Grand total reset, Ch-A             | <i>GLRSt</i>  | Manual          |
| Rate unit, channel B                | <i>CH-b</i>    | HZ-b            | Total reset, channel B              | <i>LRSt</i>   | Manual          |
| Unit, channel C                     | <i>CH-C</i>    | HZ-C            | Grand total reset, Ch-B             | <i>GLRSt</i>  | Manual          |
| Total unit, channel A               | <i>tot-A</i>   | tot-A           | Display assignment                  | <i>dSPLRy</i> |                 |
| Grand total unit, ch-A              | <i>GLtot-A</i> | Gtot-A          | Display line 1                      | <i>dCH-A</i>  | Channel A       |
| Total unit, channel B               | <i>tot-b</i>   | tot-b           | Display line 2                      | <i>dCH-b</i>  | Channel B       |
| Grand total unit, ch-B              | <i>GLtot-b</i> | Gtot-B          | Display intensity                   | <i>d-intY</i> | 8               |
| Decimal Point                       | <i>dEc Pt</i>  |                 | Relay                               | <i>rELRY</i>  |                 |
| Rate, channel A                     | <i>rRtE</i>    | 1               | Relay 1 assignment                  | <i>CH-A</i>   | Channel A total |
| Total, channel A                    | <i>totRL</i>   | 1               | Relay 1 action                      | <i>Rct 1</i>  | Automatic       |
| Grand total, channel A              | <i>GLtotRL</i> | 0               | Relay 1 set point                   | <i>SEt 1</i>  | 100.0           |
| Rate, channel B                     | <i>rRtE</i>    | 1               | Relay 2 assignment                  | <i>CH-A</i>   | Channel A total |
| Total, channel B                    | <i>totRL</i>   | 1               | Relay 2 action                      | <i>Rct 2</i>  | Automatic       |
| Grand total, channel B              | <i>GLtotRL</i> | 0               | Relay 2 set point                   | <i>SEt 2</i>  | 200.0           |
| Channel C                           | <i>CH-C</i>    | 1               | Relay 3 assignment                  | <i>CH-A</i>   | Channel A rate  |
| Input Calibration                   | <i>InCAL</i>   |                 | Relay 3 action                      | <i>Rct 3</i>  | Automatic       |
| Number of points                    | <i>no Pt5</i>  |                 | Relay 3 set point                   | <i>SEt 3</i>  | 300.0           |
| Number of points, ch-A              | <i>CH-A</i>    | 2               | Relay 3 reset point                 | <i>rSt 3</i>  | 250.0           |
| Number of points, ch-B              | <i>CH-b</i>    | 2               | Relay 4 assignment                  | <i>CH-A</i>   | Channel A rate  |
| K-Factor, channel A                 | <i>KFct-A</i>  | 1.000           | Relay 4 action                      | <i>Rct 4</i>  | Automatic       |
| K-Factor, channel B                 | <i>KFct-b</i>  | 1.000           | Relay 4 set point                   | <i>SEt 4</i>  | 400.0           |
| Total setup                         | <i>tSEtUP</i>  |                 | Relay 4 reset point                 | <i>rSt 4</i>  | 350.0           |
| Time base, channel A                | <i>tbase</i>   | Sec             | Fail-safe relay 1 to 4              | <i>FLS 1</i>  | Off             |
| Total conversion factor, Ch-A       | <i>LCF</i>     | 1.000           | On delay relay 1 to 4               | <i>On 1</i>   | 0.0 sec         |
| Grand total conversion factor, Ch-A | <i>GLCF</i>    | 1.000           | Off delay relay 1 to 4              | <i>OFF 1</i>  | 0.0 sec         |
| Time base, channel B                | <i>tbase</i>   | Sec             | Analog output                       | <i>ROUT</i>   |                 |
|                                     |                |                 | Display 1 analog out                | <i>d, 1</i>   | 0.0             |
|                                     |                |                 | Output 1 value                      | <i>OUT 1</i>  | 4.000 mA        |
|                                     |                |                 | Display 2 analog out                | <i>d, 2</i>   | 1000.0          |

| Parameter               | Display    | Default Setting |
|-------------------------|------------|-----------------|
| Output 2 value          | Out 2      | 20.000 mA       |
| Source analog output    | Source     | Channel A       |
| Overrange output        | OverRange  | 21.000 mA       |
| Underrange output       | UnderRange | 3.000 mA        |
| Maximum output          | max RH     | 23.000 mA       |
| Minimum output          | min in     | 3.000 mA        |
| Filter                  | Filter     |                 |
| Filter, channel A       | Ch-A       | High speed      |
| Filter, channel B       | Ch-b       | High speed      |
| Round                   | round      | 1               |
| Cutoff                  | Cutoff     |                 |
| Cutoff value, channel A | Ch-A       | 0.0 (disabled)  |
| Cutoff value, channel B | Ch-b       | 0.0 (disabled)  |
| Serial                  | Serial     |                 |
| Slave ID (Address)      | Slave ID   | 247             |
| Baud rate               | baud       | 9600            |
| Transmit delay          | tx delay   | 50 ms           |
| Parity                  | Parity     | Even            |
| Byte-to-byte timeout    | tx-bb      | 010 (0.1 sec)   |
| Math                    | Math       |                 |
| Math, channel C         | Sum        | Sum             |
| Adder (constant P)      | Adder      | 0.000           |
| Factor (constant F)     | Factor     | 1               |

| Parameter                   | Display     | Default Setting    |
|-----------------------------|-------------|--------------------|
| User                        | User        |                    |
| F1 function key             | F1          | Reset max & min    |
| F2 function key             | F2          | Line 1 Max & Min   |
| F3 function key             | F3          | Acknowledge relays |
| F4 function (digital input) | F4          | Acknowledge relays |
| Digital input 1             | di 1        | Menu               |
| Digital input 2             | di 2        | Right arrow        |
| Digital input 3             | di 3        | Up arrow           |
| Digital input 4             | di 4        | Enter              |
| Digital output 1            | do 1        | Alarm 1            |
| Digital output 2            | do 2        | Alarm 2            |
| Digital output 3            | do 3        | Alarm 3            |
| Digital output 4            | do 4        | Alarm 4            |
| Password                    | Pass        |                    |
| Password 1                  | Pass 1      | 000000 (unlocked)  |
| Password 2                  | Pass 2      | 000000 (unlocked)  |
| Password 3                  | Pass 3      | 000000 (unlocked)  |
| Total                       | Total       | 000000 (unlocked)  |
| Grand total                 | Grand Total | 000000 (unlocked)  |

## Troubleshooting Tips

| Symptom                                                                            | Check/Action                                                                                                                   |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| No display at all                                                                  | Check power at power connector                                                                                                 |
| Not able to change setup or programming, <i>Lacd</i> is displayed                  | Meter is password-protected, enter correct six-digit password to unlock                                                        |
| Meter displays error message during calibration ( <i>Error</i> )                   | Check:<br>1. Signal connections<br>2. Input selected in <i>Setup</i> menu<br>3. Minimum input span requirements                |
| Meter displays<br>1. <i>999999</i><br>2. <i>-99999</i>                             | Check:<br>1. Input selected in <i>Setup</i> menu<br>2. Corresponding signal at Signal connector                                |
| Display is unstable                                                                | Check:<br>1. Input signal stability and value<br>2. Display scaling vs. input signal<br>3. Filter and bypass values (increase) |
| Display response is too slow                                                       | Check filter and gate values                                                                                                   |
| Display reading is not accurate                                                    | Check:<br>1. Proper input programming used (k-factor, scaling, calibration)                                                    |
| Display does not respond to input changes, reading a fixed number                  | Check:<br>1. Display assignment, it might be displaying max, min, or set point.                                                |
| Display alternates between<br>1. <i>H</i> and a number<br>2. <i>L</i> and a number | Press Menu to exit max/min display readings.                                                                                   |
| Relay operation is reversed                                                        | Check:<br>1. Fail-safe in <i>Setup</i> menu<br>2. Wiring of relay contacts                                                     |
| Relay and status LED do not respond to signal                                      | Check:<br>1. Relay action in <i>Setup</i> menu<br>2. Set and reset points                                                      |
| Flashing relay status LEDs                                                         | Relays in manual control mode or relay interlock switches opened.                                                              |
| Meter not communicating with application programs                                  | Check:<br>1. Serial adapter and cable<br>2. Serial settings<br>3. Meter address and baud rate                                  |
| If the display locks up or the meter does not respond at all                       | Cycle the power to reboot the microprocessor.                                                                                  |
| Other symptoms not described above                                                 | Call Technical Support for assistance.                                                                                         |