



Quick Connect Test Cock Adapters



Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.

No Wrenches or Teflon Tape Required.

Part No. 110631

1/4" NPT Quick Connect x 1/4" Flare
Includes 3 spare O-rings

Part No. 110703

1/2" NPT Quick Connect x 1/4" Flare
Includes 3 spare O-rings

Part No. 110704

3/4" NPT Quick Connect x 1/4" Flare
Includes 3 Spare O-Rings

Quick Connect Test Cock Adapter Kit



Part No. 110617
(Set of 9)

Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.
Set includes all fittings required to test any size Backflow device

Set Includes:

(3) 1/4" NPT X 1/4" Flare
(3) 1/2" NPT X 1/4" FNPT
(3) 3/4" NPT X 1/4" FNPT
Includes 3 spare O-rings per size

90° Swivel Quick Connect Test Cock Adapters



Part No. 110705
(90° Swivel Fittings)
(Set of 3)

Rotate 360° after installation • Ideal for tight spaces

Set Includes:

(3) 1/4" NPT Quick Connect x 1/4" Flare 90° Swivel Fittings
Includes 3 spare O-rings

90° Swivel Quick Connect Test Cock Adapter Kit



Part No. 110706

(Set of 9)

Set includes all fittings required to test any size Backflow device.
90° Elbow Swivel Fittings - Rotate 360° after installation.

Ideal for tight spaces.

Set Includes:

- (3) pieces 90° Swivel 1/4" NPT x 1/4" Flare Quick Connect Fittings
 - (3) pieces 1/2" NPT x 1/4" FNPT Quick Connect Fittings
 - (3) pieces 3/4" NPT x 1/4" FNPT Quick Connect Fittings
- Includes 3 spare O-rings per size

90° Swivel Quick Connect Kit for Male Test Cocks



Part No. 111887

(Set of 3)

Designed for hand tight connection of Differential Pressure Test Gauges to Backflow Prevention Assemblies.

Ideal for tight spaces

- (3) pieces 1/4" NPT Quick Connect x 1/4" Flare

Standard Test Cock Adapter Kit



Part No. 109425

(Set of 9)


Standard NPT Adapter Fitting Kit

Fittings to connect Differential Pressure Test Gauges to Backflow Prevention Assemblies

Set includes:

- (3) 1/4" NPT X 1/4" Flare
 - (3) 1/2" NPT X 1/4" FNPT
 - (3) 3/4" NPT X 1/4" FNPT
- 2 Foot long chain to hang a test kit from the valve.

Model 830 Replacement Hose Kit (Set of 3)

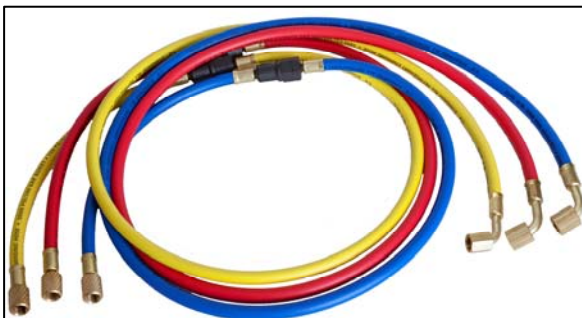


Part No. 110645

Model 830 - Five Foot Replacement Hose Assembly Kit.
Set of 3 - (Red, Blue, Yellow)

90 Deg. 1/4" Hex Flare and 1/4" Straight Quick Coupler.
Field serviceable filter housing with filters included.

Model 835/845 Replacement Hose Kit (Set of 3)

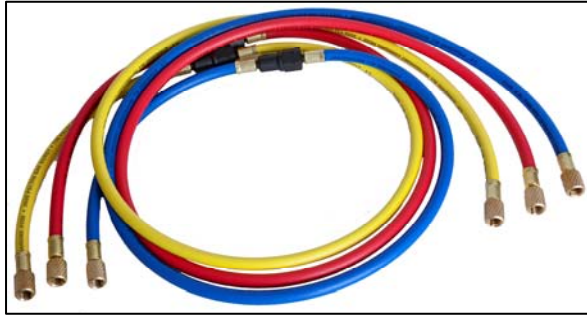

Part No. 110646

Model 835/845 - Five Foot Replacement Hose Assembly Kit. (Set of 3) - (Red, Blue, Yellow)

1/4" Straight Quick Coupler -Both Ends. Field serviceable filter housing with filters included.

Filter Assembly Adapter Kit



Part No. 109445

Filter Assembly Adapter Kit-12" hoses. (Set of 3)

For Test Kit Hoses that do not have filters.

1/4" Quick coupler x 1/4" Flare Connection. Field Serviceable filter housing and filters included.

Replacement Filter kit



Part No. 98008

Replacement Filter Element Kit (Set of 6)

Vertical Tube Kit



Part No. 830-0003

(For USC Test Procedures)

15" x 1/2" Dia. Tube/Test Cock Adapter Assembly.
15" x 1/2" Dia. Extension Tube Assembly.
15" Is Assembled Length.

Bleed-Off Valve Assembly



Part No. 830-0001

(For USC Test Procedures)

Bleed-Off Valve Assembly
Soft Seat Needle Valve

Carrying Case



Part No. 110405

Test Kit Case with Foam (Accessories not included)