


Some examples illustrating where Spike and Omni-Marker Electronic Markers may be used in a typical PON deployment. The network hardware and accessories that you use locally may differ, but you'll see that electronic markers are versatile and can be very helpful in marking key points of modern networks that are otherwise invisible to conventional cable locators.

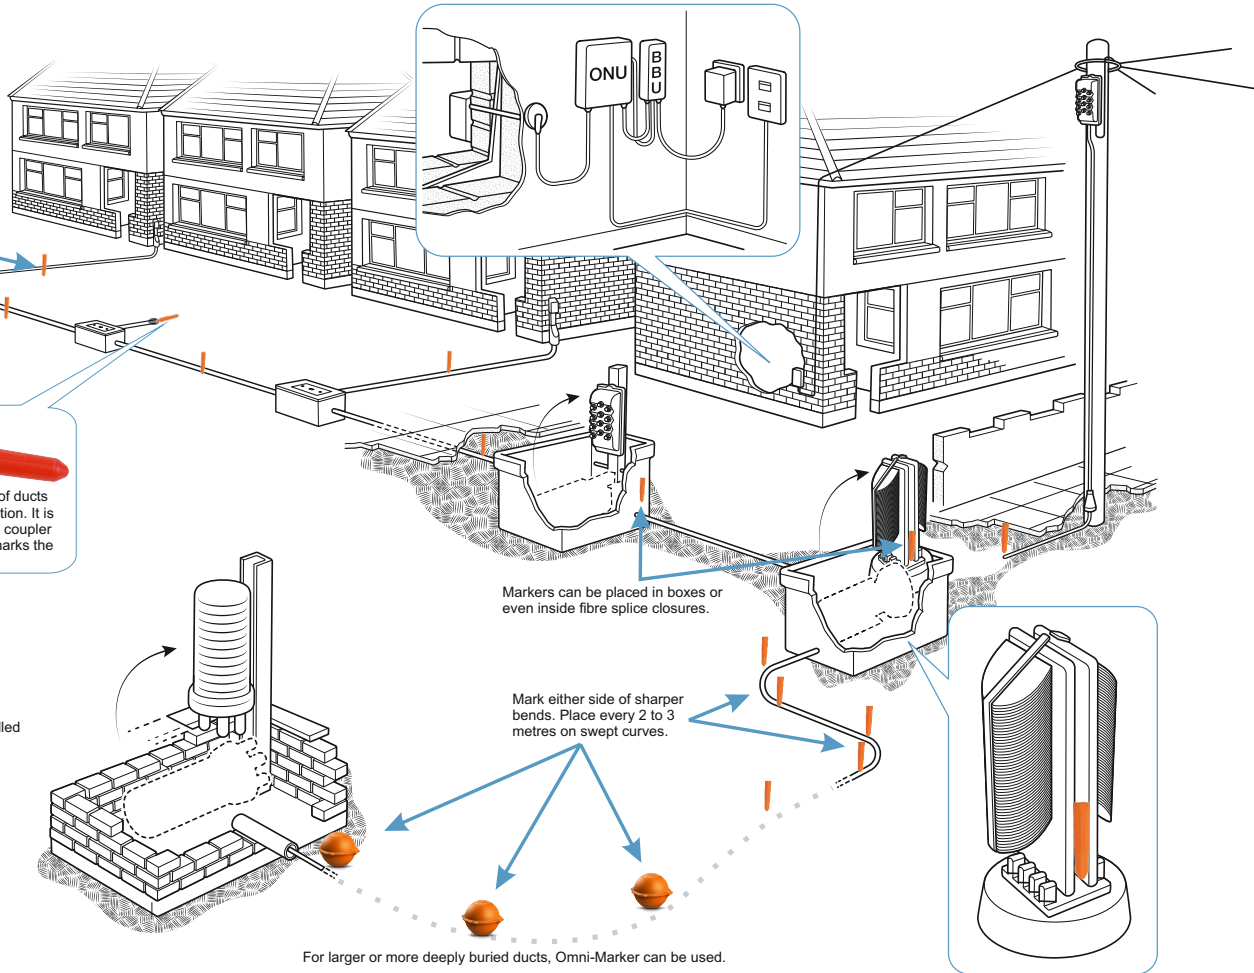

Spike markers can be added along ducts between enclosures.



#### Applicable Markers

Telecom (Orange, 101.4 kHz)  
Fiber Optic (Black & Yellow, 92kHz)  
CATV (Black & Orange, 77kHz)

Spike markers are so compact they can be installed in micro-trenches and even inside fibre splice closures.

The larger Omni-Markers are available where services are buried more deeply. Please see the website linked above for more details.