
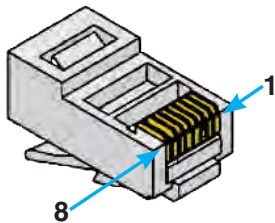
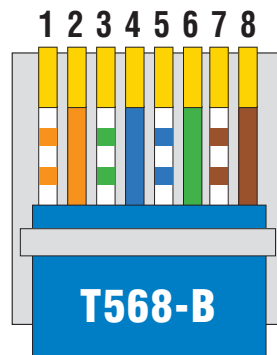


- 8 position, 8 contact pass-through type data plugs for solid or stranded wire
- Works with CAT6 and CAT6A cables
- Requires pass-through type crimping tool (VDV226-110 recommended)

8P8C **Wiring order** Orden de los alambres Ordre de câblage

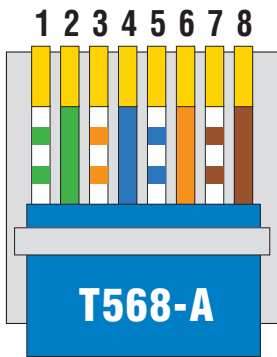

VDV826-704

**KLEIN
TOOLS**



PASS-THRU™

■ RJ45 CAT6A UTP

PASS-THRU™ DATA PLUGS

CONECTORES DE DATOS PASS-THRU™

PRISES DE DONNÉES PASS-THRU™

ENGLISH

1. Strip 1-1/2" to 2" (38 to 50 mm) of cable jacket; trim shielding, pullstring, and plastic cross-member as necessary (Fig. 1).
2. Untwist and order wires (see wiring order on other side).
3. Slide wires into and through connector body (Fig. 2).
4. Slide assembly into crimping tool and crimp/trim* (Fig. 3).
5. Remove from tool; verify & test connections.

RECOMMENDED TOOLS:

- VDV110-261 *Twisted Pair Radial Stripper*
- 2100-7 *Electrician's Scissors*
- VDV226-110 *Pass-Thru™ Modular Crimper*
- VDV501-851 *Scout™ Pro 3 Tester*

**Crimping tool must be pass-through type.*

