


The Rugby LR Remote Control (765668) is a full functioning, two-way remote control.



The LCD display and the grade and star buttons on the remote are the same as on the Rugby.



The Power button turns on only the remote. When pressed it will communicate with the Rugby to receive current information. Once communication is established, the remote can be used to change grade and setup parameters on the laser. If the remote is not within range or otherwise loses communication, the lost communication screen will be displayed.

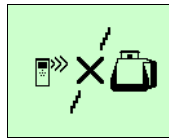

It is important, to achieve specified distances, that the remote be used within the "line of sight" of the Rugby.

Press and hold the power button for 1.5 seconds to turn the remote off.




The Standby button will cause the Rugby to go into standby mode for up to 16 hours. After this time the Rugby will shut off and can only be turned on again at the laser.

When in standby mode the display will show only a sleeping Rugby. Pressing any button (except power) while the unit is in standby mode will cause the laser to return to normal operation.



Automatic Shut Off - To conserve battery power, the remote will automatically shut off after two minutes of non-use.

Low Battery – The remote will display a low battery screen when the batteries have reached a voltage where the remote can no longer communicate with the laser.

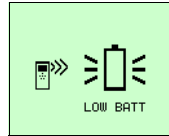

To replace the batteries, remove the bottom cover of the housing. Install as indicated on the side of the housing.

Before you can use the remote it is necessary to enable the remote capability on the laser.

To do this follow the instructions for entering and changing the setup in the second setup screen (page 17).




Change the remote symbol in the setup screen so that it no longer has a line through it.

When enabled, the remote symbol will appear on the bottom of the main display.

Programing the remote – To program the remote for your laser press and hold the **STAR** button, then press the **POWER** button.

The remote will search the immediate area for Rugby units with remote capability, and will identify these in the display.

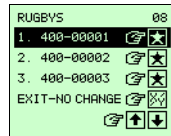

To select your laser highlight the serial number and press the **STAR** button. The remote will connect to the selected laser.

To exit this screen without changing settings, highlight **EXIT - NO CHANGE** and press the **X/Y** button.

Remote Notes

Setting the shut-off timer – The remote is set from the factory to shut off after two minutes of not being used.

To change this shut-off time, enter the remote programming screen (just described) by pressing and holding the **STAR** button, then pressing the **POWER** button.




When the Rugby select screen is shown, press and hold the **STAND-BY** button for 1.5 seconds. The shut-off time will change between 120, 60, or 30 seconds each time the button is held.

Backlighting – The LCD backlighting is normally off to conserve battery power.



To backlight the display on the remote, press the power button a second time after the remote has been turned on.

Remote reception – The remote is an RF (radio frequency) device with an internal antenna. Always ensure that the remote is within the “line of sight” of the Rugby.



If the remote loses communication, hold the remote at a different angle to improve reception.