HIOKI
















Wireless data logging at 1 kS/s (1 ms)

330-channel portable logger available with your choice of plug-in modules and wireless modules

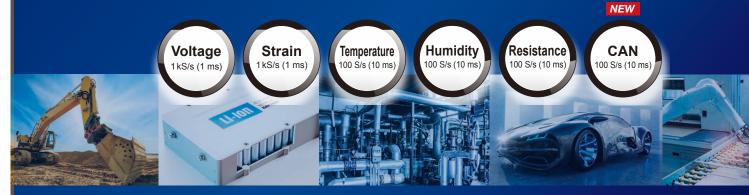

Two models: Standard Model and Wireless LAN Model



Standard model (designed for use with plug-in modules only) **LR8450**

You can add up to 4 plug-in modules which provides 120 channels of measurement






Configuration example: 120 channels of analog input

Plug-in units

VOLTAGE/TEMP UNIT U8552×4

Each VOLTAGE/TEMP UNIT U8552 accepts 30 channels of input. Add four units for 120 channels of measurement.

Depending on various scenes, you can freely combine six types of plug-in modules

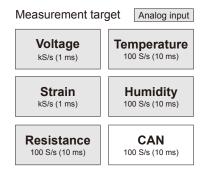



Configuration example: 60 channels of analog input + 1,000 channels of CAN input

Plug-in units

VOLTAGE/TEMP UNIT U8552×2 CAN UNIT U8555×2

Each VOLTAGE/TEMP UNIT U8552 accepts 30 channels of input. Each CAN UNIT U8555 accepts 500 channels of input.

Wireless LAN model

Add channels freely via either plug-in or wireless modules

Can also be used exclusively with wireless modules



Wireless LAN model LR8450-01

Add up to 7 wireless modules in total for a maximum of 330 channels

Configuration example: 330 channels

Plug-in modules

VOLTAGE/TEMP UNIT U8552×4





Wireless modules

WIRELESS VOLTAGE/TEMP UNIT LR8532×7



With four U8552 VOLTAGE/TEMP UNITs and seven LR8532 WIRELESS VOLTAGE/TEMP UNITs, you can measure a total of 330 channels.

Mix plug-in and wireless modules

Mixing and matching plug-in modules and wireless modules will allow you to build a measurement system that suits your needs.*1

If wireless modules are used with other modules (wireless or plug-in), the sampling-timing shift between the units is periodically corrected.*2

In addition, at times when the wireless communication is cut off, the correction function works after the communication is restored and the sampling-timing shift between the modules is corrected.

- *1 Up to four CAN modules can be used at the same time. (Plug-in and wireless modules may be used in any combination.)
- *2 Even in good wireless communication conditions (low interference) the sampling-timing between modules may shift about 20 ms. In bad wireless conditions, the sampling-timing shift will be much worse than this.



Voltage measurement



Measure outputs from a pressure sensor and other sensors at 1 kS/s max. sampling rate (1 ms interval sampling)

1 kS/s sampling is necessary to record outputs of several tens of Hertz from pressure sensors and vibration sensors.







WIRELESS HIGH SPEED VOLTAGE UNIT LR8533

Temperature measurement



Measure temperature near inverters and batteries at a sampling rate of up to 100 S/s (10 ms interval sampling)



VOLTAGE/TEMP UNIT U8550 UNIVERSAL UNIT U8551 VOLTAGE/TEMP UNIT U8552(*)



WIRELESS VOLTAGE/TEMP UNIT LR8530 WIRELESS UNIVERSAL UNIT LR8531 WIRELESS VOLTAGE/TEMP UNIT LR8532(*)

Consistent sampling rate even with added modules

Each module incorporates its own A/D converter. This design keeps the maximum sampling rate high even when Mod-



Example 1: use four U8553 HIGH SPEED VOLTAGE UNITs (with 5 channels each) to measure 20 channels at a sampling rate of 1 kS/s (1 ms).


Example 2: Use four U8550 VOLTAGE/ TEMP UNITs (with 15 channels each) to sample 60 channels at a sampling rate of 100 S/s (10 ms).

Consistent noise resistance even with added modules

Since increasing the number of modules has no effect on the cutoff frequency, which changes with the sampling rate, power supply noise can be reduced without sacrificing noise resistance.

| (ex.) Samplng rate: 1 S/s | | |
|----------------------------|--------------------------|--|
| Number of channels | Cutoff frequency | |
| 1 ch to 15 ch | 60 Hz | |
| 16 ch to 30 ch | 60 Hz | |
| 31 ch to 45 ch | 60 Hz | |
| 46 ch to 60 ch | 60 Hz | |
| *When using a power supply | <u> </u> | |
| frequency of 60 Hz. | Same cutoff frequency | |

Set filters for each module

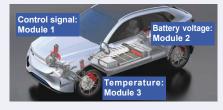

The cutoff frequency, which varies with the data refresh interval, can be set separately for each module. You can use long data refresh intervals, which boost filter effectiveness, and short data refresh intervals for different modules at the same time.

- · Measure control signals at maximum speed: module1 (data refresh interval: 1 ms)
- Measure battery voltage fluctuations: module 2 (data refresh interval: 1 ms)
- Measure temperature using thermocouples: module 3 (data refresh interval: 1 s) with strong filter



^{*}Sampling rate of 100 S/s (10 ms) is available when using 15 or fewer channels.

Strain measurement

Measure strain with a 1 kS/s sampling rate (1 ms)

Connect strain gages directly and measure at a sampling rate of up to 1 kS/s. Strain gages tend to have long, thin wires that are easily broken, but that potential pitfall can be avoided by using wireless modules so that wiring is minimized.








Connect strain gages directly

The strain units have a built-in bridge box, allowing you to connect strain gages directly to their input terminals.

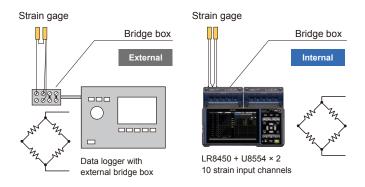

Strain-gage-type converters such as load sensors and pressure sensors can be connected directly to make measurement.





Reduced influence of noise


Stable measurement, even at high voltages and high frequencies

Most competing loggers are incapable of measuring temperature accurately in noisy environments due to the influence of high frequencies, causing values to shift or fluctuate significantly. The LR8450 uses a new design to dramatically reduce the influence of high-frequency noise.

Example: measure temperature by connecting the tip of a K thermocouple to the screw on an inverter's PWM output terminal (W-phase) when using the U8550 VOLTAGE/TEMP UNIT (settings: 10 S/s sampling in the 100°C f.s. range).

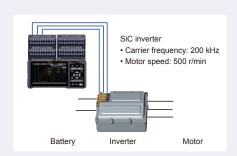

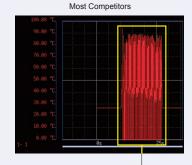

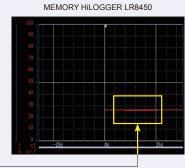


Most competing loggers exhibit significant fluctuations when the inverter is operating, whereas the MEMORY HILOGGER LR8450 does not.

5



One instrument, two uses: **CAN input + CAN output of measured values**

| | U8555 | LR8535 |
|------------------------|-------|--------|
| Input: CAN and CAN FD | Yes | Yes |
| Output: CAN and CAN FD | Yes | No |

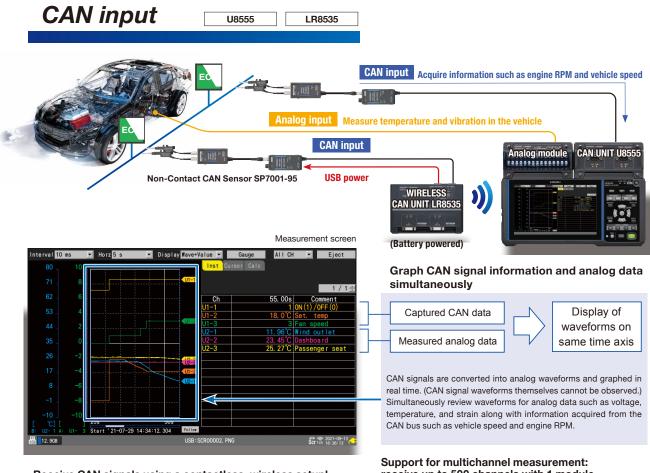

Receive CAN signals using a contactless, wireless setup!

Wireless modules interoperate flawlessly with the NON-CONTACT CAN SENSOR SP7001-95! Supply power from the battery-driven wireless unit to the NON-CONTACT CAN SENSOR SP7001-95 via USB to implement a wireless CAN measurement setup that requires no external power supply. (The system can operate for about



five hours on battery power.) Since no ECU analysis tools or computer is required, the setup takes little space to reduce the amount of wiring needed for driving tests.

Convenient function 1 Notification when a specific ID is received

Start and stop measurement when a CAN signal with a specific ID occurs



Convenient function 2 Bit mask trigger function

Set a trigger that corresponds to a particular pattern with the bit mask trigger function. For example, this function can be used when you wish to start recording when a control signal exhibits the specific pattern of "10101010."

receive up to 500 channels with 1 module

As a result of electrification, automobiles now use enormous quantities of data internally, and the amount of data on CAN buses consequently is growing. A single CAN module can capture up to 500 channels*1 of data. The LR8450 can accommodate up to four modules, allowing you to measure up to 2000 channels of CAN data. Each channel can collect information for one signal

*1 With a recording interval of 100 ms

Convenient function 3 Sending user-defined CAN frames

Sometimes it's necessary to send a CAN signal to an ECU in advance so that the ECU will output data to the CAN bus. With the U8555, you can send userdefined CAN frames to a CAN bus while performing CAN measurement.

One-time transmission

When you need to send a CAN control frame once in order to change an ECU's operating mode

Repeated transmission

When an ECU won't output the value you wish to capture unless you send specific CAN data each time




CAN UNIT U8555

CAN and CAN FD input or output

WIRELESS CAN UNIT LR8535

CAN and CAN FD input only



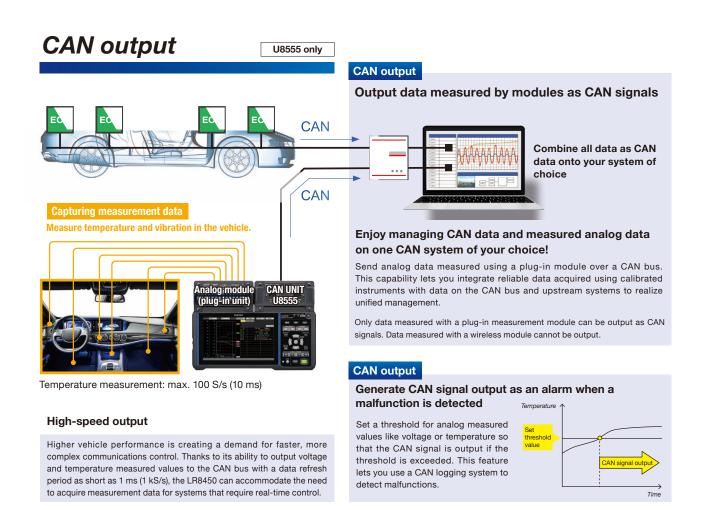

CAN Editor (standard CAN configuration software accessory)

Install this software from the application disc that comes with the MEMORY HiLOGGER LR8450 onto a PC to easily configure CAN Unit settings.

Setting method Online or offline


Save settings configured using the CAN Editor in the CES format and then load them with the LR8450. You can also configure instruments offline when a LAN or USB connection is difficult

Receive mode Loading DBC files

In addition to setting up channels manually, you can complete CAN communication definition settings simply by loading a DBC file.

Output mode Automatically configuring output targets

Creating output communication definitions one channel at a time for a logger that's handling a large number of channels is extremely time-consuming. With the CAN Editor, you need only specify the start ID and click the "Configure Automatically" button to complete all communication definitions. Those definitions can then be output as a DBC file and loaded onto an upstream system to complete the configuration process.

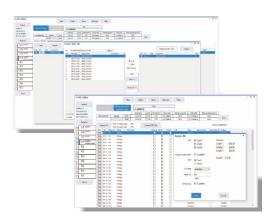

Wireless for ease of use

Collect data from dispersed locations all at the same time

The LR8450-01 can simultaneously collect measurement data from wireless units installed on various test equipment.


Collect measurement data from multiple locations with a single logger

Manage data in a single time sequence

Units can be placed in confined locations

Check the display during measurement



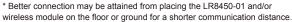



Peace of mind in the event of an interruption in power or wireless connectivity

Peace of mind if communications are temporarily interrupted

Buffer memory holds up to 5 min.*1 of measurement data

Each wireless unit has a built-in buffer memory that can hold up to 5 min.*¹ of measurement data. Data are resent along with more recent measurement data once communications resume, after which the data are restored inside the LR8450-01*².

The system can be configured to output an alarm if communications are interrupted or if a module encounters a low-battery state.

- *1 The duration for which measurement data can be maintained does not vary with the recording interval (up to a maximum of 5 min.)
- *2 Data collected using the Logger Utility software measurement cannot be restored in this manner.

Battery operation

Use modules in locations where there's no AC power

Example

The wireless VOLTAGE/TEMP UNIT LR8530 can operate for about 9 hours on battery power. If the unit is charged at night, it can operate on just the battery pack during the day.

Using the Battery Pack Z1007

| Wireless module model | Continuous operating time |
|-----------------------|---------------------------|
| LR8530 | Approx. 9 hr. |
| LR8531 | Approx. 7 hr. |
| LR8532 | Approx. 9 hr. |
| LR8533 | Approx. 9 hr. |
| LR8534 | Approx. 5 hr. |
| LR8535 | Approx. 10 hr.* |

*Approx. 5 hours when using two non-contact CAN sensors



Peace of mind in the event of a power outage during measurement

Install a battery pack for peace of mind

If you've installed a battery pack in a module that's being powered by an AC adapter, the unit will automatically switch to battery power in the event of an outage so that the LR8450-01 can continue making measurements.

Make measurements in locations where it would be difficult to route wires

Work time can be reduced using the LR8450-01 and wireless modules, since only minimal wiring is required. If the measurement target is located in a lab, this approach eliminates the need for wiring and avoids having to drill holes in the walls of the monitoring room where data is being checked.





Simple registration of wireless modules

Wireless modules, located within the range, that are not connected to another LR8450-01, can be automatically detected. Simply choose the module you wish to register from the list.








Check the unused wireless LAN channels and select the wireless channel to use

You can reduce interference from other wireless devices by using an open channel (wireless frequency range being used by wireless devices in the area). Check for open channels on the instrument's screen.

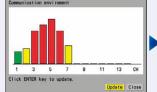



Observe data from a remote location using a PC or a tablet


By connecting the LR8450-01 to a PC or a tablet via wireless LAN, you can control the instrument remotely using the built-in HTTP server or obtain older data files using the built-in FTP server.

(You cannot use Logger Utility when using Station Mode or Access Point Mode. See below.)

Station mode Connect wirelessly to a third-party access point (AP).



Easy-to-read display of measured values

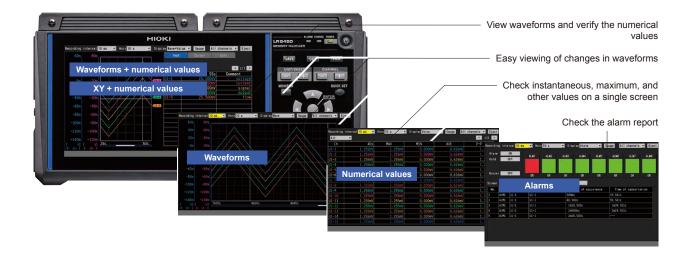


External control terminals and interfaces to accommodate a broad range of use cases



Motor speed, flow rate integration, etc.


8 channel pulse measurement

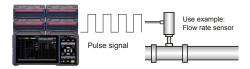

In "Revolve" mode, monitor production equipment by measuring the variations in revolution speed of motors or drills. In "Count" mode, identify operation status by acquiring integrated power or flow rate.

Useful in preventive maintenance


8 channel alarm outputs

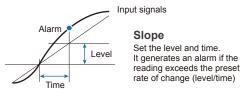

You can set alarm output for eight channels. You can set a level, a window, a slope, and a logic pattern on channels you wish to monitor.

Two terminals for voltage outputs (5, 12, or 24 V)

Supplying power to the sensors

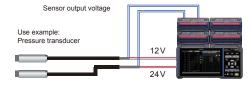

The LR8450/LR8450-01 provides two output terminals for voltages, each of which can supply 100 mA current, eliminating the need for a separate sensor power supply. You can select 5 V, 12 V, or 24 V from the VOUTPUT1 terminal and 5 V or 12 V from the VOUTPUT2 terminal.

Replace storage media during real-time saving

No need to stop recording

When you remove the storage media while recording data, and reinsert it, data remaining in the internal buffer memory will continue to be stored in a new and different file.






Extensive calculation functions

Numerical calculation function

In addition to the maximum and minimum value calculation functions provided by previous models, the LR8450/ LR8450-01 offers an extensive range of calculations, including on/off time, count, and usage ratio.

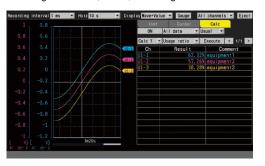


Average value Peak-to-peak value Maximum value Minimum value Time at which maximum value occurred Time at which mini-Integration Aggregation Usage ratio On time Off time

Types of calculations

Waveform calculation function

Calculate data while measurement continues and display calculated waveforms in real time. Calculation results are saved on a separate and dedicated calculation

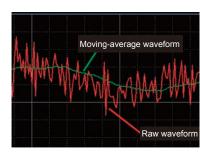

Types of calculations

Basic arithmetic operations Aggregation Simple average Moving average Integration

Recording over extended periods of time without interruption

On count Off count

Collect data on a storage device (SD memory card or USB drive) while measuring continues. The ability to segment files by hour or day without stopping measurement is convenient when you need to review data later.



Maximum recording time (estimate)

Example: Recording 30 analog channels with 2 modules (no alarm output or waveform processing)

Because the header portion of waveform files is not included in capacity calculations, expected actual maximum time is about 90% of those in the tables. The maximum recording time varies with the number of measurement channels. Recording times are doubled if the number of measurement channels. nels shown in the table is halved.

When recording 30 analog channels with two U8550/U8551 modules or one U8552 module (no alarm output, no waveform processing) When recording 30 analog channels with two LR8530/LR8531 modules or one LR8532 module (no alarm output, no waveform processing)

| Recording intervals | Internal buffer memory (512 MB) | SD MEMORY CARD Z4001 (2 GB) | SD MEMORY CARD Z4003 (8 GB) | USB DRIVE Z4006 (16 GB) |
|---------------------|------------------------------------|--------------------------------|--------------------------------|----------------------------|
| 10 ms | 1 d | 3 d 20 h | 15 d 8 h | 30 d 12 h |
| 100 ms | 10 d 8 h | 38 d 18 h | 153 d 9 h | 305 d 5 h |
| 1s | 103 d 13 h | 387 d 12 h | 1,533 d 21 h | 3,052 d 9 h |
| 10 s | 500 d | 3,875 d 6 h | 15,339 d 3 h | 30,523 d 19 h |

When recording 20 channels with four U8553 modules or U8554 modules (no alarm output, no waveform processing) When recording 20 channels with four U8553 modules or LR8534 modules (no alarm output, no waveform processing)

| Recording intervals | Internal buffer memory (512 MB) | SD MEMORY CARD Z4001 (2 GB) | SD MEMORY CARD Z4003 (8 GB) | USB DRIVE Z4006 (16 GB) |
|---------------------|------------------------------------|--------------------------------|--------------------------------|----------------------------|
| 1 ms | 3 h 43 min | 13 h 56 min | 2 d 7 h | 4 d 13 h |
| 10 ms | 1 d 13 h | 5 d 19 h | 23 d | 45 d 18 h |
| 100 ms | 15 d 12 h | 58 d 3 h | 230 d 2 h | 457 d 20 h |
| 1 s | 155 d 8 h | 581 d 7 h | 2,300 d 21 h | 4,578 d 13 h |
| 10 s | 500 d | 5,813 d 1 h | 23,008 d 20 h | 45,785 d 20 h |

When recording 330 channels with four U8552 modules and seven LR8532 modules (no alarm output, no waveform processing)

| Recording intervals | Internal buffer memory (512 MB) | SD MEMORY CARD Z4001 (2 GB) | SD MEMORY CARD Z4003 (8 GB) | USB DRIVE Z4006 (16 GB) |
|---------------------|------------------------------------|--------------------------------|--------------------------------|----------------------------|
| 20 ms | 4 h 8 min | 15 h 28 min | 2 d 13 h | 5 d 2 h |
| 100 ms | 20 h 42 min | 3 d 5 h | 12 d 18 h | 25 d 10 h |
| 1s | 8 d 15 h | 32 d 6 h | 127 d 19 h | 254 d 8 h |
| 10s | 86 d | 322 d 16 h | 1,277 d 23 h | 2,543 d 9 h |

Control the instrument remotely and capture data on a PC


HTTP server function

Control the instrument remotely from a PC

Use a standard Web browser to control the LR8450/LR8450-01, start and stop measurement, then enter comments.

Use a mouse to operate waveforms displayed on a PC

Enjoy intuitive mouse-based control, including waveform scrolling and cursor operations.

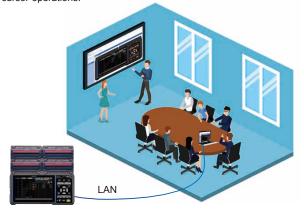

FTP server function

Download data files onto a PC

Your PC can get files from inside the SD memory card or USB drive inserted to the LR8450/LR8450-01.

Automatically transfer data files to an FTP server

Automatically transmit files to an FTP server from the SD memory card or in the USB drive inserted to the LR8450/LR8450-01.

NTP client function

Set the logger's clock

Set the clock in the LR8450/LR8450-01 and synchronize it to an NTP server on the network.

E-mail transmission function

CAN-FD - Powertrain

CAN-FD - ADAS CAN - Body

Receive email notices on errors and other information


Receive emails to your PC or mobile phone when there is a communication loss and when an error occurs during measurement and wireless module communications.

It can also send instantaneous values by e-mail periodically.


Use with other tools

Output measured values using XCP on Ethernet

The LR8450 supports XCP slave operation based on the XCP protocol, a standard developed by the Association for Standardisation of Automation and Measuring Systems (ASAM). You can perform control to start and stop measurement and acquire measured values using an XCP master. (Measured values from CAN modules cannot be output.)

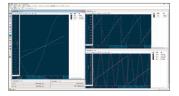



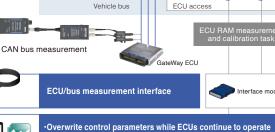


·Consolidate data from multiple measurement systems and buses ·Monitor large amounts of microcontroller RAM at high speeds

Load data using MDF-compatible waveform viewers

Voltage, temperature, strain, CAN, and other measurement data captured by the LR8450 can be saved in the Measurement Data Format (MDF) and loaded by other software that supports the format.

Commercially available software

FAMOS

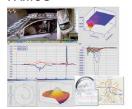

- · More than 400 calculation processing variables
- · Easy report creation functionality

FlexPro




- · High-speed search and processing of large volumes of data
- Share analysis templates within your company

NI DIAdem



- · Functionality ranging from searching and loading of data to analyzing and creating of reports
- · Dialog-based interface

OS-2000

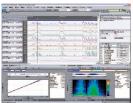

- · Freely edit large data that cannot be handled by Excel
- Simultaneously display the waveforms which have different frequencies



Logger Utility (standard accessory)

Collect data at sampling speeds of up to 10 ms on a PC



Record data on a PC in real time using the Logger Utility application software, a standard accessory. You can even scroll waveforms backwards to view older data while recording is in progress. A real-time measurement is supported for recording intervals of 10 ms or longer.

U8555 and LR8535 CAN Unit real-time measurement and viewing of waveform data are not supported. Please use the GENNECT One software for real time viewing of CAN data by the U8555 and LR8535.

Recording interval 10 ms

Simultaneous recordina

No. of connected units

Save Connection method destination

2035 channels + 60 waveform

up to 5

PC


LAN/USB

Simultaneously log data from five LR8450 instruments at a speed of up to 10 ms.

Display logged data in real time as a graph.

GENNECT One

Make simultaneous measurements using multiple instruments

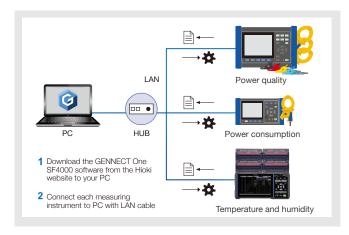

Aggregate measurement data from not only loggers, but also waveform recorders, power meters, and other instruments onto a single PC.

Display this measurement data on a single graph in real time. Summarize it in daily and monthly reports. Manage in in a centralized manner. GENNECT One is a Windows application that specializes in aggregating measurement data.

Data including CAN data from the U8555 and LR8535 can be viewed and measured in real time (logging function, dashboard function). Real time measurement and viewing of CAN data will be available from the LR8450's next firmware update around mid or late 2022.

> GENNEC One is a free application. Access this 2D Code for details and downloads.



Recording interval

Simultaneous recordina 512 channels

Total No. of connected devices up to 15

Save destination PC

Connection method LAN

*Up to 30 devices can be connected when using only the logging or dashboard functions



Simultaneously log data from instruments like recorders and power meters as frequently as 1 s.



Display logged data in real time as a graph. Automatically create CSV files and daily/monthly reports.



Graphically display measured values using the dashboard function. Visually identify anomalies.



Download instrument data files saved on instruments' SD cards.



Change instrument settings remotely.

| | 1 Memory HiLogger ions, basic specifications | |
|---|--|--|
| Product warranty period | 3 years | |
| Accuracy guarantee period | 1 year | |
| Maximum number of connectable modules | 4 plug-in modules + 7 wireless modules* *LR8450-01 only No more than 4 CAN modules (U8555 and/or LR8535) can be connected. | |
| Connectable modules (plug-in modules) | U8550 VOLTAGE/TEMP UNIT U8553 HIGH SPEED VOLTAGE UNIT U8551 UNIVERSAL UNIT U8554 STRAIN UNIT U8555 CAN UNIT | |
| Connectable modules (wireless modules) (LR8450-01 only) | LR8530 WIRELESS VOLTAGE/TEMP UNIT LR8531 WIRELESS UNIVERSAL UNIT LR8532 WIRELESS VOLTAGE/TEMP UNIT LR8533 WIRELESS HIGH SPEED VOLTAGE UNIT LR8534 WIRELESS STRAIN UNIT LR8535 WIRELESS CAN UNIT | |
| Internal buffer memory | Volatile memory, 256 M-words | |
| Clock functionality | Auto-calendar, automatic leap year recognition, 24-hour clock | |
| Clock precision (precision of clock dis- played by instrument as well as start/stop times) | ±1.0 s/day (at 23°C) Time can be synchronized with an NTP server to which the instrument is connected. | |
| Time axis accuracy | ±0.2 s/day (at 23°C) | |
| Backup battery service life | For clock, at least 10 years (reference value at 23°C) | |
| Operating environment | | |
| Operating temperature and humidity range | | |
| Storage temperature and humidity range | -20°C to 60°C (-4°F to 140°F), 80% RH or less (non-condensing) | |
| Dimensions | Without any modules: 272W × 145H × 43D mm (10.72"W × 5.71"H × 1.69"D) (excluding protrusions) With 2 modules: 272W × 198H × 63D mm (10.71"W × 7.8"H × 2.78"D) (excluding protrusions) With 4 modules: 272W × 252H × 63D mm (10.71"W × 9.92"H × 2.48"D) (excluding protruding parts) | |
| Mass | Approx. 1108 g (39.08 oz.) (excluding battery pack) | |
| Standards | Safety: EN61010 EMC: EN61326 Class A | |
| Vibration resistance | JIS D 1601:1995:1995 5.3 (1) Class 1: Passenger vehicles; conditions: Class A equivalent | |
| Accessories | Quick start manual, LOGGER application disc (quick start manual, instruction manual, logger utility, logger utility instruction manual, CAN editor, CAN editor instruction manual, communication instruction manual), USB cable, AC adapter Z1014, precautions concerning use of equipment that emits radio waves (LR8450-01 only) | |

| Display | |
|---|---|
| Display | 7-inch TFT color LCD (WVGA 800 × 480 dots) |
| Display resolution (with waveform display selected) | Max. 20 divisions (horizontal axis) × 10 divisions (vertical axis) (1 division = 36 dots [horizontal axis] × 36 dots [vertical axis]) |
| Display language | Japanese, English, Chinese, Korean |
| Backlight service life | Approx. 100,000 h (reference value at 23°C) |
| Backlight saver | Turns off backlight when no key is operated for a set amount of time |
| Backlight brightness | 5 levels (user-selectable) |
| Waveform background color | Dark/light (user-selectable) |

| Power sup | ply | |
|---|--------------------------|---|
| Power supply | AC adapter | Z1014 AC Adapter (12 V DC ±10%) AC Adapter rated supply voltage: 100 V to 240 V AC (assuming voltage fluctuation of ±10%) AC Adapter rated power supply frequency: 50/60 Hz |
| | Battery | LR8450 accommodates 2 batteries Z1007 Battery pack (when used with AC Adapter, AC Adapter takes priority) Li-ion, 7.2 V, 2170 mAh |
| | External power supply | 10 V to 30 V DC |
| Power consumption | Normal power consumption | Using Z1014 AC adapter or 12 V DC external power sup- ply, without Battery Pack With LCD at maximum brightness: 8.5 VA (instrument only) With LCD backlight off: 7 VA (instrument only) |
| | Maximum rated power | When using the Z1014 AC adapter 95 VA (including AC adapter) When using a 30 V DC external power supply 28 VA (while charging battery with LCD at maximum brightness) When using the Z1007 Battery pack 20 VA (with LCD at maximum brightness) |
| Continuous operating time | Battery | With one Z1007 Battery pack: approx. 2 h (reference value at 23°C) With two Z1007 Battery packs: approx. 4 h (reference value at 23°C) Conditions: with one U8551 Universal Unit connected, backlight on, voltage output off, and Z4006 connected |
| Charging Guardian Charging is available when the Z1007 Battery pack is a AC adapter is connected. Charging time: Approx. 7 h (reference value at 23°C) | | |

| Interface specifications | | |
|--------------------------|--|--|
| The LAN is | nterface and USB interface (function) cannot be used at the same time | |
| | IEEE 802.3 Ethernet, automatic 100Base-TX/1000Base-T detection | |
| interface | Auto MDI-X, DHCP, DNS supported | |
| | Connector: RJ-45 | |
| | Maximum cable length: 100 m | |
| | LAN functionality: Acquiring data and setting recording conditions with Logger | |
| | Utility | |
| | , | |

| LAN interface | LAN func- ionality: Configuring settings and controlling recording using communica- |
|-------------------------|---|
| interiace | Manually acquiring data using the FTP server: Acquiring files from a connected SD Memory Card or USB Drive |
| | Automatically sending of data via FTP (FTP client) |
| | Transferring files saved on a connected SD Memory Card or USB Drive Waveform files while measurement is in progress: binary, text, MDF, Waveform files after measurement has finished: binary, text, MDF, |
| | numerical calculation result files HTTP server function |
| | Control mode (one instrument): |
| | Displaying screen and remotely controlling instrument and modules, current measured value display, starting/stopping mea- |
| | surement, acquiring data via FTP, setting comments, updating instrument and modules |
| | Browsing mode (up to four instruments): |
| | Displaying screen, measurement status, and comments Email transmission |
| | Start trigger, stop trigger, alarm, power outage recovery, internal buffer |
| | memory full, media full, wireless unit communication interruption, bat- tery low, and periodic mail transmission. Instantaneous values can be |
| | attached for start trigger, stop trigger, alarm, and periodic transmission |
| | Emails can be sent regularly at the following intervals: 30 min., 1 h 12 h, or 1 day. |
| | NTP client function |
| | Time synchronization with an NTP server Regular synchronization intervals: 1 h, 1 day |
| Wireless | Pre-measurement synchronization function |
| LAN | EEE 802.11b/g/n Communications range: 30 m, line of sight |
| interface (LR8450-01 | Encryption function: WPA-PSK/WPA2-PSK, TKIP/AES Usable channels: 1 to 11 |
| only) | Auto-connect function: wireless LAN function can be toggled on and off. Supported modes: access point, station, wireless module connectivity |
| | Devices that can be connected in wireless module connectivity mode: wireles |
| | modules or PC/tablet You can use either a wireless module or PC/tablet with wireless connection |
| | Wireless Configuring settings and controlling recording using |
| | LAN func- communications commands itionality: Manually acquiring data using the ETP server |
| | Manually acquiring data using the FTP server Acquiring files from a connected SD Memory Card or USB Drive |
| | Automatically sending data via FTP (FTP client) |
| | Transferring files saved on a connected SD Memory Card or USB Drive HTTP server function |
| | Control mode (one instrument): |
| | Displaying screen and remotely controlling instrument and mod- |
| | ules, current measured value display, starting/stopping measure- ment, acquiring data via FTP, configuring comment, updating the |
| | instrument and modules |
| | Browsing mode (up to four instruments): Displaying screen, current measured value display, measurement |
| | status, and comments |
| | Email transmission Start trigger, stop trigger, alarm, power outage recovery, internal buffer, |
| | memory full, media full, wireless unit communication interruption, low bat- tery, and periodic mail transmission. Instantaneous values can be attache |
| | for start trigger, stop trigger, alarm, and periodic transmission. |
| | Emails can be sent regularly at the following intervals: 30 min, 1 h, 12 h, 1 day. NTP client function |
| | Time synchronization with an NTP server |
| | Regular synchronization intervals: 1 h, 1 day |
| USB | Pre-measurement synchronization function Standard compliance: USB 2.0 compliant |
| interface | Connectors: Series A receptacle × 2 |
| (host) | Guaranteed-operation options: Z4006 USB drive (16 GB) |
| | File system: FAT16, FAT32 Connectable devices: keyboard, mouse, hub (1 layer), USB drive (1 port only) |
| USB | USB standard: USB 2.0 compliant |
| interface (function) | Connector: series mini-B receptacle |
| (1011011011) | USB functionality: data acquisition, condition settings used with the Logger Utility software (bundled) |
| | Configuring settings and controlling recording using communications commands |
| | USB drive mode: transferring data from a connected SD memory card to a computer |
| SD card | Standard compliance: SD standard-compliant slot × 1 (with SD memory card/ |
| slot | SDHC memory card support) Guaranteed-operation options: Z4001 (2 GB), Z4003 (8 GB) |
| | File system: FAT16, FAT32 |
| | |

| Terminal block | | Push-button type terr | ninal block |
|------------------------------|--------|----------------------------|---|
| External Number of terminals | | 4, non-isolated (same | e GND as instrument) |
| | Input | Input voltage | 0 V to 10 V DC |
| | | Slope | Rising/falling (user-selectable) |
| | | Functionality | Choose from off, start, stop, start/stop, trigger input, event input |
| | Output | Output format | Open-drain output (with 5 V voltage output) |
| | | Maximum switching capacity | 5 V to 10 V DC, 200 mA |
| | | Functionality | Trigger output |
| Alarm output | | Output format | Open-drain output (with 5 V voltage output) |
| | | Maximum switching capacity | 5 V to 30 V DC, 200 mA |
| | | Number of terminals | 8, non-isolated (same GND as instrument) |
| Voltage o | output | Output voltage | Off, 5 V, 12 V, 24 V* (user-selectable) Supply current: max. 100 mA each *24 V output can be selected for the VOUT- PUT1 terminal only |
| | | Number of terminals | 2, non-isolated (same GND as instrument) |
| GND teri | minal | Number of terminals | 10 (common GND) |

| | | | Loading | | la := | | |
|--|---|--|---|---|---|---|--|
| Recording mode | | me* 5 me* 10 me 20 me 50 me 100 me 200 me 500 me 4 - 2 | Loading s | saved | Specifies a p | osition and then loads up to 256 mega-data-points of eved text-format data. | |
| recording interva | s, 5 s, 10 | ms*, 5 ms*, 10 ms, 20 ms, 50 ms, 100 ms, 200 ms, 500 ms, 1 s, 2 0 s, 20 s, 30 s, 1 min., 2 min., 5 min., 10 min., 20 min., 30 min., 1 h | | | | | |
| | | vailable only when using a module with data refresh intervals that include 1 ms | Calcula: Numerical | | | | |
| ata refresh inten epeat recording | | Automatically- or user-selected value per module On/off (user-selectable) | | | Up to 10 calc | ulations simultaneously | |
| pecified | _ | I time: recording time is set in days, hours, minutes, and seconds. | calcula- tions | calculations Calculation | Average value | e, peak-to-peak value, maximum value, maximum value | |
| me/continuous | Time ca | n be set up to maximum capacity of internal buffer memory. | | content | time, minimun | n value, minimum value time, integration*1, aggregation*1 on time*2, off time*2, on count*2, off count*2 | |
| | | 6 mega-data-points) pus: recording is performed once until it is stopped. | | | ^1: total, posit | tive, negative, or absolute value (user-selectable) | |
| | If maxim | num capacity of internal buffer memory is exceeded, memory | | | | values can be set for individual channels | |
| /aveform | | verwritten. 6 mega-data-points are saved in internal buffer memory. | Calculation range | | During record | ing: performed for all data during recording | |
| ecording | Scroll th | rough and view data stored in internal buffer memory. | | runge | After recording | g has stopped: | |
| | | ource data recording can be toggled on and off. | | | | erformed for all data in the internal buffer memory, or for dat in range specified by the A/B cursors (on the vertical axis) | |
| ackup of recorded da | ata None | | | Time split | | bled, or timed (user-selectable) | |
| isplay | | | | calcula- | | culations performed for all data during recording for each segment of time, starting with the start of mea- | |
| heet function | Dienlay e | heets can be switched between all channels and individual modules. | | tion | sure | ment | |
| noot function | Max. nu | mber of channels on all-channel display sheet: 120 analog/ | | | Segmentation time: set DD:HH:MM format Timed: calculations will be made at intervals of the segment time based | | |
| | CAN channel | annels, 30 waveform calculation channels, 8 pulse/logic s, 8 alarm channels | | | on the previou | usly set reference time. | |
| laveform display | | s waveform display: simultaneous display of gages and settings | | | Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 | | |
| reen | (channel | settings and display settings) | | | | h, 4 h, 6 h, 8 h, 12 h, 1 d | |
| | Simultani values c | eous display of time-axis waveforms and values: instantaneous ursor values, or numerical calculation values (user-switchable) | Waveform | Calculation | | erations among channels | |
| | Numerica | al display: simultaneous display of instantaneous values and statisti- | calculations | content | Moving average Calculated va | e, simple average, aggregation, and integration of any channel Ilues are recorded as data for calculation channels (W1 | |
| | cal value | s play: display of alarm status and alarm history | | | through W30). | (Calculations are performed at the same time as measure | |
| isplay format | | is waveform display: 1 screen | | | ment. Values o | cannot be recalculated after measurement.) | |
| , , , | | reform display: 1 screen | Triggers | ; | | | |
| -Y composite | Compos | ite up to 8 waveforms. | | | Digital compo | arison method | |
| umerical display | | decimal, or exponent (user-selectable) | | | Start, stop, o | | |
| rmat | | ecimal is selected, number of decimal places to display can values will then be rounded to set number of places). | Trigger of | | | eration performed on trigger source, interval trigger, or | |
| /aveform colors | _ ` | | 9901 01 | | external trigg | er | |
| poming in and | | 2 ms to 1 day/division | Trigger | aurooo | | s are disabled, free run | |
| ut on the | axis | | Trigger s | | | e, logic, waveform calculations, CAN (max. 100) | |
| aveform display | Vertical | Number of divisions per screen: 10 | Trigger ty | pes | Analog, pulse, | Level triggers: trigger activated by arising or falling edge at a set level | |
| | axis | Select position or upper and lower limits for each channel. | | | waveform calculations, | Window triggers: it is set by trigger level upper limit and lower limit. Trigger activated when value leaves | |
| | | (Waveform calculation channels: upper and lower limits only) | | | CAN | area or when value enters area | |
| | | When setting by position: set zoom factor and zero position. Zoom factor: 1/2 ×, 1 ×, 2 ×, 5 ×, 10 ×, 20 ×, 50 ×, 100 × | | | Logic, CAN | Trigger activated when patterns of 1/0/X match (when | |
| | | Zero position: -50% to 150% (with a zoom factor of 1 ×) | | | | "X" indicates either) | |
| /aafa aaaalii. | na Diamlass | When setting by upper/lower limit: set upper and lower limit. | Interval tr | iggers | Trigger activa | ated for set recording interval after setting days/hours/ | |
| /aveform scrollin | | can be scrolled left and right both during recording and while g is stopped (during waveform rendering only) | External | riggers | | ated by rising or falling edge at set level in external inpu | |
| onitor display | | stantaneous values and waveforms without recording data to | External | inggoro | | g/falling (user-selectable) | |
| | | (values and waveforms can be displayed while waiting for a trigger) | Trigger re | esponse | When using | plug-in units: | |
| | | s the battery remaining and the radio-wave strength, in the els, of the wirelessly connected modules | time | | response time* | val or data refresh interval, whichever is longer) × 2+1 ms+analo | |
| iopidy (Ento-100 of oil | ily) Tour Tove | is, or the wholeself connected modules | | | When using w | rireless units (LR8450-01 only): | |
| iles | | | | | | erval or data refresh time, whichever is longer) × 2 + wireless **² + analog response time*1 | |
| | | | | | *1: depends o | n filter settings (U8554 with a data refresh interval of | |
| | | ard or USB drive (user-selectable) | | | | | |
| estinations (on | ıly storage r | nedia sold by Hioki are guaranteed for operation) | | | 5 ms and I *2: when the r | ow-pass filter of 120 Hz). | |
| estinations (on lile names Up | lly storage n to 8 single- | nedia sold by Hioki are guaranteed for operation) byte characters | Trigger le | vel | 5 ms and I *2: when the r | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) | |
| estinations (on ile names Up Aut | lly storage n to 8 single- tomatic num | nedia sold by Hioki are guaranteed for operation) byte characters ibering, dating, assignment of title comment (user-selectable) | Trigger le | vel | *2: when the r | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse | |
| estinations (on ile names Up Aut uto saving War (use | to 8 single- tomatic num veform data er-selectable | nedia sold by Hioki are guaranteed for operation) byte characters beering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format | resolution | 1 | *2: when the r Analog Pulse | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) | |
| estinations (on file names Up Aut uto saving War (use Nur | to 8 single- tomatic num veform data of er-selectable merical calcula | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) [real-time saving): off, binary format, text format, or MDF format ition results (saved after recording): off or text format (user-selectable) | Trigger le resolution | 1 | *2: when the r Analog Pulse Set day/hour | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s.=10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. | |
| estinations (on le names Up Aut uto saving War (use Nur Wh | to 8 single- tomatic num veform data er-selectable merical calculaten text form | nedia sold by Hioki are guaranteed for operation) byte characters beering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format | resolution | 1 | *2: when the r Analog Pulse Set day/hour | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) | |
| estinations (on ile names Up Aut uto saving Wa (use Nur Wh file Del | It to 8 single- tomatic num veform data er-selectable merical calcul- tien text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters ibering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) hat is selected, choose whether to save all calculations in one | resolution | 1 | *2: when the r Analog Pulse Set day/hour | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s.=10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. | |
| estinations (on ile names Up Aut uto saving Wa (use Nur Wh file | It to 8 single- tomatic num veform data er-selectable merical calcul- tien text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving); off, binary format, text format, or MDF format) ation results (saved after recording); off or text format (user-selectable) hat is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or | Pre-trigge | ers | *2: when the r Analog Pulse Set day/hour Can be set d | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. | |
| estinations (on le names Up Aut uto saving Wa (use Nur Wh file Del | It to 8 single- tomatic num veform data er-selectable merical calcul- tien text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters beering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) nat is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. | Pre-trigge | ers | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 to alarm when any of the following conditions are satisfied | |
| estinations (on le names Up Aut uto saving War (use Nur Wh file Del | It to 8 single- tomatic num veform data er-selectable merical calcul- tien text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) tat is selected, choose whether to save all calculations in one sach calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file | Pre-trigge | ers | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources | |
| estinations (on lile names Up Aut uto saving War (use Nur Wh file Del sav | to 8 single- tomatic num veform data er-selectable merical calcul- ten text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) nat is selected, choose whether to save all calculations in one sach calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. | Pre-trigge | ers | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfied per action performed on alarm sources yellow burnout | |
| estinations (on lile names Up Aut uto saving War (uso Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format ation results (saved after recording): off or text format (user-selectable) at is selected, choose whether to save all calculations in one ach calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) | Pre-trigge Alarms Alarm col | ers | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on ile names Up Aut uto saving War (use Nur Wh fille Dels sav | to 8 single- tomatic num veform data er-selectable merical calcul- ten text form or to save e lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) nat is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) | Pre-trigge Alarms Alarm so | n ners nditions | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Analog, pulse | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on ile names Up Aut uto saving War (use Nur Wh fille Dels sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) tat is selected, choose whether to save all calculations in one sach calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own | Pre-trigge Alarms Alarm col | n ditions urces | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low batter • Thermocou • Wireless en Analog, pulse Alarm output module is de | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie peration performed on alarm sources (ple burnout for (LR8450-01 only)) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected | |
| estinations (on le names Up Aut uto saving War (uso Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for text format (user-selectable) at is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each recording session is saved in its own file, starting with the start of measurement. | Pre-trigge Alarms Alarm sol Wireless | n ditions urces | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR oo • Low battery • Thermocou • Wireless er Analog, pulse Alarm output module is de Off/now/3 mil | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on le names Up Aut uto saving War (uso Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati at is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled; data for each set period of time is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) | Pre-trigge Alarms Alarm sol Wireless | n ditions urces | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low batter • Thermocou • Wireless en Analog, pulse Alarm output module is de Off/now/3 mi Now: outputs 3 min: output | ow-pass filter of 120 Hz) adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. | |
| estinations (on le names Up Aut uto saving War (uso Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in | Alarms Alarm sol Wireless (LR8450- | anditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Analog, pulse Alarm output module is de Off/now/3 min Now: outputs 3 min: output minutes. | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. lo.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) is an alarm upon a communications disruption continues for | |
| estinations (on le names Up Aut uto saving War (uso Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati as selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each set period of time is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. | Pre-trigge Alarms Alarm sol Wireless | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Analog, pulse Alarm output module is de Off/now/3 min Now: output 3 min: output minutes. Alarm output | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. | |
| estinations (on le names Up Aut Into saving War (use Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati as selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. | Alarm sol Wireless (LR8450-Low remabattery lift Thermoon | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low batter • Thermocou • Wireless en Analog, pulse Alarm output module is de Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie veration performed on alarm sources ple burnout ror (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) an alarm upon a communication disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the ra wireless module. when low remaining battery life is detected for the ra wireless module. | |
| estinations (on le names Up Aut Into saving War (use Nur Wh fille Del sav | to 8 single- tomatic num veform data er-selectable enerical calcul- tien text form or to save er- lete and | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati as selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each set period of time is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. | Alarm sol Wireless (LR8450-Low remabattery lift Thermochurnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en • Analog, pulse Alarm output module is de Off/now/3 min Now: outputs 3 min: output minutes. | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. lo.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) san alarm upon a communications disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the ra wireless module. when a thermocouple burnout occurs (when Tc burnout ng is enabled) | |
| estinations (on le names Up Aut uto saving Uuto saving Uuto saving Uuto saving Uuto saving Evite Uuto saving Uuto saving Evite Uuto saving Uuto | Ily storage n to 8 single- tomatic num veform data i er-selectable merical calculu- men text form or to save e lete and ve der Splitting e splitting ernal media | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati as selected, choose whether to save all calculations in one sech calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by | Alarm sol Wireless (LR8450-Low remabattery lift Thermoon | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou AND/OR op Low battery Thermocou Wireless en Analog, pulse Alarm output module is de off/now/3 min output instrument or Alarm output instrument or Alarm output Alarm output detection settii Analog, | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. O.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on le names lup Aut uto saving lus luto saving lu | lly storage n to 8 single- tomatic num veform data er-selectable merical calculien text form or to save e lete and re der Splitting e splitting ernal media ct (SD memory | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) faition results (saved after recording): off or text format (user-selectable) nat is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Seglit time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d | Alarm sol Wireless (LR8450-Low remabattery lift Thermochurnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will out AND/OR Low battery Thermocou Wireless en Analog, pulse Alarm output module is de Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output Alarm output detection settin Analog, pulse, waveform | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. O.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on lile names Up Aut uto saving (us Nur Wh file Del sav | lly storage n to 8 single- tomatic nunr veform data er-selectable merical calculi merical calculi men text form or to save e lete and der Splitting e splitting ernal media ct (SD memory or USB drive) | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output detection settii Analog, pulse, waveform calculation, | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie erration performed on alarm sources (ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) as an alarm upon a communications disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the a wireless module. when a thermocouple burnout occurs (when Tc burnout ng is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area o | |
| estinations (on lile names Up Aut uto saving (ust Vul Vul | lly storage n to 8 single- tomatic num veform data er-selectable merical calcul- men text form or to save e- lete and er- splitting explitting explitting ernal media ct (SD memory or USB drive) ta protecy- ta | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) atia is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will out AND/OR Low battery Thermocou Wireless en Analog, pulse Alarm output module is de Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output Alarm output detection settin Analog, pulse, waveform | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. O.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on lie names Up Aut uto saving Uuto savin | lly storage n to 8 single- tomatic num veform data er-selectable merical calcul- men text form or to save e- lete and er- splitting explitting explitting ernal media ct (SD memory or USB drive) ta protecy- ta | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output detection settii Analog, pulse, waveform calculation, | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout ror (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) an alarm upon a communication disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the a wireless module. when a thermocouple burnout occurs (when Tc burnout in is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area of when value enters area Slope: set level and time. | |
| estinations (on le names Up Aut uto saving (us Vu Vu Vu Vu Vu Vu Vu | lly storage n to 8 single- tomatic nun veform data er-selectable merical calcul- men text form or to save e lete and der Splitting e splitting ernal media ct (SD memory or USB drive) ta protec- n | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati is selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Seplit time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- surement operation will continue). | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output detection settii Analog, pulse, waveform calculation, | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. O.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) S/minutes/seconds. uring real-time saving. | |
| estinations (on lile names and lile | lly storage n to 8 single- tomatic num veform data in er-selectable merical calculi ener selectable merical calculi ener text form or to save e lete and der Splitting ernal media ct (SD memory or USB drive) ta protec- ta is saved doose either | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- surement operation will continue). | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Off/now/3 min Now: outputs 3 min: output minutes. Alarm output detection settin Analog, pulse, waveform calculation, CAN | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. = 10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) is an alarm upon a communication disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the a wireless module. when a thermocouple burnout occurs (when Tc burnout ng is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area o when value enters area Slope: set level and time. The system will output an alarm when the rate of change (level per unit time) continues to exceed the specified change rate during the set time interval. | |
| estinations (on lile names Up Aut uto saving Uuto saving Uuto saving Uuto saving Uuto saving Uuto saving Extended Extended Extended Uuto saving Uuto | lly storage n to 8 single- tomatic nunr veform data in er-selectable merical calculi der Splitting explitting explitting explitting explitting explitting ta is saved in ta is saved in oose either en SAVE kee | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- surement operation will continue). when SAVE key is pressed. | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Wireless en Off/now/3 min Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output detection settii Analog, pulse, waveform calculation, | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) an alarm upon a communication disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the ra wireless module. when a thermocouple burnout occurs (when Tc burnouting is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area of when value enters area Slope: set level and time. The system will output an alarm when the rate of change (level per unit time) continues to exceed the specified change rate during the set time interval. System will output an alarm when patterns of 1/0/X | |
| estinations (on lile names Quantity Quan | lly storage n to 8 single- tomatic nun veform data a er-selectable nerical calcul- nerical calcul- nerical calcul- nerical calcul- nerical calcul- der Splitting explitting explitting explitting explitting ta splitting ta protec- ta is saved ta is saved ta saved ta saved ta saved ta save | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) ation results (saved after recording): off or text format (user-selectable) ati as selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled: data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Seplit time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- surement operation will continue). when SAVE key is pressed. Off, or a value from 1/2 to 1/100,000 (user-selectable) | Alarmsol Wireless (LR8450-Low remabattery lift Thermoc burnout Types of | nditions urces error 01 only) aining e buple alarms | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low battery • Thermocou • Mireless en Analog, pulse Alarm output module is de off/now/3 mi Now: outputs 3 min: output minutes. Alarm output instrument or Alarm output detection settil Analog, pulse, waveform calculation, CAN Logic | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. lo.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfier everation performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless teeted n (user-selectable) san alarm upon a communications disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the ra wireless module. when a thermocouple burnout occurs (when Tc burnouting is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area of when value enters area Slope: set level and time. The system will output an alarm when the rate of change (level per unit time) continues to exceed the specified change rate during the set time interval. System will output an alarm when patterns of 1/0/X match (where "X" indicates either) | |
| estinations (on le names Aut luto saving saving luto saving | lly storage n to 8 single- tomatic nunr veform data in er-selectable merical calculi der Splitting explitting explitting explitting explitting explitting ta is saved in ta is saved in oose either en SAVE kee | nedia sold by Hioki are guaranteed for operation) byte characters bering, dating, assignment of title comment (user-selectable) (real-time saving): off, binary format, text format, or MDF format) for its selected, choose whether to save all calculations in one each calculation in its own file. On/off (user-selectable) Off: system will stop saving data when SD memory card or USB drive starts to run out of available space. On: when SD memory card or USB drive starts to run out of available space, system will delete oldest waveform file (binary, text, or MDF) and then continue saving data. No segmentation, 1 day, 1 week, or 1 month (user-selectable) Disabled, enabled, or timed (user-selectable) Disabled data for each recording session is saved in its own file. Enabled: data for each set period of time is saved in its own file, starting with the start of measurement. Segmentation time: day, hour, or minute (user-selectable) Timed: data will be segmented at intervals of the segment time based on the previously set reference time and saved in separate files. Reference time: set in hours and minutes. Split time: 1 min, 2 min, 5 min, 10 min, 15 min, 20 min, 30 min, 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h, 1 d External media can be ejected during real-time saving by activating a button on the screen and confirming a message. Yes (valid only when Z1007 Battery Pack is installed) If remaining battery life declines during real-time saving, system will close file and stop saving data (although mea- surement operation will continue). when SAVE key is pressed. | Alarm sol Wireless (LR8450-Low remabattery lift Thermociburnout | nditions urces error 01 only) aining e buple alarms | *2: when the r Analog Pulse Set day/hour Can be set d Set separate System will ou • AND/OR op • Low batter • Thermocou • Wireless en Analog, pulse Alarm output module is de Off/now/3 min · noutput s 3 min: output minutes. Alarm output detection settin Analog, pulse, waveform calculation, CAN Logic Apply a filter sources. Set | ow-pass filter of 120 Hz). adio-wave state is in good condition, 1s. 0.1% f.s. (f.s. =10 divisions) Count = 1c, rotational speed = 1/n (where n = pulse count per rotation setting) s/minutes/seconds. uring real-time saving. ly for ALM1 to ALM8 tput an alarm when any of the following conditions are satisfie teration performed on alarm sources ple burnout for (LR8450-01 only) e, logic, waveform calculations, CAN (max. 100) when a wireless communication error with a wireless tected in (user-selectable) an alarm upon a communication disruption is an alarm if a communication disruption continues for when low remaining battery life is detected for the ra wireless module. when a thermocouple burnout occurs (when Tc burnouting is enabled) Level: system will output an alarm following a rising or falling edge at set level Window: set upper limit and lower limit System will output an alarm when value leaves area of when value enters area Slope: set level and time. The system will output an alarm when the rate of change (level per unit time) continues to exceed the specified change rate during the set time interval. System will output an alarm when patterns of 1/0/X | |



| Alarm retention | On/off (user-selectable) Clear alarms: when alarm retention is on, alarms will be cleared without stopping recording. |
|----------------------------|---|
| Alarm tone | On/off (user-selectable) |
| Alarm output response time | When using plug-in units: (recording interval or data refresh interval, whichever is longer) × 2+1 ms + analog response time* When using wireless units (LR8450-01 only): (recording interval or data refresh interval, whichever is longer) × 2 + wireless response time*2 + analog response time*1 + 1: depending on filter settings (U8554 with a data refresh interval of 5 ms and low-pass filter of 120 Hz). |
| | *2: when the radio-wave state is in good condition, 1s. |

| | "Z: when the ra | dio-wave state is in good condition, 1s. | | |
|---|--|--|--|--|
| Other functionality | | | | |
| Even mark function Number of inputs Up to 1000 inputs per measurement | | | | |
| | | | | |
| Waveform search function | | ns and display target location in center of waveform screen. | | |
| Turiction | Search conditions | Search by choosing level, window, maximum value, minimum value, local maximum value, or local minimum value. | | |
| | Search range | All data in internal buffer memory or data between A/B cursors (on vertical axis) | | |
| | Search targets | Analog, pulse, logic, waveform calculations | | |
| Jump function | Specify event n display position | nark, A/B cursor position, trigger point, or waveform to display that section in center of waveform screen. | | |
| Cursor | Cursor display | All channels or specified channels (user-selectable) | | |
| measurement function | Cursor movement | A, B, or simultaneous (user-selectable) | | |
| Turiolion | Types of cursors | Vertical or horizontal (user-selectable) | | |
| Scaling function | Scaling settings | s can be configured separately for each channel | | |
| Comment entry function | Enter titles and | channel-specific comments | | |
| Start state retention function | On/off (user-se | lectable) | | |
| Auto-start function | On/off (user-se | lectable) | | |
| Functionality for saving setting conditions | Up to five group internal backup | os of setting conditions can be saved in the instrument's memory. | | |
| Auto setup function | | ons saved in the instrument's memory or on an SD r a USB drive can be automatically loaded when the owered on. | | |
| | If there are setting conditions stored in the instrument's memory as well as on an SD memory card and a USB drive, setting conditions have the following precedence: | | | |
| | instrument's me | emory, SD memory card, and USB drive. | | |
| Prevention of inadvertent START/ STOP key operation | ing if user wishe | STOP key is pressed, system will display a message asks to start or stop measurement. | | |
| | | essage: enable/disable (user-selectable) | | |
| Key lock function | Disables opera | | | |
| Beep tone | On/off (user-se | | | |
| Self-check function | | s, LCD, ROM/RAM, LAN, media, and modules. | | |
| Display of horizontal axis (time values) | Horizontal axis (time value) display can be set to time, date, or data point count. These are reflected in saved text data. | | | |
| Measurement start/ stop time specifica- tion function | Set measurement start and stop conditions. Specified time: set start time and stop time (year, month, day, hour, and minute) | | | |
| Configuration navigation (quick set) function | nectivity trouble | le registration guide (LR8450-01 only), wireless con- eshooting guide (LR8450-01 only), connection diagram gage, external terminals), loading setting conditions | | |
| Power supply frequency filter function | 50/60 Hz select | tion | | |

| Input | |
|-----------------------|--|
| Pulse/logic inpu | |
| Number of channels | 8 channels (common GND, non-isolated) Exclusive setting for pulse/logic input for individual channels |
| Terminal block | Push-button type terminal block |
| Adaptive input format | Non-voltage contact, open collector (PNP open collector requires external resistor), or voltage input |
| Maximum input voltage | 0 V to 42 V DC |
| Input resistance | 1.1 MΩ ±5% |
| Detection level | 2 levels (user-selectable) High: 1.0 V or greater; low: 0 to 0.5 V High: 4.0 V or greater; low: 0 to 1.5 V |
| Dollar Samuel | |

Pulse input

Measurement range, resolution Measurement target Range

| | Count | | 1000 mega-pulse f.s. | 1 pulse | 0 to 1000 M pulse | | |
|-----|---------------------------|---|---|-------------------|------------------------|--|--|
| | Rotational speed | | 5000/n (r/s) f.s. | 1/n (r/s) | 0 to 5000/n (r/s) | | |
| | | | 300,000/n (r/min) f.s. | 1/n (r/min) | 0 to 300,000/n (r/min) | | |
| | | | n: number of pulses per rotation (1 to 1000) | | | | |
| | lse input riod | ut With filter off: 200 µs or greater (100 µs or greater during high and low int With filter on: 100 ms or greater (50 ms or greater during high and low int | | | | | |
| Slo | ре | Set risir | ng/falling for each chan | nel. | | | |
| Mea | Measurement mode Integrat | | ion (addition, instantaneous), rotational speed | | | | |
| Int | egration | Addition: counts number of pulses input from start of measurement. Instantaneous: counts number of pulses input within each recording interval (integrated value is reset for each rotational interval). | | in each recording | | | |
| | tational eed | r/s: counts number of input pulses during 1 s and calculates rotational speed. r/min: counts number of input pulses during 1 min and calculates rotational speed. | | | | | |
| | noothing action | Select value from 1 s to 60 s (valid only when set to rotational speed and r/min). | | | | | |

| Chatter pre- vention filter | Set to on/off for each channel |
|--------------------------------|--|
| Logic input | |
| Measure- ment mode | Records 1 or 0 for each recording interval |

Software Logger Utility specifications U8555 CAN unit and LR8535 wireless CAN unit are not support

| U8555 CAN unit and | LR8535 wireless CAN unit are not supported. |
|---------------------------|--|
| Operating Environment | Windows7 (32/64 bit) Windows8 (32/64 bit) Windows10 (32/64 bit) |
| Overview | Control PC-connected logger to receive, display, and save measured waveform data sequentially. (Total recording samples is maximum 10 million data. Data exceeding this number will be segmented into separate measurement files while recording continues.) *Real-time measurement on the LR8450, LR8450-01 is possible with a recording interval of 10 ms or more. |
| Function | Controllable loggers: 5 Data Collection System: 1 system Display Format: • Waveforms (split time-axis display is possible) • Numerical values (logging): numerical display can be enlarged • Alarms Above items can be displayed simultaneously Numerical value monitor Display: display in a separate window is possible. Scroll: waveforms can be scrolled during measurement. |
| Data Collection | Settings: data collection settings of logger modlues can be configured Monitor function can be checked before measurement. Save: save settings from multiple devices supporting real-time measurement (LUS format) and measurement data (LUW format) as one file. Data save format: real-time data collection file (LUW format), transfer data in real-time or non-real-time to Microsoft Excel®, Excel® template can be specified Event mark: recording during measurement is possible |
| Waveform Display | Supported files: waveform data file (LUW format, MEM format) Display format: waveforms (split time-axis display available), simulta- neous display of numerical values (logging) is available Maximum number of channels: 2,035 channels (measured) + 60 channels (waveform calculation) Waveform display sheets: waveform of each channel can be dis- played on any of the ten sheets Scroll: available Event mark recording: available Cursors: cursors A and B can be used to display voltage values at cursor positions. Screen capture: screen capture of waveform display is available |
| Data Conversion | Applicable files: waveform data file (LUW format, MEM format) Conversion section: all data, specified section Conversion format: CSV format (comma delimited, space delimited, tab delimited), transfer to Excel® sheet, LR5000 format (hrp2,hrp) Data thinning: simple thinning with any thinning number |
| Waveform Calculation | Calculation items: arithmetic operations Number of calculation channel: 60 channels |
| Numerical Calculations | Applicable data: waveform data file (LUW format, MEM format), real-time measurement data, waveform calculation Calculation items: average value, peak value, maximum value, time to maximum value, minimum value, time to minimum value, on time, off time, on count, off count, standard deviation, aggregation, area value, and integration and save to file |
| Search | Applicable data: real-time data collection file (LUW format), main unit measurement file (MEM format), waveform calculation data Search mode: event mark, date and time, maximum position, minimum position, local maximum position, local minimum position, alarm position, level, window, and variation |
| Print | Applicable printer: printer compatible to the OS in use Applicable data: waveform data file (LUW format, MEM format) Print format: waveform image, report print, list print (channel settings, event, cursor value) Print area: all area, specified area by A-B cursor Print preview: available |

Option specifications (sold separately)

Plug-in units: U8550, U8551, U8552, U8553, U8554, U8555 Shared specifications

| Host model | LR8450/LR8450-01 MEMORY HILOGGER |
|--|---|
| Operating temperature and humidity range | -10°C to 50°C, 80% RH or less (non-condensing) |
| Storage temperature and humidity range | -20°C to 60°C, 80% RH or less (non-condensing) |
| Vibration resistance | JIS D 1601:1995 5.3 (1), Class 1A (passenger vehicle) equivalent |
| Accessories | User manual, mounting screw × 2, wiring confirmation label (U8554 only) |

Wireless units: LR8530, LR8531, LR8532, LR8533, LR8534, LR8535 **Shared specifications**

| onarea specifications | | | |
|--|---|--|--|
| Host model | LR8450-01 MEMORY HILOGGER | | |
| Control communications method | Connect wirelessly via Z3230 WIRELESS LAN ADAPTER (included) | | |
| Communications buffer memory | 4 Mword (volatile memory) Saves data in the event of a communications error. Data is resent when communications are restored. | | |
| Operating temperature and humidity range | -20°C to 55°C, 80% RH (non-condensing) (charging temperature range: 5°C to 35°C) | | |
| Storage temperature and humidity range | -20°C to 60°C, 80% RH (non-condensing) | | |
| Vibration resistance | JIS D 1601:1995 5.3 (1), Class 1A (passenger vehicle) equivalent | | |
| LED display | Wireless connection and measurement status, error status, AC | | |

Maximum resolution Measurable range

| Auto-connect function | Available |
|-------------------------------|--|
| Accessories | Z3230 WIRELESS LAN ADAPTER, user manual, Z1008 AC ADAPTER, mounting plate, M3×4 screw × 2 (for use with mounting plate), wiring confirmation label (LR8534 only) |
| Z3230 wireless specifications | Wireless LAN (IEEE 802.11b/g/n) Range: 30 m (line of sight) Encryption: WPA-PSK/WPA2-PSK, TKIP/AES Channels: channel 1 to 11 |

| Power supply speci | rications |
|---------------------------|---|
| AC adapter | Z1008 AC ADAPTER (12 V DC, standard accessory) Rated supply voltage: 100 to 240 V AC Rated power supply frequency: 50/60 Hz Maximum rated power: 25 VA (including AC adapter) Normal power consumption (instrument only, without battery pack) LR8530, LR8532, LR8533: 2.5 VA LR8531: 3.0 VA LR8534, LR8535: 4.0 VA |
| Battery | Z1007 BATTERY PACK (when using AC adapter, AC adapter takes precedence.) Rated supply voltage: 7.2 V DC (Li-ion 2170 mAh) Maximum rated power LR8530, LR8532: 1.5 VA LR8531, LR8533: 2.0 VA LR8534, LR8533: 3.5 VA |
| External power supply | Rated supply voltage: 10 to 30 V DC Maximum rated power: 8 VA (30 V DC external power supply, while charging battery) Normal power consumption (12 V DC external power supply, without battery pack) LR8530, LR8532, LR8533: 2.5 VA LR8531, LR8535, LR8533: 4.0 VA |
| Continuous operating time | When using Z1007 BATTERY PACK (all data refresh rates, good communications state, 23°C reference values) LR8530, LR8532, LR8533: approx. 9 h LR8531: approx. 7 h LR8534: approx. 5 h LR8535: approx. 10 h (approx. 5 h when using two non-contact CAN sensors) |
| Charging function | When Z1007 BATTERY PACK installed while connected to AC adapter or 10 to 30 V DC external power supply Charging time: approx. 7 h (23°C reference value) |

VOLTAGE/TEMP UNIT U8550 UNIVERSAL UNIT U8551 VOLTAGE/TEMP UNIT U8552

WIRELESS VOLTAGE/TEMP UNIT LR8530 WIRELESS UNIVERSAL UNIT LR8531 WIRELESS VOLTAGE/TEMP UNIT LR8532

(Accuracy guaranteed for 1 year)

General specifications

| General specificati | ons |
|--|--|
| Number of input channels | U8550: 15 (set voltage, thermocouple, or humidity for each channel) LR8530: 15 (set voltage or thermocouple for each channel) U8551, LR8531: 15 (set voltage, thermocouple, humidity, RTD, or resistor for each channel) U8552: 30 (set voltage, thermocouple, or humidity for each channel) LR8532: 30 (set voltage or thermocouple for each channel) |
| Input terminals | U8550, LR8530: M3 screw-type terminal block (2 terminals per channel) U8551, LR8531: push-button type terminal block (4 terminals per channel) U8552, LR8532: push-button type terminal block (2 terminals per channel) |
| Output terminals | M3 screw-type terminal block (1 output, 2 terminals, Z2000 HUMIDITY SENSOR power supply [can power up to 15 Z2000 HUMIDITY SENSOR])(LR8531 only) |
| Measurement target | U8550, U8552: voltage, temperature (thermocouples), humidity LR8530, LR8531: voltage, temperature (thermocouples) U8551, LR8531: voltage, temperature (thermocouples), humidity, temperature (RTD), resistor |
| Input type | Scanning by semiconductor relays All channels isolated (not isolated when measuring with RTD, resistance or humidity) |
| A/D resolution | 16 bits |
| Maximum input voltage | ±100 V DC (maximum voltage between input terminals without causing damage) |
| Maximum channel- to-channel voltage | 300 V DC (maximum voltage that can be applied between each input channel without causing damage; not isolated when measuring with RTD, resistance or humidity) *Channels are isolated from each other with semiconductor relays. Never allow a voltage exceeding the product specifications, for example a lightning surge, to be applied across channels as doing so may cause the semiconductor relays to short. |
| Maximum rated terminal-to-ground voltage | 300 V AC, DC (maximum voltage that can be applied between input channels and the instrument or its chassis, or between units without causing damage; humidity measurement not isolated) |
| Input resistance | 10 M Ω or greater (10 mV f.s. to 2 V f.s. voltage ranges, thermocouple ranges, RTD and resistor ranges) 1 M Ω ±5% (10 V f.s. to 100 V f.s. voltage range, 1-5 V f.s. voltage range, humidity measurement) |
| Allowable signal source resistance | 1 k Ω or less |
| Data refresh interval | 10 ms to 10 s (10 selectable levels) |
| Digital filters | Digital filter cutoff frequency is automatically set to data refresh interval, burnout setting, and power supply frequency filter setting |
| Dimensions | U8550, U8551, U8552: approx. 134W × 70H × 63D mm (5.28"W × 2.76"H × 2.48"D) LR8530, LR8531, LR8532: approx. 154W × 106H × 57D mm (6.06"W × 4.17"H × 2.24"D) |
| Mass | U8550: approx. 345 g (12.2 oz.), U8551: approx. 318 g (11.2 oz.), U8552: approx. 319 g (11.3 oz.), LR8530: approx. 423 g (14.9 oz.), LR8531: approx. 386 g (13.6 oz.), LR8532: approx. 388 g (13.7 oz.), (including Z3230 WIRELESS LAN ADAPTER) |
| Accessories | Instruction Manual, installation screws × 2 |
| | |

Analog input specifications (23 \pm 5°C [73 \pm 9°F], 80% rh or less, after 30 minutes of warm-up and zero-adjustment, with the 50/60 Hz cut-off setting selected)

| Range | Maximum resolution | Measurable range | Measurement accuracy |
|-------------|--------------------|-------------------|----------------------|
| 10 mV f.s. | 500 nV | -10 mV to 10 mV | ±10 μV |
| 20 mV f.s. | 1 μV | -20 mV to 20 mV | ±20 μV |
| 100 mV f.s. | 5 μV | -100 mV to 100 mV | ±50 μV |
| 200 mV f.s. | 10 μV | -200 mV to 200 mV | ±100 μV |
| 1 V f.s. | 50 μV | -1 V to 1 V | ±500 μV |
| 2 V f.s. | 100 μV | -2 V to 2 V | ±1 mV |
| 10 V f.s. | 500 μV | -10 V to 10 V | ±5 mV |
| 20 V f.s. | 1 mV | -20 V to 20 V | ±10 mV |
| 100 V f.s. | 5 mV | -100 V to 100 V | ±50 mV |
| 1-5 V f.s. | 500 μV | 1 V to 5 V | ±5 mV |

Temperature

| ype | Range | Measurable range | Maximum resolution | Measurement accura | |
|-----|--------------|------------------|----------------------------|--|--|
| K | 100°C f.s. | 0.01°C | -100°C to less than 0°C | ±0.7 | |
| | | | 0°C to 100°C | ±0.5 | |
| | 500°C f.s. | 0.05°C | -200°C to less than -100°C | ±1.4 | |
| | | | -100°C to less than 0°C | ±0.7 | |
| | | | 0°C to 500°C | ±0.5 | |
| | 2,000°C f.s. | 0.1°C | -200°C to less than -100°C | ±1.4 | |
| | | | -100°C to less than 0°C | ±0.7 | |
| | | | 0°C to less than 500°C | ±0.5 | |
| | | | 500°C to 1,350°C | ±0.7 | |
| J | 100°C f.s. | 0.01°C | -100°C to less than 0°C | 10°C ±0.7° 10°C ±0.7° 10°C ±0.9° 10°C ±0.9° 10°C ±0.9° 10°C ±0.9° 10°C ±0.9° 10°C ±0.9° 10°C ±0.7° 10°C ±0.7° 10°C ±0.5° | |
| | | | 0°C to 100°C | ±0.5 | |
| | 500°C f.s. | 0.05°C | -200°C to less than -100°C | ±0.9 | |
| | | | -100°C to less than 0°C | | |
| | | | 0°C to 500°C | ±0.5 | |
| | 2,000°C f.s. | 0.1°C | -200°C to less than -100°C | | |
| | _,,,,,,, | | -100°C to less than 0°C | | |
| | | | 0°C to 1,200°C | | |
| E | 100°C f.s. | 0.01°C | -100°C to less than 0°C | | |
| _ | 100 0 1.0. | 0.01 0 | 0°C to 100°C | | |
| | 500°C f.s. | 0.05°C | -200°C to less than -100°C | | |
| | 300 0 1.3. | 0.05 0 | -100°C to less than 0°C | | |
| | | | 0°C to 500°C | | |
| | 2.000°C f a | 0.1°C | -200°C to less than -100°C | | |
| | 2,000°C f.s. | 0.10 | | | |
| | | | -100°C to less than 0°C | | |
| _ | 40000 (| 2 2 4 0 2 | 0°C to 1,000°C | | |
| Т | 100°C f.s. | 0.01°C | -100°C to less than 0°C | | |
| | | | 0°C to 100°C | | |
| | 500°C f.s. | 0.05°C | -200°C to less than -100°C | | |
| | | | -100°C to less than 0°C | | |
| | | | 0°C to 400°C | | |
| | 2000°C f.s. | 0.1°C | -200°C to less than -100°C | | |
| | | | -100°C to less than 0°C | | |
| | | | 0°C to 400°C | ±0.5 | |
| N | 100°C f.s. | 0.01°C | -100°C to less than 0°C | ±1.1 | |
| | | | 0°C to 100°C | ±0.9 | |
| | 500°C f.s. | 0.05°C | -200°C to less than -100°C | ±2.1 | |
| | | | -100°C to less than 0°C | ±1.1 | |
| | | | 0°C to 500°C | ±0.9 | |
| | 2,000°C f.s. | 0.1°C | -200°C to less than -100°C | ±2.1 | |
| | | | -100°C to less than 0°C | ±1.1 | |
| | | | 0°C to 1,300°C | ±0.9 | |
| R | 100°C f.s. | 0.01°C | 0°C to 100°C | ±4.4 | |
| | 500°C f.s. | 0.05°C | 0°C to less than 100°C | ±4.4 | |
| | | | 100°C to less than 300°C | ±2.9 | |
| | | | 300°C to 500°C | ±2.2 | |
| | 2000°C f.s. | 0.1°C | 0°C to less than 100°C | ±4.4 | |
| | | " " | 100°C to less than 300°C | ±2.9 | |
| | | | 300°C to 1,700°C | ±2.2 | |
| S | 100°C f.s. | 0.01°C | 0°C to 100°C | ±4.4 | |
| - | 500°C f.s. | 0.05°C | 0°C to less than 100°C | ±4.4 | |
| | 000 0 1.3. | 0.00 0 | 100°C to less than 300°C | ±2.9 | |
| | | | 300°C to 500°C | ±2.3 | |
| | 2,000°C f.s. | 0.1°C | 0°C to less than 100°C | ±4.4 | |
| | 2,000 C 1.S. | 0.10 | | | |
| | | | 100°C to less than 300°C | ±2.9 | |
| | 0.00000.0 | 0.400 | 300°C to 1,700°C | ±2.2 | |
| В | 2,000°C f.s. | 0.1°C | 400°C to less than 600°C | ±5.4 | |
| | | | 600°C to less than 1,000°C | ±3.7 | |
| | | | 1,000°C to 1,800°C | ±2.4 | |
| С | 100°C f.s. | 0.01°C | 0°C to 100°C | ±1.7 | |
| | 500°C f.s. | 0.05°C | 0°C to 500°C | ±1.7 | |
| | 2,000°C f.s. | 0.1°C | 0°C to 2,000°C | ±1.7 | |

| Reference junction compensation: internal/external | At INT RJC, total accuracy = add ±0.5°C |
|--|--|
| detection: on/off | System will check for burnout at each data refresh interval during thermocouple measurement. (not available with 10 ms interval) |

U8550, U8551, U8552, LR8531 only input specifications **Humidity** (use HUMIDITY SENSOR Z2000)

HUMIDITY SENSOR Z2000

Operating temperature and humidity range:

0°C to 50°C (32°F to 122°F), 100% RH or less (non-condensing)


| Range | Maximum resolution | Measurable range |
|--------------|--------------------|---------------------|
| 100% rh f.s. | 0.1% rh | 5.0% rh to 95.0% rh |

HUMIDITY SENSOR Z2000 accuracy

If the humidity value lies on a boundary line below, the better of the two regions' mea-

surement accuracy values applies.



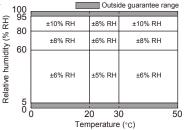

U8551, LR8531 only input specifications

Temperature RTD Connection: 3-wire/4-wire, measurement current: 1mA (Pt100, Jpt100), 0.1 mA (Pt1000) Standards: Pt100, Pt1000: JIS C1604-2013, IEC751 JPt100: JIS C1604-1989

| Туре | Range | Maximum resolution | Measurable range | Measurement accuracy |
|--------|--------------|--------------------|------------------|----------------------|
| | 100°C f.s. | 0.01°C | -100°C to 100°C | ±0.5°C |
| Pt100 | 500°C f.s. | 0.05°C | -200°C to 500°C | ±0.7°C |
| | 2,000°C f.s. | 0.1°C | -200°C to 800°C | ±0.9°C |
| | 100°C f.s. | 0.01°C | -100°C to 100°C | ±0.5°C |
| JPt100 | 500°C f.s. | 0.05°C | -200°C to 500°C | ±0.7°C |
| | 2,000°C f.s. | 0.1°C | -200°C to 500°C | ±0.9°C |
| | 100°C f.s. | 0.01°C | -100°C to 100°C | ±0.5°C |
| Pt1000 | 500°C f.s. | 0.05°C | -200°C to 500°C | ±0.7°C |
| | 2,000°C f.s. | 0.1°C | -200°C to 800°C | ±0.9°C |

^{*}When using Pt1000, data refresh intervals of 10ms, 20m, and 50ms are not available.

Connection: 4-wire; measurement current is 1 mA

| Range | Maximum resolution | Measurable range | Measurement accuracy |
|------------|--------------------|------------------|----------------------|
| 10 Ω f.s. | 0.5 mΩ | 0 Ω to 10 Ω | ±10 mΩ |
| 20 Ω f.s. | 1 mΩ | 0 Ω to 20 Ω | ±20 mΩ |
| 100 Ω f.s. | 5 mΩ | 0 Ω to 100 Ω | ±100 mΩ |
| 200 Ω f.s. | 10 mΩ | 0 Ω to 200 Ω | ±200 mΩ |

| I HIGH SPEED VOLTAGE LINIT | WIRELESS HIGH SPEED VOLTAGE UNIT |
|----------------------------|----------------------------------|
| | |
| U8553 | LR8531 |
| 00000 | I LN033 I |

(Accuracy guaranteed for 1 year)

General specifications

| Number of input channels | 5 (voltage only) |
|---|--|
| Input terminals | M3 screw-type terminal block (2 terminals per channel), outfitted with terminal block cover |
| Measurement target | Voltage |
| Input type | Scanning by semiconductor relays, all channels isolated |
| A/D resolution | 16 bits |
| Maximum input voltage | ±100 V DC (maximum voltage between input terminals without causing damage) |
| Maximum channel-to- channel voltage | 300 V DC (maximum voltage between input channels without causing damage) |
| | *Channels are isolated from each other with semiconductor relays. Never allow a voltage exceeding the product specifications, for example a lightning surge, to be applied across channels as doing so may cause the semiconductor relays to short. |
| Maximum rated termi- nal-to-ground voltage | 300 V AC, DC (maximum voltage between input channel and chassis, or between modules, without causing damage) |
| Input resistance | 1 MΩ ±5% |
| Allowable signal source resistance | 100 Ω or less |
| Data refresh interval | 1 ms to 10 s (13 selectable levels) |
| Digital filters | Digital filter cutoff frequency is automatically set to data refresh interval, burnout detection setting, and power supply frequency filter setting. |
| Dimensions | U8553: approx. 134W×70H×63D mm (5.28"W×2.76"H×2.48"D) LR8531: approx. 154W×106H×57D mm (6.06"W×4.17"H×2.24"D) |
| Mass | U8553: approx. 237g (8.4 oz.) LR8531: approx. 370g (13.1 oz.) (including Z3230 WIRELESS LAN ADAPTER) |

Analog input specifications (23 \pm 5°C/73 \pm 9°F, 80% rh or less, after 30 minutes of warm-up and zero-adjustment, with the 50/60 Hz cut-off setting selected)

| Measurement target | Range | Maximum resolution | Measurable range | Measurement accuracy |
|--------------------|-------------|--------------------|-------------------|----------------------|
| Voltage | 100 mV f.s. | 5 μV | -100 mV to 100 mV | ±100 µV |
| | 200 mV f.s. | 10 μV | -200 mV to 200 mV | ±200 μV |
| | 1 V f.s. | 50 μV | -1 V to 1 V | ±1 mV |
| | 2 V f.s. | 100 μV | -2 V to 2 V | ±2 mV |
| | 10 V f.s. | 500 μV | -10 V to 10 V | ±10 mV |
| | 20 V f.s. | 1 mV | -20 V to 20 V | ±20 mV |
| | 100 V f.s. | 5 mV | -100 V to 100 V | ±100 mV |
| | 1-5 V f.s. | 500 μV | 1 V to 5 V | ±10 mV |

| STRAIN UNIT U | J8554 | WIRELESS STRAIN UNIT LR8534 | |
|--|---|--|--|
| (Accuracy guarant | | year) | |
| General specifica | | | |
| Number of input channels | 5 (set voltage or strain for each channel) | | |
| Input terminals | | Push-button type terminal block (5 terminals per channel), outfitted with terminal block cover, set DIP switches according to measurement target | |
| Measurement | Voltage | | |
| target | Strain | Strain gage-type converter Strain gage 1-gage method (2-wire setup), 1-gage method (3-wire setup), 2-gage method (adjacent sides), 4-gage method | |
| Adaptive gage resistance | 1-gage n 4-gage n | nethod, 2-gage method: 120 Ω (external bridge box required for 350 $\Omega)$ nethod: 120 Ω to 1 $k\Omega$ | |
| Gage ratio | 2.0 (fixed | 1) | |
| Bridge voltage | 2 V ±0.0 | 5 V DC | |
| Balance | Method | Electronic auto-balancing | |
| adjustment | Range | Voltage: ±20 mV or less (1 mV f.s. to 20 mV f.s. range), ±200 mV or less (50 mV f.s. to 200 mV f.s. range) Strain: ±20,000 με or less (1,000 με f.s. to 20,000 με f.s. range), ±200,000 με or less (50,000 με f.s. to 200,000 με f.s. range) | |
| Input type | | d differential input, simultaneous sampling of all channels (non- channels) | |
| A/D resolution | 16bit | | |
| Maximum input voltage | ±0.5 V D damage) | C (maximum voltage between input terminals without causing | |
| Maximum channel- to-channel voltage | Non-isola | ated (all channels share common GND) | |
| Maximum rated terminal-to-ground voltage | | AC or 60 V DC (maximum voltage between input channel and without causing damage) | |
| Input resistance | 2 MΩ ±5 | % | |
| Data refresh interval | 1 ms to | 10 s (13 selectable levels) | |
| Low-pass filter | Cut-off frequency: -3 dB ±30% Auto, 120, 60, 30, 15, 8, 4 (Hz) Auto: cut-off frequency of low-pass filter is automatically set based on set data refresh interval. | | |
| | Attenuat | ion characteristics: 5th-order butterworth filter, −30 dB/oct | |
| Dimensions | U8554: ap LR8534: a | prox. 134W×70H×63Dmm (5.28"W×2.76"H×2.48"D) aprox. 154W×106H×57D mm (6.06"W×4.17"H×2.24"D) | |
| Mass | | oprox. 236g (8.3 oz.) approx. 372g (13.1 oz.) (including Z3230 WIRELESS LAN ADAPTER) | |
| | | | |

Analog input specifications (23 $\pm 5^{\circ}$ C/73 $\pm 9^{\circ}$ F, 80% rh or less, auto-balance at least 30 minutes after power on, with LPF set at 4 Hz)


| Measure- ment target | Range | Maximum resolution | Measurable range | Measurement accuracy |
|-------------------------|-----------------|--------------------|---------------------------|----------------------|
| Voltage | 1 mV f.s. | 50 nV | -1 mV to 1 mV | ±9 μV |
| | 2 mV f.s. | 100 nV | -2 mV to 2 mV | ±10 μV |
| | 5 mV f.s. | 250 nV | -5 mV to 5 mV | ±25 μV |
| | 10 mV f.s. | 500 nV | -10 mV to 10 mV | ±50 μV |
| | 20 mV f.s. | 1 μV | -20 mV to 20 mV | ±100 μV |
| | 50 mV f.s. | 2.5 µV | -50 mV to 50 mV | ±250 μV |
| | 100 mV f.s. | 5 μV | -100 mV to 100 mV | ±500 μV |
| | 200 mV f.s. | 10 μV | -200 mV to 200 mV | ±1 mV |
| Strain | 1,000 με f.s. | 0.05 με | -1,000 με to 1,000 με | ±9 με |
| | 2,000 με f.s. | 0.1 με | -2,000 με to 2,000 με | ±10 με |
| | 5,000 με f.s. | 0.25 με | -5,000 με to 5,000 με | ±25 με |
| | 10,000 με f.s. | 0.5 με | -10,000 με to 10,000 με | ±50 με |
| | 20,000 με f.s. | 1 με | -20,000 με to 20,000 με | ±100 με |
| | 50,000 με f.s. | 2.5 με | -50,000 με to 50,000 με | ±250 με |
| | 100,000 με f.s. | 5 με | -100,000 με to 100,000 με | ±500 με |
| | 200,000 με f.s. | 10 με | -200,000 με to 200,000 με | ±1000 με |

Internal bridge resistance precision tolerance: ±0.01%; temperature characteristics: ±2 ppm/°C

^{*} Measurement accuracy does not include internal bridge resistance tolerance and temperature characteristics

General specifications

Number of ports 2 D-sub 9 pin MALE × 2 Input terminals

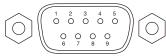

| Pin No. | Signal | Function |
|---------|--------|---------------------------|
| 1 | N.C. | Unused |
| 2 | CAN_L | CAN_L communications line |
| 3 | GND | GND |
| 4 | N.C. | Unused |
| 5 | N.C. | Unused |
| 6 | N.C. | Unused |
| 7 | CAN_H | CAN_H communications line |
| 8 | N.C. | Unused |
| 9 | N.C. | Unused |

| | 0 11101 0111000 | | |
|--|---|--|--|
| Power supply terminals (LR8535 only) | USB port (connectors: Series A receptacle × 2) Dedicated power supply for Hioki NON-CONTACT CAN SENSO | | |
| Interface | CAN, CAN FD, CAN FD (non-ISO) | | |
| Terminator | On/off setting available for each port 120 Ω ±10 Ω built-in resistance | | |
| ACT LED | Displays CAN bus operating status | | |
| TERM LED | Illuminates when terminator is on | | |
| Data refresh interval | 10 ms to 10 s (10 selectable levels) | | |
| Baud rate | CAN/CAN FD (arbitration): 50k, 62.5k, 83.3k, 100k, 125k, 250k, 500k, 800k, 1,000k [Baud] CAN FD (data): 0.5M, 1M, 2M, 2.5M, 4M, 5M [Baud] | | |
| Sampling point | CAN or CAN FD (arbitration): 50.0% to 95.0% CAN FD (data): 50.0% to 95.0% | | |
| ACK transmission | ACK response when receiving CAN data can be set to on or off | | |
| Operation mode | U8555: supports switching between receive mode and measured value output mode LR8535: supports only receive mode | | |
| Dimensions | U8553: approx. 134W×70H×54D mm (5.28"W×2.76"H×2.13"D) LR8531: approx. 154W×106H×48D mm (6.06"W×4.17"H×1.89"D) | | |
| Mass | U8553: approx. 235 g (8.3 oz.) LR8531: approx. 355 g (12.2 oz.) (including Z3230 WIRELESS LAN ADAPTER) | | |
| | | | |

Receive mode specifications

| No. of measurement channels | Data refresh interval 10 ms: max. 50 channels (max. 50 signals) Data refresh interval 20 ms: max. 100 channels (max. 100 signals) Data refresh interval 50 ms: max. 250 channels (max. 250 signals) Data refresh interval 100 ms or greater: max. 500 channels (max. 500 signals) | | |
|--|---|--|--|
| Receive ID count | Function for recording the number of times a target ID is received during the data refresh interval | | |
| User-defined frame transmission (U8555 only) | Sends user-defined CAN frames during receive mode operation No. of configurable conditions: 8 per unit | | |

Measured values output mode specifications (U8555 only)

| Overview | Converts LR8450 measured values and output them as CAN frames. |
|----------------------------|---|
| Output target | Measurement data from plug-in modules (other than CAN Unit) |
| Output data refresh period | Depends on data refresh interval of module generating output (as fast as 1 ms) |
| Response | Data refresh interval × 2 + 1 ms + analog response time (*1) *1 Varies with filter settings (U8554: 5 ms with 120 Hz low-pass filter) |
| - 41 161 | - C (D0505) |

| | Function specifications (LR8535 only) | | |
|--|---------------------------------------|--|--|
| | | Wireless connection, measurement status, error status, AC adapter or external power supply, battery power, charge status | |
| | Control keys | [AUTO], [RESET] | |
| | Auto-connect function | Available | |

CAN Editor (software) specifications

| General specifications |
|------------------------|
|------------------------|

| Maceive mode settings | General specifications | | | | |
|--|------------------------|---|--|--|--|
| Supported instruments HIOKI LR8450/LR8450-01 MEMORY HiLOGGER Set module position Module 1 to module 4 Wireless module 1 to wireless module 7 CAN interface set litureface, terminator, baud rate, data rate, sampling points, data sampling points, ACM of the sampling points and sampling points. ACM of a module operating module position on a module-by-module basis Receive mode settings Data refresh interval | Operating environment | Windows 10 (32/64-bit), Windows 11 (64-bit) | | | |
| Supported instruments Set module position Module 1 to module 4 Wireless module 1 to wireless module 7 CAN interface set interface, terminator, baud rate, data rate, sampling points, data sampling points, ACK Module operating mode Switch between receive mode and measured value output mode on a module-by-module basis Receive mode settings Bata refresh interval Receive channel definition settings Channel type: Channel type: Data or ID count Shared settings 1. Format: standard/extended 2. ID: 0h to 1 FFFFFFFh 3. Comment 4. Unit 5. Factor, offset Channel type: data 1. Start bits: 0 to 511 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/Intel 4. Data type: unsigned/signed/IEEE/float IEEE-double LR8450 display settings Receive condition No. 1 to No. 8 ILR8450 display settings Receive condition No. 1 to No. 8 ILR8450 display settings Regular transmission settings AN output port set- Port 1 or Port 2 ting No. of frame 1 to 8 Regular transmission interva Timing Regular transmis- sion setting Regular transmis- sion interva Timing At measurement start, at measurement stop at start trigger, at alarm, manual Frame type CAN standard, CAN ED extended Transmit ID O h to 1FFFFFFF h Data Measured value output mode setting Result transmis start and measurement stop at start trigger, at alarm, manual Frame type Standard, CAN ED extended Do LC (bite) O to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit ID O h to 1FFFFFFF h Data Measured value output mode setting AN output port set- Port 1 or Port 2 ting Measured value output mode setting Load function In Loads CANdb files (dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. CAN output port set- port transmit data definition files (.CDF) and applies them to the CAN Editor's overall settings. CES and applies them to the CAN Editor's overall settings. | Interface | LAN/USB | | | |
| Module 1 to module 4 Wireless module 1 to wireless module 7 | Supported languages | Japanese/English/C | Chinese | | |
| Wireless module 1 to wireless module 7 | Supported instruments | HIOKI LR8450/LR84 | 450-01 MEMORY HILOGGER | | |
| iting sampling points, ACK switch between receive mode and measured value output mode on a module-by-module basis Receive hannel definition settings Receive channel definition settings Al imput port settings Port 1 or Port 2 Channel type Data or ID count Shared settings Port 1 or Port 2 Channel type Data or ID count Shared settings 1. Format: standard/extended 2. ID: Oh to 1 FFFFFFFh 3. Comment 4. Unit 3. Comment 4. Unit 4. Unit 5. Factor, offset 6. Pactor, offset 6. Pactor offset 7. Pactor offset 7. Pactor offset 8. Pactor offset 8. Pactor offset 9. Pacto | Set module position | | | | |
| mode na module-by-module basis | | | | | |
| Data refresh interval 10 ms to 10 s (10 selectable levels) | | Switch between receive mode and measured value output mode on a module-by-module basis | | | |
| Receive channel definition settings Channel type Data or ID count Shared settings 1. Format: standard/extended 2. ID: Oh to 1 FFFFFFFh 3. Comment 4. Unit 5. Factor, offset Channel type: data 1. Start bits: 0 to 511 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/intel LR8450 display settings LR8450 display settings LR8450 display settings LR8450 display settings Receive condition No. 1 to No. 8 Inumber cal calculation threshold 4. Waveform color No. 1 to No. 8 Inumber calculation threshold 4. Waveform color No. 1 to No. 8 Inumber calculation threshold 5. Norman calculation threshold 6. No of frame 1 to 8 1 to 9999 (x 10 [ms]) 1 to 9999 (x 10 [ms]) 1 transmit ID 1 to 15 (0, 12, 16, 20, 24, 32, 48, 64) 1 Transmit data 1 Set as hexadecimal value 1 Delay Measured value output mode setting Frame type 1 Standard/extended 1 D 1 Data 1 CAN obstandard/extended 1 D 1 Data 1 CAN obstandard/extended 1 D 1 To Port 2 1 on 10 to 15 (0, 12, 16, 20, 24, 32, 48, 64) 1 Transmit data 1 Set as hexadecimal value 1 Delay 1 to 9999 (x 10 [ms]) Measured value output mode setting CAN bus load ratio estimation function 1 Data 1 CAN obstandard/extended 1 D 1 Data 1 CAN obstandard/extended 1 D 1 O th to 1FFFFFF h 1 Data 1 CAN obstandard/extended 2 D 2 CAN bus load increase rate if measured values were to be output using the current settings 2 Overall settings 3 CAN bus load increase rate if measured values were to be output using the current settings 3 CAN bus load increase rate if measured values were to be output using the current settings 3 CAN bus load increase rate if measured values output mode settings 4 CAN calculator settings (CES) 6 cAN bus load increase rate if measured values output mode settings 8 CAN calculator settings (CES) on Single-byte or 25 | Receive mode sett | | | | |
| Channel type Shared settings Channel type: J. Format: standard/extended 2. ID: Oh to 1 FFFFFFFh 3. Comment 4. Unit 5. Factor, offset Channel type: data 4. Unit 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/Intel 4. Data type: unsigned/signed/IEEE/float IEEE-double LR8450 display settings LR8450 display settings 2. No. of display digits, display format 3. Numerical calculation threshold 4. Waveform color No. 1 to No. 8 Requiar transmission settings No. of frame CAN output port setings No. of frame Regular transmission interva Timing At measurement start, at measurement stop at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN FD extended Transmit ID 0 h to 1FFFFFFF h DLC (bite) 0 to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Delay 0 to 9999 (× 10 [ms]) Measured value output mode setting ID 0 h to 1FFFFFFF h Data Measured values from the following module: can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the can be set as output data uses on the ca | Data refresh interval | 10 ms to 10 s (10 se | electable levels) | | |
| Shared settings I. Format: standard/extended 2. ID: Oh to 1 FFFFFFFh 3. Comment 4. Unit 5. Factor, offset Channel type: data 1. Start bits: 0 to 511 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/Intel 4. Data type: unsigned/signed/IEEE/float IEEE-double LR8450 display settings LR8450 display settings Receive condition 1. Display upper limit value or display lower limit value 2. No. of display digits, display format 3. Numerical calculation threshold 4. Waveform color No. 1 to No. 8 Regular transmission setting At measurement start, at measurement storp at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN extended, CAN FD extended Transmit ID Oh to 1FFFFFFFF h DLC (bite) Oto 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Set as hexadecimal value Delay Oto 9999 (x 10 [ms]) Measured value output mode setting Loads LAN output port set-load set as output data U8550, U8551, U8552, U8553, U8554 Load function 1. CANdb file (dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (CES) Title Sets titles for settings data for CAN Edito | | CAN input port settings | Port 1 or Port 2 | | |
| Channel type: data Channel type: data Channel type: data Channel type: data 1. Start bits: 0 to 511 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/Intel 4. Data type: unsigned/signed/IEEE/float IEEE-double LR8450 display settings LR8450 display settings Receive condition No. of display digits, display format 3. Numerical calculation threshold 4. Waveform color No. 1 to No. 8 Regular transmission setting Regular transmission setting Regular transmission setting Regular transmission interva Timing At measurement start, at measurement stop at start trigger, at alarm, manual Frame type CAN standard, CAN ED extended Transmit ID Oh to 1 FFFFFFFh DLC (bite) Oto 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Set as hexadecimal value Delay Oto 9999 (× 10 [ms]) Measured value output mode setting Measured value from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function Data Measured values from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function Time supplies them to configure receive channel settings. 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. | definition settings | Channel type | Data or ID count | | |
| 2. Bit length: 1 to 64 [bits] 3. Byte order: Motorola/Intel 4. Data type: unsigned/signed/lEEE/float IEEE-double LR8450 display settings LR8450 display settings | | Shared settings | 2. ID: 0h to 1 FFFFFFFh 3. Comment 4. Unit | | |
| Settings limit value 2 No. of display digits, display format 3. Numerical calculation threshold 4. Waveform color 4. Waveform color 1 to No. 8 1 to No. 8 1 to No. 6 1 to No. 8 1 to No. 6 1 to No. 7 1 t | | Channel type: data | Bit length: 1 to 64 [bits] Byte order: Motorola/Intel Data type: unsigned/signed/IEEE/float/ | | |
| transmission set- tings CAN output port set- ting | | | limit value 2. No. of display digits, display format 3. Numerical calculation threshold | | |
| No. of frame 1 to 8 Regular transmission setting At measurement start, at measurement stop at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN FD extended Transmit ID 0 h to 1FFFFFF h DLC (bite) 0 to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Set as hexadecimal value Delay 0 to 9999 (× 10 [ms]) Measured value output mode setting Measured value output mode setting Measured value output port seting Frame type Standard/extended ID 0 h to 1FFFFFF h Data Measured values from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. | | | No. 1 to No. 8 | | |
| Regular transmission setting Regular transmission interva Timing At measurement start, at measurement stop at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN FD extended Transmit ID DLC (bite) Transmit data Delay O to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Delay O to 9999 (× 10 [ms]) Measured value output mode setting Measured value output mode setting CAN output port setting CAN output port setting CAN output port setting CAN bus load ratio estimation function Frame type ID O h to 1FFFFFF h Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. | tings | | Port 1 or Port 2 | | |
| Sion Setting Regular transmission interva Timing At measurement start, at measurement storp at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN FD extended Transmit ID 0 h to 1FFFFFFF h DLC (bite) 0 to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Set as hexadecimal value Delay 0 to 9999 (× 10 [ms]) Measured value output mode setting Measured value output setting CAN output port setting Frame type Standard/extended ID O h to 1FFFFFFF h Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio Displays what would be the CAN bus load increase rate if estimation function Sile specifications 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | No. of frame | 1 to 8 | | |
| Sion interva At measurement start, at measurement stop at start trigger, at alarm, manual | | Regular transmis- sion setting | On/off | | |
| at start trigger, at alarm, manual Frame type CAN standard, CAN extended, CAN FD standard, CAN FD extended Transmit ID DLC (bite) Transmit data Delay O to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Delay O to 9999 (× 10 [ms]) Measured value output mode setting Measured value output mode setting Measured value output port setting CAN output port setting Frame type Standard/extended ID O to 1FFFFFF h Data Measured values from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function Tile specifications 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | | 1 to 9999 (× 10 [ms]) | | |
| standard, CAN FD extended Transmit ID 10 h to 1FFFFFF h DLC (bite) 10 to 15 (0, 12, 16, 20, 24, 32, 48, 64) Transmit data Delay 10 to 9999 (× 10 [ms]) Measured value output mode setting Measured value output mode setting CAN output port setting CAN output measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function CAN output would be the CAN bus load increase rate if measured values were to be output using the current settings File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. | | Timing | At measurement start, at measurement stop, at start trigger, at alarm, manual | | |
| DLC (bite) Transmit data Delay Delay Measured value output mode setting CAN output port setting Frame type Data Standard/extended ID O h to 1FFFFFF h Data Measured values from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function Displays what would be the CAN bus load increase rate if measured values were to be output using the current settings 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | Frame type | standard, CAN FD extended | | |
| Transmit data Delay 0 to 9999 (× 10 [ms]) Measured value output mode setting Measured value output mode setting Measured value output mode setting CAN output port setting Frame type Standard/extended ID 0 h to 1FFFFFF h Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function measured values were to be output using the current settings Title Set as hexadecimal value Oto 9999 (× 10 [ms]) Measured values Port 1 or Port 2 ting Frame type Standard/extended ID 0 h to 1FFFFFF h Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function measured values were to be output using the current settings Title Set as hexadecimal value Oto 9999 (× 10 [ms]) | | Transmit ID | 0 h to 1FFFFFFF h | | |
| Delay 0 to 9999 (× 10 [ms]) | | DLC (bite) | 0 to 15 (0, 12, 16, 20, 24, 32, 48, 64) | | |
| Measured value output mode setting Measured value output setting CAN output port setting Frame type Standard/extended ID O h to 1FFFFFFF h Data Measured values from the following module: can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function CAN bus load ratio estimation function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor solverall settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | Transmit data | Set as hexadecimal value | | |
| Measured value output setting CAN output port setting | | Delay | 0 to 9999 (× 10 [ms]) | | |
| output setting Frame type | Measured value out | put mode setting | | | |
| ID 0 h to 1FFFFFF h Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function measured values were to be output using the current settings File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | | Port 1 or Port 2 | | |
| Data Measured values from the following modules can be set as output data U8550, U8551, U8552, U8553, U8554 CAN bus load ratio estimation function measured values were to be output using the current settings File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | Frame type | Standard/extended | | |
| can be set as output data U8550, U8551, U8552, U8553, U8554 | | ID | 0 h to 1FFFFFFF h | | |
| CAN bus load ratio estimation function measured values were to be output using the current settings. File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | Data | | | |
| estimation function measured values were to be output using the current settings File specifications Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | 0444 | D | | | |
| Save function 1. CANdb file (.dbc) for transmit data defined using measured value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | estimation function | Displays what would be the CAN bus load increase rate if measured values were to be output using the current settings | | | |
| value output mode settings 2. Overall settings data for CAN Editor (.CES) Load function 1. Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | | | | | |
| and use them to configure receive channel settings. 2. Loads LR8450 settings (.SET) and CAN Editor settings (.CES and applies them to the CAN Editor's overall settings. Title Sets titles for settings data (.CES) (up to 50 single-byte or 25 | Save function | value output mode settings | | | |
| | Load function | Loads CANdb files (.dbc) and MR8904 definition files (.CDF) and use them to configure receive channel settings. Loads LR8450 settings (.SET) and CAN Editor settings (.CES) | | | |
| | Title | | | | |

Model: MEMORY HILOGGER LR8450



Option

Plug-in modules



VOLTAGE/TEMP UNIT U8550

Channels: 15; maximum sampling rate: 10 ms



UNIVERSAL UNIT U8551

Channels: 15; maximum sampling rate: 10 ms



VOLTAGE/TEMP UNIT U8552

Channels: 30: maximum sampling rate: 20 ms (When 15 or fewer channels are used, 10 ms)



HIGH SPEED VOLTAGE UNIT U8553

Channels: 5; maximum sampling rate: 1 ms



STRAIN UNIT U8554

Channels: 5; maximum sampling rate: 1 ms



CAN UNIT U8555

Ports: 2, input: CAN or CAN FD, output: CAN or CAN FD maximum sampling rate: 10 ms

Model No. Specifications (order code) LR8450 Standard model, main unit only LR8450-01 Wireless LAN equipped model, main unit only

- The LR8450 and LR8450-01 cannot perform measurement on their own. One or more plug-in modules or wireless modules are required (sold separately).
- The LR8450-01 and each wireless module emit radio waves. Use of radio waves is subject to licensing requirements in certain countries. Using it in a country or region other than those indicated may violate the law and may result in legal penalties for the operator. For the latest information about countries and regions where wireless operation is currently supported, please visit the Hioki website.

Wireless modules



WIRELESS VOLTAGE/TEMP UNIT LR8530

Channels: 15; maximum sampling rate: 10 ms



WIRELESS UNIVERSAL UNIT LR8531

Channels: 15; maximum sampling rate: 10 ms



WIRELESS VOLTAGE/TEMP UNIT LR8532

Channels: 30; maximum sampling rate: 20 ms (When 15 or fewer channels are used, 10 ms)



WIRELESS HIGH SPEED VOLTAGE UNIT LR8533

Channels: 5; maximum sampling rate: 1 ms



WIRELESS STRAIN UNIT LR8534

Channels: 5; maximum sampling rate: 1 ms



WIRELESS CAN UNIT LR8535

Ports: 2, input: CAN or CAN FD, maximum sampling rate: 10 ms

Power supplies

For instrument and wireless modules



BATTERY PACK Z1007

Instrument takes two; wireless modules take one

For instrument



AC ADAPTER Z1014

For wireless modules



Z1008

Fixed Stand



FIXED STAND Z5040

For installing logger on wall

CASE



CARRYING CASE C1012

Accommodates instrument and four plug-in modules or seven wireless modules

Wireless Lan Adapter

For wireless modules



WIRELESS LAN ADAPTER Z3230

Cables, sensors, etc.



LAN CABLE 9642

Straight Ethernet cable, supplied with straight to cross conversion adapter, 5 m (16.41 ft) length



HUMIDITY SENSOR Z2000

(analog output), 3 m (9.84 ft) length





Thermocouple For reference only. Please purchase locally.



CAN CABLE 9713-01

For the U8555, LR8535. Unprocessed on one end, 1.8 m (5.91 ft) length



NON-CONTACT CAN SENSOR SP7001-95

Supports CAN FD or CAN signals, SP7001, SP9250, SP7150 set

Storage media

*Always use HIOKI optional storage media. Proper operation is not guaranteed when using storage media from other manufacturers, and may prevent the product from saving and loading data properly.



SD memory card Z4001

2 GB capacity



SD memory card Z4003

8 GB capacity



USB drive Z4006

16 GB, long-life, high-reliability SLC flash memory

For the PC



LOGGER UTILITY/CAN EDITOR

measurement of loggers, real-time data collection CAN EDITOR: CAN configuration software Standard accessory

You can download the latest version from our website



GENNECT One

LOGGER UTILITY: The control of the Displays measurement results from multiple instruments in graph form Free application for Windows

