

Code 3002

High Range
Chlorine Dioxide
50 Test Strips



Insta-Test[®] ANALYTIC

High Range Chlorine Dioxide




Using a cup-size sample,
immerse strip for **2 seconds**.

Remove strip with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. With pad still facing up, **wait 10 seconds and read the**

strip. Discard strip after 30 seconds.

LaMotte Company
Chestertown, MD 21620
www.lamotte.com

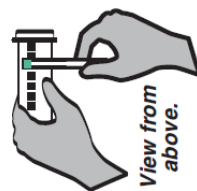

*View from
above.*

- !Keep wet fingers out of the bottle.
- !Cap bottle tightly.
- !Store in a cool, dry place.
- !In concentrations greater than 500 ppm the pad will be a mottled color of golden-brown and black.



6 37395103727 6