

# WÖHLER



## THE EASY WAY OF DATA TRANSFER

### Wohler A 550 Flue Gas Analyzer

Online-Measurement

*The Measure of Technology*

1.888.610.7664



[www.calcort.com](http://www.calcort.com)



Made in  
Germany


[sales@calcort.com](mailto:sales@calcort.com)

# Wohler A 550 Desktop Software


## System requirements



- Data management software (computer interface necessary)

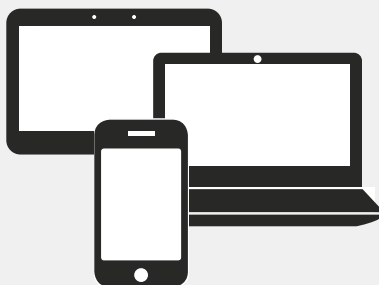


- Electronic devices: PC, Notebook

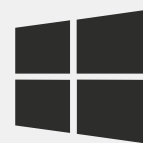

Windows

- Operating System: Windows 7, 8 (without Windows RT) and 10, with current Service Pack

## Synchronisation

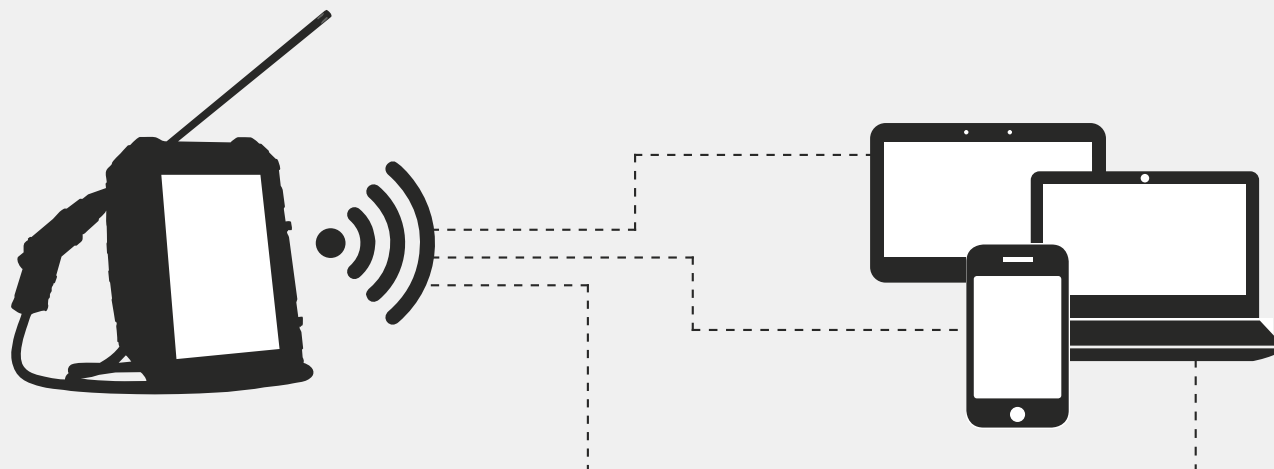

## Performing the online measurement

### 1. Step

- Open the data management software and start the online measurement
- Select interface, e.g. Bluetooth® and measurement instrument



### 2. Step

- Perform the Single Online Measurement with the Wohler A 550
- If necessary it is possible to perform various measurement consecutively



### 3. Step

- After the Single Online-Measurement is finished, the measurement data will be transferred to the data management software



## Wohler A 550 Smartphone-App

Measurement App for Android devices for transferring the measurement data of the Wohler A 550 to an external software or for displaying and saving the data on the smartphone.

### Application

- The Wohler A 550 App allows to exchange the measurement data of the Wohler A 550 with a software installed on a smartphone or tablet



### System requirements

- Android , Version 4.1 and higher
- Bluetooth®-Interface



### Measurement-App

- Download the Wohler A 550 App from the Google Play Store (free of charge)

