

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 1 of 49

HygroClip 2 (HC2) Humidity Temperature Probes User Guide



E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 2 of 49

Table of contents

1	Overview.....	3
1.1	Hardware and software compatibility	3
2	Models	4
3	General description	24
3.1	Power supply.....	24
3.2	Measured parameters	24
3.3	Calculated parameters	24
3.4	Analog output signals.....	24
3.5	Digital interface	25
3.6	Connector	26
3.7	Sensor protection (dust filter)	26
4	User configurable settings and functions	27
4.1	Function overview	28
4.2	Factory default settings	30
5	Mechanical installation	31
5.1	General guidelines for fixed installation.....	31
6	Electrical installation.....	32
6.1	General guidelines for fixed installation.....	32
6.2	Analog signal wiring	33
6.3	Minimum analog output load	33
6.4	Digital signal wiring	33
6.5	Grounding	33
7	Operation.....	34
7.1	Operation with an indicator, data logger or transmitter.....	34
7.2	Stand-alone operation as an analog probe	34
7.3	Connectivity examples for stand-alone probes.....	35
7.4	Hand-held probes used with an indicator	36
8	Maintenance.....	37
8.1	Cleaning or replacing the dust filter.....	37
8.2	Periodic calibration check	37
8.3	Validation of the output signals transmission	38
9	Firmware updates.....	39
10	Technical data.....	40
10.1	Specifications	40
10.2	44	
10.3	Dew point accuracy.....	45
10.4	Effect of cable temperature on the accuracy of probes HC2-C04 and HC2-C05	46
11	Accessories and parts	47
12	Supporting documents	48
13	Document releases.....	49

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 3 of 49

Applicability:

This manual applies to all HC2 probes with firmware version 3.0 or higher. Changes to the last digit of the version number reflect minor firmware changes that do not affect the manner in which the probe should be operated.

1 Overview

The HC2 series are digital humidity-temperature probes based on the AirChip 3000 technology. These probes feature a UART serial interface and two 0...1 V linear analog output signals.

The HC2 probes are designed for use with the HygroClip 2 generation of ROTRONIC humidity-temperature instruments: hand-held and bench top indicators, data loggers, transmitters, hygrometers, etc. The HC2 probes maintain all of the benefits of the original HygroClip technology such as the possibility of hot-swapping probes and feature significant improvements in the area of measurement accuracy and functionality.

The HC2 probes can also be used as a stand-alone device using either the analog output signals or the probe digital interface. Connectors, cables and digital interface adapters are available to this purpose. Digital integration with OEM applications is facilitated by the probe communication protocol options.

The HC2 probes offer the following user functions:

- o User configurable settings
- o Calculation of the dew or frost point
- o Humidity temperature calibration and adjustment
- o Simulator mode
- o Automatic humidity sensor test and drift compensation
- o Sensor failure mode
- o Data recording

The ability for the user to easily update the AirChip 3000 firmware means that the HC2 probes can be kept up-to-date regarding any future functionality improvement.

Available in different configurations, the HC2 probe series is designed to meet the requirements of a large number of applications and environments.

1.1 Hardware and software compatibility

The HC2 probes are compatible only with the AirChip 3000 generation of ROTRONIC humidity-temperature instruments and are not backward compatible with instruments based on the previous technology.

Configuration of the HC2 probes and access to the probe functions requires a PC with the ROTRONIC HW4 software version 2.1.0 or higher or connection to a compatible instrument from ROTRONIC. For firmware updates HW4 software version 3.3.0 or higher is needed.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 4 of 49

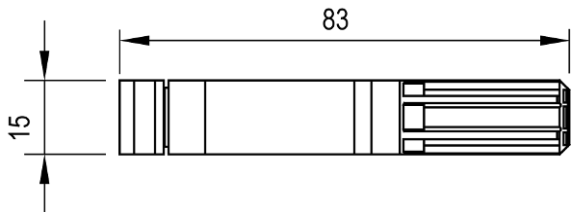
2 Models

In the following tables, we have indicated the type of instrument primarily used with each probe model. The following should also be noted:

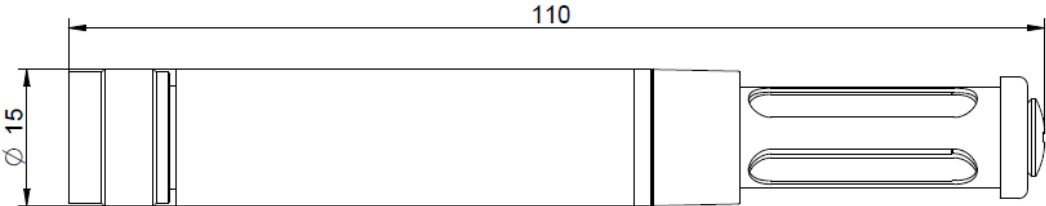
- o The HC2 probes can be directly connected to a PC or to an Ethernet network using one of the available digital interface adapters (see separate document **E-M-HC2-accessories**).
- o The HC2 Probes can also be used as a stand alone device with two analog output signals. Different connectors are available to this purpose (see separate document **E-M-HC2-accessories**).

Regardless of the probe model, the analog outputs signals are always scaled in the same way by the factory (0...1 V = 0...100 %RH and 0...1 V = -40...60 °C). The user is responsible for reconfiguring the probe analog outputs (requires the ROTRONIC HW4 software) and for providing power to the probe.

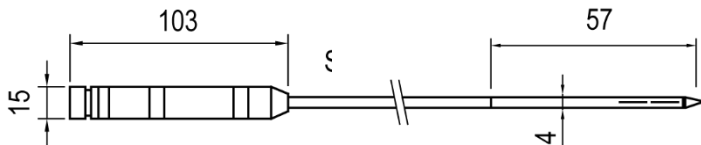
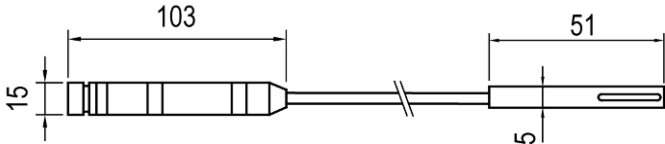
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 5 of 49

Climate measurement		
<i>For use with indicators, data loggers and transmitters, with or without an extension cable</i>		
HC2-S	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits: $-50 \dots 100 \text{ }^{\circ}\text{C}$ ($-58 \dots 212 \text{ }^{\circ}\text{F}$) Diameter: 15 mm (0.6") Length: 85 mm (3.3") Housing material: polycarbonate, black Standard dust filter: Polyethylene, $20 \text{ }\mu\text{m}$ Sensor: HYGROMER® IN-1 Weight: 10 g (0.35 oz)	
HC2-S3	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits: $-50 \dots 100 \text{ }^{\circ}\text{C}$ ($-58 \dots 212 \text{ }^{\circ}\text{F}$) Diameter: 15 mm (0.6") Length: 85 mm (3.3") Housing material: polycarbonate, white Standard dust filter: Polyethylene, $40 \text{ }\mu\text{m}$ Sensor: HYGROMER® IN-1 Weight: 10 g (0.35 oz)	
HC2-S-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits: $-50 \dots 100 \text{ }^{\circ}\text{C}$ ($-58 \dots 212 \text{ }^{\circ}\text{F}$) Diameter: 15 mm (0.6") Length: 85 mm (3.3") Housing material: polycarbonate, black Standard dust filter: MFD fleece Sensor: HYGROMER® HH-1 Weight: 10 g (0.35 oz)	
		

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 6 of 49

Climate measurement		
<i>For use with indicators, data loggers and transmitters, with or without an extension cable</i>		
HC2-SM	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits: $-50 \dots 100\text{ }^{\circ}\text{C}$ ($-58 \dots 212\text{ }^{\circ}\text{F}$) Diameter: 15 mm (0.6") Length: 85 mm (3.3") Housing material: Stainless steel, DIN 1.4301 Standard dust filter: Wiremesh filter, $20 \dots 25\text{ }\mu\text{m}$ Sensor: HYGROMER® IN-1 Weight: 50 g (1.76 oz)	
		

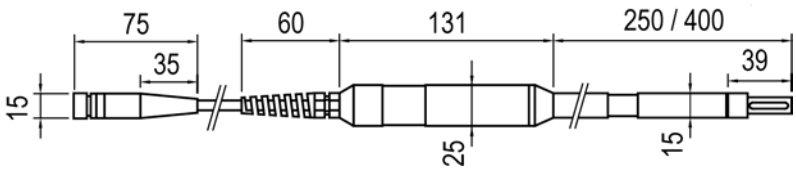
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 7 of 49

Measurement in tight spaces	
For use with indicators, data loggers and transmitters	
HC2-C04	Humidity measuring range: 0...100 %RH Temperature limits -40...85 °C (-40...185 °F) Diameter: 4 mm (0.16"), cable length (electronics – probe tip: about 0.59 m (1.9 ft) Probe electronics housing: polycarbonate, black Weight: approx. 150 g (5.3 oz)
	
HC2-C05	Same as HC2-C04 but with 5 mm diameter (0.2") Can be equipped with Teflon dust filter SP-T05 Weight: approx. 160 g (5.6 oz)
	

Note:

Accuracy of the HC2-C04 and HC2-C05 probe models is affected by the temperature of the cable separating the sensors from the electronics (see §10.3).

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 8 of 49

Spot check measurements in air ducts, chambers and ovens	
Handheld probe for use with indicators and data loggers	
HC2-HK25	Humidity measuring range: 0...100 %RH Temperature limits at sensor -100...150 °C (-148...302 °F) Barrel: diameter: 15 mm (0.6"), length: 250 mm (9.8") Probe cable length: 2 m (6.5 ft) Handgrip: POM, black -, barrel: PEEK, black Filter base (NSP-ME) with wire mesh filter cartridge (SP-M15) Weight: approx. 210 g (7.4 oz)
HC2-HK40	Humidity measuring range: 0...100 %RH Temperature limits at sensor -100...200 °C (-148...392 °F) Same as HC2-HK25 but with barrel 400 mm barrel length (15.7") Weight: approx. 240 g (8.5 oz)
	

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 9 of 49

Measurement of dust-free granular products in bulk

Handheld probe for use with indicators and data loggers

HC2-P05	Humidity measuring range: 0...100 %RH Temperature limits -40...85 °C (-40...185 °F) Barrel: diameter: 5 mm (0.2"), length: 200 mm (7.9") Probe cable length: 2 m (6.5 ft) Handgrip: POM, black - barrel: stainless steel DIN 1.4305 Weight: approx. 160 g (5.6 oz)

Measurement of seeds, granulates and powders in bulk

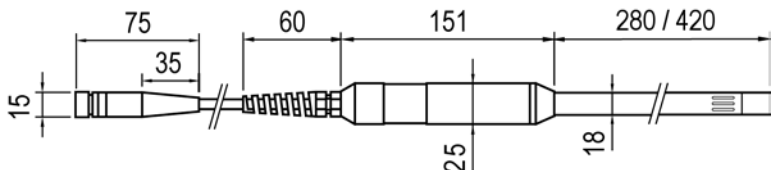
Handheld probe for use with indicators and data loggers

HC2-HP28	Humidity measuring range: 0...100 %RH Temperature limits at sensor -40...85 °C (-40...185 °F) Barrel: diameter: 10 mm (0.4"), length: 280 mm (11.0") Probe cable length: 2 m (6.5 ft) Handgrip: POM, black - barrel: stainless steel DIN1.4301 Dust filter: sintered steel filter cartridge (ET-Z10) Weight: approx. 200 g (7.1 oz)
HC2-HP50	Humidity measuring range: 0...100 %RH Same as HC2-HP28 but with barrel 500 mm barrel length (19.7") Weight: approx. 250 g (8.8 oz)

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 10 of 49

Measurement of paper – cardboard stacks and rolls

Handheld probe for use with indicators and data loggers

HC2-HS28	Humidity measuring range: 0...100 %RH Temperature limits at sensor -40...85 °C (-40...185 °F) Blade: thickness: 4 mm (0.16"), width: 22 mm (0.87"), length: 280 mm (11.0") Probe cable length: 2 m (6.5 ft) Weight: approx. 240 g (8.5 oz) Handgrip: POM, black - blade: aluminum / elox
HC2-HS42	Same as HC2-HS28 but with 420 mm blade length (16.5") Weight: approx. 300 g (10.6 oz)
	

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 11 of 49

Measurement of product samples (liquids, pastes, powders, granules or chunks)	
Handheld probe for use with indicators and data loggers	
HC2-AW	Humidity measuring range: 0...100 %RH Temperature limits at sensor -40...85 °C (-40...185 °F) Barrel: aluminum (top) , stainless steel (bottom) Probe cable length: 0.95 m (37.5") Weight: approx. 541 g (1 lb 3.1 oz)
Technical drawing of the HC2-AW probe. The main view shows a cylindrical probe with a diameter of 68 mm and a height of 60 mm. A cable is attached to the side. The top view shows a circular face with a power indicator (red LED) and a power ON/OFF (push button). The brand name 'rotronic A' is visible on the top view. Use together with WP14 or WP-40 sample cup holder Prior to use, verify the integrity and cleanliness of the sealing O-ring located under the probe	

Note:

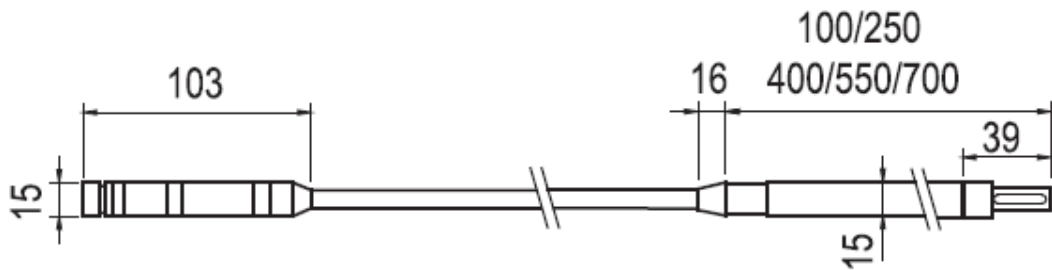
When using the HC2-AW probe, check that the red LED on top of the probe is lit. This indicates that the probe is being powered. If necessary, power the probe by pressing once on the red button located on top of the probe. When the red LED is not lit, the probe is not powered and the instrument is not receiving a signal from the probe.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 12 of 49

Process measurement (fixed installation)		
For use with transmitters and data loggers		
HC2-IC102 HC2-IC105	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}$ ($-148 \dots 392 \text{ }^\circ\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 100 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 230 g / 8.1 oz, 2 m cable 470 g / 16.6 oz, 5 m cable	
HC2-IC302 HC2-IC305	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}$ ($-148 \dots 392 \text{ }^\circ\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 250 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 260 g / 9.2 oz, 2 m cable 500 g / 17.6 oz, 5 m cable	
HC2-IC402 HC2-IC405	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}$ ($-148 \dots 392 \text{ }^\circ\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 400 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 530 g / 18.7 oz, 5 m cable	
		

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 13 of 49

HC2-IC502 HC2-IC505	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 550 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 320 g / 11.3 oz, 2 m cable 560 g / 19.8 oz, 5 m cable
HC2-IC702 HC2-IC705	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 100 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 350 g / 12.3 oz, 2 m cable 590 g / 20.8 oz, 5 m cable

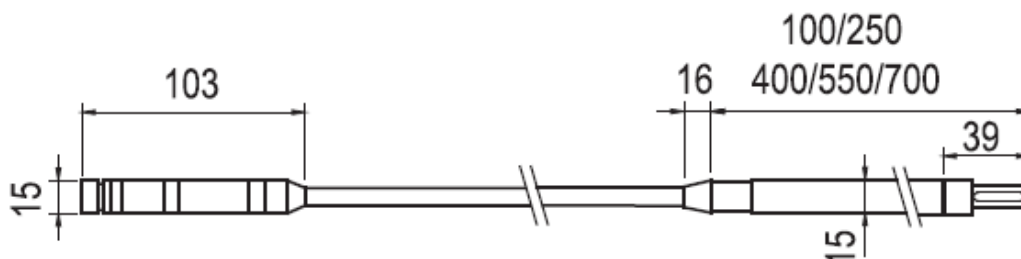


E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 14 of 49

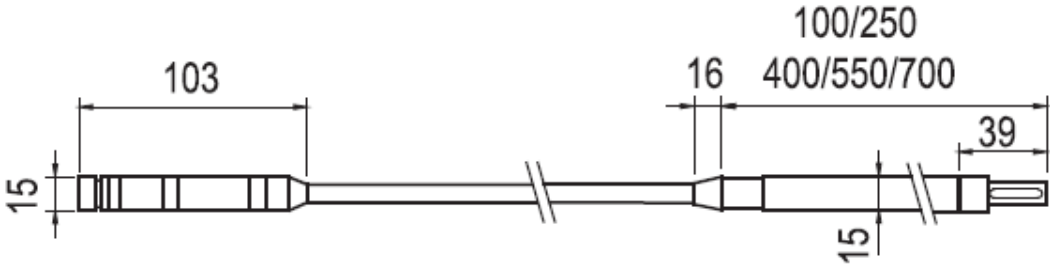
Process measurement for hydrogen peroxide H2O2 applications

For use with transmitters and data loggers

HC2-IC102-HH HC2-IC105-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at 10...30 °C Humidity measuring range: 0...100 %RH Temperature limits at sensor: -100...200 °C (-148...392 °F) Diameter barrel: 15 mm (0.6") Length (probe head): 100 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® HH -1 Weight: 230 g / 8.1 oz, 2 m cable 470 g / 16.6 oz, 5 m cable
HC2-IC302-HH HC2-IC305-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at 10...30 °C Humidity measuring range: 0...100 %RH Temperature limits at sensor: -100...200 °C (-148...392 °F) Diameter barrel: 15 mm (0.6") Length (probe head): 250 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® HH -1 Weight: 260 g / 9.2 oz, 2 m cable 500 g / 17.6 oz, 5 m cable
HC2-IC402-HH HC2-IC405-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at 10...30 °C Humidity measuring range: 0...100 %RH Temperature limits at sensor: -100...200 °C (-148...392 °F) Diameter barrel: 15 mm (0.6") Length (probe head): 400 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® HH -1 Weight: 290 g / 10.2 oz, 2 m cable 530 g / 18.7 oz, 5 m cable



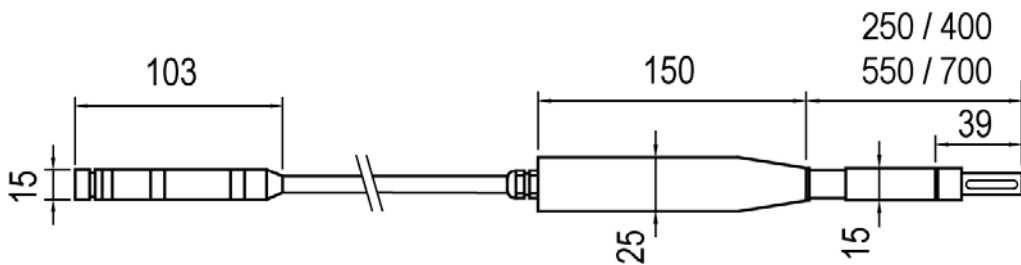
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 15 of 49

HC2-IC502-HH HC2-IC505-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 550 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® HH -1 Weight: 320 g / 11.3 oz, 2 m cable 560 g / 19.8 oz, 5 m cable
HC2-IC702-HH HC2-IC705-HH	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 100 mm (3.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® HH-1 Weight: 350 g / 12.3 oz, 2 m cable 590 g / 20.8 oz, 5 m cable
	

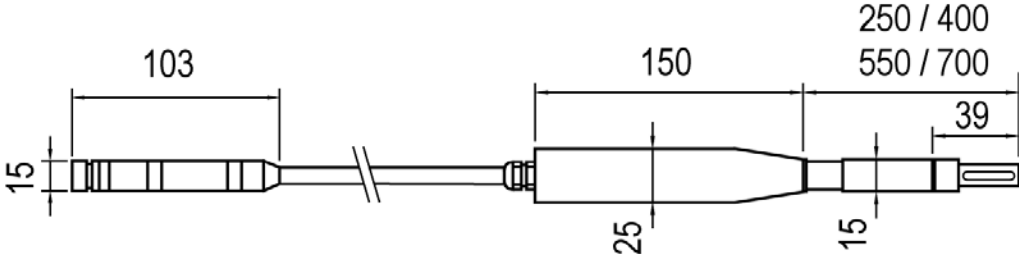
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 16 of 49

Process measurement (fixed installation)

For use with transmitters and data loggers

HC2-IC302-A HC2-IC305-A	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: $25 / 15 \text{ mm}$ ($1.0 / 0.6 \text{"}\text{'}$) Length (probe head): 250 mm (9.8'). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 530 g / 18.7 oz, 5 m cable
HC2-IC402-A HC2-IC405-A	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: $25 / 15 \text{ mm}$ ($1.0 / 0.6 \text{'}$) Length (probe head): 400 mm (15.7'). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 320 g / 11.3 oz, 2 m cable 560 g / 19.8 oz, 5 m cable
	

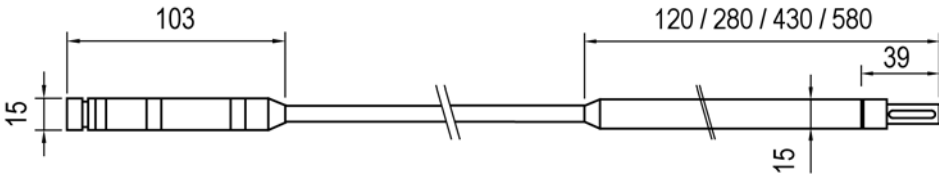
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 17 of 49

HC2-IC502-A HC2-IC505-A	Accuracy: ± 0.8 %RH, ± 0.1 K at 10...30 °C Humidity measuring range: 0...100 %RH Temperature limits at sensor: -100...200 °C (-148...392 °F) Diameter barrel: 25 / 15 mm (1.0 / 0.6") Length (probe head): 550 mm (21.6"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 350 g / 12.3 oz, 2 m cable 590 g / 20.8 oz, 5 m cable
HC2-IC702-A HC2-IC705-A	Accuracy: ± 0.8 %RH, ± 0.1 K at 10...30 °C Humidity measuring range: 0...100 %RH Temperature limits at sensor: -100...200 °C (-148...392 °F) Diameter barrel: 25 / 15 mm (1.0 / 0.6") Length (probe head): 700 mm (27.5"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 380 g / 13.4 oz, 2 m cable 770 g / 27.1 oz, 5 m cable
 The diagram shows a side view of the probe assembly. It consists of a cable, a long barrel, and a probe head. Dimensions are given in mm and inches. The cable has a diameter of 15 mm (0.6 inches). The barrel has a length of 103 mm (4.1 inches) and a diameter of 25 mm (1.0 inch). The probe head has a length of 150 mm (5.9 inches) and a diameter of 15 mm (0.6 inches). The total length of the probe head assembly is 250 mm (9.8 inches) for the 2m cable version and 400 mm (15.7 inches) for the 5m cable version. The probe head itself is 39 mm (1.5 inches) long.	

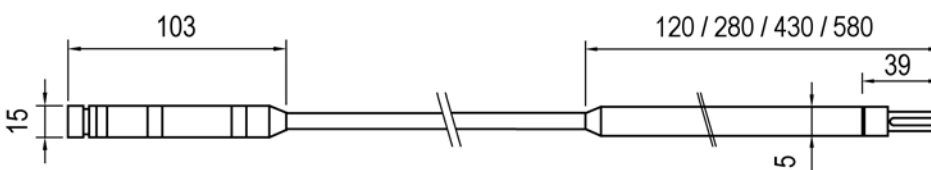
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 18 of 49

Process measurement (fixed installation)

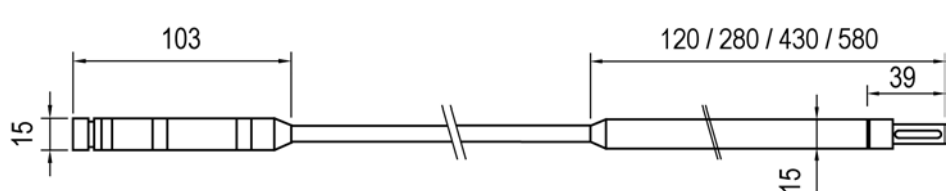
For use with transmitters and data loggers

HC2-IM102 HC2-IM105	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}$ ($-148 \dots 392 \text{ }^\circ\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 260 g / 9.2 oz, 2 m cable 420 g / 14.8 oz, 5 m cable
HC2-IM302 HC2-IM305	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^\circ\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^\circ\text{C}$ ($-148 \dots 392 \text{ }^\circ\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 280 mm (11.0"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 400 g / 14.1 oz, 2 m cable 640 g / 22.6 oz, 5 m cable
 Technical drawing of the HC2 probe showing dimensions. The probe has a diameter of 15 mm. The probe head length is 103 mm. The cable length is 120 / 280 / 430 / 580 mm. The probe head has a length of 39 mm.	

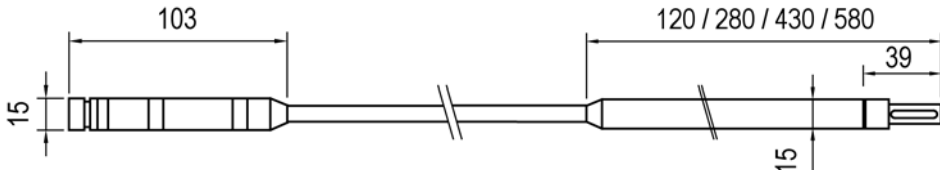
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 19 of 49

HC2-IM402 HC2-IM405	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 430 mm (16.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 540 g / 19.0 oz, 2 m cable 780 g / 27.5 oz, 5 m cable
HC2-IM502 HC2-IM505	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 580 mm (22.8"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 680 g / 24.0 oz, 2 m cable 920 g / 32.5 oz, 5 m cable
 The diagram shows a side view of the probe. The main body has a diameter of 15 mm. The probe head is 103 mm long. The cable length is shown as a range: 120 / 280 / 430 / 580 mm. The connector at the end is 39 mm long. The probe is shown with a break in the middle of the cable.	

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
	Document Type
Document title	Page 20 of 49

HC2-IM102-M HC2-IM105-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 310 g / 10.9 oz, 2 m cable 470 g / 16.6 oz, 5 m cable
HC2-IM302-M HC2-IM305-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 280 mm (11.0"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 460 g / 15.9 oz, 2 m cable 690 g / 24.3 oz, 5 m cable
 Technical drawing of the HygroClip 2 probe showing dimensions. The probe head has a diameter of 15 mm and a length of 103 mm. The cable has a diameter of 15 mm and a length of 120 / 280 / 430 / 580 mm. The probe tip has a diameter of 39 mm.	

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 21 of 49

HC2-IM402-M HC2-IM405-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 430 mm (16.9"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 590 g / 20.8 oz, 2 m cable 820 g / 28.9 oz, 5 m cable
HC2-IM502-M HC2-IM505-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Diameter barrel: 15 mm (0.6") Length (probe head): 580 mm (22.8"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 730 g / 25.7 oz, 2 m cable 970 g / 34.2oz, 5 m cable
 The diagram shows a side view of the probe. The barrel has a diameter of 15 mm. The probe head has a length of 103 mm. The cable is shown with a break in the middle, and the total length options are 120, 280, 430, and 580 mm. The connector at the end has a length of 39 mm.	

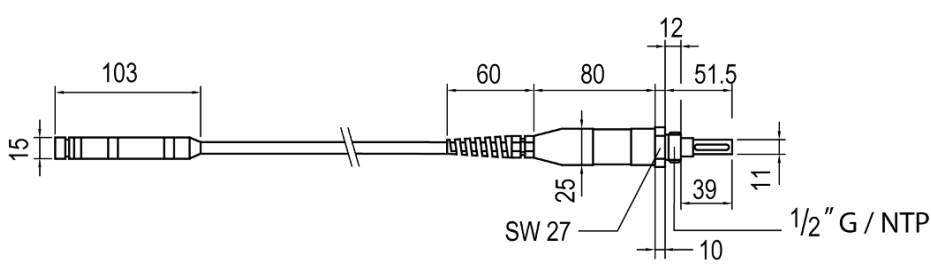
Note 1:

- o HC2-IMxxx-M probes are the same as HC2-IMxxx but are equipped with a stainless steel connector instead of PPS.
- o HC2-IM102 (120 mm barrel length) - to avoid measurement errors due to temperature gradients fully immerse the probe barrel in the environment to be measured.

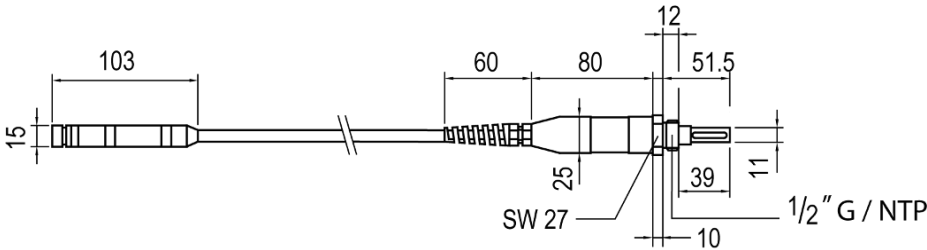
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 22 of 49

Measurement in compressed air conduits and vessels (fixed installation)

For use with transmitters and data loggers

HC2-IE102 HC2-IE105	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Thread: G1/2" Pressure resistant: 100 bar / 1450 PSI Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 660 g / 23.2 oz, 5 m cable
HC2-IE302 HC2-IE305	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30 \text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200 \text{ }^{\circ}\text{C}$ ($-148 \dots 392 \text{ }^{\circ}\text{F}$) Thread: NPT 1/2" Pressure resistant: 100 bar / 1450 PSI Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: PEEK (connector) Stainless steel, DIN 1.4301 (probe head) Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 660 g / 23.2 oz, 5 m cable
	

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 23 of 49

HC2-IE102-M HC2-IE105-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Thread: $G1/2''$ Pressure resistant: 100 bar / 1450 PSI Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 660 g / 23.2 oz, 5 m cable
HC2-IE302-M HC2-IE305-M	Accuracy: $\pm 0.8\% \text{RH}$, $\pm 0.1 \text{ K}$ at $10 \dots 30\text{ }^{\circ}\text{C}$ Humidity measuring range: $0 \dots 100\% \text{RH}$ Temperature limits at sensor: $-100 \dots 200\text{ }^{\circ}\text{C}$ ($-148 \dots 392\text{ }^{\circ}\text{F}$) Thread: $NPT\ 1/2''$ Pressure resistant: 100 bar / 1450 PSI Length (probe head): 120 mm (4.7"). See note below Cable length: 2 m (6.5 ft) 5 m (16.4 ft) Housing material: Stainless steel, DIN 1.4301 Standard filter: None, must be ordered separately Sensor: HYGROMER® IN-1 Weight: 290 g / 10.2 oz, 2 m cable 660 g / 23.2 oz, 5 m cable
	

Note 1:

- o HC2-IExxx-M probes are the same as HC2-IExxx but are equipped with a stainless steel connector instead of PPS.
- o To avoid measurement errors, temperature should be the same on both sides of the mounting wall

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 24 of 49

3 General description

3.1 Power supply

The accuracy specified for the HC2 probes is valid only when the probe is supplied with a voltage within the range of 3.3...5 VDC. The probes are tested and adjusted at the factory using a supply voltage of 3.3 VDC.

When a voltage source of 3.3...5 VDC is not available, the probe should be used together with a voltage adapter (see separate document **E-M-HC2-accessories**) so as to provide 3.3...5 VDC to the probe. Use of a voltage adapter allows powering the probe from a voltage source of 5 to 24 VDC or 5 to 16 VAC.

During start-up the typical current consumption of the probe is initially 8 mA during 2ms and 5 mA during the next 2s. Without a power supply limiter, the start-up current may reach a maximum of 50 mA. After start-up the current consumption is on average less than 3 mA. Randomly distributed current spikes of maximum 1 mA during 2µs are normal during operation and are caused by the probe micro-processor and associated components.

The HC2 probes are polarity protected by a keyed connector. There is no electrical polarity protection.

3.2 Measured parameters

The HC2 probe measures relative humidity with a ROTRONIC Hygromer® IN1 capacitive sensor and temperature with a Pt100 RTD.

3.3 Calculated parameters

Using the ROTRONIC HW4 software, the HC2 probe can be configured by the user to calculate either the dew point or the frost point.

3.4 Analog output signals

The HC2 probe features two 0...1 V linear analog output signals. The default factory settings are as follows:

Output 1: 0...1 V (humidity) = 0...100 %RH
Output 2: 0...1 V (temperature) = -40...60°C

Using the ROTRONIC HW4 software any output signal can be made to correspond one of the following:

- o Relative humidity
- o Temperature
- o Dew or frost point

The scale of each analog output can be set within the numerical limits of -999.99 and 9999.99.

If so desired, any output can also be disabled (no signal).

The D/A converters used to generate the analog output signals feature a 16-bit resolution. The 0...1 V analog output signals exhibit a small positive offset of 3 mV or less at 0 V.

Minimum load requirements apply to the external device or circuit connected to the probe voltage outputs. These requirements are defined in the "Operation" chapter

Note:

Users who require an analog signal other than 0...1 V should either contact ROTRONIC or connect the probe to one of the available transmitters.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 25 of 49

3.5 *Digital interface*

The HC2 probe features a UART interface (Universal Asynchronous Receiver Transmitter) that allows two-way communication with the probe. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**). The probe can also be indirectly connected to a PC using an instrument from the ROTRONIC program.

The ROTRONIC HW4 software (version 2.1.0 or higher) allows full access to the following:

- o Measurement data (humidity and temperature) and calculated parameter (dew or frost point)
- o Probe information: name, RS-485 address, humidity sensor status, etc.
- o Probe alarm functions
- o Probe data logging function
- o Probe calibration and probe adjustment functions
- o Probe configuration

The ROTRONIC HW4 software (version 3.3.0 or higher) allows full access to the following:

- o Firmware update of HygroClip probes

Communication protocol options

The probe measurement data can be read without having to use the ROTRONIC HW4 software. Starting with firmware version 1.3, the HC2 probe offers the following communication protocol options (ASCII) which can be selected by connecting the probe to a PC running the ROTRONIC HW4 software (version 2.1.1 or higher):

- o **RO-ASCII:** this is the standard (default) communication protocol used by all AirChip 3000 devices and by the HW4 software. In principle, this protocol supports all of the AirChip 3000 functions but some of the functions require a certain amount of computations to be carried out by an external device such as a PC.
- o **Custom:** this communication protocol can be used to provide compatibility of the HC2 probe with an existing communication system. The Custom communication protocol is limited to reading measurement data from the HC2 probe. Functions such as device configuration, humidity and temperature adjustment, etc. are not supported. The Custom protocol is applicable to all AirChip 3000 devices with a digital interface and allows RS-485 networking
- o **I2C:** The I2C protocol available with the HC2 probe does not allow the networking of devices and is limited to a one way communication where the HC2 probe automatically sends data during each refresh interval to an external device with I2C input.

When using either the RO-ASCII or the Custom protocol, the HC2 probe can be set to send data automatically after each refresh cycle without requiring a data request. When this mode is enabled, the receiving device must be listening at all times in order to get the measurement data.

For details, see document **E-M-AC3000-CP**

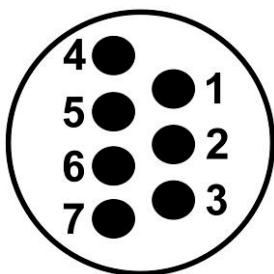
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 26 of 49

3.6 Connector

All standard probe models of the HC2 series use the same keyed connector (male). The connector is located either directly on the probe body or at the end of a cable. The probe connector is secured to the matching female connector with a threaded collar.

Pin-out diagram

Probe connector (7-pin male – looking at probe)



Pin #	Wire Color	Name	Function
1	Green	VDD (+)	3.3 to 5 VDC
2	Grey	GND	Power and digital signal
3	Red	RXD	UART
4	Blue	TXD	UART
5	White	Out 1 analog (+)	Humidity 0...100%RH (default)
6	Brown	Out 2 analog (+)	Temperature -40...60°C (default)
7	Yellow	AGND	Analog signal ground

3.7 Sensor protection (dust filter)

Most probes of the HC2 series are supplied with a filter to protect the sensors against dust particles and high air velocity. Depending on the probe model the following types of filter materials are used:

Material	Maximum temperature	Notes
Polyethylene	100 °C (212 °F)	Recommended filter material for all applications below 100 °C. Good response and good protection against fine dust particles. No water absorption or retention
Teflon	200 °C (392 °F)	Good protection against fine dust particles and salt (marine environments). Moderately slow response
Stainless steel wire mesh	200 °C (392 °F)	Provides fastest response time. Not recommended in environments with fine dust particles (clogging) and in bioactive environments
Stainless steel sintered filter	200 °C (392 °F)	Good response at low humidity levels. Do not use at high humidity levels. Provides best protection against abrasive particles

Note:

Depending on the probe model, the dust filter is either automatically included with the probe or it must be ordered separately (see Models).

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 27 of 49

4 User configurable settings and functions

The HC2 probe ships configured as per the factory defaults:

- o Users who intend to use the probe as a stand-alone analog device can use the probe as any conventional humidity and temperature probe. A connecting cable with active electronics may be required to power the probe. Most such users will never have to use the probe configurable settings and functions
- o Users who purchased a probe for use with another ROTRONIC instrument can also use the probe right away and do not necessarily have to use the probe configurable settings and functions
- o Users that intend to use the probe as a stand-alone digital device typically need to use a connecting cable with active electronics and generally need to configure either the probe or the PC

Making use of the probe configurable settings and functions is entirely up to the user and the appropriate settings depend on the user application. We have provided below a short description of the probe functions and also indicated the factory default settings.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 28 of 49

4.1 Function overview

MEASUREMENT ACCURACY AND RELIABILITY	
AirChip 3000 Functions	Description
► Humidity / temperature adjustment	- o 1-point or multi-point humidity calibration or adjustment - o 1-point or 2-point temperature calibration or adjustment - o Generate a time stamp for calibrations and adjustments - o Retain and view last adjustment date and adjustment values - o Generate calibration and adjustment protocols
► Automatic humidity sensor test and optional drift compensation	Tests the humidity sensor for drift caused by contaminants and can be used to automatically apply a correction. The test is automatically carried out at regular intervals of time. Can be configured, enabled, or disabled The humidity sensor status can be verified either with the HW4 software and is shown as Good, SQ-tuned (corrected for drift) or Bad (defective)
► Data recording	The data recording function differs from a true data logging function in the sense that the AirChip 3000 does not time stamp the data. This data recording function can be used to investigate events such as a sensor malfunction as well as to retrieve data that would otherwise be lost - o Start or stop data recording - up to 2000 value pairs (%RH and temperature). Starting a recording session erases all previously recorded data - o The recording mode and log interval can be specified - o When the probe is powered off, the recording session is paused but not ended. As long as the recording session has not been ended, the probe automatically resumes recording data when powered up again - o The recorded data can be downloaded to a PC with the HW4 software, time stamped and viewed

MEASUREMENT LOOP VALIDATION	
AirChip 3000 Functions	Description
► Simulator mode	Used to make the probe generate fixed values for the humidity, temperature and calculated parameter. Can be configured, enabled or disabled

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 29 of 49

SAFEGUARDS	
AirChip 3000 Functions	Description
► Device write protection	Used to protect the probe with a password to prevent unauthorized digital access by a digital user. Can be configured, enabled or disabled

PROCESS PROTECTION / PROTECTION OF OTHER DEVICES	
AirChip 3000 Functions	Description
► Limit humidity output to 100 %RH	Used to prevent the humidity signal from exceeding 100 %RH when condensation forms on the sensor. Can be enabled or disabled
► Out-of-limit value alarm	Used to specify the normal range for humidity, temperature and the calculated parameter depending on the user application. Can be configured, enabled or disabled Out-of-limit values trigger a digital alarm
► Bad sensor alarm	Built-in function. Cannot be disabled A bad humidity or temperature sensor triggers a digital alarm
► Fail safe mode	Used to specify a "safe" fixed value for humidity and for temperature in the event of a sensor failure. Can be configured, enabled or disabled

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 30 of 49

4.2 Factory default settings

Note:

Configuration of the probe by the user and access to its functions requires a PC with the ROTRONIC HW4 software (version 2.1.1 or higher) installed. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

Configurable Settings	Factory default
Unit system (Metric or English)	Metric
Psychrometric calculation	None
Output 1 parameter, scale and unit	Humidity: 0...100%RH
Output 2 parameter, scale and unit	Temperature: -40...60 °C
Communication protocol	RO-ASCII
RS-485 address	0
Device name	Probe type

Functions	Factory default
Humidity / temperature adjustment	Enabling / Disabling only by HW4 user rights possible
Device write protection	Disabled
Limit humidity output to 100 %RH	Enabled
Out-of-limit value digital alarm	Disabled
Data recording	Disabled
Automatic humidity sensor test	Disabled
Humidity sensor drift compensation	Disabled
Fail safe mode	Disabled
Simulator mode	Disabled

- o For a detailed description of all AirChip 3000 / probe main functions see document **E-T-AC3000-DF-V1**
- o Instructions regarding the configuration of the probe and access to its functions are provided in the following manuals:

E-M-HW4v3-Main
E-M-HW4v3-F2-001
E-M-HW4v3-DR-001
E-M-HW4v3-A2-001
E-M-AC3000-CP

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 31 of 49

5 Mechanical installation

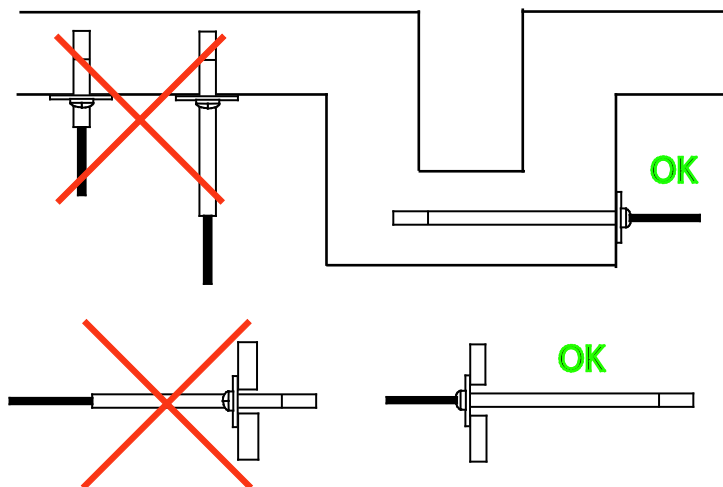
Note:

The following instructions apply only to the situation where the HC2 probe is fixed installed.

5.1 General guidelines for fixed installation

For best results, please observe the following guidelines:

- o Install the probe at a location where humidity, temperature and pressure conditions are representative of the environment or process to be measured. Avoid the following: (a) Close proximity of the probe to a heating element, a cooling coil, a cold or hot wall, direct exposure to sun rays, etc. (b) Close proximity of the probe to a steam injector, humidifier, direct exposure to precipitation, etc. (c) Unstable pressure conditions resulting from excessive air turbulence.
- o When installing the probe on a wall, do not place the probe right above a heat producing device of instrument such as a transmitter or an Ethernet adapter (warm air tends to rise).
- o If possible, choose a location that provides good air movement at the probe: air velocity of at least 1 meter/second (200 ft/ minute) facilitates adaptation of the probe to changing temperature.
- o When installing the probe through a wall, immerse as much of the probe as possible in the environment to be measured.



Position the probe so as to prevent the accumulation of condensation water at the level of the sensor leads. Install the probe so that the probe tip is looking downward. If this is not possible, install the probe horizontally.

Depending on the probe model, a probe holder (mounting flange with a compression fitting) can facilitate installation through a wall.

Future maintenance can be made easier by providing next to the probe a calibration access orifice. During maintenance, this permits the insertion of a reference probe (calibrator). The calibration access orifice should have the same size as the orifice used to install the probe and can be equipped with a probe holder.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 32 of 49

6 Electrical installation

Note:

The following instructions apply only to the situation where the HC2 probe is fixed installed.

6.1 General guidelines for fixed installation

Power supply wiring

Heavy machinery and instrumentation should not share the same power supply wiring. If this cannot be avoided, noise filters and surge protectors should be used. Most UPS devices have those features already integrated.

General guidelines for signal cables

The following guidelines are derived from European Standard EN 50170 for the transmission of signals by copper wires. When planning an installation, the rules provided by EN 50170 should be followed under consideration of local circumstances to determine the position of machines and equipment.

All ROTRONIC HygroClip products are tested for Electromagnetic Compatibility according to EMC Directive 2004/106/EG and following European standards:

- o EN 61000-6-1: 2001, EN 61000-6-2: 2005
- o EN 61000-6-3: 2005, EN 61000-6-4: 2001 + A11

Whenever the level of electromagnetic interference is expected to be high, both the instruments and signal cables should be placed as far away as possible from the source of interference.

In general, signal cables should be installed in bundles or channels / conduits, separate from other cables as indicated in the table below:

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 33 of 49

- o Bus signals such as RS485 - o Data signals for PCs, printers etc. - o shielded analog inputs - o unshielded direct current ($\leq 60V$) - o shielded process signals ($\leq 25 V$) - o unshielded alternate current ($\leq 25V$) - o coaxial cables for CRT monitors	in common bundles or channels / conduits
- o direct current from 60 V to 400 V (unshielded) - o alternate current from 25V to 400 V (unshielded)	in separated bundles or channels / conduits, without minimum distance
- o direct and alternate current $> 400 V$ (unshielded) - o Telephone lines - o lines leading into EX-rated areas	in separated bundles or channels / conduits, without minimum distance

Lightning protection

Cabling in areas with a risk of lightning requires a lightning protection. For cabling underground in between buildings, we recommend the use of special fiber optic cables. If this is not possible, use copper cables that are suitable for underground installation.

6.2 Analog signal wiring

Preferably use a shielded cable to connect the analog outputs of the HC2 to other devices. The maximum cable length is determined by the maximum error that the user will accept. This can be calculated as follows:

Error (V) = cable resistance x current through load

6.3 Minimum analog output load

The HC2 analog outputs are short circuit tolerant and have an internal resistance of less than 10 Ω . For proper operation, the minimum external load of each output should be at least 1000 Ω .

6.4 Digital signal wiring

Use one of the available connecting cables (see Accessories) to connect the UART digital interface of the HC2 probe to other devices. Without a signal booster, the maximum cable length should not exceed 5 m (16 ft).

6.5 Grounding

In the case of a fixed installation, ground the HC2 probe, especially if the electronics will be subjected to a low humidity environment (35 %RH or less). The power supply and digital ground (GND) and the analog ground (AGND) should be tied separately to a proper ground so as to avoid spikes in the analog signals.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 34 of 49

7 Operation

7.1 Operation with an indicator, data logger or transmitter

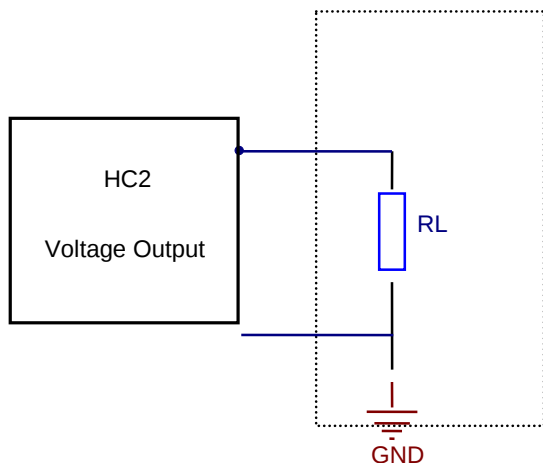
The HC2 probes are compatible with a large number of indicators, data loggers and transmitters from ROTRONIC. Operating instructions are provided in each device manual.

7.2 Stand-alone operation as an analog probe

The HC2 probes can be used as a conventional analog probe. See Accessories, supply voltage adapters, connectors and cables. Use the HW4 software to configure the probe as desired, complete the mechanical and electrical installation and power up the probe.

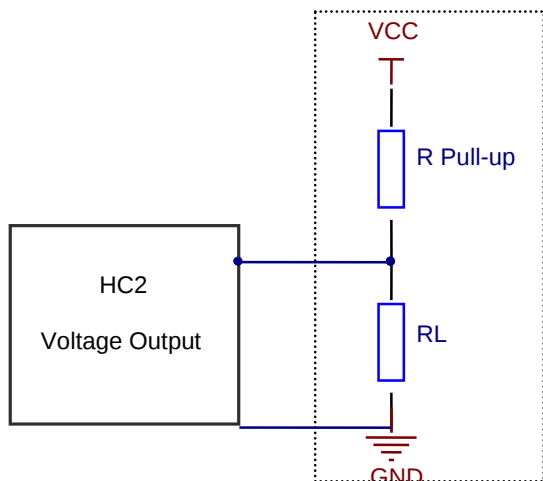
Minimum load requirements for the probe voltage outputs

The following requirements apply to any external device or circuit connected to the probe voltage outputs:



HFC2 output signal	Input resistance RL
0...1V	$\geq 1\text{k}\Omega$

In the situation where the external device uses an internal pull-up resistor the value of this resistor should meet the requirements shown below. It is also necessary to add a pull-down resistor RL connected to ground in order to be able to read 100% of the range of the probe voltage output.



HC2 signal	VCC	R pull-up	RL
0...1V	3.3V	$\geq 250\text{ k}\Omega$	1 k Ω

HC2 signal	VCC	R pull-up	RL
0...1V	5.0V	$\geq 400\text{ k}\Omega$	1 k Ω

HC2 signal	VCC	R pull-up	RL
0...1V	10.0V	$\geq 1\text{ M}\Omega$	1 k Ω

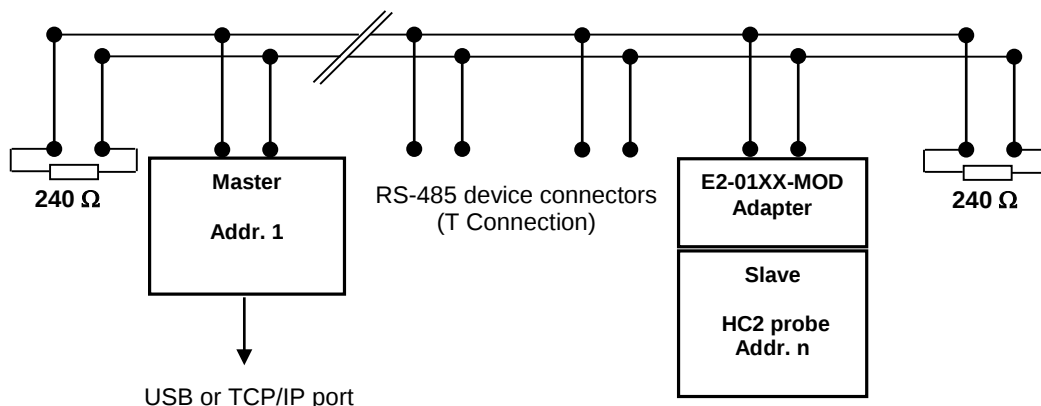
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Page 35 of 49

Stand-alone operation as a digital probe (PC or network)

The HC2 probes can be connected to a PC or to an Ethernet network with one of the available digital interface adapters (see Accessories). Probe configuration and full access to all probe functions requires a PC with the ROTRONIC HW4 software installed. Starting with firmware version 1.3, the probes accept several communication protocols that allow users to read the measurement data without the HW4 software. When using the standard RO-ASCII protocol, access to some of the probe functions is also possible without HW4. For details, see document **E-M-AC3000-CP**.

7.3 Connectivity examples for stand-alone probes

Digital connection example: RS-485 network

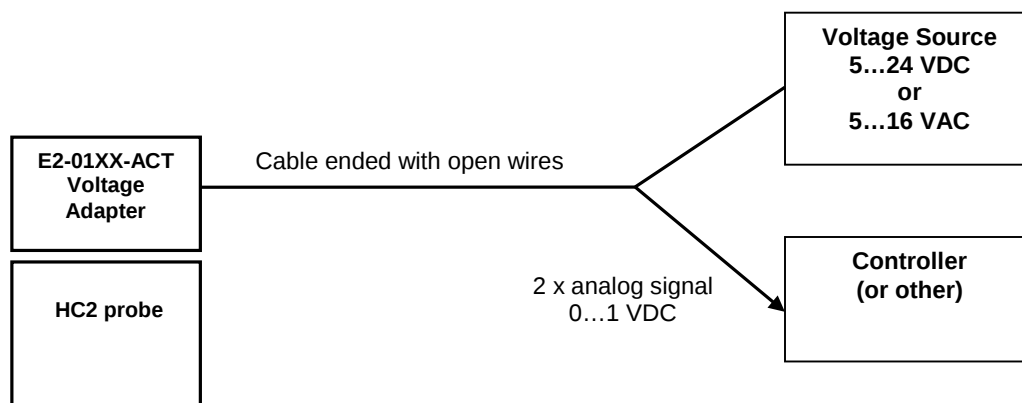


Note:

- o The master device can be either a transmitter such as the HF5 (USB or TCP/IP interface) or an adapter such as the AC3010 cable (USB)
- o Power to the combination E2-01XX-MOD and HC2 probe can be provided by an individual AC adapter or by a central voltage source connected to the RS-485 network (requires cables with 2 twisted pairs: one for the data, the other for power)

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 36 of 49

Analog connection example:



7.4 Hand-held probes used with an indicator

The most common source of error when measuring relative humidity with a hand-held probe is a difference between the temperature of the probe and the temperature of the environment. At a humidity condition of 50 %RH, a temperature difference of 1°C (1.8 °F) typically results in an error of 3 %RH on relative humidity.

When using a humidity probe with a portable indicator, it is good practice to monitor the display for temperature stability. When moving the probe from one area to another, the probe should be given sufficient time to equilibrate with the environment to be measured. This time can be shortened, and errors avoided, by using the probe configuration that fits best for your application.

In extreme situations, condensation may occur on the sensors when the probe is colder than the environment. As long as the humidity / temperature limits of the humidity sensor are not exceeded, condensation does not alter the calibration of the sensor. However, the sensor has to dry out before it can provide a valid measurement.

Non-moving air is an excellent insulator. When there is no air movement, surprising differences in temperature and humidity can be noted over short distances. Air movement at the probe generally results in measurements that are both faster and more accurate.


E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 37 of 49

8 Maintenance

8.1 *Cleaning or replacing the dust filter*

Depending on the conditions of measurement, the filter should be checked from time to time. Corroded, discolored or clogged filters should be replaced.

- o If the probe has a removable cartridge, simply replace the cartridge (leave the metal base on the probe).



- o If the probe has a plastic slotted cap with a built-in filter element follow these instructions:
 - 1) Unscrew the filter from the probe and pull it straight away, in the alignment of the probe, so as not to catch the humidity and temperature sensors.
 - 2) Before putting on a new dust filter, check the alignment of both sensors with the probe. The wires that connect the sensors to the probe are very thin and bend easily. If necessary, correct the alignment by tapping the sensor very gently with a smooth object such as a small plastic rod. Do not use sharp pliers or tweezers as this could puncture the sensor and do not pull hard on the sensor.

8.2 *Periodic calibration check*

Both the Pt 100 RTD temperature sensor and associated electronics are very stable and should not require any calibration after the initial factory adjustment.

Long term stability of the ROTRONIC Hygromer humidity sensor is typically better than 1 %RH per year. For maximum accuracy, calibration of the probe should be verified every 6 to 12 months. Applications where the probe is exposed to contaminants may require more frequent verifications. Calibration and adjustment of the HC2 probe can be done with either a PC with the HW4 software installed (version 2.1.0 or higher) or with the HP23 hand-held calibrator. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

Procedure for adjusting the HC2 probe with the ROTRONIC HW4 software:

- o Connect the HC2 probe to the HW4 PC as explained in the HW4 manual **E-M-HW4v3-Main**
- o Start HW4 software on the PC and search for the HC2 probe. (HW4 Main Menu Bar > Devices and Groups > Search for USB masters or Search for RS232 masters or search for Ethernet masters, depending on the connecting cable).
- o After finding the HC2 probe with HW4, expand the device tree to see the HC2 probe functions and select **Probe Adjustment**.
- o For further instructions see HW4 manual **E-M-HW4v3-A2-001**

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 38 of 49

8.3 *Validation of the output signals transmission*

If so desired, transmission of the HC2 probe output signals can be validated by using the probe simulator function. The HW4 software is required to enable and configure this function. When the function is enabled the probe generates digital and analog signals corresponding to values specified by the user.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 39 of 49

9 Firmware updates

Firmware updates will be available on the ROTRONIC website for downloading. Firmware files are given a name that shows both to which device the file applies and the version number of the firmware. All firmware files have the extension HEX. For connecting the HC2 probe to a PC, use any of the following digital adapter cables AC3001, AC3002 or AC3005 (see document **E-M-HC2-accessories**).

Procedure for updating the firmware:

- o Connect the HC2 probe to the HW4 PC as explained in the HW4 manual **E-M-HW4v3-Main**
- o Copy the firmware update file from the ROTRONIC website to the PC.
- o Start HW4 software on the PC and search for the HC2 probe. (HW4 Main Menu Bar > Devices and Groups > Search for USB masters or Search for RS232 masters or search for Ethernet masters, depending on the connecting cable).
- o After finding the HC2 probe, expand the device tree to see the HC2 probe functions. Select Device Manager. In the Device Manager menu bar select Tools > Firmware Update. For instructions see document **E-M-HW4v3-F2-001**

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 40 of 49

10 Technical data

10.1 Specifications

General	
Device type	Humidity temperature probe
Mechanical configuration	See models
IP protection class	IP65

Power supply and connections	
Supply voltage (VDD)	3.3...5 VDC $\pm 0\%$
Recommended supply voltage	3.3 VDC
Supply voltage during factory tests and adjustment	3.3 VDC
Supply voltage stability / ripple	See System Accuracy, effect of VDD
Nominal current consumption	<4.5 mA at VDD = 3.3...5 VDC
Maximum start-up current unlimited	<50mA during 2 μ s
Minimum start-up current	8 mA during 2ms and 5 mA during 2s
Maximum current spike during operation	1 mA during maximum 2 μ s
Polarity protection	Mechanical only (keyed connector)

Humidity measurement	
Sensor	ROTRONIC Hygromer [®] IN1
Measuring range	0...100 %RH
Measurement accuracy	± 0.8 %RH, at 10...30 °C (HC2-S(3), HC2-IC, HC2-IM, HC2-IE) ± 0.5 %RH, at 10...30 °C / 10..90 %RH (HC2-S(3)H) ± 1.5 %RH (HC2-C04, HC2-C05; see also §10.3)
Repeatability	0.3 %RH
Long term stability	<1 %RH / year
Sensor time constant	Typical 10 sec, 63% of a 35 to 80 %RH step change (1m/sec air flow at sensor)

Temperature measurement	
Sensor	Pt100 RTD, IEC 751 class A (HC2-S) Pt100 RTD, IEC 751 1/3 class B (HC2-IC / HC2-IM / HC2-IE)
Measuring range	-100...200 °C (see also environmental limits)
Measurement accuracy	± 0.1 °C, at 10...30 °C ± 0.3 °C, at 10...30 °C (HC2-C04, HC2-C05; see also §10.3)
Repeatability	0.05 °C
Long term stability	<0.1 °C / year
Sensor time constant	Typical 4 sec, 63 %RH of a step change (1 m/sec air flow at sensor)

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 41 of 49

Calculated parameters	
Psychrometric calculations	Dew or frost point (user configurable)

Start-up time and data refresh rate	
Start-up time	1.5 s (typical)
Data refresh rate	1.0 s (typical) – when not calculating any parameter

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 42 of 49

Configurable analog outputs	
Output 1	Can be made to correspond to any parameter
Factory default parameter	Relative humidity
Factory default scale	0...100 %RH
Output 2	Can be made to correspond to any parameter
Factory default parameter	Temperature
Factory default scale	-40...60 °C
Output 1 and Output 2	
Signal type	0...1 V
User configurable scaling limits	-999.99 ... 9999.99 engineering units
Offset at 0 V	+3 mV (maximum)
Ripple	<1.2 mV/x 2µs
Short circuit tolerant	Yes
Internal resistance	<10 Ω
Minimum external load	1000 Ω
Deviation from digital signal	<±1 mV from 0.002 to 1.0 V / + 2 mV from 0.0 to 0.002 V

Digital interface	
Interface type	UART (Universal Asynchronous Receiver Transmitter)
Organization	Dialog, duplex
Default configuration	Baud rate : 19200 Parity : none Data bits : 8 Stop bits : 1 Flow Control : none
Tolerance	3 %
Baud rate configuration:	No
Logical levels	Logical 0: $\leq 0.3V * VDD$ Logical 1: $\geq 0.8V * VDD$
Maximum cable length	5 m (16.4 ft) w/o signal booster

Effect of VDD in the range 3.3 to 5.0 V (see note below)	
Temperature (digital)	<0.05 °C
Humidity (digital)	<0.25 %RH
Analog signals	<2mV (reference: digital value)

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 43 of 49

General specifications	
Housing material	See Models
Collar material (connector)	Stainless steel, DIN 1.4301
Dust filter material	See Models
Protection grade	IP65
Physical dimensions	See Models
Weight	See Models

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 44 of 49

Conformity to standards	
CE / EMC immunity	EMC Directive 2004/108/EG: EN 61000-6-1: 2001, EN 61000-6-2: 2005 EN 61000-6-3: 2005, EN 61000-6-4: 2001 + A11
Solder type	Lead free (RoHS directive)
FDA / GAMP directives	compatible

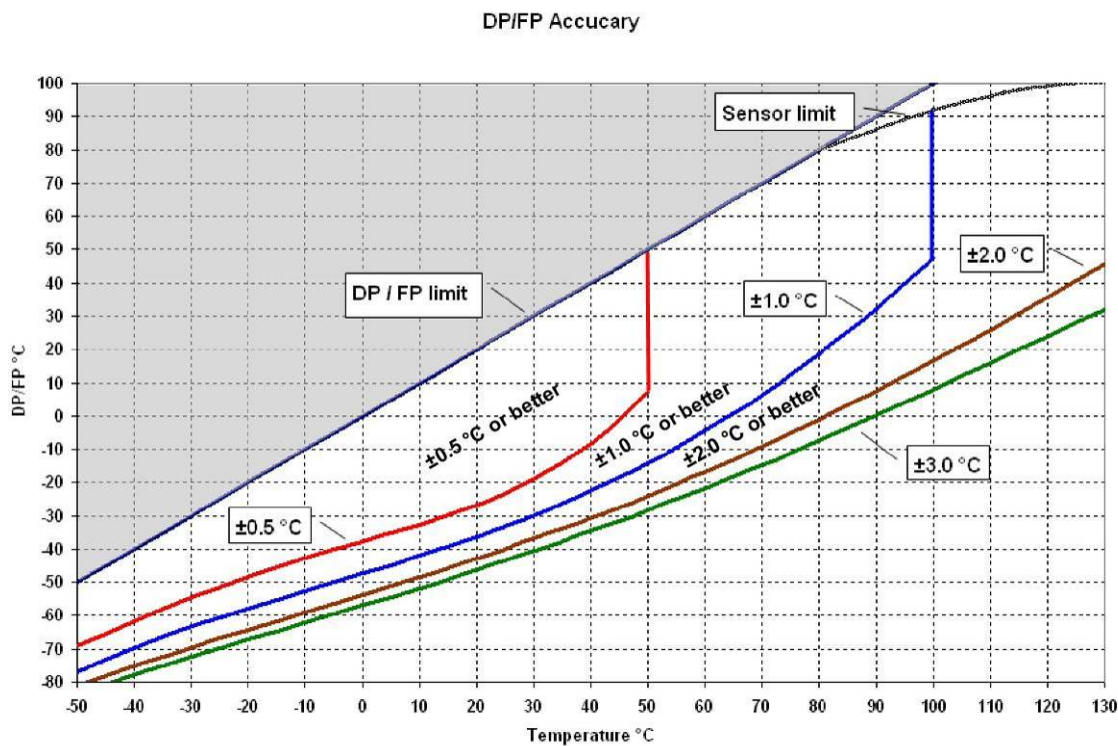
Environmental limits	
Storage and transit	-50...+100 °C / 0...100 %RH, non condensing
Operating limits at electronics	-50 ... +100 °C 0...100 %RH, non condensing
Temperature limits at sensor	See Models
Maximum humidity at sensor	100 %RH up to 80 °C (176 °F) 75 %RH at 100 °C (212 °F) 45 %RH at 125 °C (260 °F) 15 %RH at 150 °C (302 °F)
Maximum air velocity at probe	20 m/s (3,935 ft /min)
Critical environments	Humidity sensor: as per DV04-14.0803.02 - Critical chemicals

10.2

E-M-HC2 Probes-V1_33 Document code	Rotronic AG Bassersdorf, Switzerland Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide Document title	Instruction Manual Document Type
	Page 45 of 49

10.3 Dew point accuracy

The HC2 probes can be configured to calculate either the dew point or frost point based on the measurement of relative humidity and temperature. The accuracy of this conversion varies, depending on the humidity and temperature conditions as shown in the graph below:



Example: at a temperature of 20 °C, a dew point value of -37 °C is measured with an accuracy of ±1.0 °C or better.

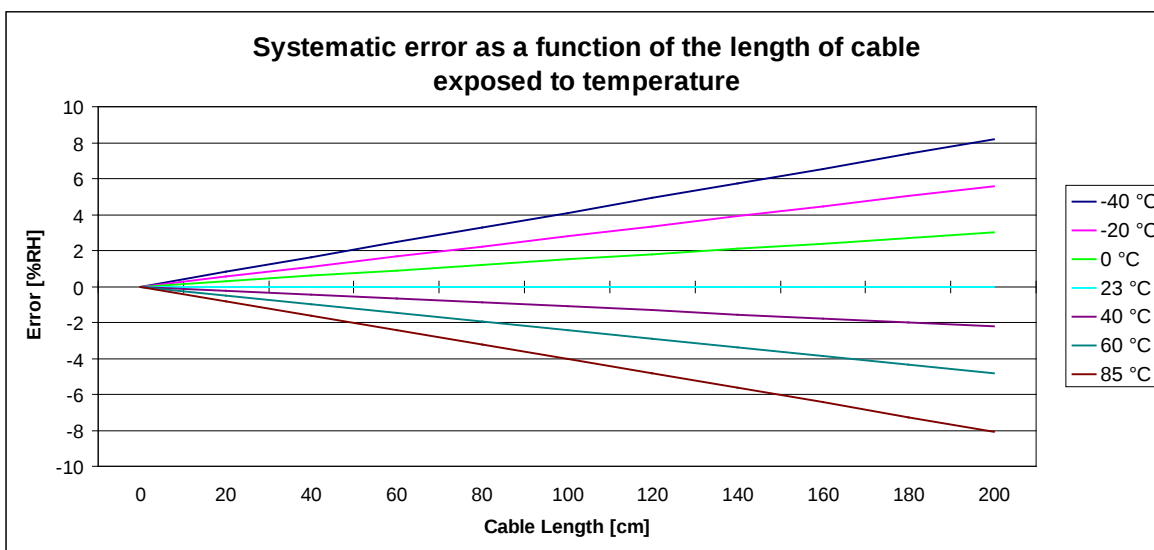
E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 46 of 49

10.4 *Effect of cable temperature on the accuracy of probes HC2-C04 and HC2-C05*

Accuracy of the HC2-C04 and HC2-C05 probes is affected by the temperature of the cable separating the sensors from the electronics.

Error on humidity:

Humidity measurement accuracy is specified at ± 1.0 %RH when both the humidity sensor and the cable are at 23 °C. Depending both on the value of temperature and on the exposed length of cable, the probe exhibits a predictable error (bias) as illustrated below:



Error on temperature:

Temperature measurement accuracy is specified at ± 0.3 °C when both the temperature sensor and the cable are at 23 °C. When the full length of the 2 meter probe cable is exposed to temperature values within the range of -40 to 85 °C, the additional error is limited to 0.125 °C.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 47 of 49

11 Accessories and parts

For accessories and parts such as the HW4 configuration software, extension cables, adapter cables, calibration accessories and spare dust filters, please see document **E-M-HC2-accessories**

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 48 of 49

12 Supporting documents

Document File Name	Contents
E-M-HC2-accessories	Accessories and parts for probes, indicators and transmitters
E-T-AC3000-DF-V1	AirChip 3000 Description and Main Functions
E-M-HW4v3-DIR	List of the HW4 manuals
E-M-HW4v3-Main	HW4 software version 3: General instructions and functions common to all devices
E-M-HW4v3-F2-001	HW4 software version 3: HC2 probe series Device configuration and AirChip 3000 functions
E-M-HW4v3-A2-001	HW4 software version 3: Probe Adjustment function AirChip 3000 devices
E-M-HW4v3-DR-001	HW4 software version 3: Data Recording Function AirChip 3000 Devices
E-M-AC3000-CP	AirChip 3000 Communication Protocol
E-M-TCPIP-Conf	Configuration procedures for ROTRONIC devices with Ethernet (TCP/IP) interface
E-M-CalBasics	Temperature and humidity adjustment basics Instructions for using the ROTRONIC humidity standards
E-T-HumiDefs	Humidity Definitions

Note:

All document file names have an extension corresponding to the document release number (example of a first release: E-M-HW4v2-Main_10). This extension is not shown in the above table.

E-M-HC2 Probes-V1_33	Rotronic AG Bassersdorf, Switzerland
Document code	Unit
HygroClip 2 (HC2) Humidity Temperature Probes: User Guide	Instruction Manual
Document title	Document Type
	Page 49 of 49

13 Document releases

Doc. Release	Date	Notes
_20	Apr. 11, 2009	Original release
_21	Aug. 19, 2009	Added probe model HC2-AW Corrected the specification of some of the probe materials
_22	Jun. 18, 2010	Updated document to HW4 software v.3
_23	May 20, 2011	Modified dimensional specifications of the HC2-C04 probe
_24	Jan. 6, 2012	Changed the factory default for data recording to "disabled"
_25	May 30, 2013	Page 10: reduced maximum pressure to 100 bar / 1450 PSI for the HC2-IE102/105 and HC2-IE302/305
_26	Nov. 2013	Changes for HygroClip2 with firmware v3.0 Power supply range changed to 3.3...5 VDC HC2-IE maximum pressure range changed to 100 bar. Added HC2-SM Added HC2-IMxxx-M Added HC2-IExxx-M
_27	July 2014	Korrections of technical specification
_28	March 2015	Update of Pt100 class. Industrial probes are delivered with Pt100 1/3 class B since the end of March 2015.
_29	March 2015	Accuracy range updated
_30	March 2015	IP protection class added Updated spec of collar material
_31	April 2015	HC2-S-HH, HC2-ICxxx-HH probes integrated
_32	June 2015	Update of document layout
_33	July 2015	Specification of HC2-IC / HC2-IM / HC2-IE adapted