



**testo 535 – Digital CO<sub>2</sub> meter**  
**0560 0535**

Instruction manual



# Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>About this document .....</b>                                  | <b>3</b>  |
| <b>2</b> | <b>Safety and disposal.....</b>                                   | <b>3</b>  |
| 2.1      | Security .....  | 3         |
| 2.2      | Disposal .....  | 4         |
| <b>3</b> | <b>Product-specific information.....</b>                          | <b>5</b>  |
| <b>4</b> | <b>Intended use .....</b>   | <b>5</b>  |
| <b>5</b> | <b>Product description .....</b>                                  | <b>6</b>  |
| 5.1      | Instrument overview .....   | 6         |
| <b>6</b> | <b>First steps .....</b>  | <b>7</b>  |
| 6.1      | Inserting / changing batteries .....                              | 7         |
| 6.2      | Getting to know the product .....                                 | 8         |
| 6.2.1    | Connecting probes .....   | 8         |
| 6.2.2    | Switching the instrument on and off .....                         | 8         |
| 6.2.3    | Switching the display illumination on and off .....               | 8         |
| 6.3      | Establishing a Bluetooth® connection.....                         | 9         |
| 6.3.1    | Establishing a Bluetooth® connection to the testo Smart App ..... | 10        |
| <b>7</b> | <b>Using the product.....</b>                                     | <b>11</b> |
| 7.1      | Controls on the measuring instrument.....                         | 11        |
| 7.1.1    | Implementing settings .....                                       | 12        |
| 7.1.2    | Opening configuration mode .....                                  | 13        |
| 7.1.3    | Setting the unit .....  | 13        |
| 7.1.4    | Setting alarm thresholds.....                                     | 14        |
| 7.1.5    | Setting the alarm sound .....                                     | 14        |
| 7.1.6    | Displaying temperature and pressure.....                          | 14        |
| 7.1.7    | Carrying out a reset of the setting menus.....                    | 15        |
| 7.1.8    | Carrying out a reset of the measuring instrument.....             | 15        |
| 7.2      | Measuring .....   | 16        |
| 7.2.1    | Freezing a reading, displaying the maximum/minimum value .....    | 16        |
| 7.2.2    | Resetting maximum/minimum values.....                             | 17        |
| 7.2.3    | Carrying out multi-point mean calculation .....                   | 17        |
| 7.2.4    | Carrying out continuous mean calculation.....                     | 18        |
| 7.3      | Printing data .....   | 19        |
| <b>8</b> | <b>Controls via testo Smart App.....</b>                          | <b>20</b> |
| 8.1      | Overview of operating controls.....                               | 20        |

## Contents

---

|           |   |           |
|-----------|---|-----------|
| 8.2       | App options.....                                  | 22        |
| 8.2.1     | Setting the language.....                         | 22        |
| 8.2.2     | Displaying App Info.....                          | 22        |
| 8.2.3     | Displaying the tutorial .....                     | 22        |
| 8.3       | Application menus .....                           | 23        |
| 8.3.1     | Selecting an application menu.....                | 23        |
| 8.3.2     | Setting favourites.....                           | 23        |
| 8.3.3     | Displaying information about an application ..... | 23        |
| 8.4       | Making measuring instrument settings .....        | 24        |
| 8.4.1     | Configuring the measuring instrument menu .....   | 26        |
| 8.4.2     | Setting Auto Off .....                            | 27        |
| 8.4.3     | Activating damping .....                          | 28        |
| 8.4.4     | Configuring alarms.....                           | 28        |
| 8.5       | Display of the readings .....                     | 29        |
| 8.6       | Adjusting the view.....                           | 29        |
| 8.7       | Exporting readings.....                           | 30        |
| 8.7.1     | Excel (CSV) Export.....                           | 31        |
| 8.7.2     | PDF Export.....                                   | 31        |
| 8.8       | Perform Firmware update .....                     | 32        |
| <b>9</b>  | <b>Maintaining the product .....</b>              | <b>33</b> |
| 9.1       | Inserting / changing batteries.....               | 33        |
| 9.2       | Cleaning the instrument.....                      | 33        |
| <b>10</b> | <b>Technical data for testo 535.....</b>          | <b>34</b> |
| <b>11</b> | <b>Tips and assistance.....</b>                   | <b>34</b> |
| 11.1      | Questions and answers .....                       | 34        |
| 11.2      | Accessories and spare parts.....                  | 35        |

# 1 About this document

- The instruction manual is an integral part of the instrument.
- Keep this documentation to hand so that you can refer to it when necessary.
- Always use the complete original instruction manual.
- Please read this instruction manual through carefully and familiarize yourself with the product before putting it to use.
- Hand this instruction manual on to any subsequent users of the product.
- Pay particular attention to the safety instructions and warning advice in order to prevent injury and damage to the product.

## 2 Safety and disposal

### 2.1 Security

#### General safety instructions

- Only operate the product properly, for its intended purpose, and within the parameters specified in the technical data.
- Do not apply any force.
- Do not operate the instrument if there are signs of damage to the housing or connected cables.
- Dangers may also arise from objects to be measured or the measuring environment. Always comply with the locally valid safety regulations when carrying out measurements.
- Do not store the product together with solvents.
- Do not use any desiccants.
- Only perform maintenance and repair work on this instrument that is described in this documentation. Follow the prescribed steps exactly when doing the work.
- Use only original spare parts from Testo.

#### Batteries

- Improper use of batteries may cause the batteries to be destroyed, or lead to injury due to current surges, fire or escaping chemicals.
- Only use the batteries supplied in accordance with the instructions in the instruction manual.
- Do not short-circuit the batteries.
- Do not take the batteries apart and do not modify them.

## 2 Safety and disposal

---

- Do not expose the batteries to heavy impacts, water, fire or temperatures in excess of 60 °C.
- Do not store the batteries in the proximity of metal objects.
- In the event of contact with battery acid: rinse affected areas thoroughly with water, and if necessary consult a doctor.
- Do not use any leaky or damaged batteries.

### Warnings

Always pay attention to any information denoted by the following warnings. Implement the precautionary measures specified!

#### DANGER

Risk of death!

#### WARNING

Indicates possible serious injury.

#### CAUTION

Indicates possible minor injury.


#### CAUTION

Indicates possible damage to equipment.

## 2.2 Disposal

- Dispose of faulty rechargeable batteries and spent batteries in accordance with the valid legal specifications.
- At the end of its useful life, deliver the product to the separate collection point for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.



-  WEEE Reg. No. DE 75334352

### 3 Product-specific information

- Do not carry out measurements on live components.
- Do not expose handles and feed lines to temperatures in excess of 70°C unless they are expressly approved for higher temperatures. Temperature specifications on probes/sensors refer only to the measuring range of the sensor system.
- Only open the measuring instrument if this is expressly described in the documentation for the purposes of maintenance or servicing.

### 4 Intended use

The testo 535 is a handy, robust measuring instrument for recording ambient CO<sub>2</sub> values. It is used for risk prevention and is intended for indoor use only.

Fields of application are, for example

- Evaluation of the indoor climate
- Heating systems with room air-dependent operation
- Ventilation systems

The product should not be used in the following areas:

- In potentially explosive atmospheres.
- For diagnostic measurements in the medical field.

5 Product description

5.1 Instrument overview

The image shows two views of a handheld electronic instrument. The front view (left) features a probe at the top (3), a monochrome LCD display showing '625' (2), and four control buttons labeled 'MODE', 'END', 'MENU', and 'ENTER' (1). The back view (right) shows a speaker grille (4) and a battery compartment cover (5). The instrument has an orange and black ruggedized design.

|   |                     |   |                         |
|---|---------------------|---|-------------------------|
| 1 | Control keys        | 2 | Display                 |
| 3 | Probe               | 4 | Speaker for alarm sound |
| 5 | Battery compartment |   |                         |

Explanation of icons

Refer to instruction manual

## 6 First steps

### 6.1 Inserting / changing batteries

#### ⚠ WARNING

Serious risk of injury to the user and/or destruction of the instrument. There is a risk of explosion if the batteries are replaced with ones that are the wrong type.

- Only use non-rechargeable alkaline batteries.

- ✓ The instrument is switched off.
- 1 Open the battery compartment (on the back of the instrument) via the snap lock.
- 2 Insert or replace batteries (3 x AA alkaline batteries).  
  
Observe the polarity!
- 3 Close the battery compartment.



When not in use for a long period: Take out the batteries.

#### Symbol explanation

|  |  |
|--|--|
|  | Do not allow children under 6 years of age to play with batteries. |
|  | Do not throw batteries in the trash.                               |
|  | Do not charge batteries.   |
|  | Do not place batteries near fire.                                  |
|  | Batteries are recyclable.  |



## 6.2 Getting to know the product

### 6.2.1 Connecting probes

The required probes are permanently connected or integrated. It is not possible to connect any additional sensors.

### 6.2.2 Switching the instrument on and off

#### Switching on

- 1 Press the **On/Off** key (0.5 sec).
- ▶ Measurement view is opened:  
  
The current reading is displayed or ---- lights up if no reading is available.

#### Switching off

- 1 Press and hold down (2 sec) the **On/Off** key.
- ▶ The display turns off.

### 6.2.3 Switching the display illumination on and off

- ✓ The measuring instrument is switched on.
- 1 Press and hold down (2 sec) the **MENU/ENTER** key.
- ▶ The display illumination is switched on or off.

## 6.3 Establishing a Bluetooth® connection



The instrument can be connected to the **testo Smart App** via Bluetooth® connection

✓ The measuring instrument is switched on.

▶ To enable the Bluetooth® connection for the first time, press and hold (approx. 2 sec) the ◀ key.

While the instrument is trying to establish a Bluetooth® connection, the ✱ icon flashes on the display.

Bluetooth® remains enabled until it is disabled manually by pressing and holding (approx. 2 sec) the ◀ key.

The measuring instrument saves the Bluetooth® setting and, depending on the configuration, starts up with Bluetooth® enabled or disabled.



### 6.3.1 Establishing a Bluetooth® connection to the testo Smart App




To establish a connection via Bluetooth®, you need a tablet or smartphone with the Testo Smart App already installed on it.

You can get the App for iOS instruments in the App Store or for Android instruments in the Play Store.

Compatibility:

Requires iOS 13.0 or later/Android 8.0 or later, requires Bluetooth® 4.2.



- ✓ Bluetooth® is enabled in the measuring instrument.
  - 1 Open the testo Smart App.
    - ▶ The app automatically searches for Bluetooth® devices in the vicinity.
  - 2 In the **Sensors** menu, check whether the required instrument is connected.
    - ▶ If necessary, switch the instrument to be connected off and on again to restart the connection module.
    - ▶ When the testo Smart App is connected to the measuring instrument, the  icon appears on the measuring instrument display.
- The measuring instrument automatically synchronizes its date and time settings with the testo Smart App.
- Once connected successfully, the current measured value from the measuring instrument appears on the app screen in the Live view.

## 7 Using the product

### 7.1 Controls on the measuring instrument

- ✓ The instrument is switched on.
- ✓ The **testo Smart App** is installed on the smartphone and connected to the instrument via Bluetooth®.
- ▶ Settings and controls are implemented either on the instrument or via the app.



If the measuring instrument is connected to the **testo Smart App**, settings can only be made via the app. The measuring instrument then remains in the measurement view and other menus, e.g. Settings, cannot be opened.



|   |   |
|---|---|
| 1 | On/Off / MODE/END key                             |
| 2 | Bluetooth® / ◀ key                                |
| 3 | Battery indicator                                 |
| 4 | Display of measured CO <sub>2</sub> concentration |
| 5 | Selected unit                                     |
| 6 | Print / ▶ key                                     |
| 7 | Illumination / MENU/ENTER key                     |

## 7.1.1 Implementing settings

### Selecting, opening and setting functions

- 1 Press the relevant key to select the functions









#### Secondary assignment (long press)




All keys with a grey corner have a secondary assignment, which can be selected by pressing and holding the key for a longer time (2 sec).

#### Adjustable functions



Ensure correct settings: all settings are transferred immediately. There is no Cancel function.

| Function   | Setting options/comments  |
|--|---|
|  Bluetooth® (long press)<br> | Switch the Bluetooth® connection on or off  |
| Arrow left<br>  | Freeze reading (HOLD function), display maximum/minimum value.<br><br>In configuration mode:<br>Decrease value, select option |
| On/Off (long press)<br>  | Switches the instrument on or off   |
| MODE/END<br>             | Select or end multi-point or continuous mean calculation.   |
| Display illumination (long press)<br>   | OFF (display illumination not active) or ON (display illumination active)   |

| Function   | Setting options/comments  |
|--|---|
| <b>MENU/ENTER</b><br>         | Open configuration mode<br><br>Start continuous measurement / record multi-point readings (Operation also possible directly on measuring instrument if it is connected to the app)<br><br>In configuration mode:<br>Confirm input |
| <b>Print (long press)</b><br> | Output readings via external printer  |
| <b>Arrow right</b><br>       | In configuration mode:<br>Increase value, select option   |



### 7.1.2 Opening configuration mode

- ✓ The instrument is switched on and is in the measurement view.
- 1 Press **MENU/ENTER** until the display changes.
- ▶ The instrument is now in configuration mode.
- ▶ Press **MENU/ENTER** to switch to the next function. You can leave configuration mode at any time. To do this, press **MODE/END** until the instrument has changed to the measurement view. Any changes that have already been made in configuration mode will be saved.


### 7.1.3 Setting the unit

- ✓ Configuration mode is open, "UNITS" is displayed.
- 1 Press **◀ / ▶** to choose between metric ("METR") and imperial ("IMPER") units of measurement and confirm with **MENU/ENTER**.
- ▶ The currently set unit flashes.
- 2 Press **◀ / ▶** to set the required unit and confirm with **MENU/ENTER**.

### 7.1.4 Setting alarm thresholds

- ✓ Configuration mode is open, “ min” is displayed.
- 1 Press ◀ / ▶ to set the lower alarm threshold value and confirm with **MENU/ENTER**.
- ▶ “ max” is displayed.
- 2 Press ◀ / ▶ to set the upper alarm threshold value and confirm with **MENU/ENTER**.

### 7.1.5 Setting the alarm sound

- ✓ Configuration mode is open, “” is displayed.
- 1 Press ◀ / ▶ to enable/disable the alarm sound (“ON” / “OFF”) and confirm with **MENU/ENTER**.

### 7.1.6 Displaying temperature and pressure

To calculate the CO<sub>2</sub> concentration, the measuring instrument needs the ambient temperature and the ambient air pressure.

These two parameters are measured by the measuring instrument, but are not output as separate readings; they are only displayed in the settings menu.

- ✓ Configuration mode is open.
- 1 Press ◀ / ▶ to scroll through the configuration menus until “T\_AMB” (ambient temperature) is displayed.
- ▶ The current ambient temperature is displayed.
- 2 Press ◀ / ▶ to scroll through the configuration menus until “P\_ABS” (absolute pressure) is displayed.
- ▶ The current ambient air pressure is displayed.

### 7.1.7 Carrying out a reset of the setting menus

- ✓ Configuration mode is open, "M. RES" (menu reset) is displayed.
- 1 Press ◀ / ▶ to select the required option and confirm with **MENU/ENTER**:
  - NO: Do not carry out reset.
  - YES: Carry out reset. All concealed menus that were hidden via the testo Smart App are displayed again.
- ▶ The instrument returns to measurement view.

### 7.1.8 Carrying out a reset of the measuring instrument

- ✓ Configuration mode is open, "RESET" is displayed.
- 1 Press ◀ / ▶ to select the required option and confirm with **MENU/ENTER**:
  - NO: Do not carry out reset.
  - YES: Carry out reset. The instrument is reset to the factory settings.
- ▶ The instrument returns to measurement view.



## 7.2 Measuring

- ✓ The instrument is switched on and is in the measurement view.
- 1 Place the measuring instrument into the position in which the measurement is to be carried out.

### IMPORTANT

- The probe contains sensitive visual components. Please handle the probe with care.
- Strong vibrations alter the factory calibration. Testing of measurement values at fresh air 350 to 450 ppm CO<sub>2</sub> (urban air up to 700 ppm CO<sub>2</sub>).
- Avoid dew on the probe, otherwise long-term stability will be impaired. If there is dew on the probe, this can lead to higher CO<sub>2</sub> measurement values.
- If the ambient temperature changes (change of measuring location, e.g. indoors/outdoors), the sensor/probe requires an acclimatization phase of a few minutes.
- After the measuring instrument is switched on, there is a sensor warm-up phase of approx. 30 s.
- The CO<sub>2</sub> concentration in the sensor requires approx. 60 s to adjust to the environment. Gently waving the probe reduces the acclimatization time.
- Keep the probe as far away from your body as possible. This avoids any influences due to the CO<sub>2</sub> content of the air you breathe.



### 7.2.1 Freezing a reading, displaying the maximum/minimum value

The current reading can be frozen. The maximum and minimum values since the last time the instrument was switched on in the standard view or during a multi-point or continuous measurement can be displayed.




- 1 Press ◀ several times until the desired value is displayed.
- ▶ The following are displayed in turn:
  - Hold: frozen measured value
  - Max: Maximum value
  - Min: Minimum value
  - Current measuring value

### 7.2.2 Resetting maximum/minimum values




The maximum/minimum values of all channels can be reset to the current reading.

- 1 Press  several times until Max or Min is shown.
- 2 Hold down  (approx. 2 s).
- ▶ All maximum and minimum values are reset to the current reading.

### 7.2.3 Carrying out multi-point mean calculation

- 1 Press **MODE/END**.
- ▶  flashes.
- ▶ The number of readings recorded is displayed in the upper line, while the current reading is displayed in the lower line.
- 2 To record readings (in the desired quantity):  
  
Press **MENU/ENTER** (several times).
- 3 To end measurement and calculate the mean value:  
  
Press **MODE/END**.
- ▶  and  flash.  
  
The number of measured values and the calculated multi-point mean value are displayed.
- 4 To switch back to the measuring view:  
  
Press **MODE/END**.

### 7.2.4 Carrying out continuous mean calculation

- 1 Press **MODE/END** twice.
  - ▶  flashes.
  - ▶ The elapsed measuring time (mm:ss) is displayed in the upper line, while the current reading is displayed in the lower line.
- 2 Start measurement:  
  
Press **MENU/ENTER**.
- 3 To interrupt/continue measurement:  
  
Press **MENU/ENTER** each time.
- 4 To end measurement and calculate the mean value:  
  
Press **MODE/END**.
  - ▶  and  flash.  
  
The measurement period and the calculated continuous mean value are displayed.
- 5 To switch back to the measuring view:  
  
Press **MODE/END**.

## 7.3 Printing data

- ✓ A testo Bluetooth®/IRDA printer (order no. 0554 0621) is connected via Bluetooth and switched on.



When first setting up a connection between the testo measuring instrument and the testo Bluetooth®/IRDA printer, the initialization phase can last up to 30 seconds.


- 1 Press and hold ► to transfer the data to the printer.
- Data is printed out (LED on the printer lights up green).

|   |                                      |
|---|--------------------------------------|
|   |                                      |
| 1 | Instrument name                      |
| 2 | Firmware version and serial number   |
| 3 | Date and time of printout            |
| 4 | Measuring type and measured duration |
| 5 | Measurement values                   |
| 6 | Measurement parameters               |

## 8 Controls via testo Smart App

If the measuring instrument is connected to the testo Smart App, it is primarily operated via the app. The measuring instrument remains in the measurement view and settings menus cannot be opened on the measuring instrument.










### 8.1 Overview of operating controls












The screenshot shows the 'Basic view' of the testo Smart App. At the top, there is a status bar with '100%' battery and '09:33' time. Below this is a header bar with a hamburger menu icon (1), the text 'Basic view', and a gear icon (5). Under the header bar are three tabs: 'LIVE' (2), 'GRAPHIC', and 'TABLE'. Below the tabs is an orange button with a timer '1 | 00:00:00'. The main display area shows two sections of data. The first section has a title 'Meas. ID: 297' and a list of measurements: 'Air temperature: 23.8 °C', 'Relative humidity: 48.7 %RH', 'Dew point: 12.4 °C', 'WB-Glob. temperature: 16.6 °C', and 'Absolute humidity: 10.49 g/m³'. The second section has a title 'Meas. ID: 374' and shows 'Temperature: 24.9 °C' and 'Humidity: 3.58 m/s'. A vertical orange bar is on the left side of the data sections. At the bottom, there is an orange button with a play/pause icon (4). Numbered callouts 1 through 6 point to specific UI elements as described in the table below.

|   |   |   |   |
|---|---|---|---|
| 1 | Choice of applications  | 2 | Switch between the views (live, graphic, table) |
| 3 | Display of connected measuring instruments including readings   | 4 | Start/stop                                      |
| 5 | Measurement configuration (the menu changes depending on the measuring instrument connected and the application selected) | 6 | Configuration of the measuring instrument       |

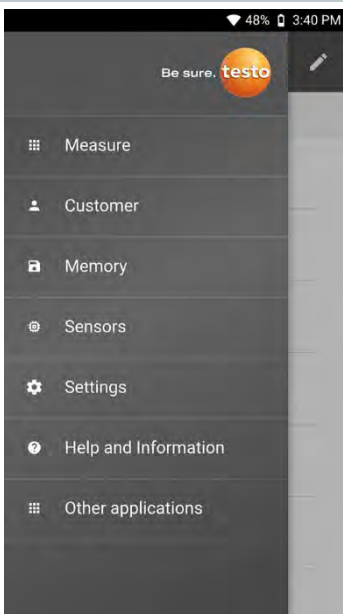**Additional symbols on the user interface of the app (not numbered)**


|   |                               |
|---|-------------------------------|
|  | One level back                |
|  | Exit view                     |
|  | Share measurement data/report |
|  | Searching                     |
|  | Favourite                     |
|  | Deleting                      |
|  | Further information           |
|  | Display report                |
|  | Multiple selection            |

The **Main menu** can be accessed via the  icon at top left. To exit the main menu, select a menu or right-click on the guided menus. The last screen displayed is shown.

|   |                             |   |
|---|-----------------------------|---|
|    | <b>Measure</b>              |  |
|    | <b>Customer</b>             |   |
|  | <b>Memory</b>               |   |
|  | <b>Sensors</b>              |   |
|  | <b>Settings</b>             |   |
|  | <b>Help and Information</b> |   |
|  | <b>Other applications</b>   |   |

## 8.2 App options


### 8.2.1 Setting the language

- 1 Click on .
- 2 Select **Settings**.
- 3 Select **Language**.
  - ▶ A selection list is displayed.
- 4 Select the required language.
  - ▶ The language is changed.

### 8.2.2 Displaying App Info




In App Info you can find the version number of the installed App.

- 1 Click on .
- 2 Select **Help and Information**.
- 3 Select **Instrument information**.
  - ▶ The version number of the app and the ID are displayed.

### 8.2.3 Displaying the tutorial




The tutorial guides you through the first steps in operating the testo Smart App.




- 1 Click on .
- 2 Select **Help and Information**.
  - ▶ The tutorial is displayed. In the tutorial, swipe to display the next page.
- 3 Click **X** to quit the tutorial.

## 8.3 Application menus



### 8.3.1 Selecting an application menu

- 1 Click on .
- ▶ A selection of menus for various applications is displayed.
- 2 Select the required application.
- ▶ Your selected application is displayed.

### 8.3.2 Setting favourites



- 1 Click on .
- ▶ A selection of menus for various applications is displayed.
- 2 Select the application you want to set as a favourite.
- 3 Click on .
- ▶ The star is displayed in orange: .

### 8.3.3 Displaying information about an application

- 1 Click on .
- ▶ A selection of applications is displayed.
- 2 Click on .
- ▶ The information about an application is displayed.




## 8.4 Making measuring instrument settings

- ✓ The measuring instrument is connected to the testo Smart App.
  - 1 Click on .
  - ▶ The main menu opens.
  - 2  Click on **Sensors**.
  - ▶ The **Sensors** menu opens.
  - 3 Click on the required measuring instrument.
  - ▶ Information about the model, order number, serial number and firmware version is displayed.
  - 4 Click on the **Settings** tab.
  - ▶ A window with settings for the respective measuring instrument opens.
- In addition to the settings that can be performed on the measuring instrument, additional settings can also be made.

- 5 Click on the blue text under a settings heading to activate or disable settings or to open an input window to enter a specific value or select a unit.

For details on the settings options, see the following sub-sections.

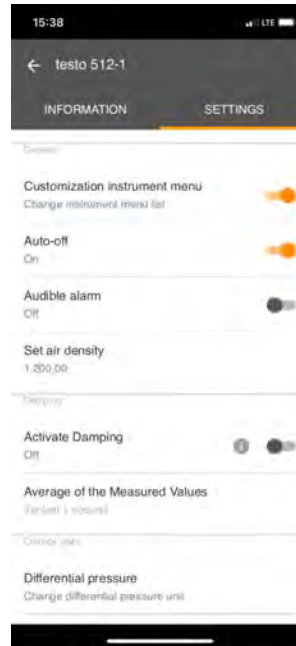

- Changes to the measuring instrument settings in the app are transferred directly to the measuring instrument. Synchronization with the app is confirmed on the measuring instrument via "SYNC DONE".



### 8.4.1 Configuring the measuring instrument menu

The testo Smart App can be used to set which settings menus should be available or hidden on the measuring instrument itself.


- ✓ The **Settings** tab in the **Sensors** menu is open.

- 1 - Activate **Customization instrument menu** and click on the blue text **Change instrument menu list** under the settings heading.

- ▶ The **Customization instrument menu** dialogue opens.

On the measuring instrument, the following menus can be displayed or hidden:

- Configuring alarms
- Alarm sound on/off
- Setting the unit
- Pitot tube factor (testo 512-1 only)
- Absolute pressure (testo 512-1 only)

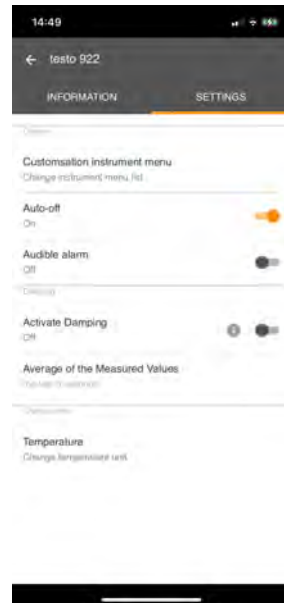


- 2 Deactivate the checkboxes for the measuring instrument menus that are no longer to be displayed on the measuring instrument itself.

- ▶ The menus belonging to the deactivated entries will no longer be displayed in the measuring instrument menu after the next synchronization.



These settings can be reset via the menu reset "M.RES" and then all settings menus will be displayed on the measuring instrument again.

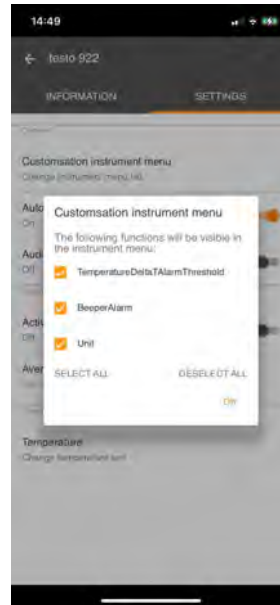

### 8.4.2 Setting Auto Off

- ✓ The **Settings** tab is open.

- 1 Enable **Activate Auto-off** using the slider.

- ▶ The measuring instrument switches off automatically if no key is pressed for 10 min.

Exception: a frozen reading is shown on the display ("Hold" is displayed).


### 8.4.3 Activating damping



If the readings fluctuate wildly, it is advisable to damp the readings.

- ✓ The **Settings** tab is open.
- 1 Enable **Activate damping** using the slider.
- 2 Click on **Average of the measured values**.
- ▶ The window for Average of the measured values opens.
- 3 Enter a value between 2 and 20 measured values.
- ▶ Changes to the measuring instrument settings in the app are transferred directly to the measuring instrument. Synchronization with the app is confirmed on the measuring instrument via "SYNC DONE".

### 8.4.4 Configuring alarms

- ✓ The standard view with the **LIVE** tab is open.
- 1 Click on .
- 2 Select **Alarm configuration**.
- ▶ The menu with the overview of alarms that can be activated opens.
- 3 Click on the checkbox to activate a specific alarm.
- 4 Click on **EDIT**.
- ▶ The input window for activating and defining upper and lower warning and alarm values is displayed.
- 5 Click **OK** to confirm the settings.
- ▶ Changes to the measuring instrument settings in the app are transferred directly to the measuring instrument. Synchronization with the app is confirmed on the measuring instrument via "SYNC DONE".

## 8.5 Display of the readings




The available readings can be displayed in different views.

- **Live view:**  
The readings transmitted by the measuring probes can be displayed in a live view. Readings from all connected measuring probes are displayed.
- **Graphic view:**  
Up to four different readings can be displayed in graph format. Readings to be displayed can be selected by tapping on a reading above the diagram.
- **Table view:**  
In the table view, all readings are displayed in sequence according to date and time. Different readings from the individual measuring probes can be displayed by pressing ◀ ▶.

## 8.6 Adjusting the view

- 1 | Click on .
- 2 | Select **Edit view**.
  - ▶ An overview of all measurement channels and their measurement parameters is displayed.
- 3 | Deselect the “check mark” to hide a measuring instrument’s measurement channel.
- 4 | Click ▼ to select the unit of a measurement channel.
- 5 | Click **OK** to confirm the settings.

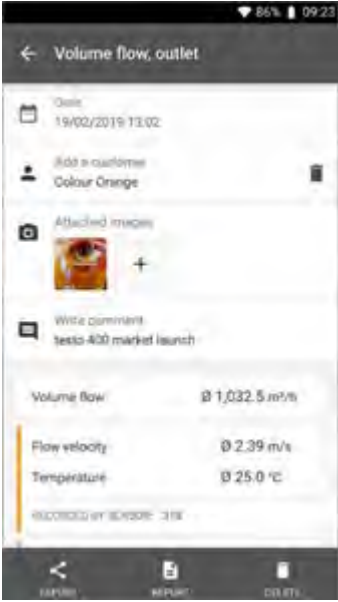


## 8.7 Exporting readings




The screenshot shows the 'Volume flow, outlet' screen in the testo Smart App. It displays the following information:


- Date: 19/02/2019 13:02
- Add a customer: Colour Orange
- Attached images: One image of a red object with a plus sign to add more.
- Write comment: testo 430 market launch
- Volume flow: 1,032.5 m³/h
- Flow velocity: 2.39 m/s
- Temperature: 25.0 °C
- Success message: SUCCESSFULLY EXPORTED 318

At the bottom of the app screen are three icons: a share icon, a document icon, and a trash icon. Below the screenshot is a table with four rows and two columns:

|   |        |   |        |
|---|--------|---|--------|
|  | Export |  | Report |
|  | Delete |   |        |
|   |        |   |        |
|   |        |   |        |

- 1 Click on .
- 2 Select **Memory**.
- 3 Click on **Select measurement**.

### 8.7.1 Excel (CSV) Export

- 1 | Click on .
- ▶ A selection of export options is displayed.
- 2 | Click on **Start export**.
- ▶ A selection of sending/export options is displayed.
- 3 | Select the required sending/export options.

### 8.7.2 PDF Export

- 1 |  Click on **Report**.
- ▶ A selection window is displayed.
- 2 | If required, activate the **Create PDF with all readings** button.
- 3 | Click on **Create**.



For measurements, please be aware that the option **Create PDF with all readings** is only possible up to 30 pages, due to the resulting file size and number of pages. In the testo DataControl software, however, PDF reports can be created for all measurements without any restrictions.

---


- ▶ A report containing all the information is created.
- ▶ A selection window is displayed. The report can be sent via e-mail or Bluetooth®.
- 4 | Click on **E-mail** or **Bluetooth®**.
- ▶ The report will be sent.



## 8.8 Perform Firmware update



Ensure that the option for **Enable update for connected instruments** in **Instrument Information** is always enabled.

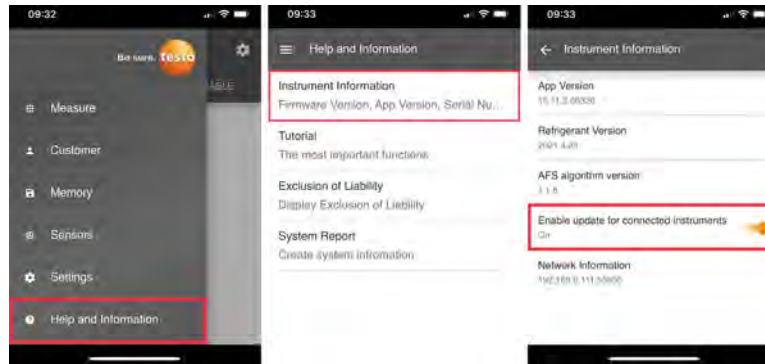

- ✓ If a new firmware is available for your measurement instrument, an update notification is shown after connecting the instrument with the testo Smart App.

- 1 Click **Start Update** to perform the update.

If you click **Later**, the Update notification is shown again during the next connection.



During the instrument update the Bluetooth connection must **not** be disconnected.

The update needs to be performed completely and takes approx. 5-10 minutes depending on the used smartphone.





After the update the measuring instrument is restarting.  
The firmware can be checked in the instrument menu or via the app.  
A restart of the testo Smart App is recommended after the instrument update.

## 9 Maintaining the product

### 9.1 Inserting / changing batteries

#### ⚠ WARNING

**Serious risk of injury to the user and/or destruction of the instrument. There is a risk of explosion if the batteries are replaced with ones that are the wrong type.**

**- Only use non-rechargeable alkaline batteries.**



The instrument is switched off.

1

Open the battery compartment (on the back of the instrument) via the snap lock.

2

Insert or replace batteries (3 x AA alkaline batteries).

Observe the polarity!

3

Close the battery compartment.



When not in use for a long period: Take out the batteries.

### 9.2 Cleaning the instrument

1

If the housing of the instrument is dirty, clean it with a damp cloth.




Do not use any aggressive cleaning agents or solvents! Mild household cleaning agents and soap suds may be used.

## 10 Technical data for testo 535

| Feature                               | Value   |
|---------------------------------------|---|
| Measurement parameters                | ppm<br>%  |
| Accuracy<br>(at 25 °C, $\pm 1$ digit) | $\pm(100 \text{ ppm} + 5\% \text{ of measuring value})$     |
| Resolution                            | 1 ppm   |
| Temperature coefficient               | $\pm(2 \text{ ppm} + 0.4\% \text{ of measuring value}) / K$ |
| Measuring range                       | 0 to 10,000 ppm   |
| Operating temperature                 | 0 to +50 °C   |
| Storage temperature                   | 0 to +50 °C   |
| Operating humidity                    | 0 to 80 %RH / For indoor use only                           |
| IP class                              | IP20  |
| Level of contamination                | PD2   |
| Max. operating altitude               | $\leq 2000 \text{ m}$ above sea level                       |
| Nominal output                        | 2 W @ 4,5 V DC  |
| Battery type                          | 3 x 1.5 V AA battery<br>(included in the scope of delivery) |
| Battery life                          | >30 h   |
| Dimensions                            | 229 x 60 x 28 mm  |
| Weight                                | 229 g   |

## 11 Tips and assistance

### 11.1 Questions and answers

| Question   | Possible cause   | Possible solution   |
|--|--|---|
|  is displayed<br>(top right on the display) | Instrument battery is almost spent   | Replace instrument battery  |
| Instrument switches itself off   | <ul style="list-style-type: none"> <li>Auto Off function is switched on</li> <li>Remaining battery capacity is insufficient</li> </ul> | <ul style="list-style-type: none"> <li>Switch off Auto Off function</li> <li>Change the battery.</li> </ul> |

| Question                    | Possible cause   | Possible solution   |
|-----------------------------|--|---|
| Display responds sluggishly | Ambient temperature is very low  | Increase ambient temperature  |
| Display: -----              | Sensor error   | Please contact your dealer or Customer Service.   |
| Display: OOOOO              | Permissible measuring range has been exceeded  | Keep within the permissible measuring range   |
| Display: UUUUU              | Permissible measuring range has been undershot   | Keep within the permissible measuring range   |
| Display: BT Fail            | Bluetooth connection could not be established  | <ul style="list-style-type: none"> <li>• Check Bluetooth® connections.</li> <li>• Restart measuring instrument, restart testo Smart App.</li> </ul>                           |
| Display: Print Fail         | Printout could not be performed successfully   | <ul style="list-style-type: none"> <li>• Check Bluetooth® connections, switch off and then on again if necessary.</li> <li>• Switch printer off and then on again.</li> </ul> |
| Display: Probe Fail         | Probe damage   | Please contact your dealer or Customer Service.   |
| Display: OTA Fail           | The update process "over the air" of the measuring instrument could not be completed successfully. | Restart the measuring instrument and testo Smart App and check the Bluetooth® connection.   |
| Display: APP Lost           | Connection to the testo Smart App was interrupted. Keys are locked for 3 s.                        | Restart the measuring instrument and testo Smart App and check the Bluetooth® connection.   |

## 11.2 Accessories and spare parts

| Description             | Order no. |
|-------------------------|-----------|
| Bluetooth®/IRDA printer | 0554 0621 |