


STABILA®



TECH 700 DA

en Operating Instructions



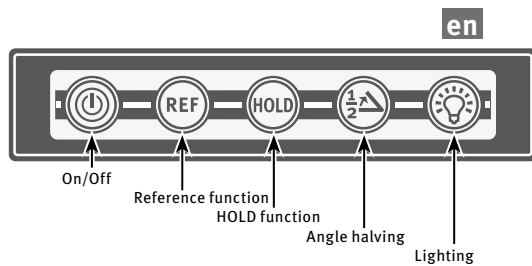

Intended use

The STABILA TECH 700 DA is an electronic angle finder with digital display for quickly and easily measuring angles. Together with the vials, the angle finder can also be used as a spirit level.


? If you still have questions after reading through the operating instructions, you can obtain advice by telephone:
+49 63 46 3 09 0
1.800.869.7460 U.S. and Canada

Equipment and functions:


- Electronics module with digital display for accurately setting and measuring angles
- Vertical vial for vertical levelling
- Horizontal vial for horizontal levelling

Components of the unit

1. 2 measuring surfaces
2. Vials - vertical and horizontal
3. Arm with 2 marking and cutting edges
4. LOCK system - to fix the set angle
5. Keyboard
6. Display
7. Battery compartment lid

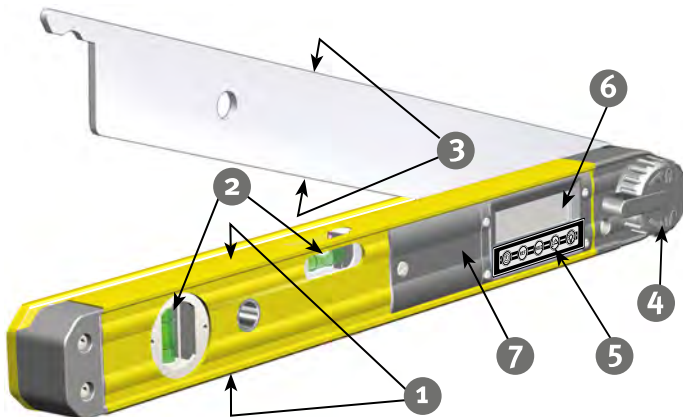

en

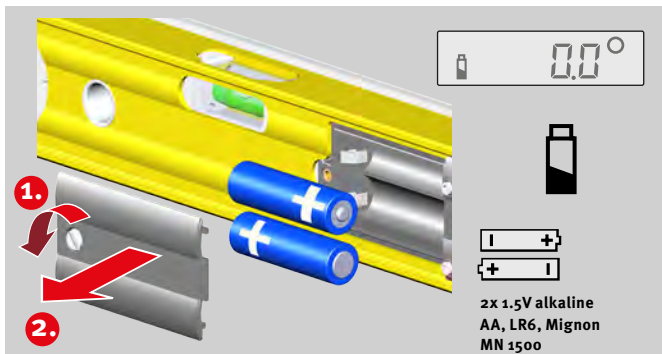

Insert batteries / Battery replacement

Unscrew battery compartment lid on front, insert new batteries according to symbol in battery compartment. Suitable rechargeable batteries can also be used.


LCD:

low battery charge - insert new battery



Dispose of used batteries at suitable collection points - not with household waste. Do not leave in unit!

Remove the batteries if you do not intend to use the unit for some time!

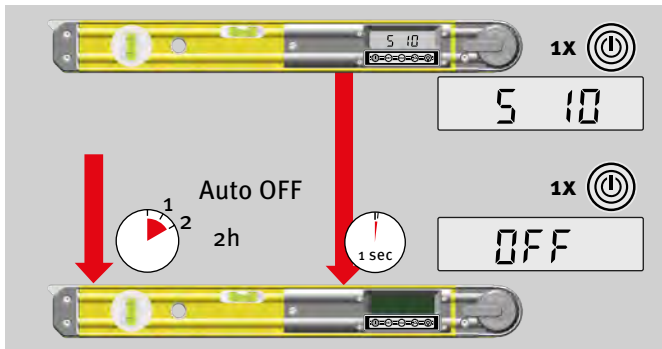


Commissioning

After switching on, the version number S x.xx of the measuring program is briefly displayed. The unit is switched off by briefly pressing the "ON/OFF" button. The "OFF" confirmation appears for 1 second.

Automatic switch-off time


If not used for long periods, the electronic angle finder automatically switches off after 2 hours.

en

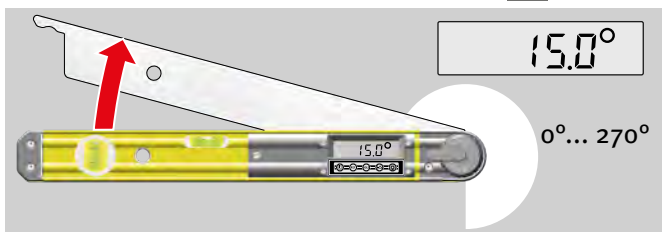

Angle finder


The angle finder displays the angle currently set between the arm and body. Angle measurements can be taken between 0° and 270°.

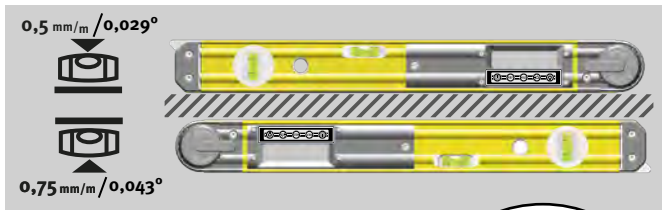

Spirit level

The angle finder with 2 measuring surfaces is also a fully functional spirit level for horizontal and vertical measurements to level construction elements. High-quality STABILA technology makes the vials suitable for measurements:


- (1) in the normal position
- (2) in the reverse position

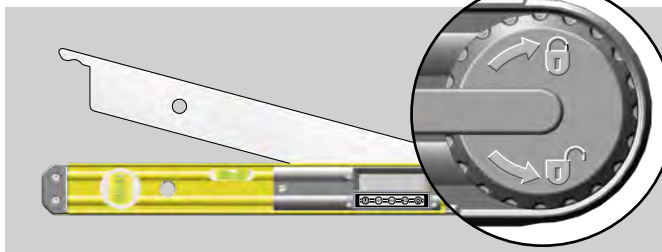

Bevel gauge

The LOCK system can be used to fix the arm at the set angle.

en

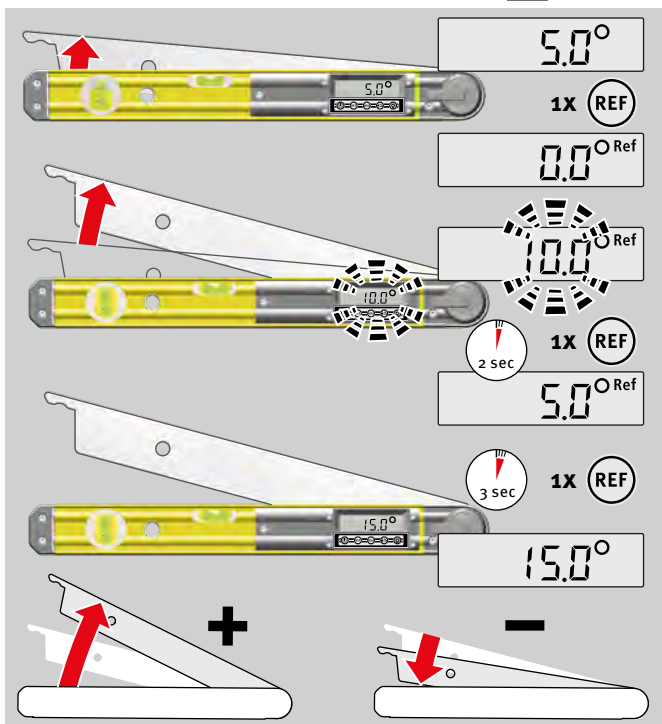

Reference function

The REF button can be used to select any set angle as 0° reference. The angle details now displayed relate to this reference angle.

The next time the arm is rotated, only the newly set angle is displayed. The display flashes in this setting. The REF symbol indicates this function setting.

The original reference angle value is displayed for 2 seconds by briefly pressing the REF button.

The reference angle is deleted by:

- pressing and holding (≥ 3 sec) the REF button
- switching off
- the automatic switch-off function


Positive and negative angles when adjusting the arm:

angle greater than reference: positive
angle less than reference: negative




Only the negative sign is displayed

en

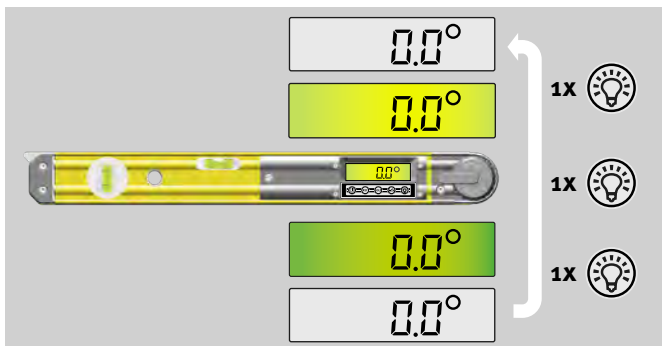

Lighting

Repeatedly pressing the "Lighting" button switches the display lighting on, to half luminance or off.

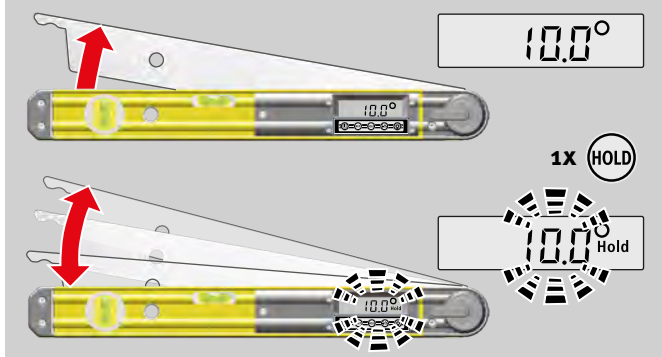


HOLD function

The current measurement can be saved by pressing the HOLD button. The measurement is displayed continuously. In this setting, the display flashes and the HOLD symbol is displayed. This function can be used in combination with the reference function.

The saved measurement is deleted by again pressing the HOLD button or switching the unit off.


en

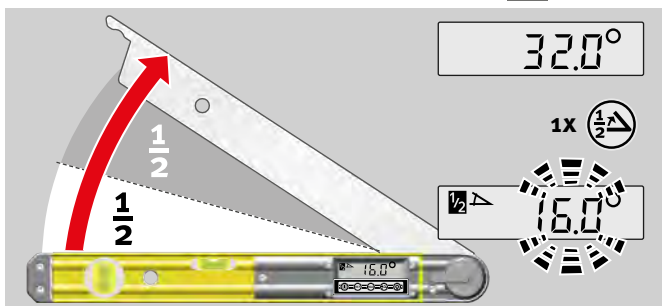

Angle halving

The current measurement is halved by pressing the "Angle halving" button. The measurement is displayed continuously. In this setting, the display flashes and the "Angle halving" symbol is displayed.

The value is deleted by again pressing the "Angle halving" button or switching the unit off.

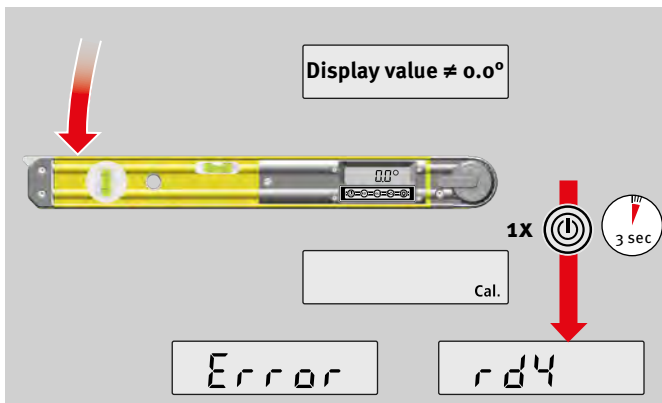

Calibration of zero position

During use, instances may arise when the display does not show 0.0° when the arm is swivelled all the way in.

If this happens, first check whether dirt is preventing the arm from closing fully. If the display is still not showing 0.0°, the unit must be calibrated.

With the arm folded all the way in, the zero position is calibrated by pressing and holding the ON/OFF button. "CAL" is displayed for approx. 1 second. Successful calibration is confirmed with "rdy".

The unit cannot be recalibrated if "Error" appears on the display. The angle finder must be returned for inspection.

en

Maintenance and upkeep

The electronic angle finder is a precision instrument and should therefore be handled with care.

Display window:

Dirty window glass impairs the optical function.
Only clean with a soft cloth, a little water or, if required, a mild detergent!

Casing:

Clean the unit with a damp cloth.
Do not use solvents or thinners!
Do not immerse the unit in water
Do not open the electronic angle finder!



Transport and storage

Remove the batteries if you do not intend to use the unit for some time!

Do not store the unit when damp!
Allow the unit and carry case to dry first if necessary.



Recycling program for our EU customers

In accordance with WEEE rules, STABILA offers to dispose of electronic products at the end of their useful service life.
For more information call: +49 63 46 3 09 0



Technical data

Accuracy of electronics module:

Angle measurement: $\pm 0.1^\circ$

Accuracy of spirit level:

in normal position: $0.5 \text{ mm / m} = 0.029^\circ$

in reverse position: $0.75 \text{ mm / m} = 0.043^\circ$

Measuring range: $0^\circ - 270^\circ$

Batteries :

2 x 1.5 V alkaline, size Mignon, AA, LR6

Operating life : ≥ 150 hours

Operating temperature range: -10°C to $+50^\circ\text{C}$ / 14°F to 122°F

Storage temperature range: -20°C to $+65^\circ\text{C}$ / -4°F to 149°F

Protection class: IP 54

Subject to technical modifications.