

# PR2000



Data Logger Manual



# Table of Contents

**Section 1: Device Safety**.....3

    1.1 Model information .....3

    1.2 Specifications .....3

    1.3 Warranty .....5

**Section 2: Device Overview** .....6

**Section 3: Status Indicator Icons** .....7

    3.1 Battery Status .....7

    3.2 Memory Status .....7

    3.3 Running Indicator.....7

    3.4 Delay Start Indicator .....8

    3.5 Wait Icon.....8

    3.6 Stop Icon.....8

    3.7 External Power Icon.....8

    3.8 Reset Icon.....8

**Section 4: Front Panel Overview** .....9

    4.1 Changing the display units .....9

    4.2 Changing the number, type, and size of channels viewed.....9

    4.3 Checking the memory status .....10

    4.4 Checking power status .....10

    4.5 Changing the Contrast.....10

**Section 5: PR2000 Function Reference**.....11

    5.1 Main Screen .....11

    5.2 Status Menu .....11

    5.3 Statistics Menu .....12

    5.4 Units.....13

    5.5 Setup Menu .....13

**Section 6: PR2000 Screen Descriptions** .....18

    6.1 Main Screen: .....18

    6.2 Status Screens (Run Parameters): .....18

    6.3 Status Screens (Memory Status):.....19

    6.4 Status Screens (Time): .....19

    6.5 ID Parameters .....20

    6.6 Statistics Menu Screen:.....20

6.7 Channel Statistics: .....21

6.8 Type Statistics:.....21

6.9 Statistics Information Screen:.....22

6.10 Unit Selection Menu:.....22

6.11 Device Configuration Menu:.....23

6.12 Adjust Visibility: .....23

6.13 Display Configuration:.....24

6.14 Power Modes Screen: .....25

6.15 Display Update Mode Screen:.....25

6.16 Power Status Screen: .....26

6.17 Device Information Screens (Minimum Device Range):.....26

6.18 Device Information Screens (Maximum Device Range): .....27

6.19 Device Information Screens (Device Version): .....27

6.20 Device Information Screens (Firmware Version): .....28

6.21 Calibration Information Screens (Calibration Date): .....28

6.22 Calibration Information Screens (Pressure Calibration):.....29

6.23 Device Reset Screen (Hardware Reset): .....29

6.24 Device Reset Screen (Power Interruption): .....30

**Section 7: Computer Interface .....31**

**Section 9: Maintenance .....32**

**Section 10: Terms and Conditions.....33**

10.1 Limited Warranty: .....33

10.2 Limitations:.....35

10.3 Software License:.....35



Section 1: Device Safety



**CAUTION:** DEVICE MUST BE USED ONLY IN A MANNER CONSISTENT WITH THIS MANUAL.

**NOTICE:** WHEN 230VAC SUPPLY USED, MADGETECH SPECIFIES USE OF AC SUPPLY PART # T35-9-100R-3 MANUFACTURED BY ENG ELECTRIC. THIS SUPPLY IS AVAILABLE FROM MADGETECH.

1.1 Model information

- Model: PR2000
- Description: Measure and record pressure with LCD display featuring real-time on screen graphing capabilities and a 1/4" NPT fitting.
- Manufactured by MadgeTech, Inc. Warner, NH USA

1.2 Specifications

**Pressure**

Range: 0 to 30, 100, 300 and 500 PSIA/G  
0 to 1000 and 5000PSIA

Resolution: 0.002, 0.005, 0.02, 0.05PSIA/G

Calibrated Accuracy: 2% FSR, 0.25% @ 25°C typical

**Dot-Matrix LCD**

Dimensions: 2.5" x 1.375" (63mm x 35mm)

Text: Configurable channel text size

Indicators: Power, status, memory

Backlight: Configurable w/auto shut-off and contrast adjustment

**Start/Stop Time:**

Software programmable start time and date, up to six months in advance; programmable stop time

**Memory:**

262,143 total readings; software configurable memory wrap

**Reading Rate:**

1 reading every 2 seconds to 1 every 24 hours

**Calibration:**

Digital calibration through software

# MadgeTech PR2000

|                               |                                                                                                                                                          |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Calibration Date:</b>      | Automatically recorded within device                                                                                                                     |
| <b>Battery Type:</b>          | 6 alkaline AA batteries, user replaceable; optional AC adapter, 7-24 VDC, 100mA. For 230 VAC operation use AC supply T35-9-100 R-3 made by ENG Electric. |
| <b>Battery Life:</b>          | 60 days typical with continuous screen use; 360 days with display off.                                                                                   |
| <b>Data Format:</b>           | Date and time stamped PSI, inHg, mmHg, bar, atm, Torr, Pa, kPa, MPa                                                                                      |
| <b>Time Accuracy:</b>         | ±1 minute/month (at 20° to 30°C)                                                                                                                         |
| <b>Computer Interface:</b>    | USB (interface cable required); 115,200 baud                                                                                                             |
| <b>Software:</b>              | XP SP3/Vista/Windows7                                                                                                                                    |
| <b>Operating Environment:</b> | -20 to +60°C, 0 to 95%RH non-condensing                                                                                                                  |
| <b>Dimensions:</b>            | 5.1" x 4.8" x 1.78" (130mm x 122mm x 45mm)                                                                                                               |
| <b>Weight:</b>                | 40 oz (1134 g)                                                                                                                                           |
| <b>Enclosure:</b>             | Black anodized aluminum                                                                                                                                  |



1.3 Warranty

Products manufactured by MadgeTech, Inc., are warranted against defective material and workmanship for a period of one year, starting from the date of shipment. In the event that a MadgeTech product is found to be defective, MadgeTech will repair or replace the product at its sole discretion. Such repair or replacement shall be the sole remedy of this warranty.

This warranty extends only to the original purchasing customer and does not apply to any unit, which in our sole judgment, has been subjected to:

- a) Operating or environmental conditions in excess of our written specifications or recommendations;
- b) Damage, misuse or neglect;
- c) Improper installation, repair or alteration.


This warranty excludes batteries.

Except as to title, this is our only warranty for the products. MadgeTech, Inc. expressly disclaims all other warranties, guarantees or remedies—whether expressed or implied or statutory—including any implied warranty of merchantability or fitness for a particular purpose. We also disclaim any implied warranty arising out of trade usage or out of a course dealing or course of performance. We do not guarantee the integrity of data or warranty that the products will operate uninterrupted or error-free.

MadgeTech data loggers and their associated software have been thoroughly tested and the documentation reviewed. However, MadgeTech does not warrant the performance of its products, or that the products or their associated software will operate as described in this manual.

*Please refer to page 33 for MadgeTech’s complete Terms and Conditions.*

Section 2: Device Overview

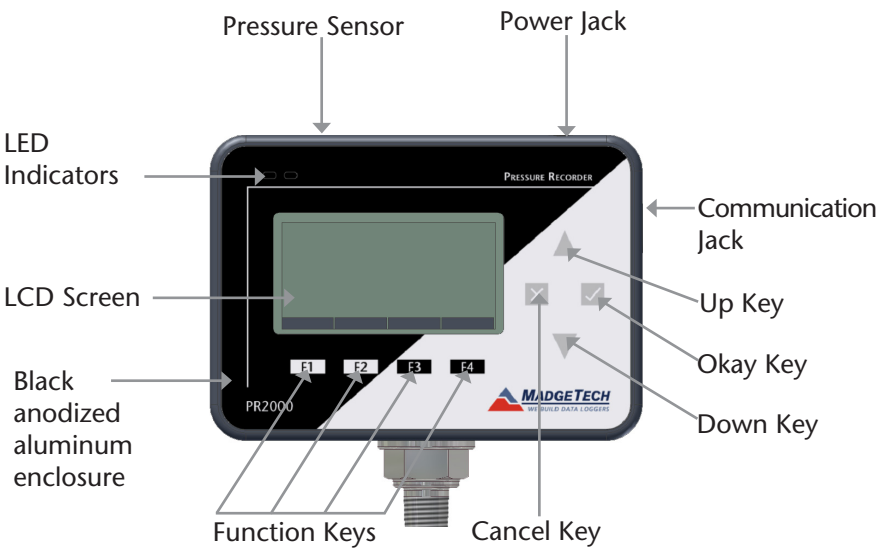

## Section 3: Important Status Icons

### 3.1 Battery Status



Battery status icons indicate the state of charge of the batteries.  
When the battery empty indicator is displayed, the battery should be replaced.

### 3.2 Memory Status



The memory status icons indicate the amount of memory left for data storage. If the PR2000 is in wraparound mode, the memory status icon will always indicate empty.

### 3.3 Running Indicator



Indicates that the PR2000 is taking readings. The icons cycle periodically.

3.4 Delay Start Indicator



*The delay start icon indicates that a logging operation is scheduled for the future.*

3.5 Wait Icon



*The wait icon indicates that the device is busy.*

3.6 Stop Icon



*Indicates that the PR2000 is not currently taking readings.*

3.7 External Power Icon



*Indicates that the PR2000 is powered by an external source.*

3.8 Reset Icon



*Indicates that the device has been reset.*

## Section 4: Front Panel Overview

---

### 4.1 Changing the display units

The PR2000 comes with factory default display units of PSI for pressure and the real-time pressure graphing feature. These units can be easily changed by pressing the F3 button in the main screen and then selecting F1 for pressure or F2 for the pressure graph. After selecting the channel, the available units can be scrolled through by either pressing the channel's function key repeatedly or using the UP and DOWN keys.

#### ***Button pressing chain:***

Main Screen -> F3 -> F1 (pressure) or F2 (pressure graph) -> function key repeatedly or UP and DOWN

### 4.2 Changing the number, type, and size of channels viewed

By default the PR2000 displays recently measured values of the pressure channel and the real-time pressure graph on its Main Screen in a large size font. The channel and graph can, however, be hidden or viewed on a smaller or larger scale.

#### **To change the number and type of displayed channels:**

From the Main Screen, press the F4 key to enter the Setup Menu and from this menu press the F1 key to enter the Display screen. On this screen, F1 and F2 correspond to the Pressure channel and Pressure graph respectively. Pressing these function keys repeatedly will cause the channels to scroll between "show" or "hide" channels displaying "show" will appear on the main screen and channels displaying "hide" will not.

#### ***Button pressing chain:***

Main Screen -> F4 -> F1 -> F1 (pressure) or F2 (pressure graph)

#### **To change the size of displayed channels:**

From the Main Screen, press the F4 key to enter the Setup Menu and from this menu press the F1 key to enter the Display screen, then F4 to scroll to the next screen. Here the F2 key will change the size of the channels viewed. By pressing F2 repeatedly the size parameter will scroll between 3 sizes: small, medium, and large.

#### ***Button pressing chain:***

Main Screen -> F4 -> F1 -> F4 -> F2 repeatedly to scroll

### 4.3 Checking the memory status

A status icon appears on all screens representing memory, but further information including percent memory left and number of readings taken can also be viewed. From the Main Screen press the F1 key to enter the Status screens then press F2 to view memory status information.

#### ***Button pressing chain:***

Main Screen -> F1 -> F2

### 4.4 Checking power status

A battery status and external power status (if available) icon appear on all screens, but percent battery power remaining and external power presence as well as battery type, current battery voltage, and current external voltage can also be viewed. From the Main Screen press F4 to view the Device Configuration Menu, F2 to access the power options, then F4 twice to view the Power Status screen, including battery power percent remaining and the presence of external power. Battery type and battery voltage are also displayed, as well as external power voltage (if connected).

#### ***Button pressing chain:***

Main Screen -> F4 -> F2 -> F4 -> F4

### 4.5 Changing the contrast

The PR2000's LCD screen contrast values can be changed in two ways. One method is outlined in the Function Reference Guide. A faster, simpler way involves simultaneously pressing the CANCEL and UP or DOWN button repeatedly in any screen.

#### ***Button pressing chain:***

CANCEL + UP repeatedly (to increase) or DOWN repeatedly (to decrease)

## Section 5: PR2000 Function Reference

---

### 5.1 Main Screen

The main screen of the PR2000 features a real-time display of most recently measured pressure data and a real-time graph of the 100 most recently recorded data points. At the bottom of the main screen are tabs corresponding to each of the four function keys. These tabs are used to access the four main function menus of the PR2000: status, statistics, units, and setup. The left side of the main screen and all subsequent screens of the device is where important status information icons can be found (detailed in Section 3: Important Status Icons – page 5) including recording status, memory status, busy status, external power status, and battery power status.

### 5.2 Status Menu

Pressing F1 on the main screen brings up the Status menu. The first screen that appears in the Status Menu is Run Parameters, but the Memory Status and Time screens can also be viewed by pressing the F2 and F3 keys respectively.

#### 5.2.i Run Parameters

The Run Parameters screen displays important information regarding the device's current recording session. These parameters include the time and date the recording session started (start time and start date), the time and date the recording session will end (stop date and stop time) due to either a full memory or preprogramming in the MadgeTech software. The rate at which the PR2000 is recording (rate) is also displayed. The device's current status (either running or stopped) is the last parameter on the Run Parameters screen.

#### 5.2.ii Memory Status

The Memory Status screen is where all information regarding the PR2000's memory. This screen displays the percent of memory space currently available (memory left), the number of readings currently stored on the device (readings), the maximum number of readings the device can record (max readings), as well as information about the wrap feature displaying either "disabled" or the number of wrap readings currently stored in memory.

### 5.2.iii Time and Date

The time and date screen displays current time data including the current time and date, time and date of last measured data, and current time zone.

## 5.3 Statistics Menu

Pressing the F2 key while in the Main Screen brings up the Statistics Menu. From the Statistics Menu, statistics generated from the conditions encountered by the device can be viewed in a variety of different styles including being sorted by channel and by type. The Statistics Menu also displays important statistics information as well as the option to clear the statistics at any time.

### 5.3.i Viewing statistics by channel

Pressing F1 while viewing the Statistics Menu brings up statistics sorted by channel. Here the F1 key provides the ability to view statistics regarding pressure. The screen displays the minimum, maximum, and average pressure values encountered by the device.

### 5.3.ii Viewing statistics by type

The PR2000's Statistics Menu also provides the option to view statistics by type. This can be done by pressing F2 while in the Statistics Menu. Here the function keys F1, F2, and F3 correspond to the three different types of statistics: average, minimum, and maximum respectively. Each type screen displays the values of pressure encountered by the device of the particular type.

### 5.3.iii Statistics Information

Pressing the F3 key while viewing the Statistics Menu screen brings up Statistics Information. This screen displays the number of readings being considered within the statistics (readings), as well as the date and time the recording period began. From this screen the statistics information can also be cleared. This is done by pressing the F1 key marked by a tab labeled "CLEAR". Upon pressing this key a confirmation message will appear with function tabs labeled "NO" and "YES" corresponding to F1 and F2 respectively. Selecting "YES" by pressing the F2 key will confirm the statistics clear function.

### 5.4 Units

Pressing the F3 key while viewing the Main Screen will access the Units Selection screen. Here the measurement units can be easily changed. In the Units Selection screen the F1 function key corresponds to the pressure channel and the F2 key corresponds to the pressure graph. Selecting a channel by pressing its corresponding function key allows the user to change the units by either pressing the function key repeatedly or using the UP and DOWN keys to scroll through the list of available units. Selecting OK (either by pressing the OK button or the F4 key) accepts and confirms the unit selection. Pressing the CANCEL key cancels the unit changing action and reverts to the previously selected units. The PR2000 offers most commonly used units.

### 5.5 Setup Menu

Pressing the F4 key while in the Main Screen will display the Device Configuration screen. From this menu changes can be made to most of the PR2000's display configuration including the screen contrast, size of the channel view in the main screen, as well as display of the channels. Power status can also be viewed including battery power remaining and the presence of external power, and options regarding the LCD and the backlight can be modified. The setup menu is also the place to find basic information regarding device identification, calibration parameters, and firmware details.

#### 5.5.i Display

From the Display section, the number and identity of channels shown on the main screen can be changed and set, the LCD screen's contrast values can be changed and set, and the size the channel information appears on the main screen can be changed and set. Pressing F1 while in the Setup Menu brings up the Display section.

##### *5.5.i.a Adjust Visibility*

The first screen that appears in the Display section is the Adjust Visibility screen. Here the F1 and F2 key correspond to the pressure channel and pressure graph respectively. Pressing these function keys results in highlighting their corresponding channel function tab. While a channel is highlighted the corresponding display function can be toggled between "Hide" and "Show", with "Hide" indicating that the channel will not be displayed on the main screen and "Show" indicating that it will be shown. Channels can be toggled by either repeatedly pressing the channel's corresponding function key or by using the UP and DOWN keys.

*Note: Use of the Pr2000's graphing function will reduce the battery life of the device, particularly when not logging. To increase battery life either deactivate the graphing function by turning it to "Hide" in the Adjust Visibility screen, increase "auto time" in the Display Update Mode screen, or change the Graph Source from 'auto' to 'reading'. Alternatively, use the AC adapter for continuous power and graphing ability.*

### **5.5.i.b Display Configuration**

By selecting "MORE" (either by pressing the F4 key on the Adjust Visibility Screen or by pressing the OK button) in the Display section the Display Configuration screen can be viewed. Here LCD screen contrast values can be set as well as the size the channels are displayed on the Main Screen.

#### **Contrast**

To change the LCD contrast view while viewing the Display Configuration screen, first select the contrast configuration parameter by pressing the F1 key. This action will highlight the function tab corresponding to the F1 key. Once this tab is highlighted the contrast can be increased or decreased using the UP and DOWN keys.

#### **Size**

To change the size that each channel is displayed on the Main Screen view while viewing the Display Configuration screen, first select the size configuration parameter by pressing the F2 key. This action will highlight the function tab corresponding to the F2 key. Once this tab is highlighted the size can be increased or decreased using the UP and DOWN keys. Sizes include: small, medium, and large

### **5.5.ii Power**

The Power section displays information regarding battery and external power sources as well as giving options including display and backlight status that could potentially save power and LED status options.

#### **5.5.ii.a Power Modes**

The power modes screen displays information regarding the display, backlight and LED mode as well as the options to change their function.

### *Display*

The PR2000's LCD has options to be either on continuously or turn off automatically after five minutes of inactivity. This option can be changed by first pressing the F1 key to highlight the display parameter configuration tab. Once the tab is highlighted the option can be changed by pressing the F1 key repeatedly or using the UP and DOWN keys to select either "On" or "Auto".

### *Backlight*

Like the display, the LCD backlight also has power saving options. The backlight can be either on, off, or set to automatically shut off after 30 seconds of inactivity. This option can be changed by first pressing the F2 key to highlight the backlight parameter configuration tab. Once the tab is highlighted the option can be changed by pressing the F2 key repeatedly or using the UP and DOWN keys to select either "On", "Off" or "Auto".

### *LED Modes*

The function of the two LEDs on the upper left corner of the PR2000 can be regulated by first pressing the F3 key to highlight the LED parameter configuration tab. Once the tab is highlighted the option can be changed by pressing the F3 key repeatedly or using the UP and DOWN keys to select either "Enabled" meaning the LEDs will light to indicate device function or "Disabled" meaning the LEDs will never light.

### *5.5.ii.b Display Update Mode*

Selecting "MORE" by either pressing the F4 key or "OK" key while viewing the Power Modes screen brings up the Display Update Mode screen. On this screen, options relating to the refresh rate of the screen are displayed. The F1 key changes the refresh rate of the whole main screen and the F2 key changes the refresh rate of the graphing feature. Both parameters toggle between 'auto' and 'reading'. In 'auto' mode, the display is updated periodically according to the time displayed by the Auto Time parameter (which can be changed using the F3 key), whereas in 'reading' mode, the display only updates after a reading is taken.

### 5.5.ii.c Power Status

Selecting "MORE" by either pressing the F4 key or the OK key while viewing the Display Update Mode screen brings up the Power Status screen. On this screen the battery type is displayed and should be changed by the user based on whether a Lithium or Alkaline battery is used in the PR2000. This can be changed by first pressing the F1 button to highlight the type parameter configuration tab. Once the tab is highlighted, the battery type can be changed by either pressing the F1 key repeatedly or by using the UP and DOWN arrows to select the correct battery type. The percent battery power remaining, external power presence, battery voltage and external power voltage are also displayed on the Power Status screen.

### 5.5.iii Device Information

The F3 key in the Setup Menu displays the Device Information screens. Here device identification information can be found including serial number, product ID, revision, and subtype. Calibration parameters are also found under device information including the date the device was last calibrated and when it will be due for calibration again. Firmware details are also found here.

#### 5.5.iii.a Device Range (Minimum)

The Minimum Device Range screen can be accessed by pressing the F1 key while viewing the Device Information screen. This display indicates the minimum values which the PR2000 is capable of detecting and logging. Values on this screen cannot be modified.

#### 5.5.iii.b Device Range (Maximum)

The Maximum Device Range screen can be accessed by pressing the F2 key while viewing the Minimum Device Range screen. This display indicates the maximum values which the PR2000 is capable of detecting and logging. Values on this screen cannot be modified.

#### 5.5.iii.c Calibration Parameters

Pressing F3 while in the Maximum or Minimum Device Range screens will display the device calibration parameters. This screen displays information indicating the most recent calibration date as well as the date the next calibration will be due.



**It is important to keep your device properly calibrated to ensure accurate readings.**

**5.5.iii.d Device Version**

Pressing the F4 key while viewing the Maximum or Minimum Device Range screens will display the Device Version screen, containing information such as firmware revision number and communications baud rate. Values on this screen cannot be modified.

**5.5.iii.e Firmware Version**

Firmware details can be viewed by pressing the F2 key while viewing the Device Version screens. These details include the firmware version number, date and time of firmware creation, and checksum.

## Section 6: PR2000 Screen Descriptions

### 6.1 Main Screen:



*Displays last measured values.*

- F1** = STATUS: enters status screens
- F2** = STATS: shows statistics menu
- F3** = UNITS: enters unit selection screen
- F4** = SETUP: enters device configuration menu
- CANCEL** = no function
- OK** = no function
- UP** = no function
- DOWN** = no function

### 6.2 Status Screens (Run Parameters):



*Displays information about run parameters including date of recording start (start date), time of recording start (start time), stop date, stop time, recording rate, and current status.*

#### For all status screens:

- F1** = RUN: displays run parameters screen
- F2** = MEM: displays memory status screen
- F3** = TIME: displays date and time screen
- F4** = MORE: displays ID parameters screen
- CANCEL** = returns to main screen

- OK = returns to main screen
- UP = no function
- DOWN = no function

6.3 Status Screens (Memory Status):



*Displays information about the device’s memory capabilities including percent of memory available (memory left), number of readings taken so far (readings), max number of readings (max readings), and wrap status.*

For all status screens:

- F1 = RUN: displays run parameters screen
- F2 = MEM: displays memory status screen
- F3 = TIME: displays date and time screen
- F4 = MORE: displays ID parameters screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function

6.4 Status Screens (Date and Time):



*Displays current time and date as well as registered time and date and time zone information.*

For all status screens:

- F1 = RUN: displays run parameters screen
- F2 = MEM: displays memory status screen

- F3 = TIME: displays date and time screen
- F4 = MORE: displays ID parameters status screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function

6.5 ID Parameters




*Displays information relating to device identity.*

**For all status screens:**

- F1 = ID: no function
- F3 = MORE: displays run parameters screen
- F4 = EXIT: returns to main screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function

6.6 Statistics Menu Screen:

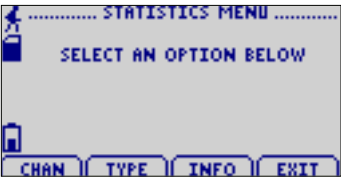

*Displays options available within the statistics menu.*

- F1 = CHAN: shows statistics sorted by channel
- F2 = TYPE: shows statistics sorted by type
- F3 = INFO: enters Statistics Information Screen
- F4 = EXIT: returns to main screen

- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- DOWN = no function

6.7 Channel Statistics:



*Displays statistics (maximum recorded value, minimum recorded value, and average recorded value) for the pressure channel.*

- F1 = PRESS: Displays pressure statistics
- F2 = no function
- F3 = no function
- F4 = EXIT: returns to Statistics Menu Screen
- CANCEL = returns to Statistics Menu
- OK = returns to Statistics Menu
- UP = no function
- DOWN = no function

6.8 Type Statistics:



*Displays statistics from from the pressure channel sorted by type (maximum recorded value, minimum recorded value, or average value).*

- F1 = AVG: displays average recorded value for the channel
- F2 = MIN: displays minimum recorded value for the channel
- F3 = MAX: displays maximum recorded value for the channel

- F4 = EXIT: returns to Statistics Menu
- CANCEL = returns to Statistics Menu
- OK = returns to Statistics Menu
- UP = no function
- DOWN = no function

6.9 Statistics Information Screen:



*Displays current statistics information including the number of recorded readings, start date, and start time.*

- F1 = CLEAR: gives the option to clear all statistics
- F2 = no function
- F3 = no function
- F4 = EXIT: returns to Statistics Menu
- CANCEL = returns to Statistics Menu
- OK = returns to Statistics Menu
- UP = no function
- DOWN = no function

6.10 Unit Selection Menu:



*Displays units currently being used for each channel*

- F1 = PRESS: selects pressure channel for unit change
- F2 = GRAPH: selects graph feature for unit change

**F3** = no function

**F4** = OK: returns to Main Screen

***Note:** Unit selection can be changed by pressing the corresponding function key repeatedly or using the UP and DOWN arrows to select appropriate units.*

**CANCEL** = returns to main menu without accepting changes

**OK** = accepts changes and returns to main menu

6.11 Device Configuration Menu:



*Displays options available within the device configuration menu.*

**F1** = DISPLAY: enters Adjust Visibility screen

**F2** = POWER: enters Power Modes screen

**F3** = INFO: enters Device Information screens

**F4** = EXIT: returns to main screen

**CANCEL** = returns to main screen

**OK** = returns to main screen

**UP** = no function

**DOWN** = no function

6.12 Adjust Visibility:



*Displays options for changing the view on the main screen (either shows a particular channel or hides it).*

**F1** = PRESS: first highlights and then changes the viewing options of the pressure channel

**F2** = GRAPH: first highlights and then changes the viewing options of the graphing feature

**F3** = SOURCE: first highlights and then changes the option for how often the graphing feature will update

**F4** = MORE: moves on to Display Configuration screen

**CANCEL** = return to Display Configuration Menu

**OK** = moves on to Display Configuration screen

**UP** = once channel parameter configuration tab is highlighted scrolls through available options

**DOWN** = once channel parameter configuration tab is highlighted scrolls through available options

### 6.13 Display Configuration:



*Allows the user to change the contrast of the LCD display as well as the channel size.*

**F1** = CNTRST: highlights the contrast parameter configuration tab

**F2** = SIZE: highlights and then changes options of the channel size parameter

**F3** = MORE: moves back to the Adjust Visibility screen

**F4** = EXIT: returns to Display Configuration Menu

**CANCEL** = returns to Device Configuration Menu

**OK** = moves back to the Adjust Visibility screen

**UP** = when contrast parameter configuration tab is highlighted increases contrast value

**DOWN** = when contrast parameter configuration tab is highlighted increases decreases contrast value

6.14 Power Modes Screen:



*Displays information regarding the devices different power modes including the display visibility, backlight options, and LED modes.*

- F1** = DISPLAY: first highlights and then changes display visibility (On: full visibility or Auto: shuts off after 5 minutes of inactivity)
- F2** = BKLIGHT: first highlights and then changes backlight options (On: backlight always on, Auto: backlight shuts off after 30 sec of inactivity, or Off: backlight always off)
- F3** = LED: first highlights and then changes LED mode options
- F4** = MORE: moves to Display Update Mode screen
- CANCEL** = returns to Device Configuration Menu
- OK** = moves to Display Update Mode screen
- UP** = once parameter configuration tab is highlighted scrolls through available options
- DOWN** = once parameter configuration tab is highlighted scrolls through available options

6.15 Display Update Mode Screen:



*Displays information regarding display refresh mode and refresh interval.*

- F1** = MODE: first highlights and then changes the screen update mode (Auto: screen refreshes periodically or Reading: refreshes only after a reading is taken)
- F2** = GRAPH: first highlights and then changes the graph's source.
- F3** = TIME: first highlights and then changes the amount of time associated with the Auto referesh option in "mode" and "graph mode".

- F4** = MORE: moves to Power Status screen
- CANCEL** = returns to Device Configuration Menu
- OK** = moves to Power Status screen
- UP** = once parameter configuration tab is highlighted scrolls through available options
- DOWN** = once parameter configuration tab is highlighted scrolls through available options

6.16 Power Status Screen:



*Displays details about power available to the device including the battery type, battery voltage, and external voltage.*

- F1** = TYPE: highlights and then changes battery type (Lithium or Alkaline)
- F3** = MORE: moves back to Power Modes screen
- F4** = EXIT: returns to Device Configuration Screen
- CANCEL**: returns to Device Configuration Menu
- OK** = moves back to Power Modes screen
- UP** = if type parameter configuration tab is highlighted, scrolls through available options
- DOWN** = if type parameter configuration tab is highlighted, scrolls through available options

6.17 Device Information Screens (Minimum Device Range):



*Displays values indicating minimum pressure detectable by the PR2000.*

**For all Device Information Screens:**

**F1** = MIN: no function

**F2** = MAX: shows Device Range (Maximum) screen

**F3** = CAL: shows Calibration Information screens

**F4** = MORE: shows further Device Information screens

**CANCEL** = returns to Device Configuration Menu

**OK** = returns to Device Configuration Menu

**UP** = no function

**DOWN** = no function

**6.18 Device Information Screens (Maximum Device Range):**



*Displays values indicating maximum pressure detectable by the PR2000.*

**6.19 Device Information Screens (Device Version):**



*Displays device version information.*

**F1** = VERS: no function

**F2** = FIRM: shows Firmware Version screen

**F3** = MORE: shows Device Range (Minimum) screen

**F4** = EXIT: returns to Device Configuration Menu

**CANCEL** = returns to Device Configuration Menu

**OK** = returns to Device Configuration Menu

**UP** = no function

**DOWN** = no function

6.20 Device Information Screens (Firmware Version):



*Displays device firmware version information.*

- F1** = VERS: shows Device Version screen
- F2** = FIRM: no function
- F3** = MORE: shows Device Range (Minimum) screen
- F4** = EXIT: returns to Device Configuration Menu
- CANCEL** = returns to Device Configuration Menu
- OK** = returns to Device Configuration Menu
- UP** = no function
- DOWN** = no function

6.21 Calibration Information Screens (Calibration Date):



*Displays date of last calibration and due date of next calibration.*

**For all Device Information Screens:**

- F1** = DATE: no function
- F2** = PRESS: shows pressure calibration information
- F3** = no function
- F4** = EXIT: returns to device information screens
- CANCEL** = returns to Device Configuration Menu
- OK** = returns to Device Configuration Menu
- UP** = no function
- DOWN** = no function

6.22 Calibration Information Screens (Pressure Calibration):



*Displays calibration information for pressure channel.*

**For all Device Information Screens:**

- F1** = DATE: returns to Calibration Date screen
- F2** = PRESS: no function
- F4** = EXIT: returns to Device Information screens
- CANCEL** = returns to Device Information screens
- OK** = returns to Device Information screens
- UP** = no function
- DOWN** = no function

6.23 Device Reset Screen (Hardware Reset):



*Displayed as notification when a hardware reset has occurred.*

- F1** = OK: accepts notification and displays main screen
- F2** = no function
- F3** = no function
- F4** = no function
- CANCEL** = no function
- OK** = accepts notification and displays main screen
- UP** = no function
- DOWN** = no function

6.24 Device Reset Screen (Power Interruption):



*Displayed as notification when power is interrupted during device operation.*

**F1** = OK: accepts notification and displays main screen

**F2** = no function

**F3** = no function

**F4** = no function


**CANCEL** = no function

**OK** = accepts notification and displays main screen

**UP** = no function

**DOWN** = no function

Section 7: Computer Interface:

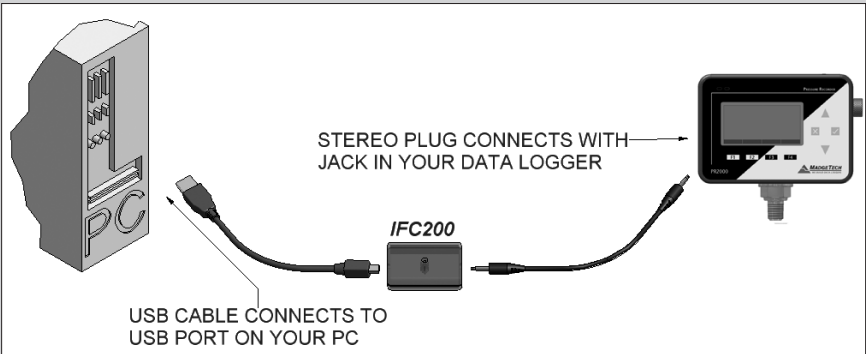

Insert the USB connector of the IFC200 into an available USB port. Fully insert male connector of the IFC200 interface cable into the female receptacle of the data logger\*.

*\*WARNING: Install driver before connecting a device using a USB for the first time. See the Data Logger Software manual for further information.*

## Section 9: Maintenance

### BATTERY WARNING

**Most MadgeTech data loggers contain a lithium battery. Do not cut the battery open, incinerate, or recharge. Do not heat lithium batteries above the specified operating temperature.\* Dispose of the battery in accordance with local regulations.**

The PR2000 does not have any user-serviceable parts except the battery which should be replaced periodically. The battery life is affected by battery type, ambient temperature, sample rate, sensor selection, offloads and LCD display usage. The PR2000 has a battery status indicator on the LCD display. If the battery indication is low, or if the device seems to be inoperable, it is recommended that the battery be changed.

To change the batteries, locate and remove the four(4) 9/64" hex screws on the back of the unit. Separate the halves and the battery compartment is now visible. Remove the old AA batteries from the battery holder and replace with six(6) new AA alkaline batteries as indicated on the holder. When replacing the cover, make sure that the gasket is still seated in its groove, and that all wires are tucked away inside the compartment.

## Section 10: Terms and Conditions

All products furnished by MadgeTech, Inc. ("Seller") shall be in accordance with the following terms and conditions unless otherwise stated in writing:

These Terms and Conditions ("Terms and Conditions") govern (a) all sales quotations and sales of components, equipment, parts, and other products ("Product") from, and (b) all service proposals and provisions of services by Seller to the buyer of the Products ("Buyer"). These Terms and Conditions shall take precedence over any terms and conditions which appear on Buyer's order or other form or any other writing or electronic transmission from Buyer. Any terms or conditions on any of Buyer's forms, recordings, electronic transmissions, or orders that are different from or in addition to these Terms and Conditions are specifically rejected. Any modification to these Terms and Conditions must be agreed to and executed in writing by Seller. Seller's failure to object to provisions contained in any communication from Buyer shall not be construed as a waiver of these Terms and Conditions or as an acceptance of any such provision. Trade custom, trade usage and past performance are superseded by these terms and conditions and shall not be used to interpret these terms and conditions. In the event that Product includes software, the software is licensed to Buyer in object code form only in accordance with Seller's standard Software License Terms that are included below.

### 10.1 Limited Warranty.

#### A. Seller Manufactured Products and Seller Provided Services.

Seller warrants to Buyer that:

- (i) Seller manufactured Software (as defined in Section 23 below) shall execute the programming instructions provided by Seller, and
- (ii) Seller manufactured Product and consumables and Seller provided services shall be free from material defects in material and workmanship under normal uses and care, in each case until the expiration of the applicable warranty period specified below

Seller manufactured Product is warranted for the shorter of twelve (12) months from the date of initial installation or fifteen (15) months from the date of shipment by Seller. Seller manufactured consumables and Software, and Seller provided services are warranted for a period of ninety (90) days from the date of shipment or completion, as applicable. If Buyer discovers any warranty defect and notifies Seller thereof in writing during the applicable warranty period, Seller shall, at its option, promptly

correct any defects that are found by Seller, or repair or replace F.O.B. point of manufacture that portion of the Seller manufactured Products, consumables or Software found by Seller to be defective, or refund the price of the defective portion of the Seller manufactured Products, consumables or Software, or of the defective portion of the Seller provided services. All replacements or repairs necessitated by inadequate maintenance, normal wear and usage, unsuitable power sources, unsuitable environmental conditions, accident, misuse, improper installation, modification, repair, storage or handling, or any other cause not the fault of Seller are not covered by this limited warranty, and shall be at Buyer's expense. Seller shall not be obligated to pay any costs or charges incurred by Buyer or any other party except as may be agreed upon in writing in advance by an authorized representative of Seller. All costs of dismantling, re-installation and freight, and the time and expenses of Seller's personnel for site travel and diagnosis under this limited warranty shall be borne by Buyer unless accepted in writing by Seller. Seller manufactured Products, consumables and Software, and Seller provided services, repaired, replaced or corrected during the applicable warranty period shall be in warranty for the greater of the remainder of the applicable original warranty period or ninety (90) days.

THE FOREGOING STATES THE SOLE AND EXCLUSIVE WARRANTY AND LIABILITY OF SELLER. FOR BREACH OF WARRANTY AND IS IN LIEU OF ALL OTHER REPRESENTATIONS, WARRANTIES AND COVENANTS, EXPRESSED OR IMPLIED, IN REGARD THERETO. EXCEPT FOR THE EXPRESS LIMITED WARRANTY SET FORTH IN THIS SECTION, SELLER DOES NOT MAKE AND HEREBY DISCLAIMS ANY AND ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND WHATSOEVER, WHETHER EXPRESSED, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NONINFRINGEMENT OR ACCURACY, ADEQUACY OR COMPLETENESS OF DATA MEASUREMENT, WITH RESPECT TO ANY OF THE SELLER MANUFACTURED PRODUCTS, CONSUMABLES OR SOFTWARE, OR ANY OF THE SELLER PROVIDED SERVICES.

Any drawings submitted with the Products are only to show the general style, arrangement, and approximate dimensions of the Products.

B. Equipment, Consumables, Software and Services Manufactured or Provided by Others.

SELLER DOES NOT MAKE, AND HEREBY DISCLAIMS, ANY AND ALL REPRESENTATIONS AND WARRANTIES OF ANY KIND WHATSOEVER, WHETHER EXPRESSED, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY PARTICULAR PURPOSE, NONINFRINGEMENT

OR ACCURACY, ADEQUACY OR COMPLETENESS OF DATA MEASUREMENT, WITH RESPECT TO ANY EQUIPMENT, COMPONENTS, PARTS, CONSUMABLES, SOFTWARE OR SERVICES SOLD TO BUYER BY SELLER THAT ARE NOT MANUFACTURED OR PROVIDED BY SELLER. Seller shall assign the manufacturer's or service provider's warranty applicable to such equipment, components, parts, consumables, Software and services to the extent permitted, to Buyer. Seller will provide Buyer with available warranty information.

### 10.2 Limitations.

IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT OR OTHERWISE), SHALL SELLER'S LIABILITY EXCEED THE PRICE ACTUALLY PAID BY BUYER TO SELLER FOR THE SPECIFIC PRODUCTS, CONSUMABLES AND/OR SOFTWARE MANUFACTURED, AND/OR SERVICES PROVIDED, BY SELLER GIVING RISE TO THE CLAIM OR CAUSE OF ACTION. SELLER SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE FOR ANY LOSS OF REVENUE, LOSS OF PROFITS OR ANY INCIDENTAL, INDIRECT, SPECIAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, WHETHER OR NOT FORESEEABLE. NO ACTION, REGARDLESS OF FORM, ARISING OUT OF ANY TRANSACTION GOVERNED BY THESE TERMS AND CONDITIONS, MAY BE BROUGHT BY EITHER PARTY MORE THAN TWO (2) YEARS AFTER THE CAUSE OF ACTION HAS ACCRUED. The foregoing allocation of risk and limitation of liability has been agreed to by the parties and forms the basis of their willingness to enter into any accepted order.

### 10.3 Software License.

(A) For purposes hereof, "Software" means the computer programs included in the Product at delivery, together with all codes, techniques, software tools, formats, designs, concepts, methods, and ideas associated with those computer programs. The term also includes all copies of any part of the software, as well as the manual(s) and printed materials provided by Seller.

(B) Seller grants Buyer a non-exclusive, non-transferable license to use the Software, in object code form only, according to the terms set forth below. Buyer may operate the Software only (i) in conjunction with and as part of the Product; (ii) in the manner in which it is intended by Seller; and (iii) at Buyer's plant site where the Product is first used. Buyer may negotiate with Seller separate licenses to use the Software at other plant sites. Buyer's use of Software shall be governed exclusively by Seller's and/or an third party owner's applicable license terms.

(C) Buyer shall not (i) make the Software available to any person or entity other than its employees, who must use the Software only as specified above; (ii) modify

the Software or merge it with another program; (iii) reverse engineer, disassemble, decompile, or make any attempt to discover the source code of the Software; (iv) translate or create derivative works based on the Software; (v) remove, obscure, or alter any notice of the patent, copyright, or other proprietary rights related to the Software; (vi) sub-license, sell, lend, rent, or lease any portion of the Software; (vii) copy any portion of the Software; (viii) operate the Software other than in conjunction with operation of Product; or (ix) transfer the Software in violation of applicable United States Export laws and regulations.



