brother **USER'S GUIDE**

ENGLISH







!touch ELECTRONIC LABELING SYSTEM

PT-E500



In order to use your P-touch labeling system safely, read the included Quick Setup Guide first. Read this guide before you start using your P-touch



- INTRODUCTION
- 2 EDITING A LABEL
- 3 LABEL PRINTING
- 4 USING THE FILE MEMORY
- 5 USING P-TOUCH SOFTWARE
- **6** RESETTING & MAINTENANCE
- 7 TROUBLESHOOTING
- 8 APPENDIX

Version 0

| EDITING A LABEL | 3 |
|--|----------------------------|
| Entering and Editing Text Entering Text from the Keyboard Adding a New Line. Adding a New Block. Moving the Cursor Inserting Text. Deleting Text. Entering Symbols | 3 3 3 3 3 |
| Entering Symbols Using the Symbol Function Entering the User-defined Character Using the Symbol Function Using Symbol History Entering Accented Characters Setting Character Attributes Setting Character Attributes by Label | 4 5 6 7 |
| Setting Character Attributes by Each Line | 7 8 8 9 |
| Label Preview Printing a Label Printing a Single Page Printing a Range of Pages Printing Multiple Copies Attaching Labels | 11 12 12 12 |
| USING THE FILE MEMORY | 14 |
| Storing a Label into Memory Opening a Stored Label File Printing a Stored Label File Deleting a Stored Label File | 14 15 |
| USING P-TOUCH SOFTWARE | 16 |
| Using P-touch Editor Using P-touch Editor (For Windows®) Using P-touch Editor (For Macintosh) Updating P-touch Editor Using P-touch Transfer Manager (For Windows®) How to Use P-touch Transfer Manager Transferring the Label Template to P-touch Transfer Manager Using P-touch Transfer Manager Transferring Templates or Other Data from the Computer to the P-touch Labeling System | 20 25 25 26 27 |
| Backing Up Templates or Other Data Saved in the P-touch Labeling System | 33 |

Contents

















INTRODUCTION

| • • • • • • • • • |
|--|
| 34 35 35 35 37 40 41 41 42 43 |
| 45 |
| |
| 46 |
| 47 |
| 47 49 |
| 55 55 56 57 59 59 59 60 61 61 |
| |

Entering and Editing Text

Entering Text from the Keyboard

· The keyboard of your P-touch labeling system can be used in the same way as a standard computer keyboard.

Adding a New Line

- To end the current line of text and start a new line, press the Enter key. A return mark appears at the end of the line and the cursor moves to the start of the new line.
- Maximum number of lines
 - 0.94" (24 mm) tape: 7 lines

 - 0.70" (18 mm) tape: 5 lines 0.47" (12 mm) tape: 3 lines
 - 0.35" (9 mm) and 0.23" (6 mm) tape: 2 lines
 - 0.13" (3.5 mm) tape: 1 line

Adding a New Block

· When GENERAL is selected, you can create up to 99 new blocks. To create a new block of text/lines to the right of your current text, press the Shift key and then press the Enter key. The cursor moves to the start of the new block. In other labeling application types, you can set the number of blocks when pressing a label application key. Some labeling application types are not required.

Moving the Cursor

- Press the ▲, ▼, ◀ or ▶ key to move the cursor one space or line.
- To move the cursor to the beginning or end of the current line, press the Shift key and then press the ◀ or ▶ key.
- To move the cursor to the beginning of previous or next block, press the Shift key and then press the ▲ or ▼ key.

Inserting Text

· To insert additional text into an existing line of text, move the cursor to the character to the right of the position where you want to start inserting text and then enter the additional text. The new text is inserted to the left of the cursor.

Deleting Text

■ Deleting one character at a time

- To delete a character from an existing line of text, move the cursor to the character to the right of the position you want to start deleting text and then press the BS (backspace) key. The character to the left of the cursor is deleted each time the BS (backspace) key is pressed.
- If you hold down the **BS** (backspace) key, the characters left of the cursor are continuously deleted.















Entering and Editing Text



■ Deleting all text at once

Use the Clear key to delete all text at once.

1 Press the Clear key. The Clear options are displayed.



Using the ▲ or ▼ key, select "Text Only" to delete all text while retaining the current format settings, or select "Text&Format" to delete all text and format settings.



- Press the Esc key to return to the text entry screen, without erasing (or clearing) text or format.
- When "Text&Format" is selected, all text are cleared and the P-touch labeling system set to the default settings.
- 3 Press the **OK** or **Enter** key. All text is deleted. All format settings are also deleted if "Text&Format" was selected.



Entering Symbols

In addition to the symbols available on the keyboard, there are various symbols (including international, extended ASCII characters and the user-defined characters *1) available with the symbol function.

To enter a symbol, use the Symbol function (see below).

Alternatively, press the Shift key and then press a key on the keyboard to enter the symbol printed on the selected key's upper-right corner.

Selectable "Symbols" (excluding the user-defined characters) are listed in the Appendix. (See page 55)

To use the user-defined characters, transfer the bitmap image to the P-touch labeling system using the P-touch Transfer Manager.

Entering Symbols Using the Symbol Function

Press the **Symbol** key.

A list of symbol categories and symbols in that category is displayed.



The last symbol entered is selected in the displayed list.

Select a symbol category (Punctuation, Mathematics, etc.) using the ▲ or ▼ key and then press the **OK** or **Enter** key.



Entering Symbols

^{*1} A bitmap image of a user-created character that is not pre-installed on the P-touch labeling system.

| 3 Select a symbol using the ▲, ▼, ◀ or ▶ key, and then press the OK or Enter key. The selected symbol is inserted into the line of text. |
|---|
| When selecting a symbol: • Press the Shift key and Symbol key to return to the previous page. • Press the Symbol key to go to the next page. |
| Press the Esc key to return to the previous step. |
| Entering the User-defined Character Using the Symbol Function |
| Pefore using the user-defined character images, transfer the images to the P-touch labeling system using the P-touch Transfer Manager. For the P-touch Transfer Manager refer to "Using P-touch Transfer Manager (For Windows®)" on page 25. |
| Press the Symbol key. A list of symbol categories and symbols in that category is displayed. If the user-defined character has been transferred, "Custom" is also displayed. |
| The last symbol entered is selected in the displayed list. |
| 2 Select "Custom" using the ▲ or ▼ key and then press the OK or Enter key. |
| Select a user-defined character image using the ▲ or ▼ key, and then press the OK or Enter key. The selected image is inserted into the line of text. |
| • When selecting a symbol, press the Symbol key to go to the next page. • The inserted user-defined character image is displayed as a highlighted user-defined character mark () in the text entry screen. • To view the user-defined character image in the text entry screen, move the cursor to the image and press the Symbol key. |
| Press the Esc key to return to the previous step. |
| Using Symbol History You can create your personal category of symbols by using the Symbol History. The "History" will appear first when selecting the symbols to help you locate the desired symbols quickly. |
| User-defined characters cannot be added to the Symbol History even if they are transferred to the P-touch labeling system. |
| 1 Press the Menu key, select "Advanced" using the ▲ or ▼ key and then press the OK or Enter key. |
| |
| Entering Symbols |

Select "Symbol History" using the ▲ or ▼ key and press the **OK** or **Enter** key. Then select "On" to create your personal category by using the ▲ or ▼ key.




Press the **OK** or **Enter** key to apply the setting. The screen returns to the text entry screen.



- **4** Enter the symbol you wish to add to your History.
 - Refer to "Entering Symbols Using the Symbol Function" on page 4 for detail.



Press the **Symbol** key.
The "History" appears, including the symbol entered in step 4.



 $\hfill \bullet$ Up to 30 symbols can be added to the "History". The oldest symbol will be deleted from the category when the symbols added to the "History" exceed 30 symbols.

• To stop using the Symbol History, select "Off" in the "Symbol History" screen.

Entering Accented Characters

The P-touch labeling system can display and print a set of accented characters such as other language specific characters. Selectable "Accented Characters" are listed in the Appendix. (See page 56)

- 1 Enter the character you wish to change to an accented character.
 - O Caps mode can be used with the Accent function.
- Press the **Accent** key.
 The character you entered will change to an accented character.
- 3 Press the **Accent** key repeatedly until the desired accented character is selected, or select it by using the ◀ or ▶ key.
 - The order of accented characters displayed will differ depending on the selected LCD language.
- Press the **OK** or **Enter** key.
 The selected accented character is inserted into the line of text.
- Press the **Esc** key to return to the previous step.

6 Entering Accented Characters



Setting Character Attributes

Setting Character Attributes by Label


Using the Style key, you can select a font and apply size, width, style, line, and alignment attributes. Selectable "Character Attribute" options are listed in the Appendix. (See page 57)

- Press the Style key. The current settings are displayed.
- Select an attribute using the ▲ or ▼ key, and then set a value for that attribute using 2 the ◀ or ▶ key.
- Press the **OK** or **Enter** key to apply the settings.
 - New settings are NOT applied if you do not press the **OK** or **Enter** key.
- Press the Esc key to return to the previous step.
 Press the Space key to set the selected attribute to the default value.
 - Small characters may be difficult to read when certain styles are applied (e.g. Shadow + Italic).
 - Depends on the labeling application type, you cannot change the value in Style setting. In that case, **\(\frac{1}{4} \)** is displayed on the preview in the right side of the screen.


Setting Character Attributes by Each Line

When a label consists of two or more lines of text, you can set different values of character attributes (font, size, width, style, line and alignment) for each line.

Move the cursor to the line you wish to change the character attribute by using the ▲, ▼, ◀ or ▶ key. Next, press the Shift key and then press the **Style** key to display the attributes. (\equiv on the screen indicates that you are now applying the attribute for that specific line only.)



When different attribute values are set for each line, the value will be displayed as ***** when you press the Style key. When you change the setting on this screen by using the ▲ or ▼ key, the same change will be applied to all lines of the label.















Setting Character Attributes



Setting Auto Fit Style

When "Size" of the **Style** key is set to "Auto" and label length is set to a specific length, you can select the way of reducing the text size to fit within the label length.

- 1 Press the **Menu** key, select "Advanced" using the ▲ or ▼ key, and then press the **OK** or **Enter** key.
- 2 Select "Auto Fit Style" using the ▲ or ▼ key and then press the **OK** or **Enter** key.
- 3 | Select the style using the ▲ or ▼ key.
 - When "Text Size" is selected, the total text size is modified to fit within the label.
 When "Text Width" is selected, the text width will be reduced to the size of x1/2 setting. (If further size reduction is required to fit the text into the selected label length, the total text size will be modified after reducing the text width to x1/2 setting.)
- 4 Press the **OK** or **Enter** key to apply the settings.
- Press the Esc key to return to the previous step.
 Press the Space key to set the style to the default setting ("Text Size").

Setting Frames

You can select the frame of the label by using the **Style** key. Selectable "Frames" are listed in the Appendix. (See page 59)

1 Press the **Style** key. The current settings are displayed.



2 Select an attribute using the ▲ or ▼ key until the "Frame" is selected, and then select a frame by using the ◀ or ▶ key.



- 3 Press the **OK** or **Enter** key to apply the settings.
 - New settings are NOT applied if you do not press the **OK** or **Enter** key.



• Press the **Esc** key to return to the previous step.

• Press the **Space** key to set the selected attribute to the default value.

8 Setting Frames

Tape Cutting Options

The tape cutting options allow you to specify how the tape is fed and cut when printing labels. In particular, the "Chain" and "No Cut" options greatly reduce the amount of wasted tape by using smaller margins and eliminating blank sections cut between labels.

- Press the Menu key.
- Select "Cut Option" using the ▲ or ▼ key, and then press the **OK** or **Enter** key.
- 3 Set the value by using the ▲ or ▼ key, and then press the **OK** or **Enter** key to apply the settings.
 - New settings are NOT applied if you do not press the **OK** or **Enter** key.
- Press the Esc key to return to the previous step.
 Refer to the Tape Cutting Options table for a list of all available settings.

Tape Cutting Options

| Setting | Description | Example | |
|-----------------|--|------------------------------------|--|
| Large Margin | Automatically cuts the tape after each label is printed, leaving a margin of 0.96" (24.5 mm) on each end. This setting can be selected only when GENERAL is selected. | ABC ABC 0.96" (24.5mm) (24.5mm) | |
| Small Margin | Automatically cuts a piece of blank tape before printing the first label and then cuts the tape after each label is printed, leaving a 0.08" (2 mm) margin at both ends of each label. | ABC ABC O.08" (2mm) (2mm) (24.5mm) | |
| Chain | Automatically cuts a piece of blank tape before printing the first label and then cuts the tape after each label is printed, leaving a 0.08" (2 mm) margin at both ends of each label. Once the last label is printed, the tape is not fed and cut. Press the Feed & Cut key to feed and cut the tape | ABC ABC 0.08" (2mm) 0.96" (24.5mm) | |











Tape Cutting Options



| Setting | Description | Example |
|-----------------|--|---|
| No Cut | Select this setting when printing multiple copies of a label and you do not want the labels cut after each label is printed, or when using Fabric Tape or other special tapes that cannot be cut by the tape cutter of the P-touch labeling system. Once the label is printed, the tape is not fed and cut. Press the Feed & Cut key to feed and cut the tape. When using the special tapes that cannot be cut by the tape cutter of the P-touch labeling system, remove the tape cassette from the P-touch labeling system and use scissors to cut the tape. | ABC AB 0.96" 0.16" (24.5mm) (4mm) |
| Special tape | Select this setting when using special tape. When using Fabric Tape, set "No Cut" for "Cut Option" before printing. After printing, remove the tape cassette from the P-touch labeling system and use scissors to cut the tape. When using Heat Shrink Tube, set "Special tape" for "Cut Option" before printing. After printing, remove the Heat Shrink Tube cassette from the P-touch labeling system and use scissors to cut the tape. | When multiple copies are printed one time: ABC ABC ABC 0.96° 0.16° 0.16° (24.5mm) (4mm) (4mm) When a label is printed two times: 1 2 ABC ABC 0.96° 1.04° (24.5mm) (26.5mm) 1. 1st print 2. 2nd print |

10

Tape Cutting Options

LABEL PRINTING

Label Preview

You can preview the current page and check the layout before printing

Press the **Preview** key.

An image of the label is displayed on the screen.

- 1. The bar indicates the position of the currently displayed portion of the label.
- 2. The tape width of the installed tape cassette and the label length are indicated as follows. Tape width x Label length
- 3. The information for the installed tape cassette is detected and indicated. The first line indicates the character color and the second line indicates the tape

Press the ◀ or ▶ key to scroll the preview to the left or right. Press the ▲ or ▼ key to change the magnification of the preview.



• Press the Esc, OK or Enter key to return to the text entry screen.

- To scroll the preview to the left or right end, press the **Shift** key and then press the ◀ or ▶ key.
- To print the label directly from the preview screen, press the **Print** key or open the print options screen and select a print option. Refer to "Printing a Label" on page 11 for details.
- The print preview is a generated image of the label, and may differ from the actual label when
- The character color and tape color cannot be detected for some tape cassettes.

Printing a Label

Labels can be printed once text entry and formatting is complete.

- Do not pull the label coming out of the tape exit slot. Doing so will cause the ink ribbon to be discharged with the tape, making the tape no longer usable.
 - Do not block the tape exit slot during printing or when feeding tape. Doing so will cause the tape to jam.
 - Be sure to check that there is enough tape remaining when printing several labels continuously. If tape is running low, set fewer copies, print labels one at a time, or replace the tape cassette.
 - Striped tape indicates the end of the tape cassette. If this appears during printing, press the **Power** key to turn the P-touch labeling system off. Attempting to print with an empty tape cassette may damage the P-touch labeling system.















Label Preview



LABEL PRINTING

Printing a Single Page

Press Print key to start printing.

Printing a Range of Pages

When there are multiple pages, you can specify the range of pages to print.

- Press the **Print** key. The screen you can specify the range is displayed.
- 2 Select "All", "Current" or "Range" by using ▲ or ▼ key. If you select "All" or "Current", go to step 4.
- 3 Specify the first page and the last page.
 - Blank pages are not printed.
- Press the **OK** or **Enter** key to print.

Printing Multiple Copies

Using this function you can print up to 99 copies of the same label.

- Make sure that the appropriate tape cassette is inserted and ready for printing.
- 2 Press the **Shift** key and then press the **Print** key to display the Copies screen, and then select the number of copies to be printed using the ▲ or ▼ key, or type the number using the number keys.
 - Hold down the ▲ or ▼ key to change the number of copies faster.
- 3 Press the **OK** or **Enter** key. "Printing... Copies" is displayed while the labels are being printed.
 - If you select an automatic cutting option when printing multiple copies of a label, a message will be displayed to confirm whether you want the labels to be cut after each label is printed. To disable the message display, press the **Menu** key, select "Advanced" using the ▲ or ▼ key, and then press the **OK** or **Enter** key. Select "Cut Pause" using the ▲ or ▼ key, and then press the **OK** or **Enter** key. Select "Off" using the ▲ or ▼ key, and then press the **OK** or **Enter** key.



- Press the **Esc** key to return to the previous step.
- The figures shown on the screen during printing indicate the "count / number of copies set".
- Pressing the **Space** key when setting the number of copies resets the value to 01, the default.
- When the message "Press Print to Cut Tape and Continue" is displayed, press the Print key. To set whether the tape is cut after each label is printed, use "Cut Option". For details, refer to "Tape Cutting Options" on page 9.
- To print a label created using the transferred template, refer to "Using the Data Transferred to the P-touch Labeling System" on page 35.

Printing a Label

Attaching Labels

- If necessary, trim the printed label to the desired shape and length using scissors, etc.
- Peel the backing from the label.
- Position the label and then press firmly from top to bottom with your finger to attach the label.
- The backing of some types of tapes may be pre-cut to make it easier to peel the backing. To remove the backing, simply fold the label lengthwise with the text facing inward, to expose the inside edges of the backing. Next, peel off the backing one piece at a time.
 - Labels may be difficult to attach to surfaces that are wet, dirty, or uneven. The labels may peel off easily from these surfaces.
 - Be sure to read the instructions provided with Fabric Tapes, Extra Strength Adhesive Tapes or other special tapes and observe all precautions noted in the instructions.
 - Please use scissors to cut Heat Shrink Tube.











Attaching Labels



USING THE FILE MEMORY

You can store up to 99 of your most frequently used labels in the file memory. Each label is stored as a file, allowing you to quickly and easily recall your label when needed again.

- When the file memory is full, each time you save a file you will need to overwrite one of your stored files.
 - The available space in the file memory can be confirmed using the following procedure. Press the Menu key, select "Usage" using the ▲ or ▼ key, and then press the OK or Enter key. Select "Local Content" using the ▲ or ▼ key and press the OK or Enter key.
 - * The available space that is displayed in "Available: XXXXchrs" may be different from the actual available space

Storing a Label into Memory

- 1 After entering the text and formatting the label, press the File key.
 - If one or more of the labels are a transferred, a screen will be displayed to select "Local Files" or "Transferred Templates" when you press the **File** key. Select "Local Files".
- 2 Select "Save" using the ▲ or ▼ key and press the **OK** or **Enter** key. A file number is displayed.

A label text is also displayed if a label is already stored in that file number.

- 3 Select a file number using the ▲ or ▼ key, and then press the **OK** or **Enter** key.
 - When there is already a stored file in the selected number, the data will be overwritten by the file you try to save.
- Enter the file name and then press the **OK** or **Enter** key. The file is saved and the screen returns to the text entry screen.
- Press the **Esc** key to return to the previous step.

Opening a Stored Label File

- 1 Press the File key.
 - If one or more of the labels are a transferred, a screen will be displayed to select "Local Files" or "Transferred Templates" when you press the **File** key. Select "Local Files".
- Select "Open" using the ▲ or ▼ key and press the OK or Enter key. The file number of a stored label is displayed.
 The label text is also displayed to identify the label.
- Select a file number using the ▲ or ▼ key, and then press the **OK** or **Enter** key to open the selected file. The file is opened and displayed on the text entry screen.
- Press the **Esc** key to return to the previous step.
- 14 Storing a Label into Memory



Printing a Stored Label File

- To print a label created using the transferred template, refer to "Using the Data Transferred to the P-touch Labeling System" on page 35.
- 1 Press the File key.
- Select "Print" using the ▲ or ▼ key, and then press the OK or Enter key. The file number of a stored label is displayed. The label text is also displayed to identify the label.
- 3 Select a file number using the ▲ or ▼ key, and then press the Print, OK or Enter key.
 - · Printing a single page:
 - A single page is printed immediately.
 - Printing a range of pages:
 The screen you can specify the range is displayed. Select "All" or "Range" by using the ▲ or ▼ key, and then press the OK or Enter key.
 - If you select "Range", specify the first page and the last page.
- Press the **Esc** key to return to the previous step.
 - The message "No Text!" is displayed when you try to print a file with no text.
 - When the message "Press Print to Cut Tape and Continue" is displayed, press the **Print** key. To set whether the tape is cut after each label is printed, use "Cut Option". For details, refer to "Tape Cutting Options" on page 9.

Deleting a Stored Label File

- To delete a label using the transferred template, refer to "Deleting the Transferred Data" on page 40.
- 1 Press the File key.
- Select "Delete" using the ▲ or ▼ key and press the OK or Enter key. The file number of a stored label is displayed. The label text is also displayed to identify the label.
- 3 Select a file number using the ▲ or ▼ key, and then press the **OK** or **Enter** key. The message "Delete?" is displayed.
- 4 Press the **OK** or **Enter** key to delete the file.
- Press the **Esc** key to cancel deleting the file and return to the previous screen.

1

2

3



<u>(5)</u>

6

8

Printing a Stored Label File



Using P-touch Editor

You will need to install P-touch Editor and the printer driver to use your P-touch labeling system with your computer.

For details on how to install the P-touch software, please refer to the Quick Setup Guide. Refer to the procedures below for your computer's operating system. In the screen shots, "XX-XXXX" is displayed to represent the P-touch labeling system model number. To download the latest driver and software, please visit the Brother Solutions Center at:

Using P-touch Editor (For Windows®)

■ Starting P-touch Editor

Tor Windows Vista® / Windows® 7
From the Start button, click [All Programs]-[Brother P-touch]-[P-touch Editor 5.1].
When P-touch Editor starts, select whether you want to create a new layout or open an existing layout.



For Windows[®] 8

Click [P-touch Editor 5.1] on [Start]/[Apps] screen or double-click [P-touch Editor 5.1] on the desktop.

When P-touch Editor starts, select whether you want to create a new layout or open an existing layout.

- Q
- You can also start P-touch Editor using shortcuts, if you selected to create shortcuts during installation.
- Shortcut icon on the desktop: double-click to start P-touch Editor
- Shortcut icon in the Quick Launch bar: click to start P-touch Editor
- To change how P-touch Editor functions when it starts, click [Tools]-[Options] in the P-touch Editor menu bar to display the [Options] dialog box. On the left side, select the [General] heading and then the desired setting in the [Operations] list box under [Startup Settings]. The default setting is [Display New View].

Select an option in the screen.



- 1. To create a new layout, click the [New Layout] button.
- 2. To create a new layout using a pre-set layout, select the desired category button.
- 3. To connect a pre-set layout to a database, select the check box next to [Connect Database].
- 4. To open an existing layout, click [Open].
- 5. To open the application for easily creating labels for electrical equipment management, click the [Cable Labeling Wizard] button.


















■ Operation modes

P-touch Editor has three different operation modes: [Express] mode, [Professional] mode, and [Snap] mode. You can easily switch between modes by using mode selection buttons.

[Express] mode

This mode allows you to quickly and easily create layouts that include text and images. The [Express] mode screen is explained below.

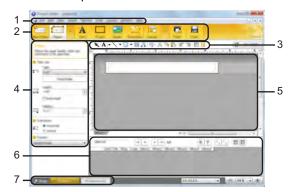

- 1. Menu bar
- 2. Command bar
- 3. Draw/Edit toolbar
- 4. Property bar
- 5. Layout window
- 6. Database window
- 7. Mode selection buttons



[Professional] mode

This mode allows you to create layouts using a wide-range of advanced tools and options. The [Professional] mode screen is explained below.



- 1. Menu bar
- 2. Standard toolbar
- 3. Property palette
- 4. Draw/Edit toolbar
- 5. Layout window
- 6. Database window
- 7. Mode selection buttons
- 8. Side bar





[Snap] mode

This mode allows you to capture all or a portion of your computer screen content, print it as an image, and save it for future use.

Click the [Snap] mode selection button. The [Description of Snap mode] dialog box is displayed.



2 Click [OK]. The [Snap] mode palette is displayed.



- If you select the [Do Not Display This Dialog Again] check box in the [Description of Snap mode] dialog box, next time you will switch to [Snap] mode without displaying the dialog box.
 - For Windows Vista® / Windows® 7 You can also start P-touch Editor in [Snap] mode by clicking the Start menu -[All Programs]-[Brother P-touch]-[P-touch Editor 5.1 (Snap mode)].
 - For Windows® 8 You can also start P-touch Editor in [Snap] mode by clicking [P-touch Editor 5.1 (Snap mode)] on the [Start]/[Apps] screen.

Using P-touch Editor (For Macintosh)

■ Starting P-touch Editor

- Double-click [P-touch Editor] icon on the desktop.
 - The following method can also be used to start the P-touch Editor. Double-click [Macintosh HD] - [Applications] - [P-touch Editor] and then [P-touch Editor] application icon.


P-touch Editor starts.



■ Operation modes

Standard Mode

This mode provides easy label creation with texts and images. The layout window consists of the following sections:

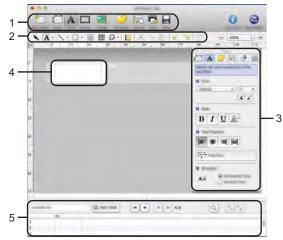

- 1. Command bar
- 2. Draw/Edit toolbar
- 3. Inspector
- 4. Layout window
- 5. Database window

Snap Mode

With this mode, you can capture the screen, print it as an image, and save it for future use. To start the Snap mode, follow the steps below.

- When you click [Snap Mode], the [Description of Snap mode] dialog box appears. Click [OK].
 - If you select [Do Not Display This Dialog Again], you can go to Snap mode directly from the next time.





Snap mode appears.







Updating P-touch Editor

The software can be upgraded to the latest available version using the P-touch Update

In the following steps, you will see XX-XXXX. Read "XX-XXXX" as your P-touch labeling system name.

- - You must be connected to the internet in order to launch the P-touch Update Software.
 - You may find that the software and the contents in this manual are different.
 - Upon installation of the P-touch Update Software, an icon will be installed on your desktop for your convenience.
 - Do not turn off the power when transferring data or updating software.


■ Updating P-touch Editor Software (For Windows®)

- To use the P-touch Update Software, it is necessary to install it from the CD-ROM provided. You can also download the software from the Brother Solutions Center
- For Windows Vista® / Windows® 7 Double-click the [P-touch Update Software] icon.
 - The following method can also be used to start the P-touch Update Software.
 - Click the Start button, and then select [All Programs] [Brother P-touch] - [P-touch Update Software].

For Windows® 8

Click [P-touch Update Software] on the [Start]/[Apps] screen or double-click [P-touch Update Software] on the desktop.

2 Click the [Computer software update] icon.

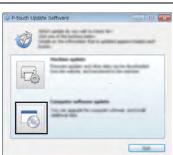





Select the [Printer] and [Language], select the check box next to P-touch Editor and then click [Install].




A message is displayed to indicate that installation has finished.

■ Updating P-touch Editor Software (For Macintosh)

- To use the P-touch Update Software, you can download it from the Brother Solutions Center Macintosh users can access this URL directly by clicking the 💸 icon found on CD-ROM.
- Double-click the [P-touch Update Software] icon.
 - The following method can also be used to start the P-touch Update Software. Double-click [Macintosh HD] - [Applications] - [P-touch Update Software] and then the [P-touch Update Software] application icon.



2 Click the [Computer software update] icon.

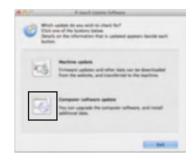















Select the [Printer] and [Language], select the check box next to P-touch Editor and then click [Install].



A message is displayed to indicate that installation has finished.

Using P-touch Transfer Manager (For Windows®)

This application allows you to transfer templates and other data to the P-touch labeling system and save backups of your data on the computer.

This function is not supported with Macintosh computers.

There are some restrictions regarding the templates that can be transferred to the P-touch labeling system. For details, refer to "Notes on Using P-touch Transfer Manager (For Windows®)" on page 61.

How to Use P-touch Transfer Manager

- 1 Create or open a template using P-touch Editor.
- Prepare the P-touch Editor and Open/Edit the template.


P. 16

· Update the P-touch Editor if necessary.

P. 22

Notes on using P-touch Transfer Manager (For Windows[®])

P. 61



- Transferring the label template to P-touch Transfer Manager
 - P. 26



- · Using P-touch Transfer Manager
 - P. 27
- Transferring templates or other data from the computer to the P-touch labeling system
 P 29
- <u>4</u>] Print (without using a computer) the template that was transferred to the P-touch labeling system.
- · Printing the transferred template

P. 35

(1)















Transferring the Label Template to P-touch Transfer Manager

The label templates created in P-touch Editor must first be transferred to P-touch Transfer Manager.


- 1 In P-touch Editor, open the label template to be transferred.
- Click [File] [Transfer Template] [Preview]. You can check a preview of the printed template before the created template is sent to the P-touch labeling system and printed.
- 3 If there are no problems with the displayed template, click [Transfer Template]. P-touch Transfer Manager starts.
- You can also start P-touch Transfer Manager using the following procedure. • For Windows Vista® / Windows® 7
 - From the Start button, click [All Programs] [Brother P-touch] [P-touch Tools] [P-touch Transfer Manager 2.2].
 - For Windows® 8 Click [P-touch Transfer Manager 2.2] on [Start] / [Apps] screen.



Using P-touch Transfer Manager

When P-touch Transfer Manager starts, the main window is displayed.

You can also start P-touch Transfer Manager from P-touch Editor. Click [File] - [Transfer Template] - [Transfer].

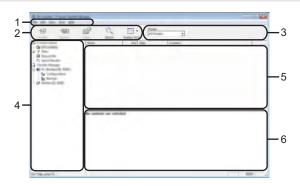

1. Menu bar

Provides access to various commands, which are grouped under each menu title ([File], [Edit], [View], [Tool], and [Help]) according to their functions.

2. Toolbar

Provides access to frequently used commands.

3. Printer selector

Allows you to select which printer or P-touch labeling system the data will be transferred to. When you select a P-touch labeling system, only the data that can be sent to the selected P-touch labeling system is displayed in the data list.

4. Folder view

Displays a list of folders and P-touch labeling system. When you select a folder, the templates in the selected folder are displayed in the template list. If you select a P-touch labeling system, the current templates and other data stored in the P-touch labeling system are displayed.

5. Template list

Displays a list of templates in the selected folder.

6. Preview

Displays a preview of the templates in the templates list.

| (| 1 |) | |
|---|---|---|--|
| (| 2 |) | |
| (| 3 |) | |
| (| 4 |) | |
| (| 5 |) | |
| (| 6 |) | |
| (| 1 |) | |
| (| 8 |) | |



Explanations of the Toolbar Icons

| lcon | Button name | Function |
|---------------------|--|---|
| | Transfer (Only for P-touch Transfer Manager) | Transfers templates and other data from the computer to the P-touch labeling system. |
| | Backup (Only for P-touch Transfer Manager) | Retrieves the templates and other data saved in the P-touch labeling system and saves it on the computer. |
| | Open | Opens the selected template. |
| | Print (Only for P-touch Library) | Prints the selected label template with the P-touch labeling system. |
| Q | Search | Allows you to search for templates or other data that are registered to P-touch Library. |
| Fig. 100 No. 100 | Display Style | Changes the file display style. |


Transferring Templates or Other Data from the Computer to the P-touch Labeling System

Use the following procedure to transfer templates, databases and images from the computer to the P-touch labeling system.

Start P-touch Transfer Manager using the following procedure. For Windows Vista® / Windows® 7 From the Start button, click [All Programs] - [Brother P-touch] - [P-touch Tools] -[P-touch Transfer Manager 2.2].

For Windows® 8 Click [P-touch Transfer Manager 2.2] on [Start] / [Apps] screen.

- 2 Connect the computer and the P-touch labeling system via USB and turn on the P-touch labeling system. The P-touch labeling system model name is displayed in the folder view.
 - If you select a P-touch labeling system in the folder view, the current templates and other data stored in the P-touch labeling system are displayed.
- Select the P-touch labeling system that you want to transfer the template or other data

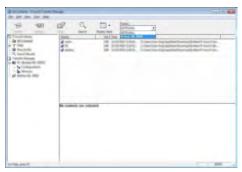

Before transferring data, check that the PC and the P-touch labeling system are correctly connected with a USB cable and that the P-touch labeling system power is On.


















Right-click the [Configurations] folder, select [New], and then create a new folder.

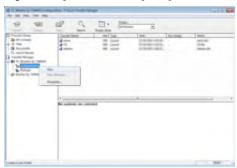

In the example above, the folder [Transfer] is created.

5 Drag the template or other data that you want to transfer and place it in the new folder.

Transfer Function Specification

| Data type | Maximum number of transferable items | Restriction details |
|---|---|---|
| Template | 99 | Each template can contain a maximum of 50 objects. Each object can contain a maximum of 7 lines. |
| Database | 99 | Only *.csv files can be transferred. Each *.csv file can contain a maximum of 256 fields and 65000 records. |
| Image (User-defined 99 character) | | Only *.bmp files can be transferred. Monochrome *.bmp files are recommended. The size limit is 2048 × 2048 pixels. Wide images may be cropped. |


The available space in the transfer file memory can be confirmed using the following procedure. Press the **Menu** key, select "Usage" using the ▲ or ▼ key, and then press the **OK** or **Enter** key. Select "Transferred Content" using the ▲ or ▼ key and press the **OK** or **Enter** key.

^{*} The available space that is displayed in "Available : X.XXMB" may be different from the actual available space.


You can view the templates and other data by selecting the folder in the [Configurations] folder, selecting [All Contents] or by selecting one of the categories under [Filter], such as [Layouts].

When transferring multiple templates or other data, drag all the files that you want to transfer and place them in the new folder.

Each file is assigned a key number (memory location in the P-touch labeling system) when it is placed in the new folder.

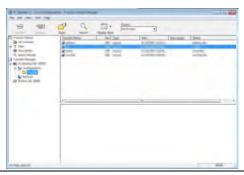

To change the key number assigned to an item, right-click the item, select [Key Assign], and then select the desired key number.

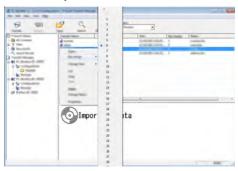

- All data transferred to the P-touch labeling system is assigned a key number.
 - If the template or other data transferred to the P-touch labeling system has the same key number as another template already saved in the P-touch labeling system, the new template will overwrite the old one. You can confirm the templates key number assignments saved in the P-touch labeling system by backing up the templates or other data (refer to "Backing Up Templates or Other Data Saved in the P-touch Labeling System" on page 33).
 - If the P-touch labeling system memory is full, remove one or more templates from the P-touch labeling system nonvolatile memory (refer to "Backing Up Templates or Other Data Saved in the P-touch Labeling System" on page 33).













- To change the names of templates or other data that will be transferred, click on the desired item and enter the new name.
- Select the folder containing the templates or other data that you want to transfer, and then click [Transfer]. A confirmation message will be displayed.



- You can also transfer individual items to the P-touch labeling system. Select the template or other data that you want to transfer, and then click [Transfer].
- 9 Click [OK].



The selected templates or other data are transferred to the P-touch labeling system.

1 To print data that was transferred to the P-touch labeling system, the P-touch labeling system must be switched from the transfer mode to the normal mode. Turn the P-touch labeling system off and then on again.


32

Backing Up Templates or Other Data Saved in the P-touch Labeling System

Use the following procedure to retrieve the templates or other data saved in the P-touch labeling system and save it on the computer.

- Backed up templates or other data cannot be edited on the computer.
 - Depending on the P-touch labeling system model, templates or other data backed up from one P-touch labeling system model may not be able to be transferred to another P-touch labeling system model.
- 1 Connect the computer and the P-touch labeling system and turn on the P-touch labeling system.

The P-touch labeling system model name is displayed in the folder view. If you select a P-touch labeling system in the folder view, the current templates and other data stored in the P-touch labeling system are displayed.

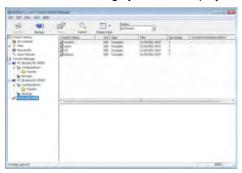

Select the P-touch labeling system to back up from, and then click [Backup]. A confirmation message is displayed.



Click [OK].

A new folder is created under the P-touch labeling system in the folder view. The folder name is based on the date and time of the backup. All of the P-touch labeling system templates and other data are transferred to the new folder and saved on the computer.

















Deleting All the P-touch Labeling System data

Use the following procedure to delete all templates or other data that are saved in the P-touch labeling system.

- Connect the computer and the P-touch labeling system and turn on the P-touch labeling system.

 The model name is displayed in the folder view.
- 2 Right-click your model, and then select [Delete All].



A confirmation message is displayed.



Glick [OK].
All templates and other data saved in the P-touch labeling system are deleted.



Using the Data Transferred to the P-touch Labeling System

A template, database or user-defined character image transferred from the computer can be used to create or print the label.

To delete the transferred data, refer to "Deleting the Transferred Data" on page 40.

A User-defined Character Image

To enter the image, refer to "Entering Symbols" on page 4.

Printing the Transferred Template

A label layout created with P-touch Editor (*.lbx file) can be transferred to the P-touch labeling system, where it can be used as a template for printing labels. Templates can be edited or printed using text from either a database, or by directly typing text in.

- Before editing a template, transfer the template to the P-touch labeling system.
 - When the transfer of the data to the P-touch labeling system is complete, turn the P-touch labeling system off and then on again.

■ When the template which has no object to be edited

- 1 Press the **File** key, select "Transferred Templates" using the ▲ or ▼ key and then press the **OK** or **Enter** key.
 - "Transferred Templates" is displayed if a template is transferred.
- 2 Select the template to be printed using the ▲ or ▼ key and then press the **OK** or **Enter** key.
 - When the template is linked to a database, the equipment in the upper-right corner of the screen.
- 3 Press the **Print** key to start printing.

■ When the template has an object to be edited

If necessary, the template can be temporarily edited. However, the template cannot be saved after it is changed.

When the template is not linked to a database, the label will be ready to print after you select the label template and type text into each of its fields.

When the template is linked to a database, a single record or a range of records in the database linked to the template can be printed.

- The following procedure is for printing a single database record. The database remains unchanged.
 - You cannot add or delete a line break.
- Press the **File** key, select "Transferred Templates" using the ▲ or ▼ key and then press the **OK** or **Enter** key.
 - Transferred Templates" is displayed if a template is transferred.

1

2

3

4



6

8

Using the Data Transferred to the P-touch Labeling System



| | NG P-100CH SUP I WARE |
|------------|---|
| 2 | Select the template to be edited using the ▲ or ▼ key and then press the OK or Enter key. |
| | When the template is linked to a database, the \boxminus icon appears in the upper-right corner of the screen. |
| 3 | |
| | key. Objects that can be edited are displayed. |
| 4 | Select the object to be edited using the ▲ or ▼ key and then press the OK or Enter key. ■ When the template is not linked to a database: The contents of the selected object are displayed. Edit the object and then press the OK or Enter key. ■ When the template is linked to a database: The first record of the database is displayed. Edit the object and then press the OK or Enter key. |
| 5 | Press the Print key to start printing. |
| 2 | When editing templates linked to a database: When an object that is not linked to the database was edited, you can press the Esc key to return to step 3, and then select "Print from Database" to print a selected range from the database. To select the range that you want to print, refer to steps 3 to 5 in "When the template is linked to the database and will not be edited". When an object that is linked to the database was edited, the edited contents will be deleted if you select "Print from Database". Therefore, print the template just by pressing the Print key as described in step 5 above. |
| ■ W | hen the template is linked to the database and will not be edited |
| <u>!</u>) | The following procedure is for printing database records. The database remains unchanged. When printing a range of database records, the text cannot be edited. |
| 1 | Press the File key, select "Transferred Templates" using the \blacktriangle or \blacktriangledown key and then press the OK or Enter key. |
| | "Transferred Templates" is displayed if a template is transferred. |
| 2 | Select the template to be printed using the ${\color{red}\blacktriangle}$ or ${\color{red}\blacktriangledown}$ key and then press the ${\bf OK}$ or ${\bf Enter}$ key. |
| | When the template is linked to a database, the equivalent icon appears at the upper-right corner of the screen. |
| 3 | Select "Print from Database" using the ▲ or ▼ key and then press the OK or Enter key. The contents of the database linked to the template are displayed. |
| 4 | Select the first record in the range that you want to print using the |

Select the last record in the range that you want to print using the ▲, ▼, ◀ or ▶ key and then press the Print, OK or Enter key to start printing.

When the range is set, the selected records will be highlighted.

| name | Ī |
|------|----------------|
| AA | Т |
| AB | |
| AC | |
| AD | П |
| | AA AB AC |

- Press the **Esc** key to return to the previous step.
- The maximum number of characters that can be printed for one transferred template is 1500 characters. However, the maximum number of characters will decrease when line breaks or blocks are added.

Using Transferred Database Data

A database converted to a *.csv file can be transferred to the P-touch labeling system. The data for a database that was transferred without a template can be imported into each label application type. The database data is imported according to the number of blocks and pages set for each label application type. Refer to "Selecting a Labeling Application Type" in the Quick Setup Guide for details on setting the number of blocks and pages for each label application type.

- Before using a database, transfer the database to the P-touch labeling system.
 If a database and template are linked and transferred together, the database can use only that template.
- If the selected database range is larger than the set number of blocks and pages, the data will be imported until the maximum number of blocks and pages is reached.
 - If the set number of blocks and pages is larger than the selected database range, the operation will finish when all of the database is imported. The remaining blocks and pages will be printed blank without any data.

The print results are shown for each label application type when the databases for the following examples are imported.

■ Example 1:

| number | name(1) | type | length | Block No. |
|--------|---------|------|--------|-----------|
| 1A-B01 | AA U | а | 10 | #008 |
| 1A-B02 | AB | b | 20 | #009 |
| 1A-B03 | AC | С | 30 | #010 |
| 1A-B04 | AD | d | 40 | #011 |
| 1A-B05 | AE | е | 50 | #012 |
| 1A-B06 | AF | f | 60 | #013 |
| 1A-B07 | AG | g | 70 | #014 |
| 1A-B08 | AH | h | 80 | #015 |
| 1A-B09 | Al | i | 90 | #016 |

■ Example 2:

| number | name(2) | tvne | length | Block No. |
|---------|---------|------|--------|-----------|
| 1A-B01 | AA U | а | 10 | #008 |
| 1A-B02 | AB | b | 20 | #009 |
| 1A-B03 | AC | С | 30 | #010 |
| 1A-B04 | AD | d | 40 | #011 |
| 1A-B05 | AE | е | 50 | #012 |
| 1A-B06 | AF | f | 60 | #013 |
| 1A-B07 | AG | g | 70 | #014 |
| 1A-B08 | AH | h | 80 | #015 |
| 4 A DOO | ΔI | : | 00 | #04C |

| Label Application Type | Data Import Method | Print Result for Example 1 (one field per record selected) | Print Result for Example 2 (two fields per record selected) |
|------------------------------|---|---|--|
| GENERAL | Data is imported in order according to the set number of blocks and pages | AA AB AC AD * When 2 blocks are set per page | AA a AB b * When 2 blocks are set per page |
| FACEPLATE | For each page separately | AA AB AC AD | AA a AB b |



USING P-TOUCH SOFTWARE

| Label Application Type | Data Import Method | Print Result for Example 1 (one field per record selected) | Print Result for Example 2 (two fields per record selected) |
|------------------------------|---------------------------|---|--|
| CABLE WRAP | For each page separately | 444 BBB 644 644 | ABBB BBB BBB |
| CABLE FLAG | For each page separately | AA AA AB AB | AA AA a a |
| | For each block separately | AA AB AC AD | AA a AB b |
| PATCH PANEL | For each block separately | AA AB AC AD AE AF | AA a AB b AC c |
| PUNCH- DOWN BLOCK | For each block separately | AA AB AC AD AE AF AG AH | AA a AB b AC C AD d |

1 Press the **Database** key, select the database to be used and then press the **OK** or **Enter** key.

The first record of the selected database is displayed.

- \mathbb{Q}
- If the selected record is not changed within a certain time while the database is displayed, the contents of the record will be displayed at the bottom of the screen. However, the contents of the record will not be displayed if the record contains 9 characters or less.
 - When the **Preview** key is pressed, the properties of the record will be displayed.
 - When setting the range, the "field names" line (first line of data) cannot be selected.

| type | name |
|----------------|------------------|
| f brother | AA |
| brother | AB |
| brother | AC |
| brother | AD |
| | |
| (After a | approx. |
| (After a | approx. cond) |
| (After a | approx. cond) |
| (After a 1 sec | cond) |
| 1 sec | name |

2 Select the first record in the range that you want to insert and then press the **OK** or **Enter** key.

The selected record will be highlighted.

| type | name |
|---------|------|
| brother | AA |
| brother | AB |
| brother | AC |
| brother | AD |
| + | |

brother-PT

Select the last record in the range that you want to insert and then press the **OK** or **Enter** key.

The selected range will be highlighted.

The contents of the selected database will be displayed.



38

■ Searching the database

While selecting a database record to be used in a template or added to a label, you can search for records containing specific characters or a specific number.

The search proceeds to the right after the first matched string. Then, the database records will be searched in the same direction as the import order for the label type. The "field names" line will also be searched.

The possible search characters include uppercase and lowercase letters (including accented characters), numbers, and the upper symbols shown on the keys.

1 Press the **Database** key, select the database to be used and then press the **OK** or **Enter** key.

The first record of the selected database is displayed.

| number | name | I |
|--------|------|--------|
| 1A-B01 | AA | П |
| 1A-B02 | AB | \Box |
| 1A-B03 | AC | \Box |
| 1A-B04 | AD | Т |

2 Type in the first character (e.g., "B") that you wish to search for. Example: If you type "B", the fields will be searched from the first field for character strings containing "B".

| number | name | |
|--------|------|--|
| 1A-B01 | AA | |
| 1A-B02 | AB | |
| 1A-B03 | AC | |
| 1A-B04 | AD | |

If a string that contains "B" is found, the cursor will move to that data and "B" will be highlighted. In addition, "B" will be stored in the internal memory.

If a string that contains the searched character "B" is not found, the cursor will remain in its current position without moving and the character "B" will not be stored in the internal memory.

Type in the 2nd character (e.g., "R") that you wish to search for. Next, if you type "R", the fields will be searched from the next field for character strings containing "BR".

| | name | type |
|---|------|---------|
| † | AA | brother |
| i | AB | brother |
| H | AC | brother |
| | AD | brother |

If a string that contains "BR" is found, the cursor will move to that data and "BR" will be highlighted. In addition, "BR" will be stored in the internal memory.

4 Continue searching the database using the same procedure.



• If the character that you searched for is contained in multiple fields in the database, press the **Database** key to move to the next field containing the character. The character will be highlighted in the field.

| containing the character. The character will be highlighted in the field. | AB AC AD | brother brother brother |
|---|----------------|-------------------------------|
| Press the Backspace key to delete the last search character that was typed. The cursor will move to the field containing the | number | name AA |

type

| (1) |
|-----|
| 2 |
| (3) |

| _ | _ |
|---|---|
| (| 4 |
| | |





Using the Data Transferred to the P-touch Labeling System



remaining search characters.

USING P-TOUCH SOFTWARE

Deleting the Transferred Data

Use the following procedure to delete transferred data.

Multiple items cannot be deleted together. Each item must be deleted separately.

■ A user-defined character image to the text

- Press the **Symbol** key, select "Custom" using the ▲ or ▼ key and then press the **OK** or **Enter** key.
- 2 Select the user-defined character image to be deleted using the ▲ or ▼ key and then press the Clear key. A message "Delete?" is displayed.
- 3 Press the **OK** or **Enter** key. Selected user-defined character image is deleted and the next image is selected. If necessary, delete the next character.

■ A template

- Press the **File** key, select "Transferred Templates" using the ▲ or ▼ key and then press the **OK** or **Enter** key.
- Select the template to be deleted using the ▲ or ▼ key and then press the **OK** or **Enter**
- 3 Select "Delete" using ▲ or ▼ key and then press the **OK** or **Enter** key. A message "Delete?" is displayed.
- Press the **OK** or **Enter** key. Selected template is deleted and the next template is selected. If necessary, delete the next template.

■ Database data

- 1 Press the **Database** key.
- Select the database to be deleted using the ▲ or ▼ key and then press the Clear key. A message "Delete?" is displayed.
- Press the **OK** or **Enter** key. Selected template is deleted and the next database is selected. If necessary, delete the next database.

Using P-touch Library

P-touch Library allows you to print templates or to manage templates and other data.

Starting P-touch Library


■ For Windows Vista® / Windows® 7

From the Start button, click [All Programs] - [Brother P-touch] - [P-touch Tools] - [P-touch Library 2.2].

■ For Windows[®] 8

Click [P-touch Library 2.2] on [Start] / [Apps] screen.

When P-touch Library starts, the main window is displayed.

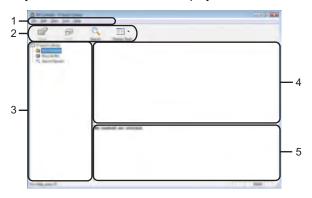

1. Menu bar

Provides access to all available commands, which are grouped under each menu title ([File], [Edit], [View], [Tool], and [Help]) according to their functions.

2. Toolbar

Provides access to frequently used commands.

3. Folder view

Displays a list of folders. When you select a folder, the templates or other data in the selected folder is displayed in the templates list.

4. Templates list

Displays a list of the templates or other data in the selected folder.

5. Preview

Displays a preview of the templates or other data selected in the templates list.















Using P-touch Library




USING P-TOUCH SOFTWARE

Explanations of the Toolbar Icons

| lcon | Button name | Function |
|------|----------------------------|--|
| | Open | Opens the selected template. |
| | Print | Prints the selected label template with the |
| | (Only for P-touch Library) | P-touch labeling system. |
| Q | Search | Allows you to search for templates or other data that are registered to P-touch Library. |
| | Display Style | Changes the file display style. |

Opening and Editing Templates

Select the template you want to open or edit, and then click [Open].

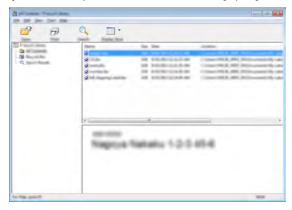


The program that is associated with the template will be started and you can edit the

The program that starts depends on the type of file that is selected. For example, if you select a P-touch Template, P-touch Editor starts.



Printing Templates

Select the template that you want to print and then click [Print].

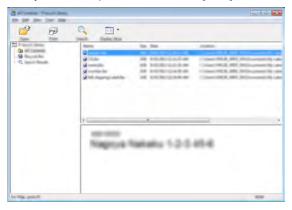

The template is printed using the connected P-touch labeling system.

Searching for Templates or Other Data

You can search for templates or other data registered to P-touch Library.

Click [Search]. The [Search] dialog box is displayed.







Using P-touch Library




USING P-TOUCH SOFTWARE

Specify the search criteria. The following search criteria are available.

| Setting | Details |
|---------------------|---|
| Multiple Parameters | Determines how the program searches when multiple criteria are specified. If you select [AND], the program searches for files that satisfy all of the criteria. If you select [OR], the program searches for files that satisfy any of the criteria. |
| Name | Allows you to search for a template or other data by specifying the file name. |
| Туре | Allows you to search for a template or other data by specifying the file type. |
| Size | Allows you to search for a template or other data by specifying the file size. |
| Date | Allows you to search for a template or other data by specifying the file date. |

Click [Begin Search]. The search begins.

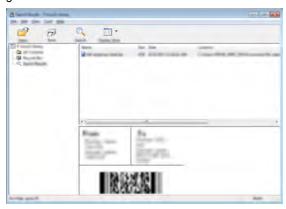

- Close the [Search] dialog box. The search results can be confirmed by clicking [Search Results] in the folder view.
- You can register templates or other data to P-touch Library by dragging and dropping it into the [All Contents] folder or to the folder view. You can also configure P-touch Editor to register templates to P-touch Library automatically, using the following procedure.

 1. From the P-touch Editor menu, select [Tools]-[Options].

 - 2. In the [Options] dialog box, click [Registration Settings] in the [General] tab.
 - 3. Select the timing for registering templates created with P-touch Editor, and then click [OK].



RESETTING & MAINTENANCE

Resetting the P-touch Labeling System

You can reset the internal memory of your P-touch labeling system when you want to clear all saved label files, or in the event the P-touch labeling system is not operating correctly.

Resetting the Data to Factory Settings Using the P-touch Labeling System Keyboard

All text, format settings, option settings and stored label files are cleared when you reset the P-touch Labeling System. Language and unit settings will also be cleared.

■ To reset all the labels and customized settings

Turn off the P-touch labeling system. Press and hold down the Shift and Backspace keys. While holding down the Shift and Backspace keys, press the Power key once and then release the Shift and Backspace keys.

Release the **Power** key before releasing the other key.

■ To reset the customized settings

Turn off the P-touch labeling system. Press and hold down the Shift and R keys. While holding down the Shift and R keys, press the Power key once and then release the Shift and R keys.

Release the **Power** key before releasing the other key.

Resetting the Data Using the Menu Key

Press the **Menu** key, select "Reset" using the ▲ or ▼ key, and then press the **OK** or **Enter** key. Select the resetting method using the ▲ or ▼ key and press the **OK** or **Enter** key.

| Value | Details |
|--------------------|---|
| Reset All Settings | Transferred data (templates, databases, and user-defined characters) and the contents in the file memory are NOT cleared. Other data is cleared and all settings are reset to the factory settings. |
| Erase All Content | Transferred data (templates, databases, and user-defined characters) and the contents in the file memory are cleared. Other data is NOT cleared and settings are NOT reset. |
| Factory Default | All labels and customized settings are reset to the factory settings. |







Resetting the P-touch Labeling System



RESETTING & MAINTENANCE

Maintenance

Your P-touch labeling system should be cleaned on a regular basis to maintain its performance and life span.

Always remove the batteries and disconnect the AC adapter before cleaning the P-touch labeling system.

Cleaning the Unit


Wipe any dust and marks from the main unit using a soft, dry cloth. Use a slightly dampened cloth on difficult to remove marks.


Do not use paint thinner, benzene, alcohol or any other organic solvent. These may deform the case or damage the appearance of your P-touch labeling system.

Cleaning the Print Head

Streaks or poor quality characters on printed labels generally indicates that the print head is dirty. Clean the print head using a cotton swab or the optional print head cleaning cassette (TZe-CL4).










Cleaning the Tape Cutter

Tape adhesive can build up on the cutter blades after repeated use, dulling the blade which may result in the tape jamming.



• Do not touch the cutter blade directly with your bare hands.





Maintenance

TROUBLESHOOTING

What to do when...

| Problem | Solution |
|--|--|
| The screen "locks", or the P-touch labeling system does not respond normally. | Refer to "Resetting the P-touch Labeling System" on page 45 and reset the internal memory to the initial settings. If resetting the P-touch labeling system does not solve the problem, disconnect the AC adapter and remove the batteries for more than 10 minutes. |
| The display remains blank after turning on the power. | Check that the batteries are correctly installed and that the AC adapter designed exclusively for your P-touch labeling system (provided) is correctly connected. Check that the rechargeable Li-ion battery is fully charged. |
| The LCD messages are displayed in a foreign language. | Refer to "Quick Setup Guide" to select your desired language. |
| The label is not printed after pressing the Print key. | Check that text has been entered and that the tape cassette is installed correctly with sufficient tape remaining. If the tape is bent, cut off the bent section and thread the tape through the tape exit slot. If the tape is jammed, remove the tape cassette and then pull out the jammed tape and cut it. Check that the end of the tape passes through the tape guide before reinstalling the tape cassette. |
| The label is not printed correctly. | Remove the tape cassette and reinstall it, pressing it firmly until it clicks into place. If the print head is dirty, clean it with a cotton swab or optional print head cleaning cassette (TZe-CL4). |
| The ink ribbon is separated from the ink roller. | If the ink ribbon is broken, replace the tape cassette. If not, leave the tape uncut and remove the tape cassette, then wind the loose ink ribbon onto the spool as shown in the figure. 1. Spool |
| The P-touch labeling system stops while printing a label. | Replace the tape cassette if striped tape is visible, as this indicates that you have reached the end of the tape. Replace all batteries or connect the AC adapter directly to the P-touch labeling system. |
| The label is not cut automatically. | Check that the Cut Option setting is not set to "No Cut" or "Chain", as the tape will not be fed after printing the label. Alternatively, press the Feed & Cut key to feed and cut the tape. |
| A tape jam error which can not be cleared after following troubleshooting. | Please contact Brother customer service. Refer to the Quick Setup Guide for the contact information. |

8

What to do when...



TROUBLESHOOTING

| Problem | Solution |
|--|--|
| When printing multiple copies of a label, a message is displayed to confirm whether you want the labels to be cut after each label is printed. | Because the cut labels must not remain in the tape exit slot, the message is displayed. To disable the message display, press the Menu key, select "Cut Pause" using the ▲ or ▼ key, and then press the OK or Enter key. |
| I do not know the version number of the firmware for the P-touch labeling system. | The version number and other information for the firmware can be confirmed using the following procedure. Press the Menu key, select "Version Info." using the ▲ or ▼ key, and then press the OK or Enter key. |



What to do when...

Error Messages

When an error message appears on the display, follow the directions provided below.

| Message | Cause/Remedy |
|---|---|
| Wrong Type Of Adapter Connected! | An incompatible AC adapter is connected. Use an appropriate AC adapter (AD-E001). |
| Low Battery! | The installed batteries are getting weak. |
| Replace Battery! | The installed batteries are about to run out. |
| Recharge Li-ion Battery! | The battery is low. Please charge the lithium-ion battery. |
| Li-ion is damaged Use other power source! | The Li-ion is damaged. Please use an AC adapter (AD-E001), AA size alkaline batteries (LR6) or AA size Ni-MH rechargeable batteries (HR6). |
| Unit Cooling Wait XX min. before restart! | High temperature error. Please wait following the message, and try again. |
| Cutter Error! | The tape cutter has been closed when you tried to print or feed tape. Turn the P-touch labeling system off and then on again before continuing. When tape is twisted in the cutter, remove the tape. |
| Insert Tape Cassette! | There is no tape cassette installed when you try to print or preview a label, or feed tape. Install a tape cassette before continuing. |
| Text Full! | The maximum number of characters have already been entered. Edit the text and use fewer characters. |
| No Text! | There is no text, symbols or bar code data entered when you try to print or preview a label. Enter data before continuing. |
| Incorrect Value! | The value entered for setting the tape length, multiple copies or the numbering function is invalid. Enter a valid value for the setting. |
| Tape Cassette Changed! | The tape cassette selected for printing is different from the tape cassette installed in the P-touch labeling system. |
| Line Limit! Max 7 Lines | The maximum number of lines have already been entered. Limit the number of lines to seven. |
| Tape Width Limit! Max 5 Lines | There are more than five lines of text when you press the Print or Preview key while using 0.70" (18 mm) tape. Limit the number of lines to five, or replace with a larger width tape cassette. |
| Tape Width Limit! Max 3 Lines | There are more than three lines of text when you press the Print or Preview key while using 0.47" (12 mm) tape. Limit the number of lines to three, or replace with a larger width tape cassette. |
| Tape Width Limit! Max 2 Lines | There are more than two lines of text when you press the Print or Preview key while using 0.35" or 0.23" (9 mm or 6 mm) tape. Limit the number of lines to two, or replace with a larger width tape cassette. |
| Tape Width Limit! Max 1 Line | There is more than one line of text when you press the Print or Preview key while using 0.13" (3.5 mm) tape. Limit the number of lines to one, or replace with a larger width tape cassette. |

8

Error Messages



TROUBLESHOOTING

| Message | Cause/Remedy |
|--|--|
| Block Limit! Max 99 Blocks | Exceeded maximum block capacity. Limit the number of blocks to 99. |
| Length Limit! | The length of the label to be printed using the text entered is longer than 39.37" (1 m). Edit the text so that the length of the label is less than 39.37" (1 m). |
| Insert 0.94" Tape Cassette! Insert 24mm Tape Cassette! | A 0.94" (24 mm) tape cassette is not installed when Template or Block Layouts for 0.94" (24 mm) tape is selected. Install a 0.94" (24 mm) tape cassette. |
| Insert 0.70" Tape Cassette! Insert 18mm Tape Cassette! | A 0.70" (18 mm) tape cassette is not installed when Template or Block Layouts for 0.70" (18 mm) tape is selected. Install a 0.70" (18 mm) tape cassette. |
| Insert 0.47" Tape Cassette! Insert 12mm Tape Cassette! | A 0.47" (12 mm) tape cassette is not installed when Template or Block Layouts for 0.47" (12 mm) tape is selected. Install a 0.47" (12 mm) tape cassette. |
| Insert 0.35" Tape Cassette! Insert 9mm Tape Cassette! | A 0.35" (9 mm) tape cassette is not installed when Template or Block Layouts for 0.35" (9 mm) tape is selected. Install a 0.35" (9 mm) tape cassette. |
| Insert 0.23" Tape Cassette! Insert 6mm Tape Cassette! | A 0.23" (6 mm) tape cassette is not installed when Template or Block Layouts for 0.23" (6 mm) tape is selected. Install a 0.23" (6 mm) tape cassette. |
| Insert 0.13" Tape Cassette! Insert 3.5mm Tape Cassette! | A 0.13" (3.5 mm) tape cassette is not installed when Template or Block Layouts for 0.13" (3.5 mm) tape is selected. Install a 0.13" (3.5 mm) tape cassette. |
| Insert HS 0.93" Tube Cassette! Insert HS 23.6mm Tube Cassette! | A 0.93" (23.6 mm) Heat Shrink Tube is not installed when Template for 0.93" (23.6 mm) Heat Shrink Tube is selected. Install a 0.93" (23.6 mm) Heat Shrink Tube. |
| Insert HS 0.69" Tube Cassette! Insert HS 17.7mm Tube Cassette! | A 0.69" (17.7 mm) Heat Shrink Tube is not installed when Template for 0.69" (17.7 mm) Heat Shrink Tube is selected. Install a 0.69" (17.7 mm) Heat Shrink Tube. |
| Insert HS 0.46" Tube Cassette! Insert HS 11.7mm Tube Cassette! | A 0.46" (11.7 mm) Heat Shrink Tube is not installed when Template for 0.46" (11.7 mm) Heat Shrink Tube is selected. Install a 0.46" (11.7 mm) Heat Shrink Tube. |
| Insert HS 0.34" Tube Cassette! Insert HS 8.8mm Tube Cassette! | A 0.34" (8.8 mm) Heat Shrink Tube is not installed when Template for 0.34" (8.8 mm) Heat Shrink Tube is selected. Install a 0.34" (8.8 mm) Heat Shrink Tube. |

Error Messages

| Message | Cause/Remedy | ᄁ |
|---|--|----------------|
| Insert HS 0.23" Tube Cassette! Insert HS 5.8mm Tube Cassette! | A 0.23" (5.8 mm) Heat Shrink Tube is not installed when Template for 0.23" (5.8 mm) Heat Shrink Tube is selected. Install a 0.23" (5.8 mm) Heat Shrink Tube. | ROUBLESHOOTING |
| Text Too Long! | The length of the label to be printed using the text entered is longer than the length setting. Edit the text to fit within the set length or change the length setting. | OOTING |
| Memory Full! | There is not enough internal memory available when you try to save a label file. Delete any unnecessary files to make more memory available for the new label file. | - |
| Check # of Digits Entered! | The number of digits entered in the bar code data does not match the number of digits set in the bar code parameters. Enter the correct number of digits. | |
| Input A,B,C or D At Start&End! | The bar code data entered does not have the required start/stop code (A, B, C, or D required at the beginning and end of the bar code data for the CODABAR protocol). Enter the bar code data correctly. | |
| Maximum Of 5 Bar Codes Per Label! | There are already five bar codes entered in the text data when you try to enter a new bar code. You can only use up to five bar codes in each label. You can enter up to two bar codes when A : AA is selected in flag layout. | |
| Text Too Large! | The text size is too large. Select a different size option. | |
| System Error 02! | Please contact Brother customer service. Refer to the Quick Setup Guide for the contact information. | |
| Select Other Cut Option! | The tape length set using the tape length setting is shorter than the total length of the left and right margins applied for the "Large Margin" cutting option. You have to select a different cutting option. | |
| Close Cover! | The rear cover is open. Close the cover when printing. | |
| Installed tape is not compatible with this machine! | Tape that is incompatible with the P-touch labeling system has been installed. Use a compatible tape. | |
| Line Limit! Max 297 Lines per Label | Exceeds max. You can enter up to 297 lines in the whole page and blocks. | |
| Block Function is not Allowed! | In this setting, you cannot add or delete blocks. | (1) |
| Line Limit! Max 3 Lines | PUNCH-DOWN BLOCK layout allows to print up to 3 lines / block. | 3 |
| This Function Requires 0.35" or Wider Tape! This Function Requires 9mm or Wider Tape! | PUNCH-DOWN BLOCK layout must use 9mm or wider tape cassettes. | 4 5 6 |
| Sequence Type Must be None When Editing! | Texts cannot be edited when you set Sequence Type in PUNCH-DOWN BLOCK to Horizontal or Backbone. | 8 |



Error Messages



TROUBLESHOOTING

| Message | Cause/Remedy |
|--------------------|--|
| No Database Found! | Database key on the P-touch labeling system was pressed while there is no database file saved in the P-touch labeling system. |
| No Data! | You tried to open a database file which doesn't contain any data in P-touch labeling system's database function. |
| Bar Code Error! | The bar code labels were tried to print from a database. The P-touch labeling system will display this message when the selected range of the database includes invalid characters/numbers those are not supported by the bar code protocol. |



APPENDIX

Specifications

Main Unit

| Item | Specification |
|--------------------|---|
| play | |
| Character display | 15 characters x 2 lines and guidance area (128 dot x 64 dot) |
| Screen contrast | 5 levels (+2, +1, 0, -1, -2) |
| nting | |
| Print method | Thermal Transfer |
| Print head | 128 dot / 180 dpi |
| Print height | 0.71" (18.0 mm) max. (when using 0.94" [24 mm] tape)*1 |
| Print speed | AC Adapter: Maximum 1.18" (30 mm)/sec. Batteries: Maximum 0.78" (20 mm)/sec. Actual print speed varies depending on the conditions. |
| Tape/Tube cassette | Brother TZe tape cassette (0.13", 0.23", 0.35", 0.47", 0.70", 0.94" [3.5 mm, 6 mm, 9 mm, 12 mm, 18 mm, 24 mm] widths) Brother HGe tape cassette (0.23", 0.35", 0.47", 0.70", 0.94" [6 mm, 9 mm, 12 mm, 18 mm, 24 mm] widths) Brother HSe tube cassette (0.23", 0.34", 0.46", 0.69", 0.93" [5.8 mm, 8.8 mm, 11.7 mm, 17.7 mm, 23.6 mm] widths) |
| No. of lines | 0.94" (24 mm) tape : 1 - 7 lines; 0.70" (18 mm) tape : 1 - 5 lines 0.47" (12 mm) tape : 1 - 3 lines; 0.35" (9 mm) tape : 1 - 2 lines; 0.23" (6 mm) tape : 1 - 2 lines; 0.13" (3.5 mm) tape : 1 line |
| Cut option | Large Margin, Small Margin, Chain, No cut, Special tape |
| mory (local files) | |
| Memory buffer size | Maximum 18297 characters |
| File storage | Maximum 99 files |
| mory (transfered) | |
| File storage | Maximum 99 templates, databases, and images each (total of 6 MB) |
| wer Supply | |
| Power supply | Six "AA" alkaline batteries (LR6)*2, Six "AA" Ni-MH rechargeable batteries (HR6)*2, *3, Li-ion Battery (BA-E001), AC adapter (AD-E001). |
| Auto Power-off | Six "AA" alkaline batteries (LR6)/Six "AA" Ni-MH rechargeable batteries (HR6): 20 min. Li-ion Battery (BA-E001): 30 min. AC adapter (AD-E001): 60 min. (Use the Menu key to change the Auto Power-off setting for the Li-ion battery or AC adapter.) |

Specifications



APPENDIX

| | Item | Specification |
|-----|----------------------------------|---|
| Siz | ze | |
| | Dimensions | Approx. 4.9" (W) x 9.8" (D) x 3.7" (H) [125.8 mm (W) x 249.9 mm (D) x 94.1 mm (H)] |
| | Weight | Approx. 2.0 lb (920 g) (without tape cassette and batteries) |
| Ot | her | |
| | Operating temperature / humidity | 50 °F - 95 °F (10 °C - 35 °C) / 20 % - 80 % humidity (without condensation) Maximum wet bulb temperature: 80.6 °F (27 °C) |

^{*1} Actual character size may be smaller than maximum print height.
*2 Not included.
*3 Visit us at r the latest information at

Specifications

r the latest information about the recommended batteries.

| Symbols | | |
|---------------------|---|--|
| Category | Symbols | |
| Punctuation | . , ? ! " ' : ; \ / & ¿ ; ~ • * @ # % ^ % † ‡ | |
| Datacom | □□11111111111111111111111111111111111 | |
| Audio/Visual | | |
| Electrical | | |
| Arrows | | |
| Safety | | |
| Prohibited | \@\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\ | |
| Brackets | () [] < > « » { } | |
| Mathematics | + - × ÷ ± = ≧ ≦ ≠ ≥ ≤ > < ∴ ∵ ¼ ½ ¾ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ ⅓ | |
| Greek | αβγδφλμΩΣ | |
| Super/ Subscript | O R C TM 0 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 7 8 9 | |
| Bullets | | |
| Currency | \$ ¢ € £ ¥ ₺ | |
| Misc. | 五1000000000000000000000000000000000000 | |

The symbols shown in the table may look slightly different on the P-touch labeling system LCD and when printed.

Symbols



APPENDIX

Accented Characters

| Character | Accented Characters | Character | Accented Characters |
|-----------|---------------------|-----------|---------------------|
| а | áàâäæãąåāă | n | ñňńņ |
| Α | ÁÀÂÄÆÃĄÅĀĂ | N | ÑŇŃŅ |
| С | çčć | 0 | óòôøöōœő |
| С | ÇČĆ | 0 | 0 0 0 Ø Ö O Œ O |
| d | ď ð đ | r | řfţ |
| D | ĎĐ | R | ŘŔŖ |
| е | éèêëęĕēē | s | šśşşβ |
| Е | ÉÈÊËĘĔĖĒ | S | šśŞŞβ |
| g | ģğ | t | ť ţ þ |
| G | ĢĞ | Т | ŤΤÞ |
| i | íìîïįīı | u | ú ù û ü ų ů ū ű |
| 1 | ĺÌÎÏĮĪi | U | ÚÙÛÜŲŮŪŰ |
| k | ķ | у | ýÿ |
| K | Ķ | Y | ÝΫ |
| I | ł í ľ | z | žźż |
| L | ŁĹĻĽ | Z | ž ź ż |

Accented Characters

Character Attribute

| Attribute | Value | Result | Value | Result |
|-----------|---------------------------|---|------------------|-----------------|
| | LGO (Letter Gothic) | ABCabc | CAL (Calgary) | ABCabc |
| | HEL (Helsinki) | ABCabc | BEL (Belgium) | ABCabc |
| | BRU (Brussels) | ABCabc | ATL (Atlanta) | ABCabc |
| Font | US (US) | ABCabc | ADM (Adams) | ABCabc |
| | LA (Los Angeles) | ABCabc | BRN (Brunei) | ABCabc |
| | SGO (San Diego) | ABCabc | SOF (Sofia) | ABCabc |
| | FLO (Florida) | ABCabc | GER (Germany) | ABCabc |
| | Auto | When Auto is selected, the text is automatically adjusted to print in the largest size available for each tape width. | 18pt | ABCabc |
| Size | 48pt | ABCabc | 12pt | ABCabc |
| Size | 42pt | ABCabc | 9pt | ABCabc ggijyy |
| | 36pt | ABCabc | 6pt | ABCabc ggilyy = |
| | 24pt | ABCabc | | - (|
| | x 2 | ABCabc | x 2/3 | ABCabc |
| Width | x 3/2 | ABCabc | x 1/2 | ABCabc |
| | x 1 | ABCabc | | |

Character Attribute



APPENDIX

| Attribute | Value | Result | Value | Result |
|-------------|--------------------|---------------|------------------------------|---------------|
| | Normal | ABCabc | ITA (Italic) | <i>ABCabc</i> |
| | BLD (Bold) | ABCabc | I+BLD (Italic Bold) | <i>ABCabc</i> |
| Style | OUT (Outline) | ABCabc | I+OUT (Italic Outline) | ABCabc |
| | SHD (Shadow) | ABCabc | I+SHD (Italic Shadow) | ABCabc |
| | SLD (Solid) | ABCabc | I+SLD (Italic Solid) | ABCabc |
| Line | Off | ABCabc | UND (Underline) | <u>ABCabc</u> |
| Line | STR (Strikeout) | ABCabc | | |
| Align | Left | ABCabc | Right | ABCabc |
| (Alignment) | Center | ABCabc | Just (Justify) | A B C a b c |

Character Attribute

[•] The actual printed font size depends on the tape width, number of characters and number of input lines. Once characters reach a minimum size, the selected font will default to a custom font which is based on the Helsinki style. This allows labels to print using the smallest text possible on narrow or multi-line labels.

[•] All 6 point text is printed in Helsinki except in default setting.

Frames

| Attribute | Value | Result | Value | Result |
|-----------|-------|--------|-------|---|
| | Off | ABCabc | 4 | ABCabc |
| | 1 | ABCabc | 5 | (ABCabc) |
| Frame | 2 | ABCabc | 6 | ABCabc |
| | 3 | ABCabc | 7 | ABC abc ABC ABC abc ABC ABC abc ABC |

Bar Codes

Bar Code Settings Table

| • | |
|-------------------------------------|---|
| Attribute | Value |
| Protocol | CODE39 , CODE128, EAN-8, EAN-13, GS1-128 (UCC/EAN-128), UPC-A, UPC-E, I-2/5 (ITF), CODABAR |
| Width | Small |
| vvidui | Large |
| Under# | On |
| (characters printed below bar code) | Off |
| | Off |
| C.Digit (check digit) | On (only available for the CODE39, I-2/5 and CODABAR protocols) |













Frames



APPENDIX

Special Character List

CODE39

| CC | DA | BA | R |
|--------|-----|----|---|
| \sim | ,,, | | |

| Special Character | Special Character |
|-------------------|-------------------|
| - | - |
| | \$ |
| (SPACE) | : |
| \$ | / |
| / | - |
| + | + |
| % | |

CODE128, GS1-128 (UCC / EAN-128)

| Special Character | Special Character | Special Character |
|-------------------|-------------------|-------------------|
| (SPACE) | \ | DC3 |
| |] | DC4 |
| 11 | ^ | NAK |
| # | _ | SYN |
| \$ | NUL | ETB |
| \$ % | • | CAN |
| & | SOH | EM |
| • | STX | SUB |
| (| ETX | ESC |
|) | EOT | { |
| * | ENQ | FS |
| + | ACK | |
| , | BEL | GS |
| = | BS | } |
| • | HT | RS |
| / | LF | ~ |
| : | VT | US |
| ; | FF | DEL |
| < | CR | FNC3 |
| = | SO | FNC2 |
| > | SI | FNC4 |
| ? | DLE | FNC1 |
| ä | DC1 | |
| Γ | DC2 | |



Notes on Using P-touch Transfer Manager (For Windows®)

Since some P-touch Editor 5.1 functions are not available with the P-touch labeling system, keep the following points in mind when using P-touch Editor 5.1 to create templates. You can check a preview of the printed template before the created template is transferred to the P-touch labeling system. Refer to "Transferring the Label Template to P-touch Transfer Manager" on page 26 for details.

Notes on Creating Templates

- The P-touch labeling system is loaded with 14 fonts. Some of the text in the template that is transferred to the P-touch labeling system will be printed using similar fonts and character sizes that are loaded in the P-touch labeling system. As a result, the printed label may differ from the image of the template created in P-touch Editor.
- Depending on the text object setting, the character size may be automatically reduced or some of the text may not be printed. If this occurs, change the text object setting.
- Although character styles can be applied to individual characters with P-touch Editor, styles can only be applied to a block of text with the P-touch labeling system. In addition, some character styles are not available on the P-touch labeling system.
- · A numbering field specified with P-touch Editor will not transfer.
- Backgrounds specified with P-touch Editor are not compatible with the P-touch labeling system.
- Date and Time objects using the "At Printing" setting on P-touch Editor will not be printed.
- A P-touch Editor layout that uses the split printing function (enlarging the label and printing
 it on 2 or more labels) cannot be transferred.
- Only the first seven lines of text typed into a database field is read by the P-touch labeling system.
- Fields that extend out of the print area may not print completely.

Notes on Transferring Templates

- The printed label may differ from the image that appears in the Preview area of P-touch Transfer Manager.
- If a bar code that is not loaded on the P-touch labeling system is to be transferred to the
 P-touch labeling system, the bar code will be converted into an image if it is a 2dimensional bar code. The image of the converted bar code cannot be edited. If the bar
 code is a 1-dimensional bar code containing a bar code protocol that is not compatible with
 the P-touch labeling system, an error will occur and the template cannot be transferred.
- All of the transferred objects that cannot be edited by the P-touch labeling system are converted into images.
- Grouped objects will be converted into a single bitmap from which the data cannot be edited from the P-touch labeling system keyboard.

Notes on Transferring Data Other Than Templates

- If the number or order of fields in a database are changed and only the database (*.csv file) is transferred to update it, the database may not link correctly with the template. In addition, the first line of data in the transferred file must be recognized by the P-touch labeling system as "field names".
- Downloaded logos, symbols and graphics into the P-touch labeling system will automatically be scaled (to 8 sizes) like the resident font or any of the resident symbol in the library.

1

2











Notes on Using P-touch Transfer Manager (For Windows®)

