

# EPower™

## MODEL

- Fully software configurable
- Predictive Load Management
- Current rating 50A to 630A (nominal load 16A to 630A)
- Voltage up to 690V ac
- All types of firing modes
- Measurement accuracy <1%
- Large integral four row display
- Remote display option
- Multi-channel unit
- Event Log
- Optional I/O
- Modbus RTU comms
- Profibus DP comms
- DeviceNet® comms
- Ethernet (Modbus TCP) comms
- EtherNet/IP comms
- CC-Link comms
- Profinet IO comms
- Voltage, current and power control
- Complete diagnostics
- Energy counter
- Single phase Load Tap Changer

invenys  
Eurotherm



## Power management and control units

### Specification Sheet

EPower™ is the Eurotherm® series of advanced power control units. Combining the advantages of the latest technologies and innovations to produce a truly impressive performance for your process.

#### Ratings

The EPower current ratings cover the range from 50 Amps up to 630 Amps (nominal 16 Amps to 630 Amps). Ratings are designed at 40°C, but operation can be defined up to 50°C with associated deratings. The voltage rating can go up to a maximum of 690 volts.

#### Predictive Load Management (Patented)

You can reduce your energy costs across your plant by using the Predictive Load Management functionality within EPower. This innovative feature provides a better distribution of energy across different loads in your installation by managing the priority and if necessary, load shedding.

#### Multi Channel Unit

EPower includes seven different power configurations within one unit, depending on the number of power modules fitted. From single phase configuration to two times two phase control, the unit is perfectly modular and configurable to your process requirements. Multiple zones can be controlled with one unit.

Many more features are available (Log file management, advanced alarm strategy, optional I/O...) to provide you with the best of the technology for your process.

#### Display and Remote Display

EPower is fitted with a 4 line x 10 character display with indication of the process values, and diagnostic information, along with an alarm and event message centre. Optionally, the EPower has a 32h8e remote display to allow for the process values and alarm information to be presented front of panel in a clear and unambiguous way. Secure access to the local setpoint is also provided to allow for local control when needed. The remote display, as an indicator, can also provide over temperature policeman functionality removing the need

imagine having the power to save energy

## Communication

Eurotherm has an approach to open communications, offering standard fieldbus networks such as Modbus RTU, Profibus DP, DeviceNet®, Ethernet (Modbus TCP), EtherNet/IP, CC-Link and Profinet IO communications. The use of Fieldbus makes integration into PLCs and other supervisory systems easy to accomplish. It allows an easier integration into PLCs and other supervisory systems by using the main protocols of the market.

## Configuration

"Quick Start" HMI menus provide an easy and friendly way to quickly configure the unit. With the more complex configurations using the iTools software package.



## General specification

### General Standards

The product is designed and produced to comply with EN60947-4-3 (Low voltage switch gear and control gear). Other applicable standards are cited where appropriate.

### Installation Categories

General installation category details for the driver and power units are summarised in the table below.

	Installation Category	Rated impulse withstand voltage (Uimp)	Rated insulation voltage
Communications	II	0.5kV	50V
Standard I/O	II	0.5kV	50V
Driver module power	II	2.5kV	230V
Relays	III	4kV	230V
Power Modules (up to 600V)	III	6kV	600V
Power Modules (690V)	II	6kV	690V
Auxiliary (Fan) supply	II	2.5kV	230V

Table 1 Installation category details

### Power (at 40°C)

#### Caution

Although the driver module supply voltage range is 85 to 265V ac, the fans (if any) fitted to the power (thyristor) modules are specified for use at one of 115V ac or 230V ac as specified at time of order. Before plugging the fan harness into the driver module, ensure that the utility supply voltage is suitable for the fan(s). Otherwise, fan life may be shortened or the cooling effect may not be sufficient, either case presenting a possible hazard to the equipment or to the operator.

#### Driver module

Voltage range: 100 to 240V ac (+10% - 15%)  
Frequency range: 47 to 63Hz  
Power requirement: 60W + Power Module fans (15W each for 400A/500A/630A power modules; 10W each for 160A/250A modules)

Installation Category: Installation category II (category III for relays)

#### Power module

Number of modules: Up to four identical units per Driver Module  
Voltage range: 100 to 600V ac (+10% - 15%) or 100 to 690V ac (+10% - 15%) as specified at time of order  
Frequency range: 47 to 63Hz  
Nominal current: 16 to 630A depending on power module  
Power dissipation: 1.3W per Amp per phase  
Rated short-circuit conditional current: CE Rated. 92kA all modules except: 98kA for 500A modules; 105kA for 630A modules.  
Note: this is not a UL508A test

#### Cooling

Up to and including 100A: Natural convection  
Above 100A: Fan cooling. Fans are connected in parallel to driver module connector  
Fan supply voltage: 115 or 230V ac, as specified at time of order (see 'Caution' above)  
Fan power requirement: 10W for 160A/250A modules; 15W for 400A, 500 and 630A modules

Protection: Thyristor drive: RC circuits and high-speed fuses  
Pollution degree: Pollution degree 2 (EN60947-1)

#### Installation category

Power network: Installation category III up to 600V; Installation category II up to 690V

Auxiliary (fan) supply: Installation category II assuming nominal phase voltage with respect to earth is ≤300V rms

Utilisation categories AC51: non inductive or slightly inductive loads, resistance furnaces

AC56a: switching of transformers

Duty cycle: Uninterrupted duty/continuous operation  
Form designation: Form 4

#### Short circuit protection

co-ordination type: Type1 (fuses)

Load types: Single or multiphase control of resistive loads (low/high temperature coefficient and non-aging/aging types) and transformer primaries. Load voltage/current feedback either internal (standard) or external (option for use with transformer secondaries for example)

## Physical

Dimensions and fixing centres: See Fixing Details

Weight: See Table 2 (weights ± 50gm (2oz))


Current	Weight (including 2kg (4.4lb) for driver module)				lb	oz
	1 phase	2 phases	3 phases	4 phases		
50A/100A	6.5 (14.3)	11.0 (24.3)	15.5 (34.2)	20.0 (44.1)	0.1	1.6
160A	6.9 (15.2)	11.8 (26.0)	16.7 (36.8)	21.6 (47.6)	0.2	3.2
250A	7.8 (17.2)	13.6 (30.0)	19.4 (42.8)	25.2 (55.6)	0.3	4.8
400A	11.8 (26.0)	21.6 (47.6)	31.4 (69.2)	41.2 (90.8)	0.4	6.4
500A	14.0 (30.9)	26.0 (57.3)	38.0 (83.8)	50.0 (110.2)	0.5	8.0
630A	14.5 (32.0)	27.0 (59.5)	39.5 (87.1)	52.0 (114.6)	0.6	9.6
					0.7	11.2
					0.8	12.8
					0.9	14.4

Table 2 Weights

## Environment

Temperature limits Operating: 0°C to 50°C (derate above 40°C as per accompanying curves)

Storage: -25°C to 70°C

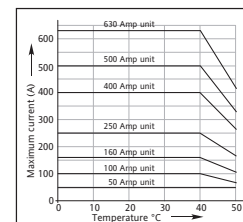

#### Humidity limits:

Altitude (maximum):

Protection:

Atmosphere:

#### External wiring:

Shock (EN60068-2-29):

Vibration (EN60068-2-6):

5% to 95% RH (non-condensing)

1000 metres

IP10 (EN60529)

Non-explosive, non-corrosive and non-conductive

Must comply with IEC 364

10g Peak; 6ms duration; 100 bumps

67-150Hz at 1g

## EMC

Standard: EN60947-4-3 Emissions class A  
This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the user may be required to take adequate mitigation measures.

Immunity criteria: Immunity criterion 1 (criterion 3 for voltage dips and short-time interruptions)

## Operator Interface

Display: 4 lines of up to 10 characters each. Display pages can be used to view process variable values and to view and edit the configuration of the unit. (Editing of the configuration is better carried out using configuration software (iTools). In addition to the standard displays, up to four 'custom' pages can be defined which allow bargraph displays, text entry etc.

Character format: 7 high x 5 wide yellow-green LCD dot matrix array

Push buttons: 4 push buttons provide page and item entry and scroll facilities

LED indicators (beacons): 3 indicators (PWR LOC and ALM) are supplied to indicate that power is applied, that Local Control is selected and that there is one or more active alarm respectively

## Standard Inputs/Outputs (SK1)

All figures are with respect to driver module 0V, unless otherwise stated.

Number of inputs/outputs

No of analogue inputs: 2

No of analogue outputs: 1

No of digital inputs/outputs: 2 (each configurable as an input or an output)

10V (Potentiometer) supply: 1

Update rate: Twice the mains frequency applied to power module 1. Defaults to 83.2Hz (12ms) if no power applied to power module1 or if supply frequency lies outside the range 47 to 63Hz

Termination: Removable 10-way connector. (5.08 mm. pitch)

## Analogue Inputs

Performance: See Tables 3 and 4

Input types: Each input is configurable as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20 mA

Absolute maxima + terminal:  $\pm 16V$  or  $\pm 40mA$   
- terminal:  $\pm 1.5V$  or  $\pm 300mA$

## Analogue outputs

Performance: See Tables 5 and 6

Output types: Each output is configurable as one of 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20 mA

Absolute maxima + terminal:  $(-0.7V$  or  $-300mA)$  or  $(+16V$  or  $+40mA)$   
0V terminal:  $\pm 2A$

Analogue input: Voltage input performance		
Parameter	Typical	Max/Min
Total voltage working input span (Note 1)		-0.25V to +12.5V
Resolution (noise free) (Note 2)	13 bits	
Calibration error (Notes 3 and 4)	<0.25%	<0.5%
Linearity error (Note 3)		$\pm 0.1\%$
Ambient temperature error (Note 3)		<0.01%/°C
Input resistance (+ve terminal to 0V)		>140k $\Omega$
Input resistance (-ve terminal to 0V)	150 $\Omega$	
Allowable voltage (-ve terminal to 0V)		$\pm 1V$
Series mode rejection of mains interference	46dB	>30dB
Common mode dc rejection	46dB	>40dB
Hardware response time	5ms	
<b>Note 1:</b> w.r.t. to the relevant -ve input		
<b>Note 2:</b> w.r.t. total working span		
<b>Note 3:</b> % of effective range (0 to 5V, 0 to 10V)		
<b>Note 4:</b> After warm up. Ambient = 25°C		

Table 3 Analogue input specification table (voltage inputs)

Analogue input: Current input performance		
Parameter	Typical	Max/Min
Total current working input span		-1mA to +25mA
Resolution (noise free) (Note 1)	12 bits	
Calibration error (Notes 2 and 3)	<0.25%	<0.5%
Linearity error (Note 2)		$\pm 0.1\%$
Ambient temperature error (Note 2)		<0.01%/°C
Input resistance (+ve to -ve terminal)	235 $\Omega$	
Input resistance (-ve terminal to 0V)	150 $\Omega$	
Allowable voltage (-ve terminal to 0V)		< $\pm 1V$
Series mode rejection of mains interference	46dB	>30dB
Common mode dc rejection	46dB	>40dB
Hardware response time	5ms	
<b>Note 1:</b> w.r.t. total working span		
<b>Note 2:</b> % of effective range (0 to 20mA)		
<b>Note 3:</b> After warm up. Ambient = 25°C		

Table 4 Analogue input specification table (current inputs)

Analogue output: Voltage output performance		
Parameter	Typical	Max/Min
Total voltage working span (within $\pm 20mA$ (typ.) current span)		-0.5V to +12.5V
Short circuit current		<24mA
Resolution (noise free) (Note 1)	12.5 bits	
Calibration error (Notes 2 and 3)	<0.25%	<0.5%
Linearity error (Note 2)		< $\pm 0.1\%$
Ambient temperature error (Note 2)		<0.01%/°C
Minimum load resistance		>800 $\Omega$
DC output impedance		<2 $\Omega$
Hardware response time (10% to 90%)	20ms	<25ms
<b>Note 1:</b> w.r.t. total working span		
<b>Note 2:</b> % of effective range (0 to 5V, 0 to 10V)		
<b>Note 3:</b> After warm up. Ambient = 25°C		

Table 5 Analogue output specification table (voltage outputs)

Analogue output: Current output performance		
Parameter	Typical	Max/Min
Total current working span (within -0.3V to +12.5V voltage span)		-24mA to +24mA
Open circuit voltage		<16V
Resolution (noise free) (Note 1)	12.5 bits	
Calibration error (Notes 2 and 3)	<0.25%	<0.5%
Linearity error (Note 2)		< $\pm 0.1\%$
Ambient temperature error (Note 2)		<0.01%/°C
Maximum load resistance		<550 $\Omega$
DC Output conductance		<1 $\mu A/V$
Hardware response time (10% to 90%)	20ms	<25ms
<b>Note 1:</b> w.r.t. total working span		
<b>Note 2:</b> % of effective range (0 to 20mA)		
<b>Note 3:</b> After warm up. Ambient = 25°C		

Table 6 Analogue output specification table (current outputs)

## 10V supply (Potentiometer supply)

Output voltage:  $10.0V \pm 0.3V$  @ 5.5mA  
Short circuit o/p current: 15mA max.  
Ambient temperature drift:  $\pm 0.012\%/^{\circ}C$  (typ);  $\pm 0.04\%/^{\circ}C$  (max.)  
Absolute maxima Pin 1:  $(-0.7V$  or  $-300mA)$  or  $(+16V$  or  $+40mA)$

## Digital I/O

Hardware response time: 100 $\mu s$

Voltage inputs

Active level (high):  $4.4V < V_{in} < 30V$   
Non-active level (low):  $-30V < V_{in} < +2.3V$   
Input impedance: 10k $\Omega$

Contact closure inputs

Source current: 10mA min; 15mA max  
Open contact (non active) resistance: >500 $\Omega$   
Closed contact (active) resistance: <150 $\Omega$

Current source output

Source current: 9mA <  $I_{source}$  < 14mA @ 14V  
10mA <  $I_{source}$  < 15mA @ 0V  
9mA <  $I_{source}$  < 14mA @ -15V


Open circuit voltage: <14V  
Internal pull-down resistance: 10k $\Omega$  (to 0V)  
Absolute maxima + terminal:  $\pm 30V$  or  $\pm 25mA$   
0V terminal:  $\pm 2A$

## Notes:

1. Absolute maximum ratings refer to externally applied signals
2. The 10V potentiometer supply is designed to supply two 5k $\Omega$  potentiometers connected in parallel with one another.
3. The maximum current for any 0V terminal is  $\pm 2A$ .

## Relay Specification

The relays associated with this product have gold plated contacts applicable to 'dry circuit' (low current) use.

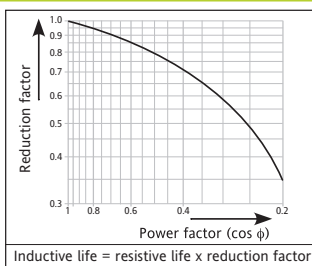

Contact life	Resistive loads:	100,000 operations (de-rate with inductive loads as per figure)
High power use	Current:	<2A (resistive loads)
	Voltage:	<264V RMS
Low power use	Current:	>1mA
	Voltage:	>1V
Contact configuration:	Single pole change-over (One set of Common, Normally Open and Normally Closed contacts)	
Termination	Relay 1 (standard):	3-way connector on underside of driver module
	Watchdog relay (standard):	3-way connector on underside of driver module
	Relays two to four (option):	12-way option module connector
Installation Category	Installation category III, assuming that nominal phase to earth voltage is ≤300V RMS. Isolation between different relays' contacts is double isolation, in accordance with the installation category and phase to earth voltage specified above.	
Absolute max switching capability: <2A at 240V RMS (resistive loads)		

**Note:** Normally closed and normally open refer to the relay when the coil is not energised.

## Optional Input/Output Modules (SK3, SK4, SK5)

Up to three input/output modules can be fitted, each containing the inputs and outputs detailed below. Unless otherwise stated below, the specification for the optional I/O (including relays) is as given above for the standard I/O.

Termination:	Removable 12-way (5.08mm pitch) connector per module
Number of modules:	Up to 3
Number of inputs:	1 analogue input and 2 digital inputs per module
Number of outputs:	1 analogue output per module
Number of relays:	1 set of common, normally open and normally closed contacts per module
10V potentiometer supply output voltage:	10.0V ±0.3V at 5.5mA

## Mains Network Measurements

All network measurements are calculated over a full mains cycle, but internally updated every half-cycle. For this reason, power control, current limits and alarms all run at the mains half-cycle rate. The calculations are based on waveform samples taken at a rate of 20kHz. Measurements on each phase are synchronised to its own phase and if the line voltage cannot be detected, the measurements stop for that phase. It should be noted that, depending on the configuration, the phase voltage referred to is one of:

- the line voltage referenced to neutral in four star,
- the line voltage referenced to neutral or another phase for single phase networks or
- the line voltage referenced to the phase applied to the next adjacent power module for three phase star or delta networks.

The parameters below are directly derived from measurements for each phase.

### Accuracy (20 to 25°C)

Line RMS voltage (Vline):	±0.5% of Nominal Vline
Load RMS voltage (V):	±0.5% of Nominal V for voltage readings >1% of Nominal V. Unspecified for readings lower than 1%Vnom
Thyristor RMS current (IRMS):	±0.5% of Nominal IRMS for current readings >3.3% of Nominal IRMS. Unspecified for readings = 3.3% Nominal IRMS
Note:	For external current feedback the above specification does not include errors associated with external current transformers.
Load RMS voltage squared (Vsqr):	±1% of (Nominal V) <sup>2</sup>
Thyristor RMS current squared (Isqr):	±1% of (Nominal I) <sup>2</sup>
True load power (P):	±1% of (Nominal V) x (Nominal I) 0.1Hz
Frequency resolution:	11 bits of Nominal value (noise free)
Measurement resolution:	<0.02% of reading /°C

Further parameters (S, PF, Q, Z, Iavg, IsqBurst, IsqMax, Vavg, Vsqr Burst, VsqrMax and PBurst) are derived from the above, for each network (if relevant). See EPower User Guide Section (Meas submenu) for further details.

## External Current Transformer



Ratio:	Chosen such that the full scale output from the current transformer is 5 Amps
--------	---

## Communications

CC-Link	Protocol: CC-Link version 1.1 Connector: 5-way Indicators: RUN and ERR
DeviceNet	Protocol: DeviceNet Connector: 5-way Indicators: Network status and Module status
EtherNet	Type: 10baseT (IEEE801) Protocol: Modbus TCP Connector: RJ45 Indicators: Tx activity (green) and communications activity (yellow)
EtherNet/IP	Protocol: EtherNet/IP Connector: RJ45 Indicators: NS (Network status), MS (Module status) and LINK (Link status)
Modbus RTU	Protocol: Modbus RTU slave Transmission standard: 3-wire EIA485 Connector: Twin, parallel-wired RJ45 Indicators: Tx activity (green) and Rx activity (yellow)
Isolation (EN60947-4-3):	Installation category II, Pollution degree 2
Terminals to ground:	50V RMS or dc to ground (double isolation)
Profibus	Protocol: Profibus DPV1 Connector: 9-way D-type Indicators: Mode and Status
Profinet	Protocol: Profinet IO Connector: RJ45 Indicators: NS (Network status), MS (Module status) and LINK (Link status).

## Electrical Installation

### Drive Module Connectors

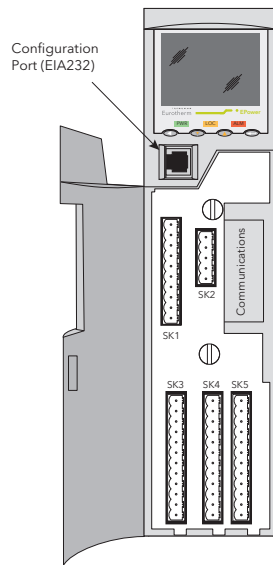


**SK1 Standard I/O**

1	+10 Volts out
2	Analogue i/p 1 +
3	Analogue i/p 1 -
4	Analogue i/p 2 +
5	Analogue i/p 2 -
6	Analogue o/p 1 +
7	Analogue o/p 1 0V
8	Digital i/o 1 +
9	Digital i/o 2 +
10	Digital i/o 0V

**SK2 Predictive Load Management Option**

1	Terminator A
2	Low
3	Shield
4	High
5	Terminator B



**SK3 Optional I/O 1**

1	+10 Volts out
2	Analogue i/p 3 +
3	Analogue i/p 3 -
4	Analogue o/p 2 +
5	Analogue o/p 2 0V
6	Digital i/p 3 +
7	Digital i/p 4 +
8	Digital 0V
9	Not used
10	Relay 2 NO (24)
11	Relay 2 Com (21)
12	Relay 2 NC (22)

Polarising pins:  
Fixed connector: pins 1 and 2;  
Mating connector: pin 3

**SK4 Optional I/O 2**



1	+10 Volts out
2	Analogue i/p 4 +
3	Analogue i/p 4 -
4	Analogue o/p 3 +
5	Analogue o/p 3 0V
6	Digital i/p 5 +
7	Digital i/p 6 +
8	Digital 0V
9	Not used
10	Relay 3 NO (34)
11	Relay 3 Com (31)
12	Relay 3 NC (32)

Polarising pins:  
Fixed connector: pins 2 and 3;  
Mating connector: pin 1

**SK5 Optional I/O 3**


1	+10 Volts out
2	Analogue i/p 5 +
3	Analogue i/p 5 -
4	Analogue o/p 4 +
5	Analogue o/p 4 0V
6	Digital i/p 7 +
7	Digital i/p 8 +
8	Digital 0V
9	Not used
10	Relay 4 NO (44)
11	Relay 4 Com (41)
12	Relay 4 NC (42)

Polarising pins:  
Fixed connector: pins 1 and 3;  
Mating connector: pin 2

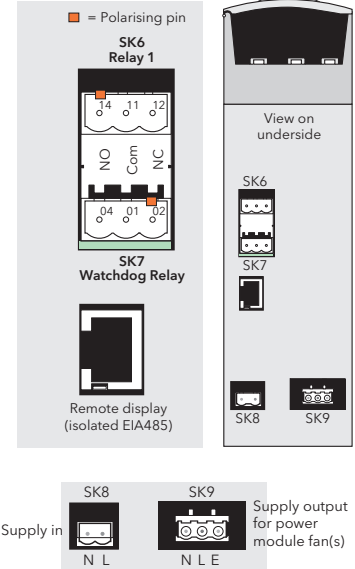

Safety Earth Details			
Max. load current	Minimum earth cable cross-section	Earth Terminal	
		Size	Tightening torque
50/100A	25 mm <sup>2</sup>	M6	5 Nm (3.7 ft lb)
160A	35 mm <sup>2</sup>	M6	5 Nm (3.7 ft lb)
250A	70 mm <sup>2</sup>	M8	12.5 Nm (9.2 ft lb)
400A	120 mm <sup>2</sup>	M10	15 Nm (11.1 ft lb)
500A	150 mm <sup>2</sup>	M12	25 Nm (18.4 ft lb)
630A	185 mm <sup>2</sup>	M12	25 Nm (18.4 ft lb)

### Power Module Connectors

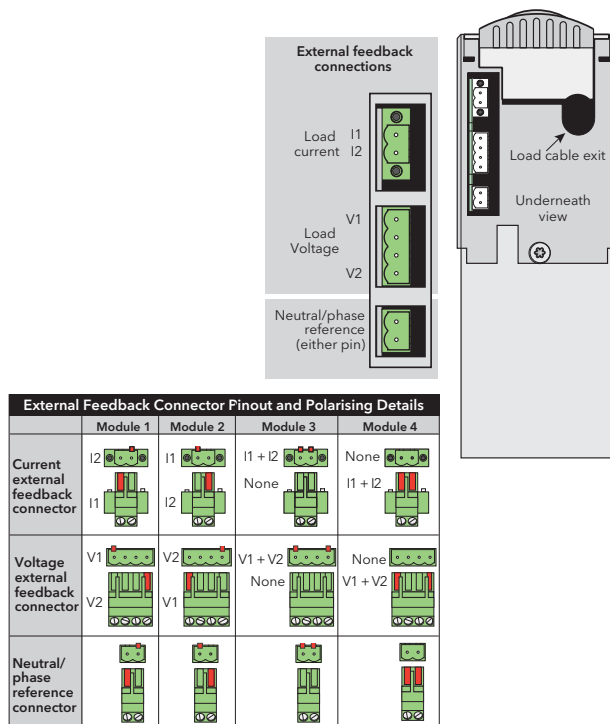

**External Feedback Connector Pinout and Polarising Details**

	Module 1	Module 2	Module 3	Module 4
Current external feedback connector	I2 I1	I1 I2	I1 + I2 None	None I1 + I2
Voltage external feedback connector	V1 V2	V2 V1	V1 + V2 None	None V1 + V2
Neutral/phase reference connector				




Line/Load Termination Details			
Max. load current	Terminal size	Minimum cable cross-section	Recommended torque setting
50/100A	M8	35 mm <sup>2</sup>	12.5 Nm (9.2 ft lb)
160A	M8	70 mm <sup>2</sup>	12.5 Nm (9.2 ft lb)
250A	M10	120 mm <sup>2</sup>	25 Nm (18.4 ft lb)
400A	M12	240 mm <sup>2</sup>	28.8 Nm (21.2 ft lb)
500A	2 x M12	2 x 150 mm <sup>2</sup>	30 Nm (22.1 ft lb)
630A	2 x M12	2 x 185 mm <sup>2</sup>	30 Nm (22.1 ft lb)



## Communications

### DeviceNet Connector Pinout

Pin	Function
1	V- (negative bus supply voltage)
2	CAN_L
3	Cable shield
4	CAN_H
5	V+ (positive bus supply voltage)



Network Status LED Indication	
LED state	Interpretation
Off	Off-line or no power
Steady green	On-line to 1 or more units
Flashing green	On-line - no connections
Steady red	Critical link failure
Flashing red	1 or more connections timed out

Module Status LED Indication	
LED state	Interpretation
Off	No power
Steady green	Operating normally
Flashing green	Missing or incomplete configuration
Steady red	Unrecoverable fault(s)
Flashing red	Recoverable fault(s)

#### Notes:


- See DeviceNet specification for power supply specification
- During startup, an LED test is performed, satisfying the DeviceNet standard.

### Modbus RTU Pinout

Pin	Signal (EIA485)
8	Reserved
7	Reserved
6	N/C
5	N/C
4	N/C
3	Isolated 0V
2	A
1	B

Internal connections:  
Pin 1 to 5V via 100k  
Pin 2 to 0V via 100k


LEDs:  
Green = Tx activity  
Yellow = Rx activity



Connectors in parallel

### Profibus Connector Pinout

Pin	Function	Pin	Function
9	N/C	5	Isolated ground
8	A (Rx-/Tx-)	4	RTS
7	N/C	3	B (Rx+/Tx+)
6	+5 V (1)	2	N/C
		1	N/C



Operation Mode LED Indication	
LED state	Interpretation
Off	Off-line or no power
Steady green	On-line, data exchange
Flashing green	On-line, clear
Red single flash	Parametrisation error
Red double flash	Profibus configuration error

Status LED Indication	
LED state	Interpretation
Off	No power or not initialised
Steady green	Initialised
Flashing green	Diagnostic event present
Steady red	Exception error


#### Notes:

- Isolated 5 Volts for termination purposes. Any current drawn from this terminal affects the total power consumption.
- The cable screen should be terminated to the connector housing.

### Modbus TCP (Ethernet 10baseT) Pinout


Pin	Function
8	N/C
7	N/C
6	Rx-
5	N/C
4	N/C
3	Rx+
2	Tx-
1	Tx+

LEDs:  
Green = Tx activity  
Yellow = Network activity



### CC-Link Connector Pinout

Pin	Function
1	DA (Rx+/Tx+) — 110R, 1/2W, 5% across pins 1 and 2 of first and last connectors
2	DB (Rx-/Tx-) —
3	DG (Signal ground) —
4	SLD (Cable Shield) — SLD and FG connected internally
5	FG (Protective Ground) —



'RUN' LED Indication	
LED state	Interpretation
Off	Off-line or no power
Green	Normal operation
Red	Major fault (fatal error)


'ERR' LED Indication	
LED state	Interpretation
Off	No error or no power
Steady red	Exception or fatal event
Flickering red	CRC Error
Flashing red	Station number of Baud rate has changed since startup

#### Notes:

- A 110 Ohm ( $\pm 5\%$  1/2 watt) terminating resistor should be connected across pins 1 and 2 of the connectors at each end of the transmission line.
- The cable shield should be connected to pin 4 of each CC-Link connector.
- The shield and Protective earth terminals (pins 4 and 5) are internally connected.

### EtherNet/IP Connector Pinout

Pin	Function
1	Tx+
2	Tx-
3	Rx+
4	N/C
5	N/C
6	Rx-
7	N/C
8	N/C



LINK LED Indication	
LED state	Interpretation
Off	No Link, no activity
Steady green	Link established
Flickering green	Activity in progress

NS (Network Status) LED Indication	
LED state	Interpretation
Off	No power or no IP address
Steady green	On-line, one or more connections established (CIP class 1 or 3)
Flashing green	On-line, no connections enabled
Steady red	Duplicate IP address, ('fatal' error)
Flashing red	One or more connections timed out (CIP class 1 or 3)

MS (Module Status) LED Indication	
LED state	Interpretation
Off	No power
Steady green	Controlled by a scanner in Run state
Flashing green	Not configuration or scanner in idle state
Steady red	Major fault (Exception-state, fatal error etc.)
Flashing red	Recoverable fault

### Profinet IO Connector Pinout

Pin	Function
1	Tx+
2	Tx-
3	Rx+
4	N/C
5	N/C
6	Rx-
7	N/C
8	N/C



LINK LED Indication	
LED state	Interpretation
Off	No Link, no activity
Steady green	Link established; no activity
Flickering green	Activity in progress








NS (Network status) LED	
LED state	Interpretation
Off	No power or no connection with I/O Controller
Steady green	On-line (RUN); connection with IO controller established. Controller in 'Run' state
Flashing green	On-line (STOP); connection with IO controller established. Controller in 'Stop' state

MS (Module status) LED	
LED state	Interpretation
Off	Not initialised
Green steady	Normal operation
Green 1 flash	Diagnostic event
Green 2 flash	Blink
Red steady	Exception error
Red 1 flash	Configuration error
Red 2 flash	IP Address error
Red 3 flash	Station Name error
Red 4 flash	Internal error

## General diagrams

### Caution

1. Neutral/phase reference connections (if applicable) must be located between any isolating device and the relevant Power Module.
2. For single phase configurations, all Neutral reference connections must be individually fused.

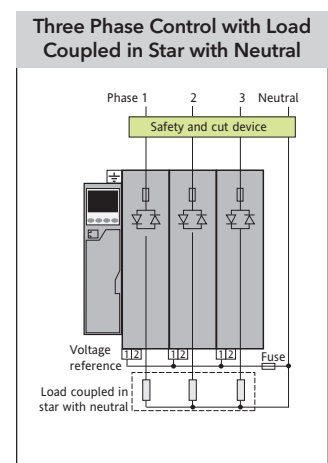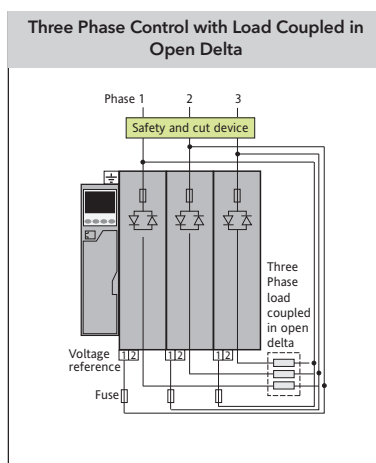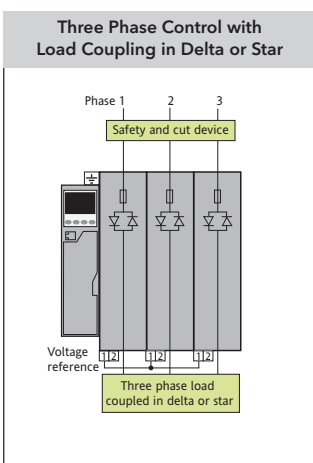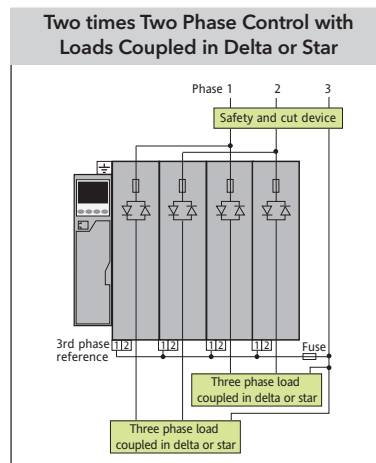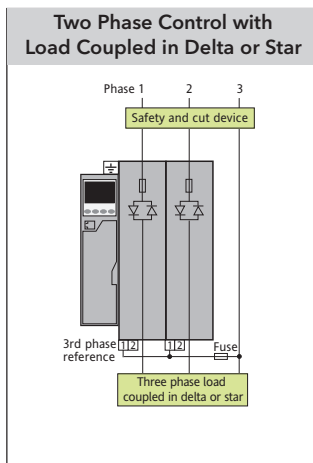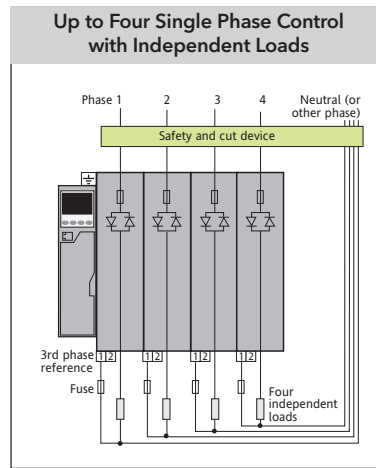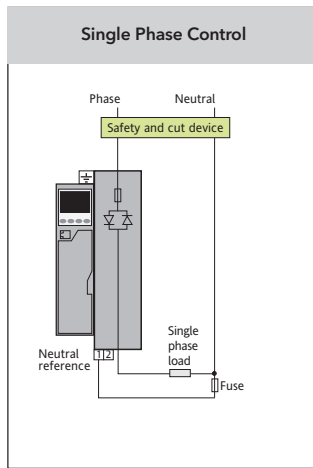



**50A/100A (drawing on the right)**  
**160A/250A (drawings next page)**  
**Fixing Details**

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with 2, 3 or 4 phase brackets as appropriate. See table below for details.

Dimension **mm (inches)**

50/100/160/250 AMPS	Overall Widths			
No of phases	1	2	3	4
Door closed	149.5 (5.89)	234.5 (9.23)	319.5 (12.58)	404.5 (15.93)
Door open	211.0 (8.31)	296.0 (11.65)	381.0 (15.00)	466.0 (18.35)

Bracket	Upper	Lower
2-phase	Use A & B	Use E & F
3-phase	Use A, B & C	Use E, F & G
4-phase	Use A, B, C & D	Use E, F, G & H

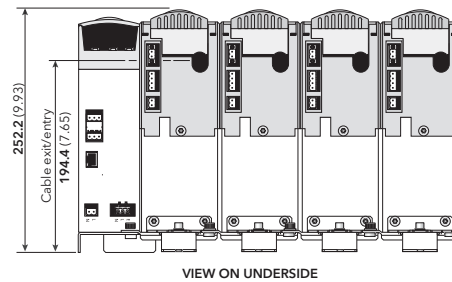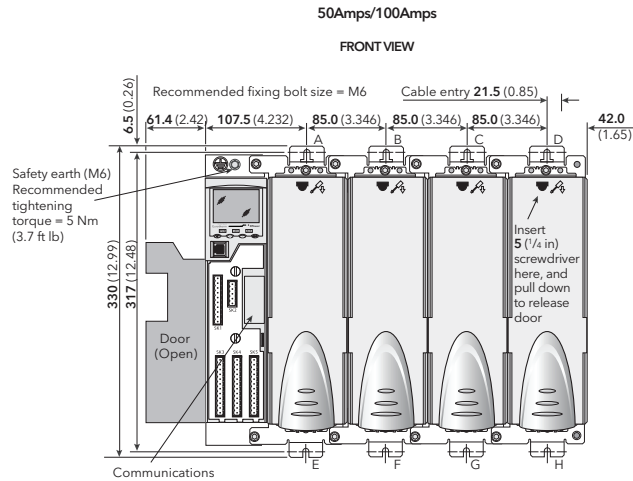



**400A (drawing on the right)**  
**500A/630A (drawing next page)**  
**Fixing Details**

**Note:** Units are shown with individual mounting brackets. Multi-phase units come supplied with 2, 3 or 4 phase brackets as appropriate. See table below for details.




Dimension **mm (inches)**

400/500/630 AMPS	Overall Widths			
No of phases	1	2	3	4
Door closed	189.5 (7.46)	314.5 (12.38)	439.5 (17.30)	564.5 (22.22)
Door open	251.0 (9.88)	376.0 (14.80)	501.0 (19.72)	626.0 (24.65)


Bracket	Upper	Lower
2-phase	Use A & B	Use E & F
3-phase	Use A, B & C	Use E, F & G
4-phase	Use A, B, C & D	Use E, F, G & H

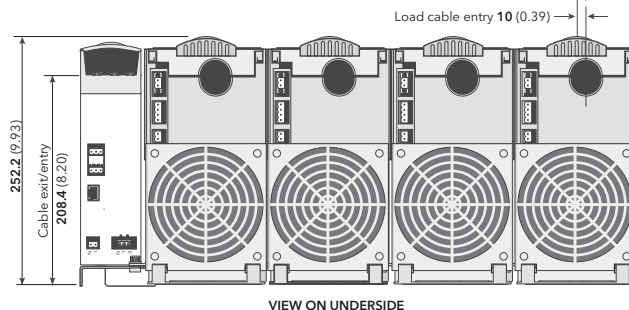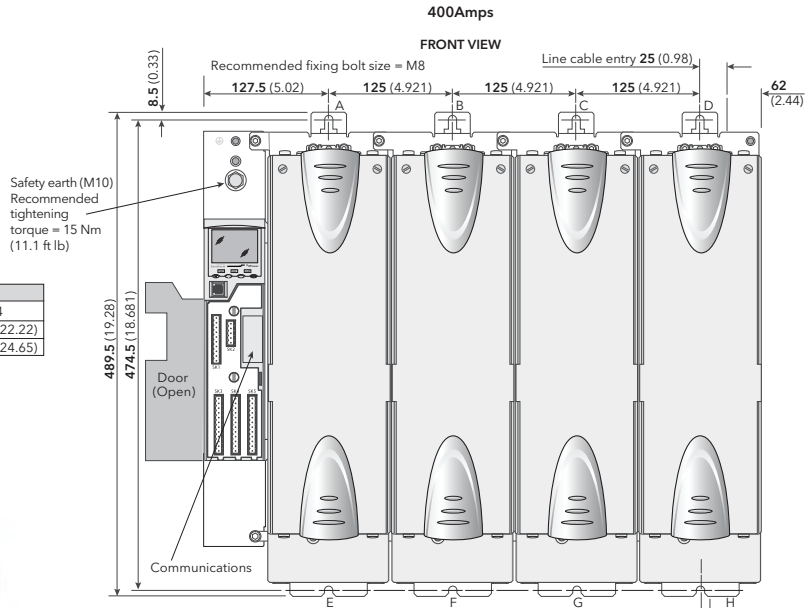





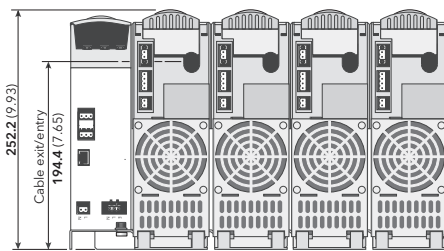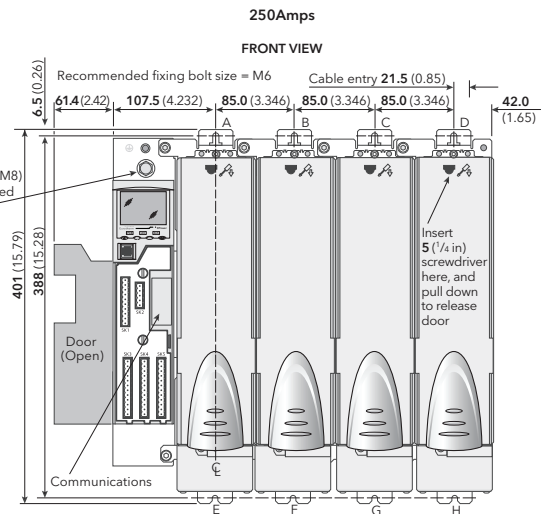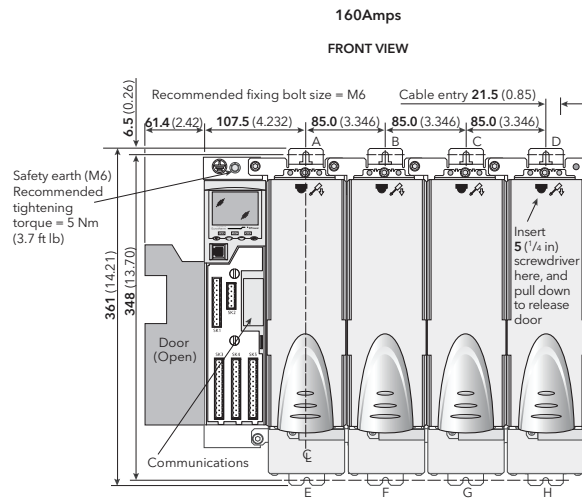

VIEW ON UNDERSIDE

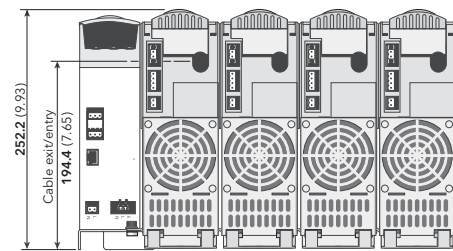

VIEW ON UNDERSIDE

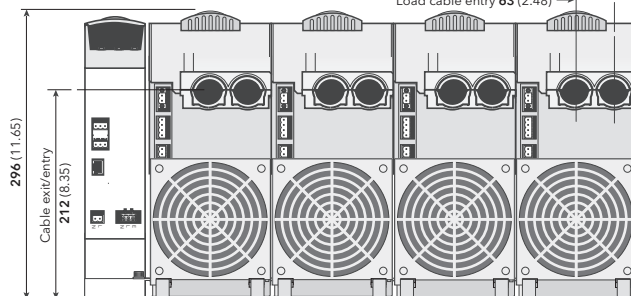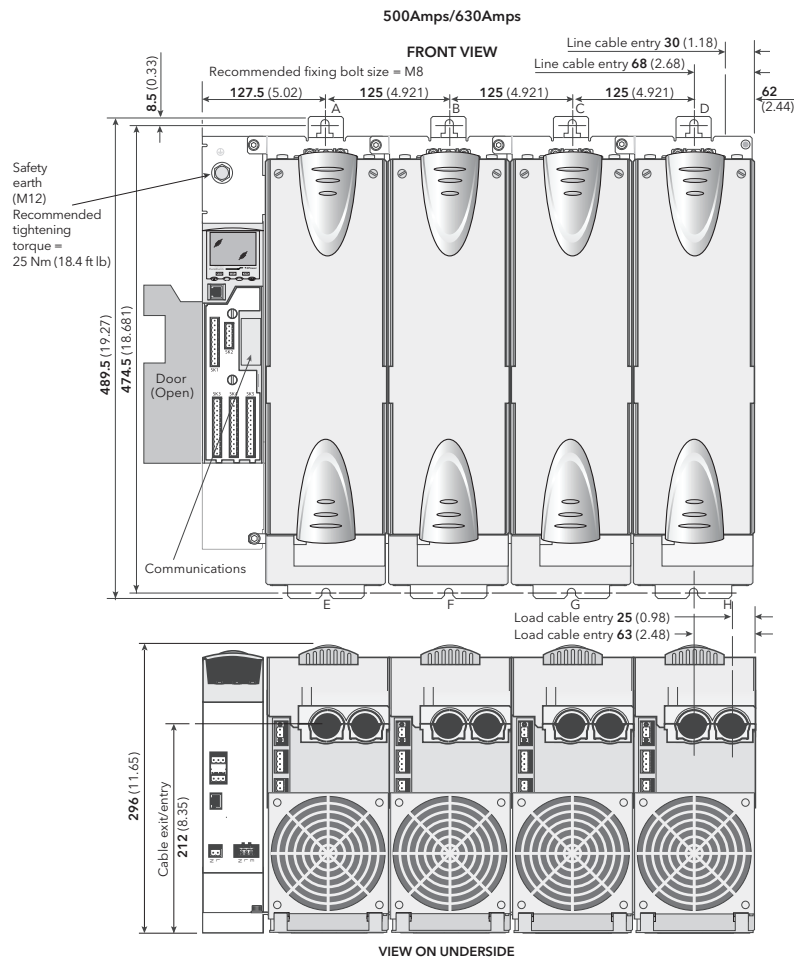

VIEW ON UNDERSIDE

## Order codes

EPOWER	1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20	21	22	23	24	25	26	27
28	29	30	31	32	33	34	35	36	37				

The code is divided in three sections:

- 1 Hardware, which defines the type, number and size of the unit and/or the modules.
- 2 Optional hardware and software functions.
- 3 QuickStart which is intend to configure the unit for maximum 60 to 80% of the application (single unit in 1, 2 or 3 legs configuration)

The code can then be either "Short" and include only the main hardware fields or "medium" and combine the hardware + the optional fields, or finally "Long" with the additional quick start code at the end.

Basic Product		4	Warranty	12	Predictive Load Management	19	Language			
EPOWER	Power Controller	XXX	Standard 5 Year USW3L3	XXX	PLM	None Predictive Load Management	ENG FRA GER ITA SPA	English French German Italian Spanish		
1		Phase/Amps		13		External Feedback				
1PH-50A	1 Phase unit 50A	5	Internal Use	XX	XF	None - Standard unit External feedback*				
1PH-100A	1 Phase unit 100A	XXX	None							
1PH-160A	1 Phase unit 160A	6		Internal Use		* Factory option				
1PH-250A	1 Phase unit 250A	XXX	None							
1PH-400A	1 Phase unit 400A	7		Option		14		Remote Panel		
1PH-500A	1 Phase unit 500A	XX	00	None - End of Code Unit with options and/ or quick start definition	XX	32ENG 32FRA 32GER 32ITA 32SPA	None 32h8e English 32h8e French 32h8e German 32h8e Italian 32h8e Spanish			
1PH-630A	1 Phase unit 630A	8		Communications Protocol		15		Software Option 1		
2PH-50A	2 Phase unit 50A	XX	Y2	No optional fieldbus communication 2-wire 485 Modbus (RJ45 connector)	XXX	EMS	None Energy Measurement (Counter)			
2PH-100A	2 Phase unit 100A	PB		Profibus-DP1 (with D type connector)	LTC		Load Tap Changer			
2PH-160A	2 Phase unit 160A	ET	DN	Modbus-TCP	16		Software Option 2			
2PH-250A	2 Phase unit 250A	IP	CC	DeviceNet	XXX	EMS	None Energy Measurement (Counter)			
2PH-400A	2 Phase unit 400A	PN		Ethernet/IP	LTC		Load Tap Changer			
2PH-500A	2 Phase unit 500A	9		Module 1		17		Not Used		
2PH-630A	2 Phase unit 630A	XX	IO	None IO optional board	XX		Default			
3PH-50A	3 Phase unit 50A	10		Module 2		18		Quick Start		
3PH-100A	3 Phase unit 100A	XX	IO	None IO optional board	XX	QS	None - End of code Quick Start config			
3PH-160A	3 Phase unit 160A	11		Module 3		19		Load Current (nominal)		
3PH-250A	3 Phase unit 250A	XX	IO	None IO optional board			16A 25A 40A 50A 63A 80A 100A 125A 160A 200A 250A 315A 400A 500A 630A	16 Amps 25 Amps 40 Amps 50 Amps 63 Amps 80 Amps 100 Amps 125 Amps (Note 1) 160 Amps (Note 1) 200 Amps (Note 1) 250 Amps (Note 1) 315 Amps (Note 1) 400 Amps (Note 1) 500 Amps (Note 1) 630 Amps (Note 1)		
3PH-400A	3 Phase unit 400A	12		Module 4		20		Load Voltage (nominal)		
3PH-500A	3 Phase unit 500A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
3PH-630A	3 Phase unit 630A	13		Module 5		21		Load Current (nominal)		
4PH-50A	4 Phase unit 50A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
4PH-100A	4 Phase unit 100A	14		Module 6		22		Load Voltage (nominal)		
4PH-160A	4 Phase unit 160A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
4PH-250A	4 Phase unit 250A	15		Module 7		23		Load Current (nominal)		
4PH-400A	4 Phase unit 400A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
4PH-500A	4 Phase unit 500A	16		Module 8		24		Load Voltage (nominal)		
4PH-630A	4 Phase unit 630A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
PWR-50A	50A Power module	17		Module 9		25		Load Current (nominal)		
PWR-100A	100A Power module	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
PWR-160A	160A Power module	18		Module 10		26		Load Voltage (nominal)		
PWR-250A	250A Power module	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
PWR-400A	400A Power module	19		Module 11		27		Load Current (nominal)		
PWR-500A	500A Power module	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
PWR-630A	630A Power module	20		Module 12		28		Load Voltage (nominal)		
DRV-XXX	Driver module only	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
2		Voltage		21		Quick Start		28		Load Current (nominal)
600V	100V to 600V	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
690V	100V to 690V	22		Module 13		29		Load Voltage (nominal)		
XXX	For Driver mod only	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
3		Fan Supply		23		Quick Start		30		Load Current (nominal)
230V	230V ac ≥160A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		
115V	115V ac ≥160A	24		Module 14		31		Load Voltage (nominal)		
XXX	No fan ≤100A	XX	IO	None IO optional board			100V 110V 115V 120V 127V 200V 208V 220V 230V 240V 277V 380V 400V 415V 440V 460V 480V 500V 575V 600V 660V 690V	100 Volts 110 Volts 115 Volts 120 Volts 127 Volts 200 Volts 208 Volts 220 Volts 230 Volts 240 Volts 277 Volts 380 Volts 400 Volts 415 Volts 440 Volts 460 Volts 480 Volts 500 Volts 575 Volts 600 Volts 660 Volts (Note 2) 690 Volts (Note 2)		



#### 22 Control Type (Note 3)

1P	Single phase
2P	Two phase control
3P	Three phase control

#### 23 Load Configuration (Note 4)

1P	Single phase
3S	Star
3D	Delta
4S	Star with neutral
6D	Open delta

#### 24 Load Type

XX	Resistive
TR	Transformer primary

#### 25 Firing Mode (Note 5)

PA	Phase angle
HC	Half cycle
BF	Burst firing (default 16 cycles)
FX	Fix modulation period (default 2 seconds)
LG	Logic mode

#### 26 Feedback

V2	RMS load voltage squared
I2	RMS load current squared
TP	True power
VR	RMS load voltage
IR	RMS load current
OL	Open loop

#### 27 Current Transfer Mode (Linear Current Limit) (Note 6)

XXX	Off
I2	RMS load current squared transfer
IR	RMS load current transfer

#### 28 Analogue Input 1 Function (Note 6)

XX	None
SP	Setpoint
HR	Setpoint limit
IL	Current limit
VL	Voltage limit
PL	Power limit
TS	Current transfer span

#### 29 Analogue Input 1 Type

XX	None
1V	1-5 Volt
2V	2-10 Volt
5V	0-5 Volt
0A	0-20 mA
4A	4-20 mA

#### 30 Analogue Input 2 Function (Note 6)

XX	None
SP	Setpoint
HR	Setpoint limit
IL	Current limit
VL	Voltage limit
PL	Power limit
TS	Current transfer span

#### 31 Analogue Input 2 Type

XX	None
0V	0-10 Volt
1V	1-5 Volt
2V	2-10 Volt
5V	0-5 Volt
0A	0-20 mA
4A	4-20 mA

#### 32 Analogue Output Function

XX	None
X	None
V	Voltage
I	Current
P	Power
R	Impedance

#### 33 Analogue Output Type

XX	None
0V	0-10 Volt
1V	1-5 Volt
2V	2-10 Volt
5V	0-5 Volt
0A	0-20 mA
4A	4-20 mA

#### 34 Digital Input 2 Function

XX	None
AK	Alarm acknowledgement
RS	Remote setpoint selection

#### 35 Alarm Relay Configuration

XX	None
AA	Any alarm
PA	Process alarms
FB	Fuse blown

#### 36 Load Management Configuration

XX	None - Load Management disabled
SH	Sharing
I1	Incremental Type 1
I2	Incremental Type 2
RI	Rotating Incremental
DC	Distributed Control
DI	Distributed Control and Incremental Control
RD	Rotating Distributed and Incremental Control

#### 37 Predictive Load Management Address

XX	Predictive Load Management address (00 to 63) Default address 00
----	---

#### SPARE FUSE FOR POWER MODULES

Current rating amps	Fuse number
50A	CS179139U315
100A	CS179139U315
160A	CS179139U315
250A	CS179139U350
400A	CS179439U630
500A	CS029859U630
630A	CS029960U900

#### Notes

- The maximum nominal current selectable is the current rating selected in Field 1.
- Only available if 690V selected in Field 2.
- Selection dependent on number of Phases selected in Field 1.  
1PH = IP only  
2PH = IP or 2P only  
3PH = IP or 3P only  
4PH = IP or 2P only
- Selection dependent on number of Phases selected in Field 1.  
1PH = 1P only  
2PH = 1P, 3S or 3D only  
3PH = Any  
4PH = 1P, 3S or 3D only  
If IP selected in Field 22 only option is IP.
- PA not selectable if 2P selected in Field 22.  
HC not selectable if TR selected in Field 24.
- Except XX the selection in Fields 28 and 30 cannot be the same.

## 32h8e EPower Remote Panel



Model number 32h8e is a horizontal 1/8 DIN indicator and alarm unit that performs the dual function of remote display for EPower and independent 'policeman'. The latter is intended to disconnect should an overtemperature (or other excess process condition) occur.

32h8e communicates with EPower using Modbus protocol via the EIA485 RJ45 connector located on the underside of the EPower controller.

The remote panel is normally ordered as an option with EPower units. It is a fixed hardware build consisting of a relay output in OP1 and an analogue output in OP3. There are no user communications since this is used to communicate with EPower and the supply is high voltage only (100-240Vac). The unit is configured using 'QuickStart' code on initial start up.

The 32h8e is based on a 32h8i indicator and has the same and additional features as this instrument. For features not covered please refer to HA029005.

The 32h8e displays EPower Current, Voltage, Power and Setpoint parameters for each EPower Network. The Setpoint of the EPower networks can be adjusted via the 32h8e HMI. Indication of selected setpoint is included: local or remote.


### Wire sizes

The screw terminals accept wire sizes from 0.5 to 1.5mm (16 to 22AWG). Hinged covers prevent hands or metal making accidental contact with live wires. The rear screws should be tightened to 0.4Nm (3.3lb in).




Ensure that the supply to the unit does not exceed 240V ac +10%

### Mechanical Details




Panel cut-out 45 (1.77) (-0.0 +0.6) x 92 (3.62) (-0.0 +0.8)

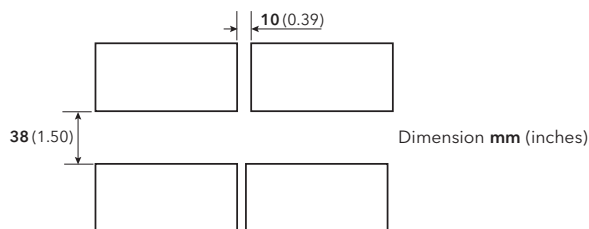


### Recommended minimum spacing

If more than one unit is mounted in the same panel they should be spaced to allow sufficient air flow between them.

### Rear Terminals

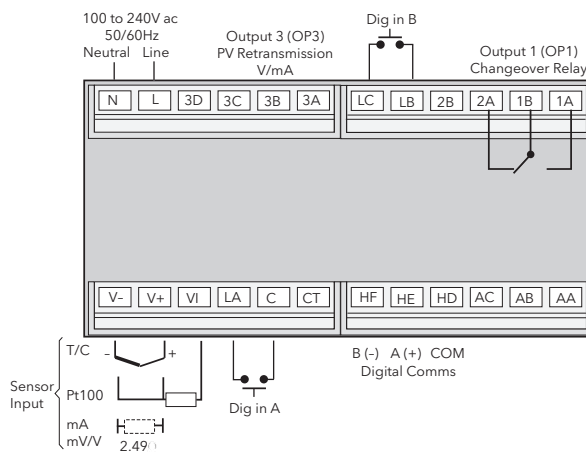

### Example Wiring Diagram

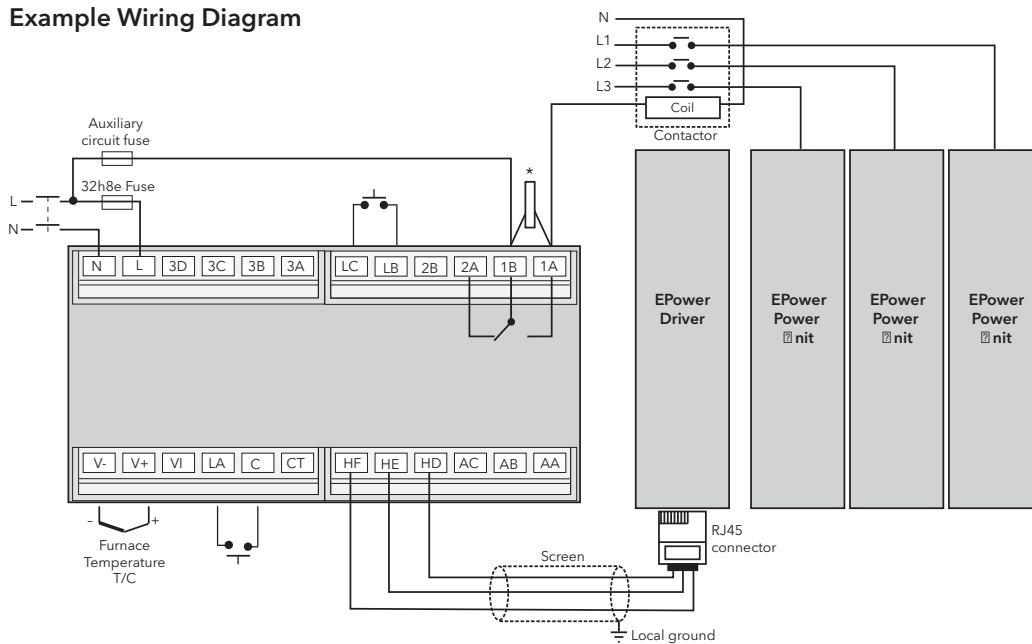

### \* General notes about relays and Inductive Loads

When switching inductive loads such as contactors or solenoid valves, wire the 22nF/100 'snubber' supplied across normally open relay terminals.

This will prolong contact life and reduce interference.

⚠ Snubbers pass 0.6mA at 110V and 1.2mA at 230V ac, which may be sufficient to hold on high impedance loads.

## Specification - 32h8e Remote display

### General

#### Environmental performance

Temperature limits	Operation:	0 to 55°C
	Storage:	-10 to 70°C
Humidity limits	Operation:	5 to 85% RH non condensing
	Storage:	5 to 85% RH non condensing
Panel sealing:		IP65, Nema 4X
Shock:		BS EN61010
Vibration:		2g peak, 10 to 150Hz
Altitude:		<2000 metres
Atmospheres:		Not suitable for use in explosive or corrosive atmosphere

#### Electromagnetic compatibility (EMC)

Emissions and immunity: BS EN61326

#### Electrical safety

(BS EN61010): Installation cat. II; Pollution degree 2

#### INSTALLATION CATEGORY II

The rate impulse voltage for equipment on nominal 230V mains is 2500V.

#### POLLUTION DEGREE 2

Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected

#### Physical

Panel mounting:	1/8 DIN, horizontal
Dimensions and weight:	96mm (3.78") W x 48mm (1.89") H x 90mm (3.54 inches) D, 350g (0.77lbs)
Panel cut-out dimensions:	92mm (1.77 inches) W x 45mm (3.62 inches) H

#### Operator interface

Type:	LCD TN with backlight
Main PV display:	5 digits, green or red
Lower display:	9 character starburst, green
Status beacons:	Units, outputs, alarms

#### Power requirements

Voltage:	100 to 240V ac, -15%, +10%, max 9W
Frequency:	48 to 62Hz

#### Approvals

CE, cUL listed (file E57766)

#### Communications

Serial communications option

Protocol:	Modbus RTU Master
Isolation:	264V ac, double insulated
Transmission standard:	EIA485 (2 wire)

The 32h8e has Modbus Master RS485 Comms with a fixed set of EPower Modbus addresses. Power up the display for the first time, configure the QuickStart code for the standard indicator functions, and the process values and alarm messages are immediately displayed, automatically configured to match the EPower display - for example RMS values or average values for current, voltage and power displayed as 3 phase or as several times single phase as defined by the EPower configuration.

32h8e Terminal			RJ45 Pin Number
HD	White/Green	Common	3
HE	Orange	Rx A(+)	2
HF	White/Orange	Tx B(-)	1

#### Process variable input

Calibration accuracy:	$\pm 0.25\%$ of reading $\pm 1$ LSD (Note 1)
Sample rate:	9Hz (110ms)
Isolation:	264V ac double insulation from the PSU and communication
Resolution ( $\mu$ V):	<0.5 $\mu$ V with 1.6s filter (mV range) <0.25mV with 1.6s filter (Volts range)
Resolution (effective bits):	>17 bits
Linearisation accuracy:	< 0.1% of reading
Drift with temperature:	<50ppm (typical) <100ppm (worst case)
Common mode rejection:	48-62Hz, >-120dB
Series mode rejection:	48-62Hz, >-93dB
Input impedance:	100M $\Omega$ (200K $\Omega$ on volts range C)
Cold junction compensation:	>30/1 rejection of ambient change
External cold junction:	Reference of 0°C

Cold junction accuracy:	$\pm 1^\circ\text{C}$ at 25°C ambient
Linear (process) input range:	-10 to 80mV, 0 to 10V
Thermocouple types:	K, J, N, R, S, B, L, T, C, custom download (Note 2)

Resistance thermometer	types:	3-wire Pt100 DIN 43760
Bulb current:		0.2mA
Lead compensation:		No error for 22 ohms in all leads
Input filter:		Off to 100s
Zero offset:		User adjustable over full range
User calibration:		2-point gain & offset

#### Notes

- (1) Calibration accuracy quoted over full ambient operating range and for all input linearisation types
- (2) Contact Eurotherm for details of availability of custom downloads for alternative sensors

#### OP 1

Type:	Form C (changeover)
Rating:	Min 100mA @12V dc, max 2A@240V ac resistive
Functions:	Alarms, events

#### OP 3

Isolation:	264V ac double insulated
Functions:	Retransmission
Current output	Rating: 0-20mA into <500 $\Omega$ Accuracy: $\pm$ (<0.25% of Reading + <50 $\mu$ A) Resolution: 13.6 bits
Voltage output	Rating: 0-10V into >500 $\Omega$ Accuracy: $\pm$ (<0.25% of Reading + <25mV)
Resolution:	13.6 bits

#### Software features

##### Alarms

Number:	4
Type:	Absolute high & low, Rate of change (rising or falling)
Latching:	Auto or manual latching, non-latching, event only
Output assignment:	Up to four conditions can be assigned to one output
EPower Alarms:	Missing mains, Thyristor short circuit, Open thyristor, Fuse blown, Over temperature, Voltage dips, Frequency fault, Power module
24V fault, Total load failure, Chop off, Partial Load Unbalance, Volt module	Load Failure, Partial fault, Temperature pre alarm, Power wdog fault, Power module comms error, Power module timeout, Closed loop, Output fault

The pre-set alarms have a fixed medium priority enables indicator alarms to be configured as lower, the same or higher priority. EPower alarms can be globally acknowledged via the 32h8e HMI.

##### Other status outputs

Functions:	Including sensor break, power fail, new alarm, pre-alarm
Output assignment:	Up to four conditions can be assigned to one output

##### Custom messages

Number:	15 scrolling text messages
No of characters:	127 characters per message max
Languages:	English, German, French, Spanish, Italian
Selection:	Active on any parameter status using conditional command

##### Recipes

Number:	5 recipes with 19 parameters
Selection:	HMI interface, communications or digital IO

##### Other features

Display colour:	Upper display selectable green or red or change on alarm
Scrolling text:	Parameter help, custom messages
Display filter:	Off to zero last 2 digits
Peak monitor:	Stores high and low values


## 32h8e Initial configuration

At first switch on, after the start-up sequence, the initial configuration page is displayed.


Note: the following 'quickstart' description applies only to new (not previously configured) instruments. If the instrument has previously been configured (either at the factory or subsequently) the instrument starts up showing the relevant process value.

The initial display shows 'Set1' on the top line, with a coded display below with its first item flashing. The lower line is decoded as shown in table.

The 'mode' (up/down arrows) are used to scroll through the available choices for each item. Once the required value is displayed, the scroll key is used to select the next character for editing. Once all five characters have been edited, further operations of the scroll key call the range high display (allowing the high range value to be edited using the mode keys), then the range low display (allowing the low range value to be edited). A further operation calls the Set2 display, which is decoded in the table below.

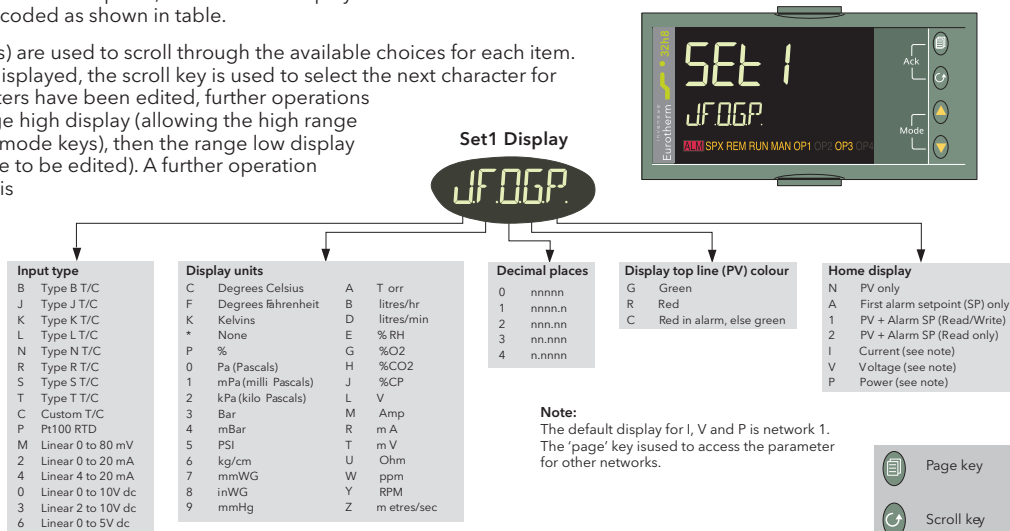

After Set2 parameters have been edited, a further operation of the scroll key invites the user to Exit. Operating the scroll key returns to the Set1 display; operating a mode key to display 'yes' quits the quickstart menu and causes the unit to enter operating mode.

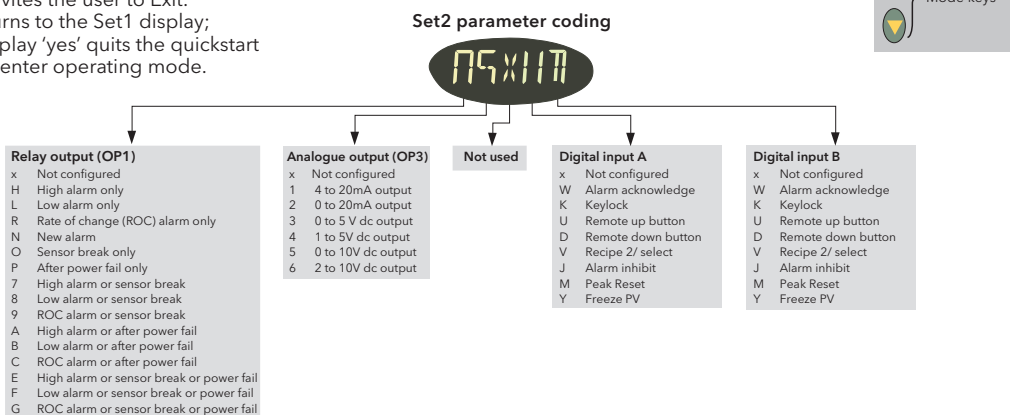

**Eurotherm: International sales and service**

ED61

© Copyright Eurotherm Limited 2010

Invensys, Eurotherm, the Eurotherm logo, Chessell, EurothermSuite, Mini8, Eycon, EPower nanodac and Wonderware are trademarks of Invensys plc, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.

All rights are strictly reserved. No part of this document may be reproduced, modified, or transmitted in any form by any means, nor may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior written permission of Eurotherm limited.

Eurotherm Limited pursues a policy of continuous development and product improvement. The specifications in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only.

Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.

**inven'sys**  
Operations Management