

Leica DISTO™ S910

The original laser distance meter



- when it has to be **right**

Leica
Geosystems

Table of Contents

EN

Instrument Set-up -----	2
Introduction	2
Overview	2
Basic measuring screen	3
Selection screen	3
Pointfinder (Viewscreen)	4
Icons on Status bar	4
Charging the Li-Ion battery via USB	5
Using the Smart Base	6
Using the Smart Base Extension	6
Operations -----	7
Using the Touch Screen	7
Switching ON/OFF	8
Clear	8
Message Codes	8
Permanent / Minimum-Maximum measuring	8
Add / Subtract	8
Pointfinder (Viewscreen)	9
Screenshot	9
Memory	10
Settings -----	11
Overview	11
Tilt units	11
Move Alert of Levelling	12
Distance units	13
Beep ON/OFF	14
Digital level ON/OFF	14
De-/Activate keylock	14
Switch on with keylock	14
Bluetooth® / WLAN	15
Calibration of tilt sensor (Tilt Calibration)	17
Personalized favorites	18
Illumination	18
Touch Screen ON/OFF	18
Date and Time	19
Compass Adjustment	19
Offset	20
Reset	20
Information/Software Update	21
Functions -----	22
Overview	22
Calculator	23
Smart Horizontal Mode	23

Smart Angle measurement	24
Level	24
Measuring single distance	25
Point to point measurements	26
DXF data capture	27
Photo	28
Volume	29
Smart Area measurement	30
WLAN data transmission	31
Gallery	32
Area	33
Sloped objects	34
Width	35
Timer	36
Triangular area	37
Height-profile measurement	38
Diameter	39
Adjusting measuring reference	40
Pythagoras (2-point)	41
Height tracking	42
Area from Photo	43
Compass	44
Pythagoras (3-point)	45
Trapezium	46
Stake out	47
Technical Data -----	48
Message Codes -----	49
Care -----	49
Warranty -----	50
Safety Instructions -----	50
Areas of responsibility	50
Permitted use	50
Prohibited use	50
Limits of use	51
Disposal	51
Electromagnetic Compatibility (EMC)	51
FCC statement (applicable in U.S.)	51
Déclaration FCC, applicable aux États-Unis	52
Use of the product with Bluetooth®	53
Laser classification	53
Labelling	53

Leica DISTO™ S910 808167a

|

Instrument Set-up

EN

Introduction

⚠ The safety instructions and the user manual should be read through carefully before the product is used for the first time.

⚠ The person responsible for the product must ensure that all users understand these directions and adhere to them.

The symbols used have the following meanings:

⚠ WARNING


Indicates a potentially hazardous situation or an unintended use which, if not avoided, will result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor injury and/or appreciable material, financial and environmental damage.

i Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.


Overview

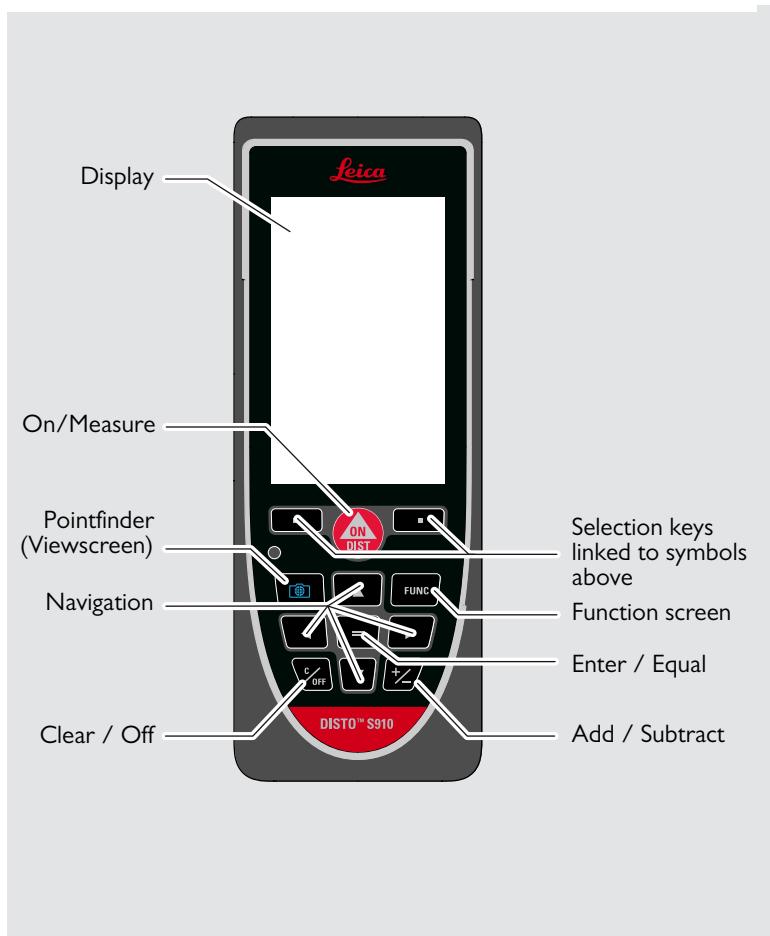


Instrument Set-up

EN

Basic measuring screen

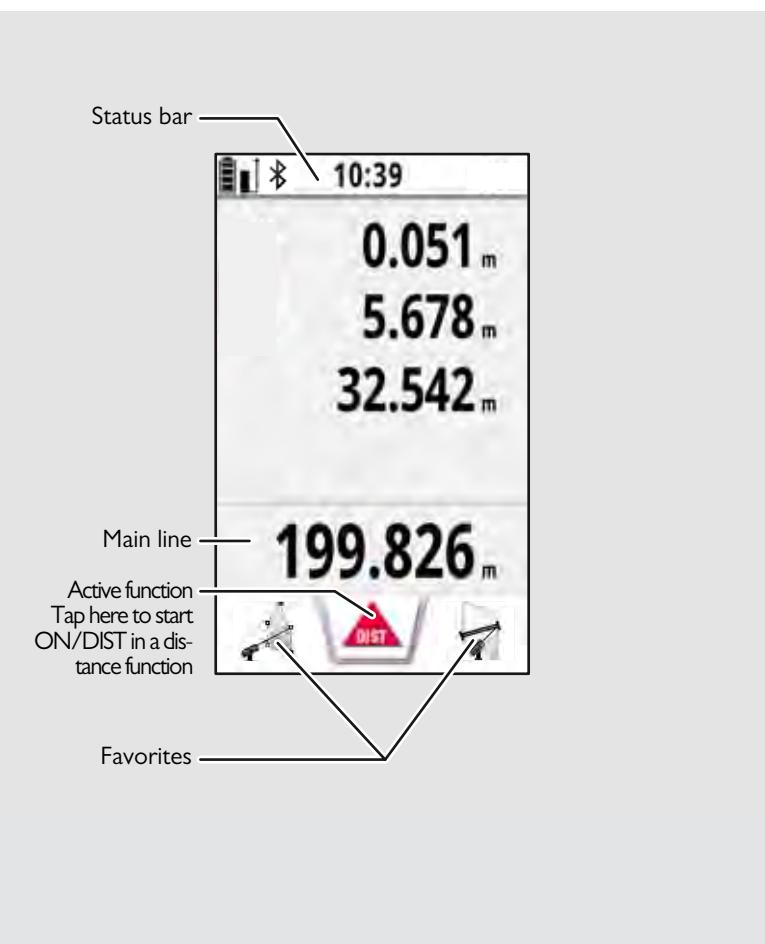


Selection screen

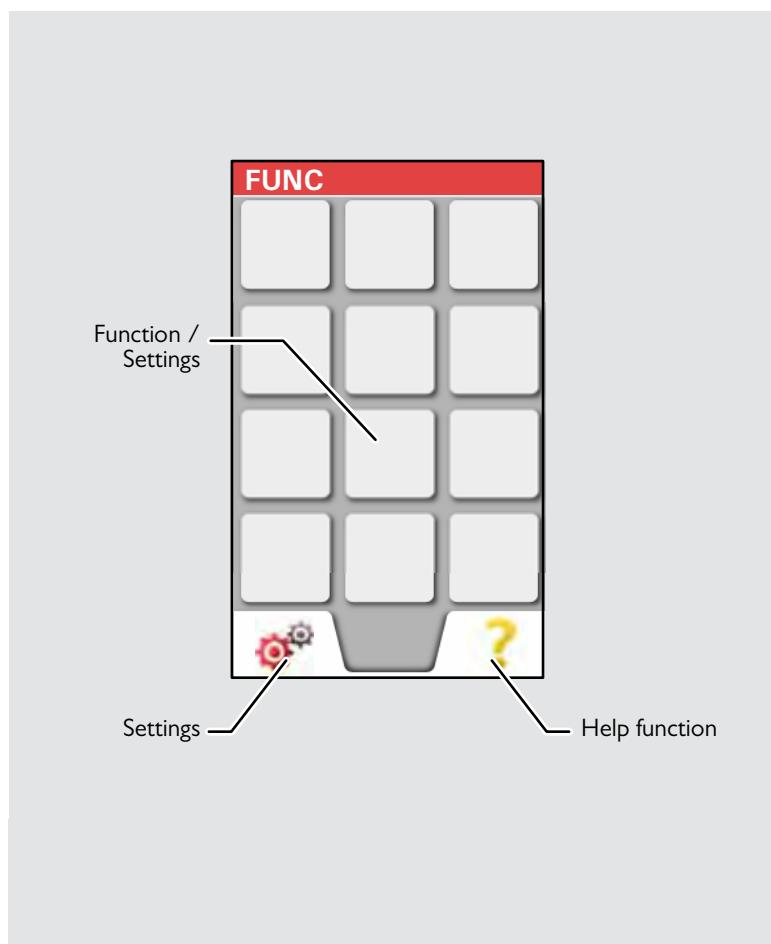

Instrument Set-up

Pointfinder (Viewscreen)

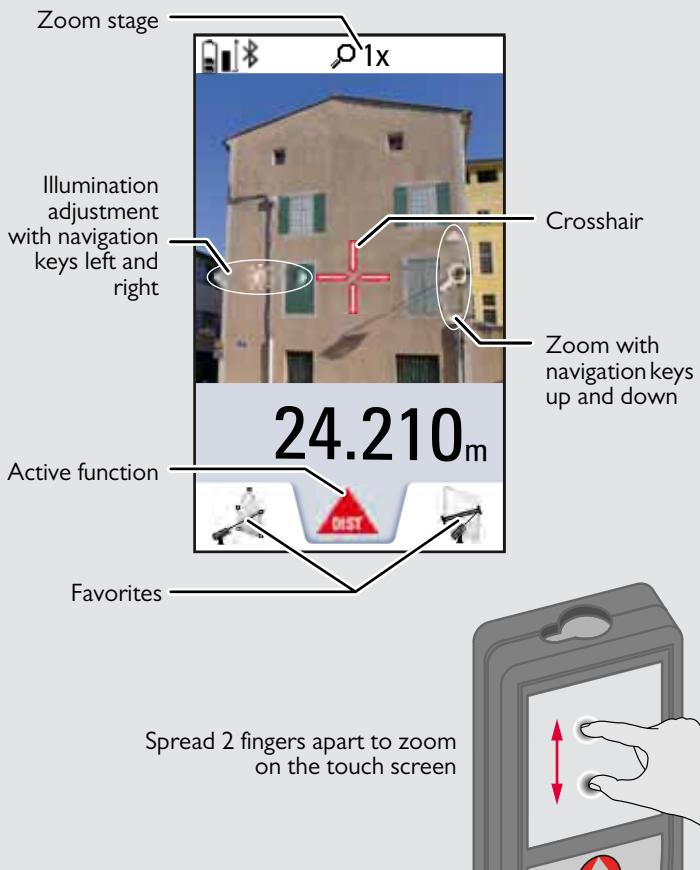

Leica DISTO™ S910 808167a

EN

Icons on Status bar

▲▼	Scroll up and down for further results
■■■	Battery power
Bluetooth	Bluetooth® is switched on
Bluetooth	Bluetooth® connection established
Device	Device is not leveled
Device	Device is leveled
Device	Device was moved after leveling - affects measuring accuracy
Offset	Offset is activated and subtracts the defined value from measured distance
Offset	Offset is activated and adds the defined value from measured distance
Device	Device is measuring
DISTO	DISTO™ WLAN hotspot activated
Other	Other device connected to DISTO™ WLAN hotspot
WLAN	WLAN client mode activated
WLAN	DISTO™ connected as client to WLAN
Zoom	Zoom
Measuring reference	Measuring reference

4

Instrument Set-up


EN

Charging the Li-Ion battery via USB

Charge the battery before using it for the first time. Use the provided cable to charge the battery.

Plug the small end of the cable into the port of the device, and plug the end of the charger into an electrical socket. Select the appropriate connector for your country. The device cannot be used while it is charging.

The computer can also be used to charge the device, but this takes more time. If the device is connected to the computer via USB cable, you can download or delete the gallery. **It is not possible to upload any data.**

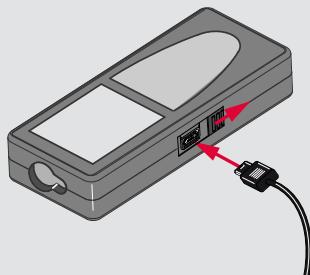

When you charge the battery, the following icons show the status:

Charging



Fully charged



Leica DISTO™ S910 808167a



Charge batteries when battery symbol is flashing. While charging, the device may heat up. This is normal and should not affect the device's lifespan or performance. If the battery gets hotter than 40°C / 104°F, the charger stops.

At a recommended storage temperature of -20°C to +30°C (-4°F to +86°F), batteries containing a 50% to 100% charge can be stored up to 1 year. After this storage period the batteries must be recharged.

To save energy, unplug the charger when not in use.



⚠ CAUTION

Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty. Use only Leica-approved chargers, batteries, and cables. Unapproved chargers or cables can cause the battery to explode or damage the device.

If the device is connected to the computer via USB cable, you can download or delete the gallery. It is not possible to upload any data.

Using the Smart Base

Fold out Smart Base.
Use it as mini tripod.

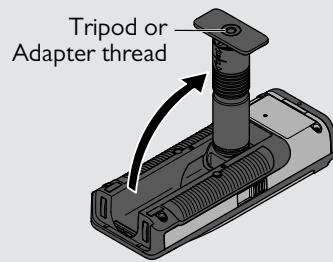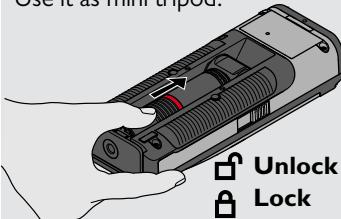

Using the Smart Base Extension



The Smart Base Extension
allows for stable targeting
without unintentionally tilting
the device..

i Do not move or tilt the Smartbase during measuring.

We recommend the use of a tripod with the Leica
FTA360-S adapter.

Using the Touch Screen




Use only fingers to use the touch screen. Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction. Do not allow the touch screen to contact water. The touch screen may malfunction in humid conditions or when exposed to water. To avoid damaging the touch screen, do not tap it with anything sharp or do not apply excessive pressure to it with your fingertips.

Tapping




Tap on the display to open an on-screen button or to make a selection. Tapping on the icon in the middle of the bottom line activates the distance measurement or triggers the camera.

Dragging

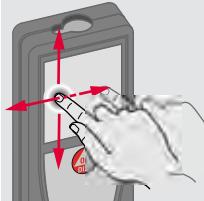

Drag on the display to move to previous or to next screen in the galerie function.

Pinching

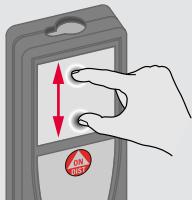

Spread 2 fingers apart to zoom if pointfinder is activated.




Instead of using the touch screen, the normal keypad buttons can be used also.

Operations

EN

Switching ON/OFF

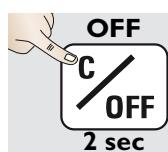


Device is turned OFF.




If no key is pressed for 180 sec, the device switches off automatically.

Clear

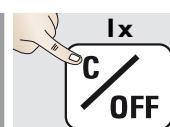

Undo last action.

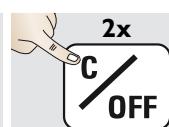

Leave actual function, go to default operation mode.

Message Codes


If the info icon appears with a number, observe the instructions in section "Message Codes". Example:



Permanent / Minimum-Maximum measuring



2

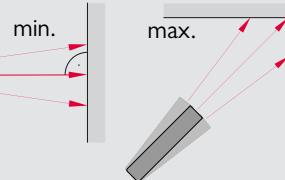

Used to measure room diagonals (maximum values) or horizontal distance (minimum values)

The minimum and maximum distance measured is displayed (min, max.). The last value measured is displayed in the main line.



3 Stops permanent / minimum-maximum measuring.


Add / Subtract



2





The next measurement is **added** to the previous one.

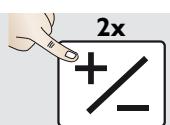

The next measurement is **subtracted** from the previous one.



3

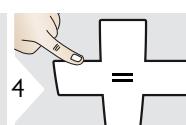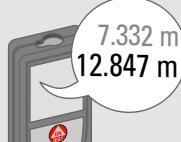

4




This process can be repeated as required. The same process can be used for adding or subtracting areas or volumes.

Operations

EN

Pointfinder (Viewscreen)

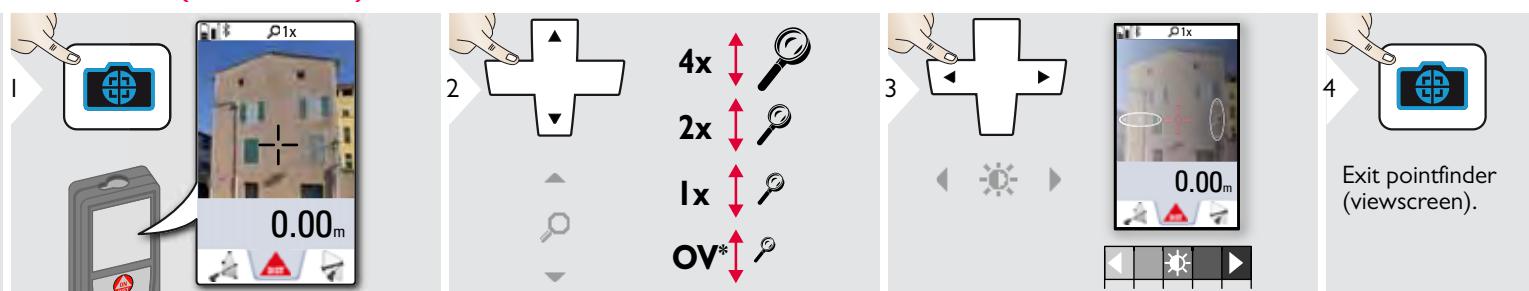


i This is a great help for outdoor measuring. The integrated pointfinder (viewscreen) shows the target on the display. The device measures in the middle of the cross hair, even if the laser dot is not visible.


Parallax errors occur when the pointfinder camera is used on close targets, with the effect that the laser appears displaced in the crosshair. In this case the error is automatically corrected with a shift of the crosshair.


* OV = Overview

Screenshot

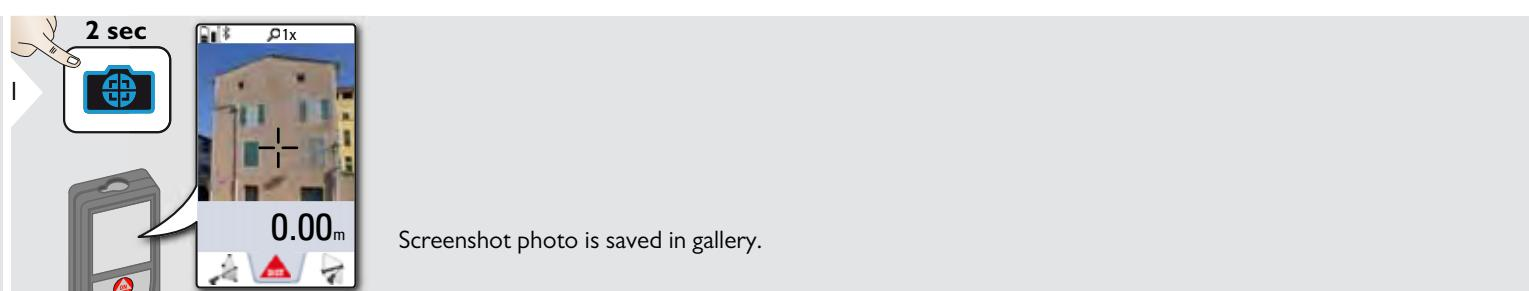


Memory

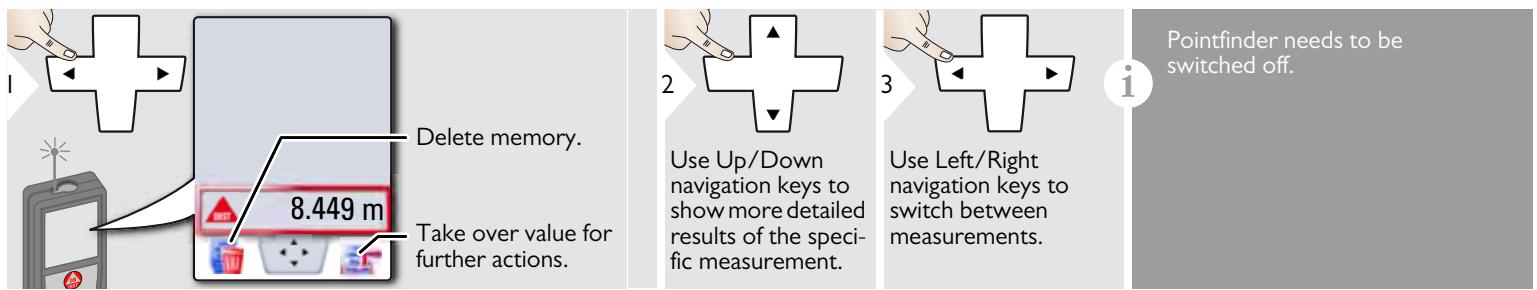

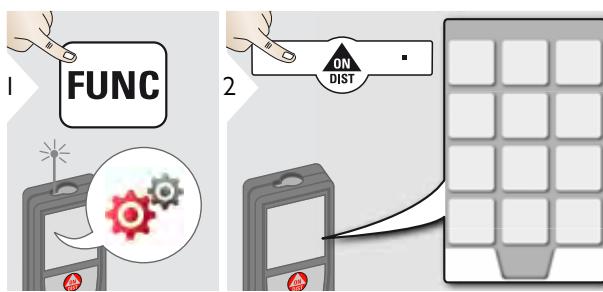Overview




 UNIT	Tilt units
 MOVE	Move Alert
 WLAN	WLAN / Bluetooth®
 LEVEL	Digital level
 KEYPAD	Keypad lock
 ILLUM	Illumination
 CALIB	Tilt calibration
 FAVORITES	Favorites
 COMPASS	Compass adjustment
 TOUCH	Touch screen
 DATE/TIME	Date and Time
 UNIT	Distance units
 OFFSET	Offset
 RESET	Reset
 INFO	Information/Software Update
 BEEP	Beep

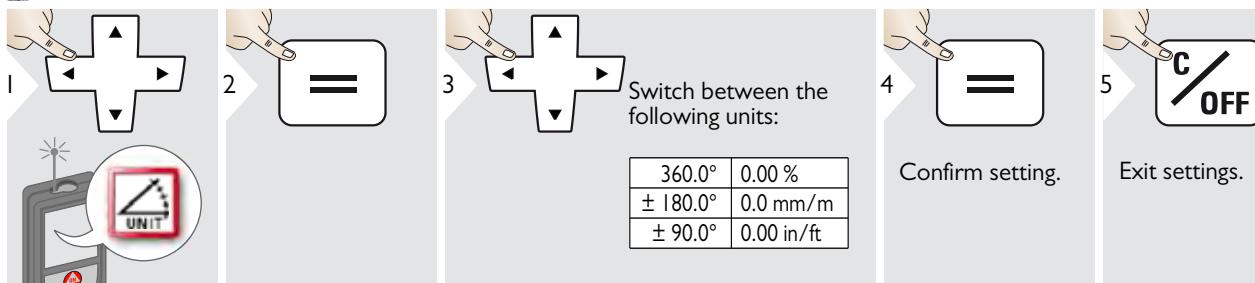Tilt units

Settings


EN

Move Alert of Levelling

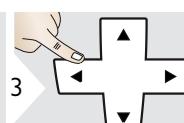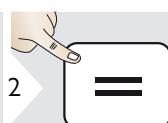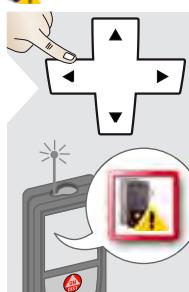

<input checked="" type="radio"/>		FINE
<input type="radio"/>		ROUGH
<input type="radio"/>		OFF

Choose the sensitivity of the levelling, which is needed for some measuring functions. FINE means, that the levelling of the device is sensitive to any small vibrations. Choose ROUGH when working in harsh construction environment with many shocks and vibrations. In this case the accuracy is decreased in correlation with the movements.

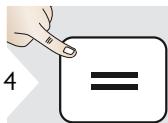

Confirm setting.






Exit settings.

Settings

EN

Distance units

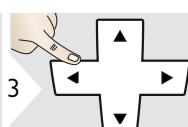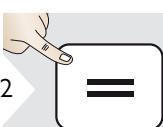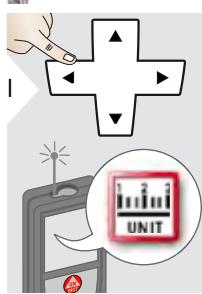


Switch between
the following
units:

Art. No. 805080:

0.00 m	0.00 ft
0.000 m	0.00 in
0.0000 m	0 in 1/32
0.0 mm	0'00" 1/32

US-Model Art. No. 808183:

0.00 m	0 in 1/16
0.000 m	0'00" 1/16
0.0000 m	0 in 1/8
0.0 mm	0'00" 1/8
0.00 ft	0 in 1/4
0.00 in	0'00" 1/4
0 in 1/32	0.000 yd
0'00" 1/32	

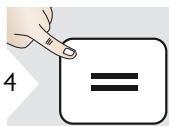

Confirm setting.




Exit settings.


Settings

EN

Beep ON/OFF

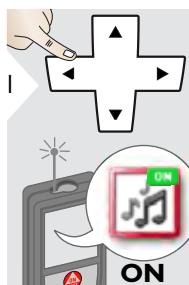


To switch ON, repeat procedure.

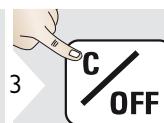


Exit settings.

Digital level ON/OFF

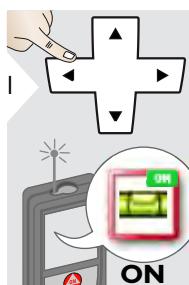


To switch ON, repeat procedure.

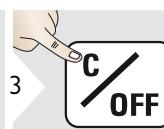


Exit settings.

i The digital level is displayed in the status bar.

De-/Activate keylock

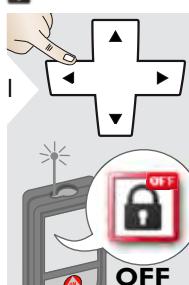

To deactivate, repeat procedure. The keylock is active if device is switched off.

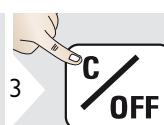

Exit settings.


Switch on with keylock



Settings


EN

Bluetooth® /WLAN

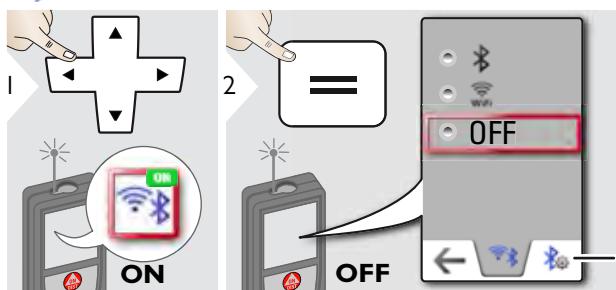

Explanation see info box below.

Special Settings for data transfer.

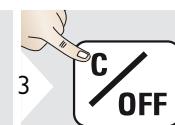

Exit settings.



Bluetooth®/WLAN is switched on and black Bluetooth®/WLAN icon is displayed in status bar. If connection is established the color of the icon changes to blue.

Special Bluetooth® Settings



Figure Mode: Use this mode if the data needs to be transferred in figures, e.g. working with spread sheets. Ft/in fractional is converted into ft/in decimal. An additional press on the Bluetooth® Settings Icon allows further adjustments for data transfer.

Device is connected. Favorites disappear and two softkeys appear:

- Allows the arrow keys to move the cursor on your computer.
- sends the value of the main line to the computer.



Text Mode: Use this mode if the data needs to be transferred as text, e.g. working with word processing programs.

Device is connected. Favorites disappear and two softkeys appear:

- Allows the arrow keys to move the cursor on your computer.
- sends the value of the main line to the computer.



App Mode: Use this mode to transfer the data using an App. Special properties: ENCRYPTED is the default setting. In case of trouble with data transfer, select mode UNENCRYPTED.



Special WLAN Settings



Available WLAN network can be chosen with the possibility to enter a password. Recommended for GIS applications.



WLAN: DISTO™ acts as hotspot. Data transfer unsecured or secured with serial number as password. Recommended for standard use.

Bluetooth® data transfer

 Connect the device with your smart phone, tablet, laptop,... The actual measurement is transferred automatically if Bluetooth® connection is established. To transfer a result from the main line, press =. Bluetooth® switches off as soon as the laser distance meter is switched off.


The efficient and innovative Bluetooth® Smart module (with the new Bluetooth® standard V4.0) works together with all Bluetooth® Smart Ready devices. All other Bluetooth® devices do not support the energy saving Bluetooth® Smart Module, which is integrated in the device.

We provide no warranty for free DISTO™ software and offer no support for it. We accept no liability whatsoever arising from the use of the free software and we are not obliged to provide corrections nor to develop upgrades. A wide range of commercial software can be found on our homepage. Apps for Android® or Mac iOS can be found in special internet shops.

For more details, see our homepage.

WLAN data transfer


 Only data from the function Point Data transmission can be transferred with WLAN. A corresponding program is needed to receive the data, e.g. DISTO™ transfer. For more details, see our homepage.

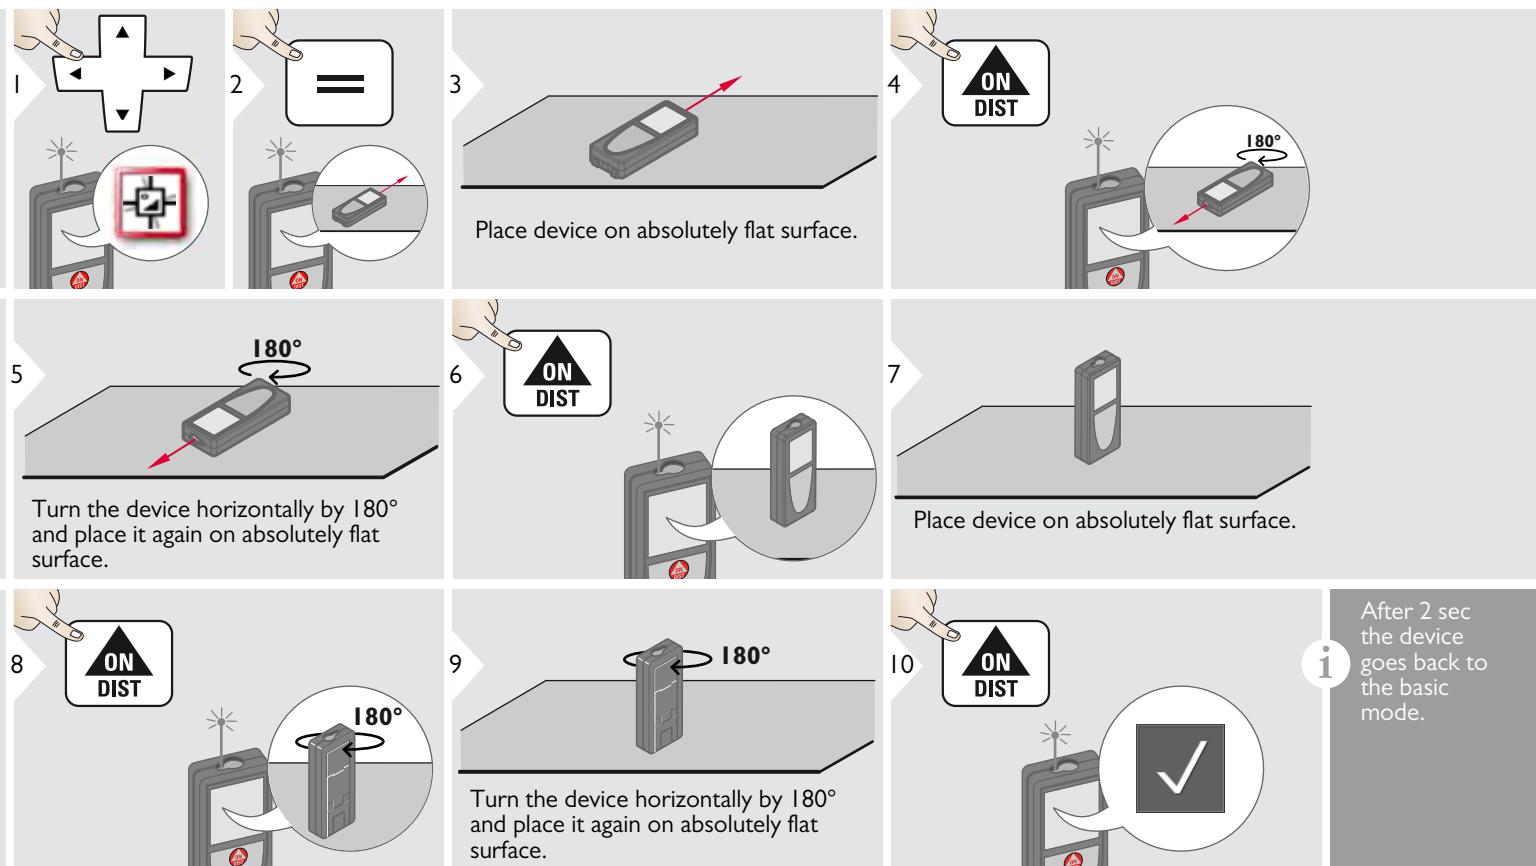 **Calibration of tilt sensor (Tilt Calibration)**

Settings

EN

Personalized favorites

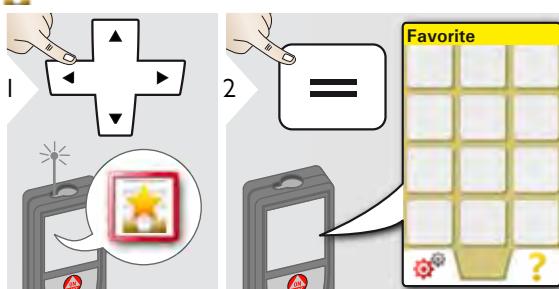


Select favorite function.


Press selection key left or right. Function is set as favorite above the corresponding selection key.

i Select your favorite functions for quick access.
Short cut: Press 2 sec on a selection-key in the measuring mode. Select your favorite function and press again short on the corresponding selection key.

Illumination

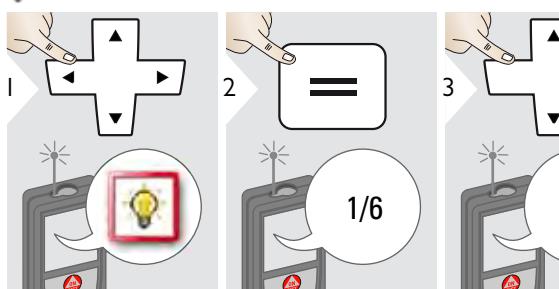

Select brightness.

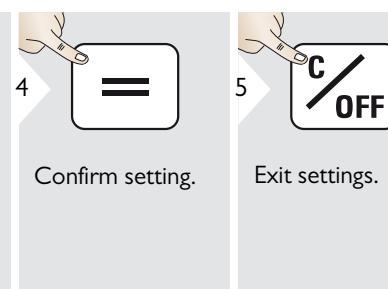


Confirm setting.

Exit settings.

i To save power reduce brightness if not necessary.

Touch Screen ON/OFF

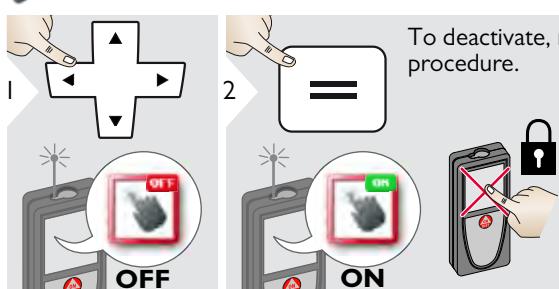

To deactivate, repeat procedure.




Exit settings.

Settings

EN


1 Date and Time

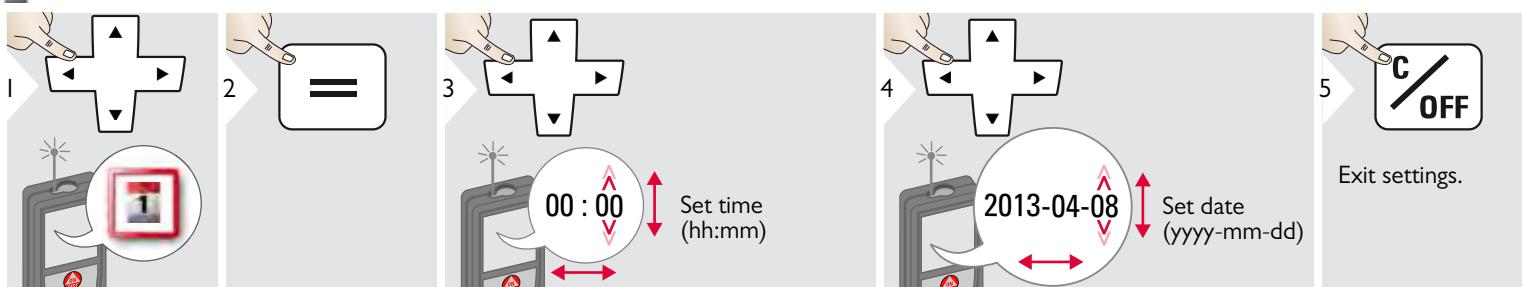

2 Compass Adjustment

Adjusting the magnetic declination



1 Depending on your geographic location, the angle of declination may vary from other locations, as the geographic and magnetic poles are aligned. However, if the reference location is not selected, the difference in declination between the poles can differ greatly. For best results, select the nearest geographic reference point using the steps below.

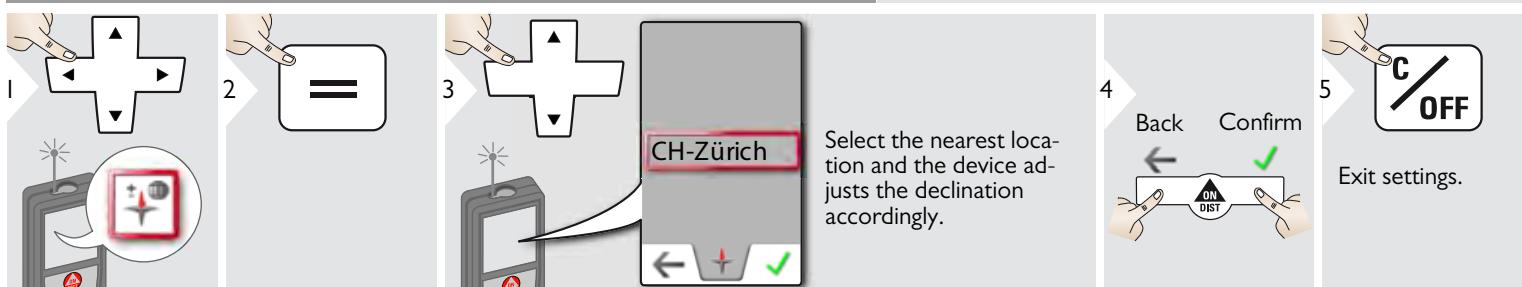


Settings



EN

Offset

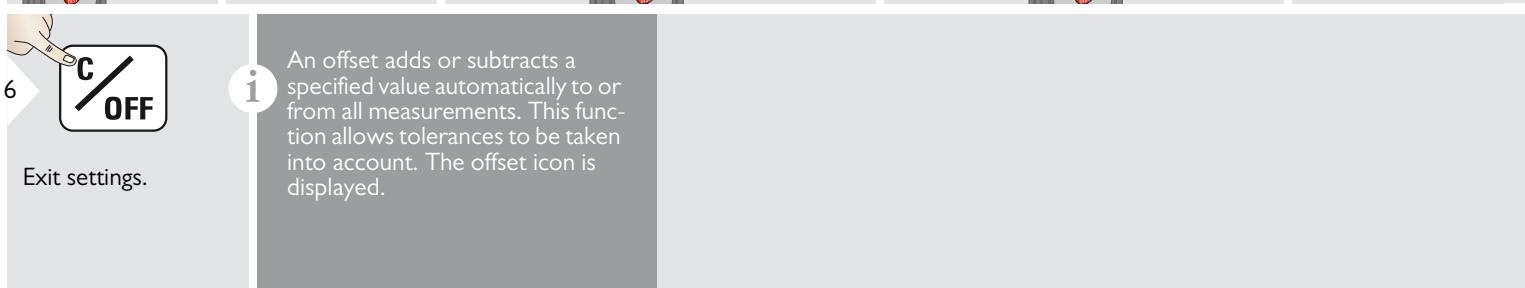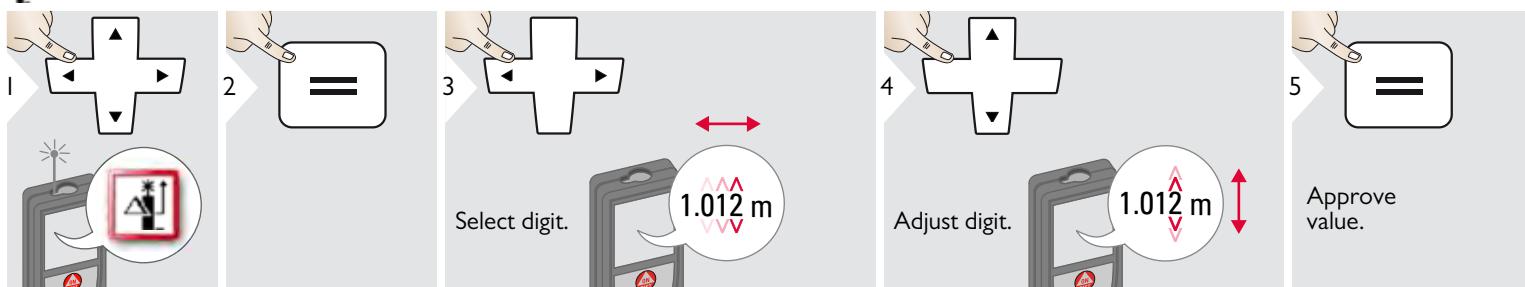


Reset

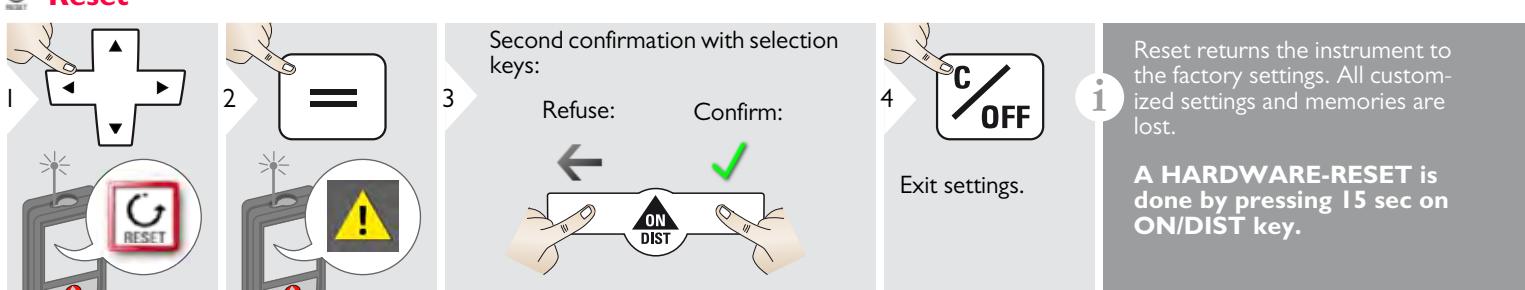

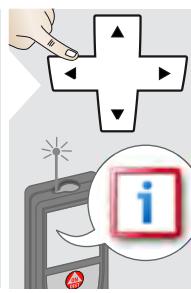Information/Software Update

2

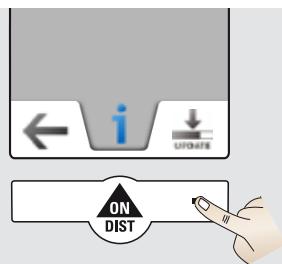

3

Connect the device with USB to your computer.


4

Software updates with correspondent instructions can be found on our homepage www.disto.com.



Make sure that you use always the newest software version.

Overview

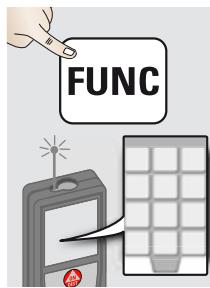


	Calculator
	Smart Horizontal Mode
	Smart Angle measurement
	DXF Folder
	Level
	Single Distance measurement
	Point to point measurements
	DXF data capture
	Photo
	Volume
	Smart Area measurement
	WLAN data transmission
	Gallery
	Area
	Measuring on sloped objects
	Width
	Timer
	Triangular area
	Height-profile Measurement
	Diameter
	Adjusting measuring reference
	Pythagoras (2-point)
	Height Tracking
	Area from Photo
	Compass
	Pythagoras (3-point)
	Trapezium
	Stake out

Functions

EN

Calculator


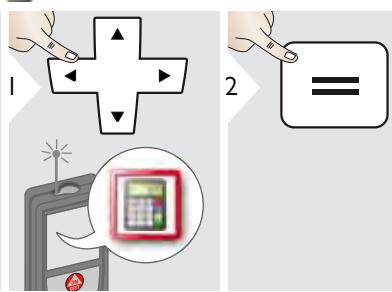


- 1 Select key on display.
- 2 Confirm every key.
- 3 Use selection keys for clear or result.




The measurement result from the main line is taken over to the calculator and can be used for further calculations.
Ft/in fractions are converted into ft/in decimal.
To take over a result from the calculator in the basic mode press DIST before leaving the calculator function.

Smart Horizontal Mode

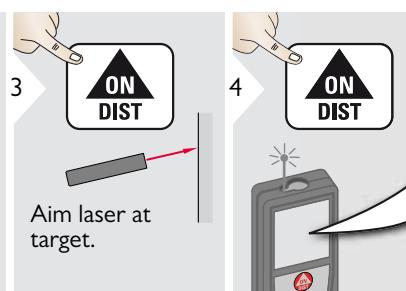
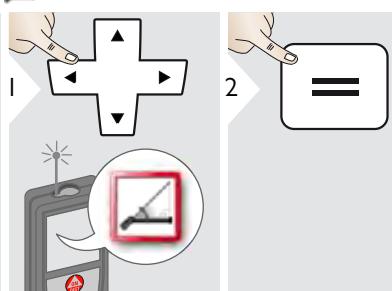



40.8 °
5.204 m
0.032 m
4.827 m

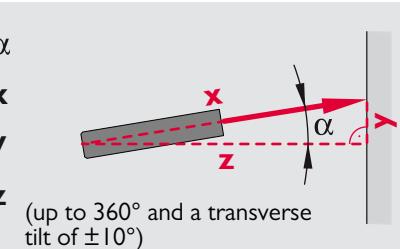


FUNC Functions

EN

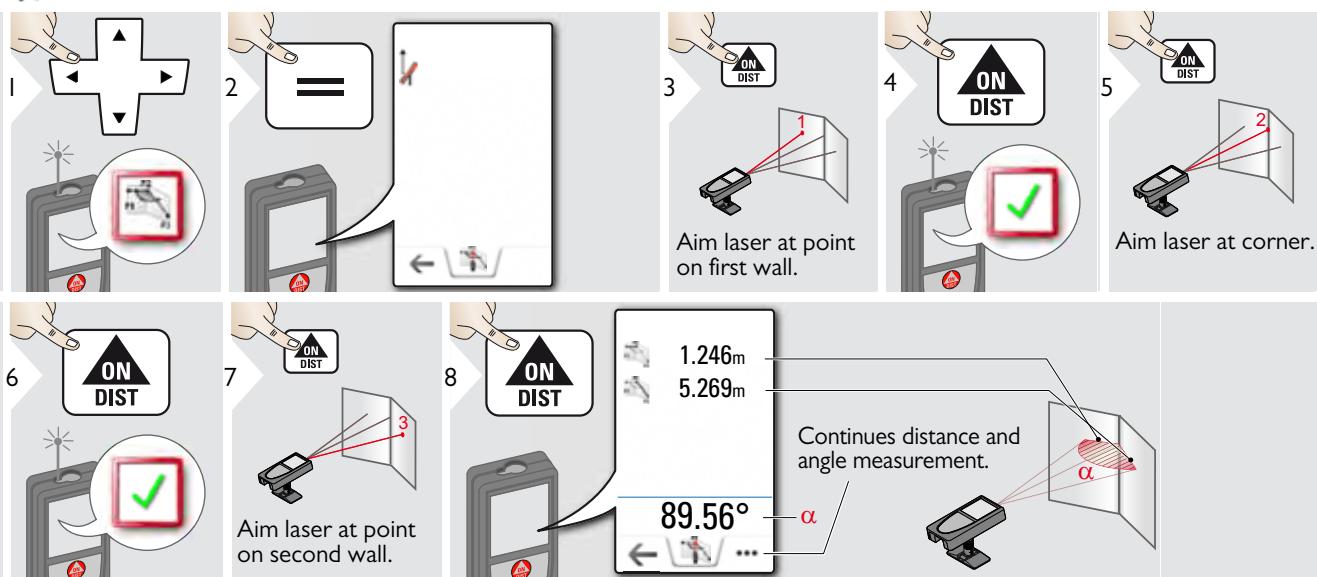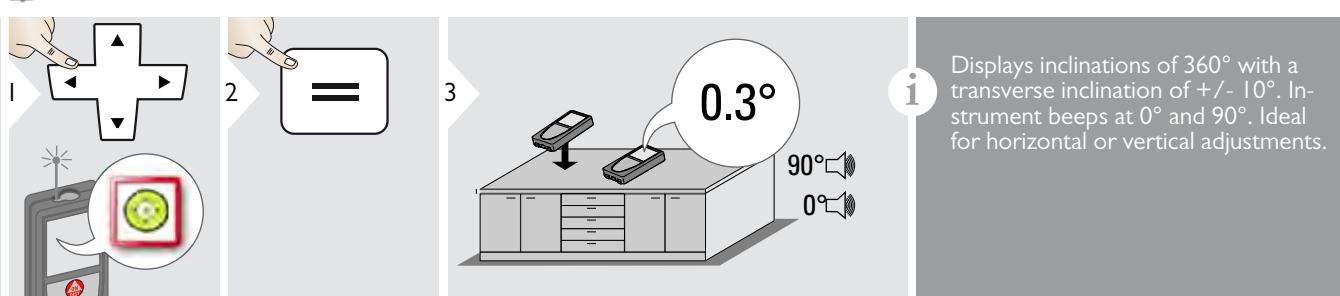Smart Angle measurement**Level**

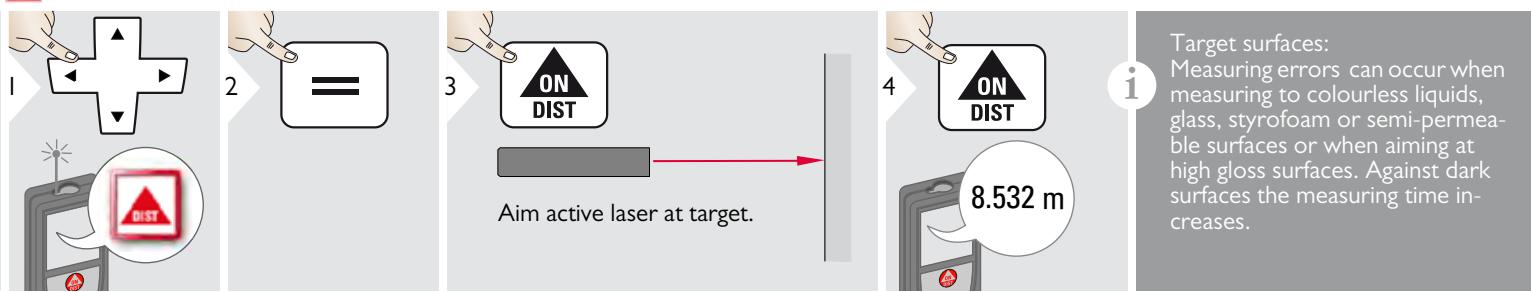 Measuring single distance

Target surfaces:
Measuring errors can occur when measuring to colourless liquids, glass, styrofoam or semi-permeable surfaces or when aiming at high gloss surfaces. Against dark surfaces the measuring time increases.

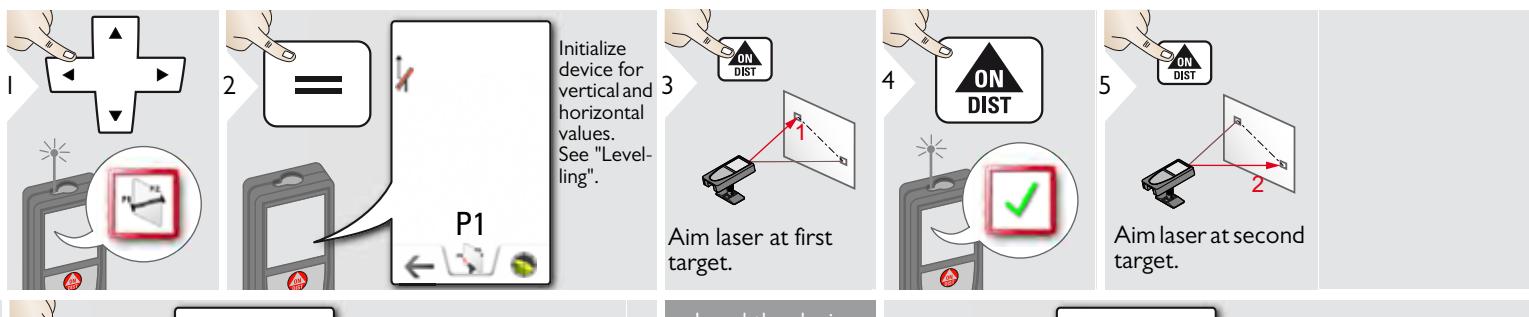

Point to point measurements


Levelling

i Level the device to get more measuring data.

Do not move device after levelling.

For levelling, Smart Base has to be folded out and device needs to be in an inclination range of $\pm 5^\circ$.

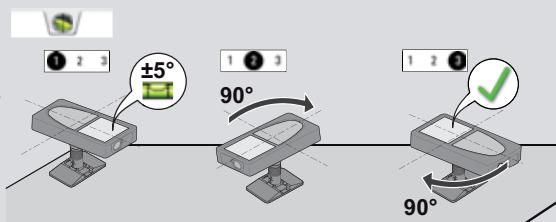


Rotate the device two times clockwise 90° . Follow the instructions on the display. Levelling is finished when OK icon appears on the display.




Check status line:


-  indicates proper levelling
-  indicates insufficient levelling
-  indicates that smart base was tilted and can affect measuring accuracy

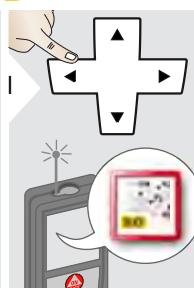 **DXF data capture**




1 Levelling is mandatory!
For levelling, Smart Base has to be folded out and device needs to be in an inclination range of $+/ - 5^\circ$.

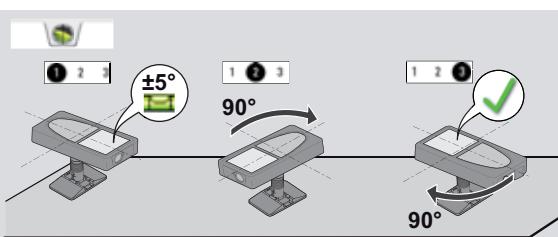



Rotate the device two times clockwise 90° . Follow the instructions on the display. Levelling is finished when OK icon appears on the display.

**Check status line:**






- indicates proper levelling
- indicates insufficient levelling
- indicates that smart base was tilted and can affect measuring accuracy

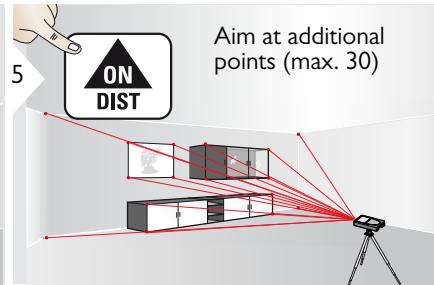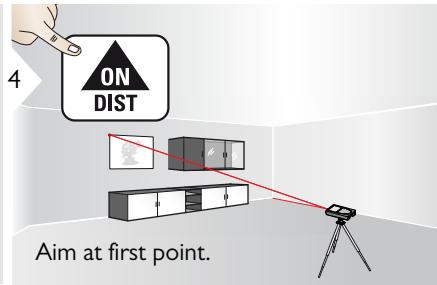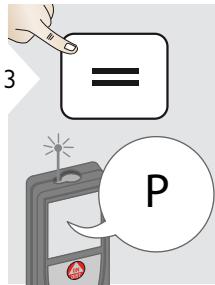

Aim at additional points (max. 30)

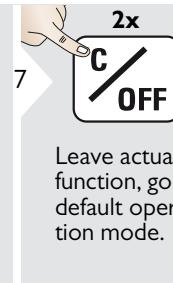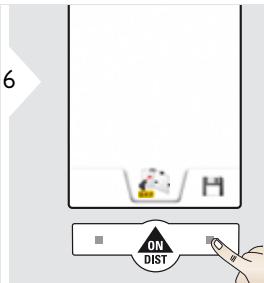

Max. 20 DXF files can be generated (with 30 measuring points/photos each).
If pointfinder is switched on, the corresponding photos are saved with a resolution of 300 x 400 dpi.
Do not forget to save your data!

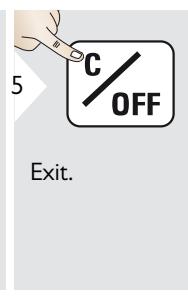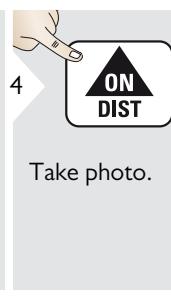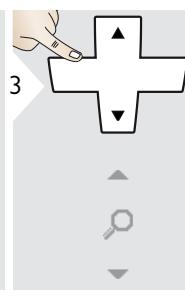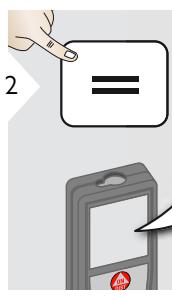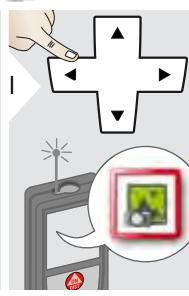FUNC Functions**EN****Photo**

Tap on the camera icon in the middle of the bottom line to take a photo.

For screenshots, press camera key for 2 sec.

2x
OV*


Take photo.


Exit.

* OV = Overview

FUNC Functions

EN

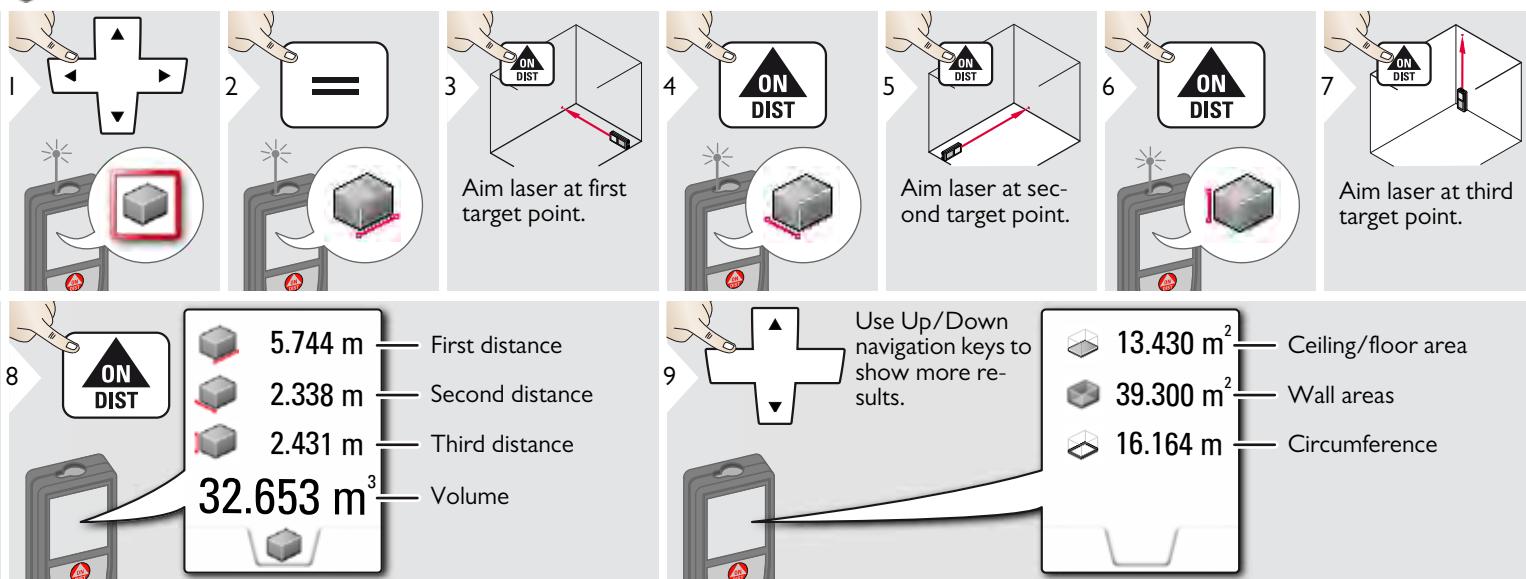Volume

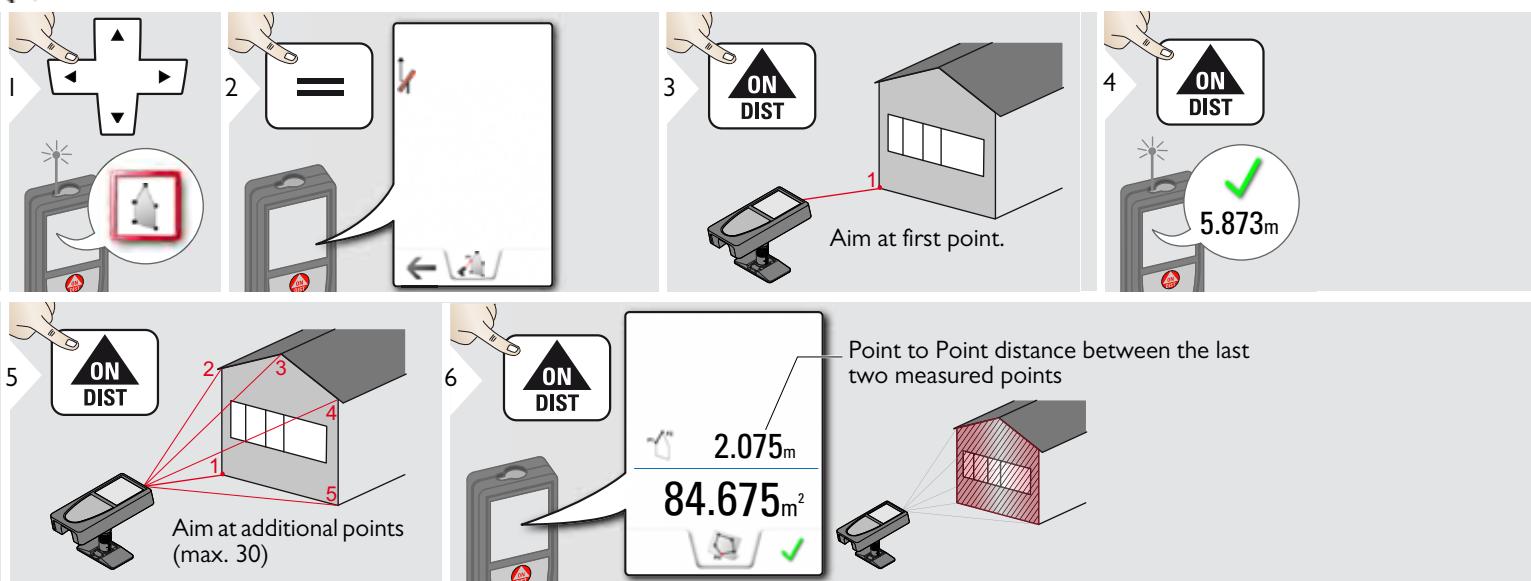 Smart Area measurement

WLAN data transmission

1

2 For levelling, Smart Base has to be folded out and device needs to be in an inclination range of $+-5^\circ$.

3

4 Aim laser at first point.

5

6 Aim at additional points.

7 Leave actual function, go to default operation mode.


8

9

Do not move device after levelling!

Rotate the device two times clockwise 90° . Follow the instructions on the display. Levelling is finished when OK icon appears on the display.

Check status line:

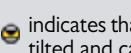-  -1.697m indicates proper levelling
-  indicates insufficient levelling
-  indicates that smart base was tilted and can affect measuring accuracy

WLAN data transfer of point coordinates




13.207 m

with pointfinder photo

without pointfinder photo

i If smart base is folded out, device sends x,y,z coordinates of measured point. If smart base is not folded out, device sends only inclination and slope distance. If WLAN is switched off, the device requests to switch on WLAN.





Data transfer works only with WLAN.

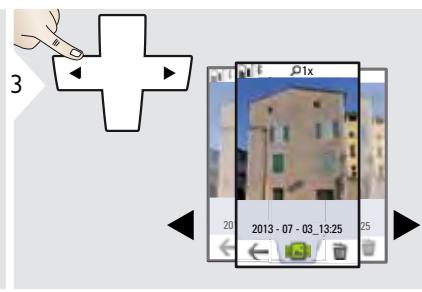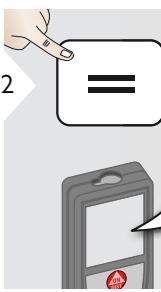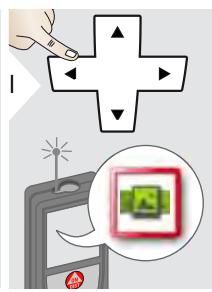 **Gallery**

Exit.





If the device is connected to the computer via USB cable, you can download or delete the gallery. It is not possible to upload any data.

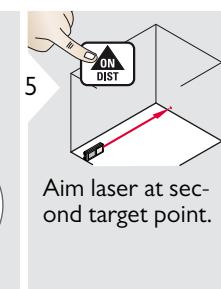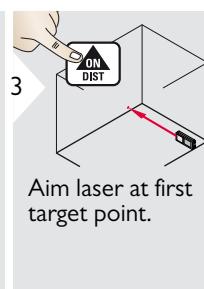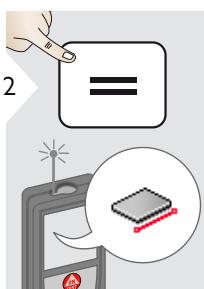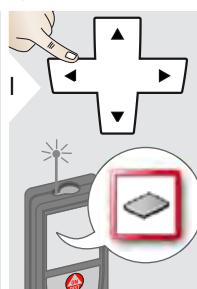 **Area**

-  6.228 m First distance
-  3.910 m Second distance
-  20.276 m Circumference
-  24.352 m² Area






The result is shown in the main line and the measured value above.
 Partial Measurements / Painter function:
 Press + or - before starting the first measurement. Measure and add or subtract distances. Finish with =. Measure 2nd length.

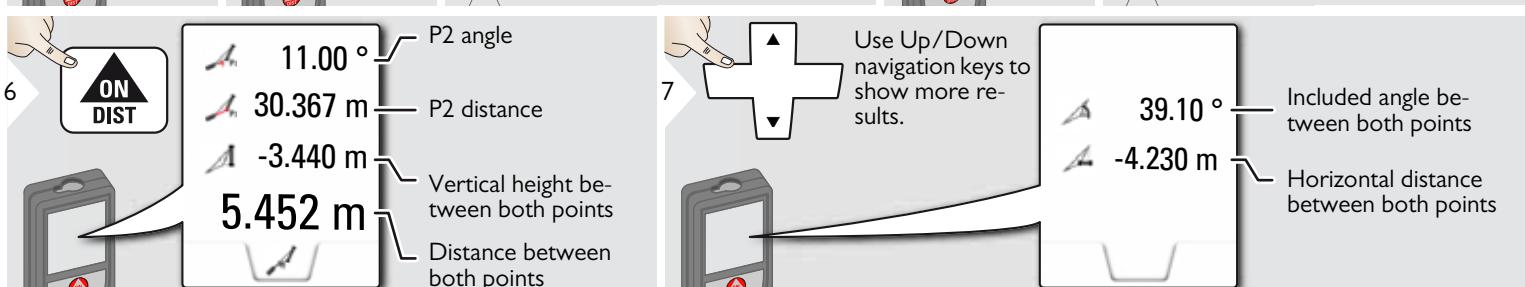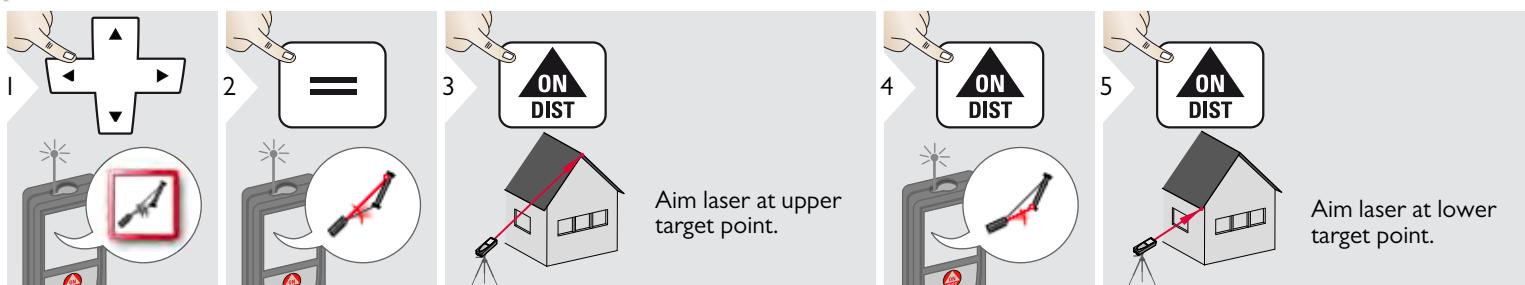
 Sloped objects

i Indirect distance measuring between 2 points with additional results. Ideal for applications such as length and slope of roof, height of chimneys,....
It is important, that the instrument is positioned in the same vertical plane as the 2 measured points. The plane is defined of the line between the 2 points. This means, that the device on the tripod is only moved vertically and not turned horizontally to reach both points.

Width

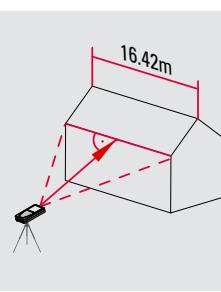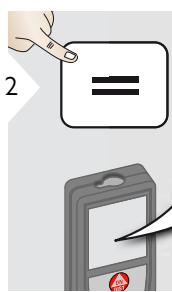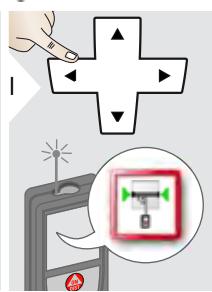

It is absolutely necessary to aim with the laser perpendicular to the object.

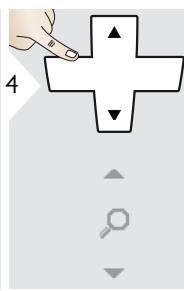


If necessary, use the Zoom for precise aiming.


* OV = Overview




Select arrows with the cursor keys or by tapping on the display and adjust with softkeys. Corresponding width is calculated.

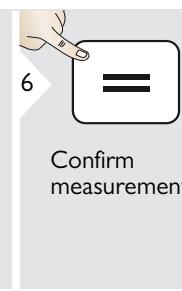

Confirm
measurement.




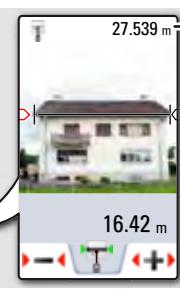


— Distance to object

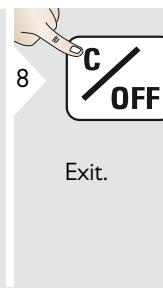

Exit.


Timer

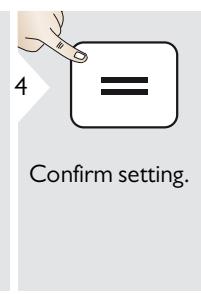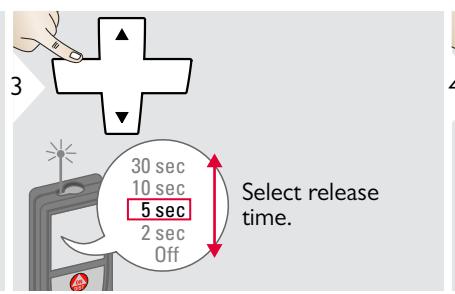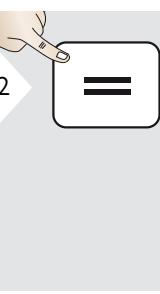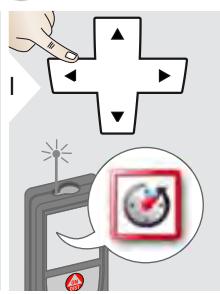



i The self release starts if ON/Measure key is pressed.




FUNC Functions

EN

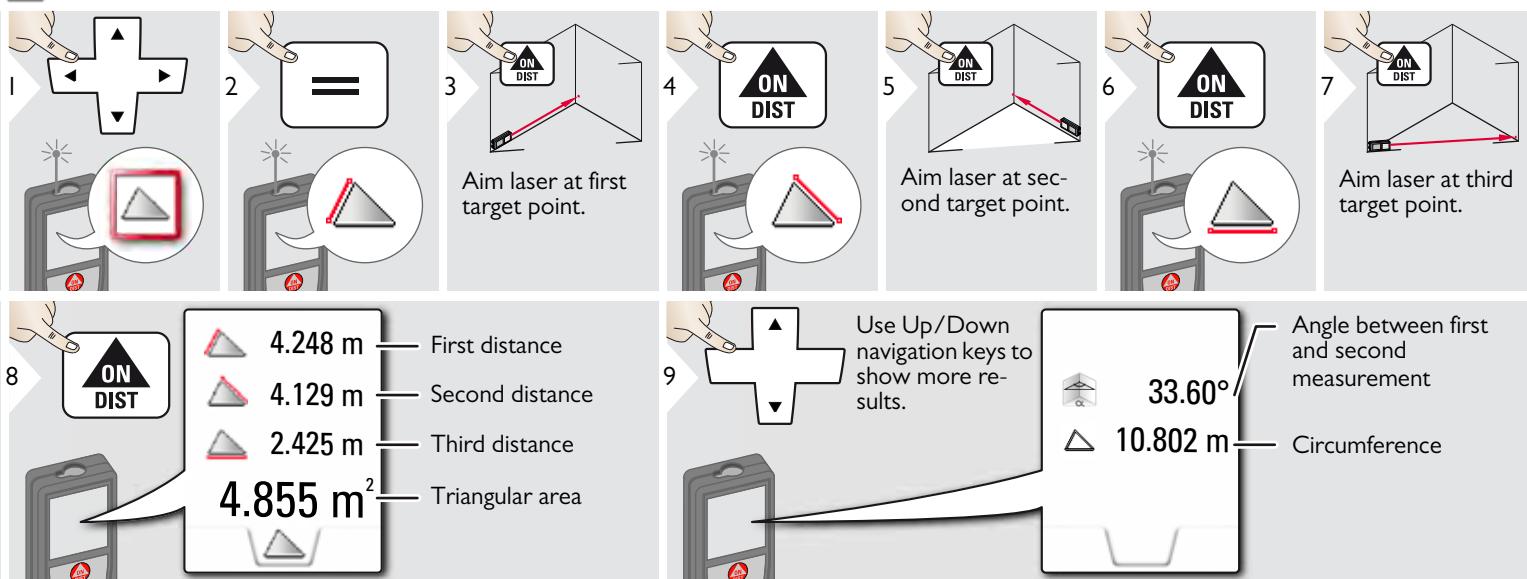△ Triangular area

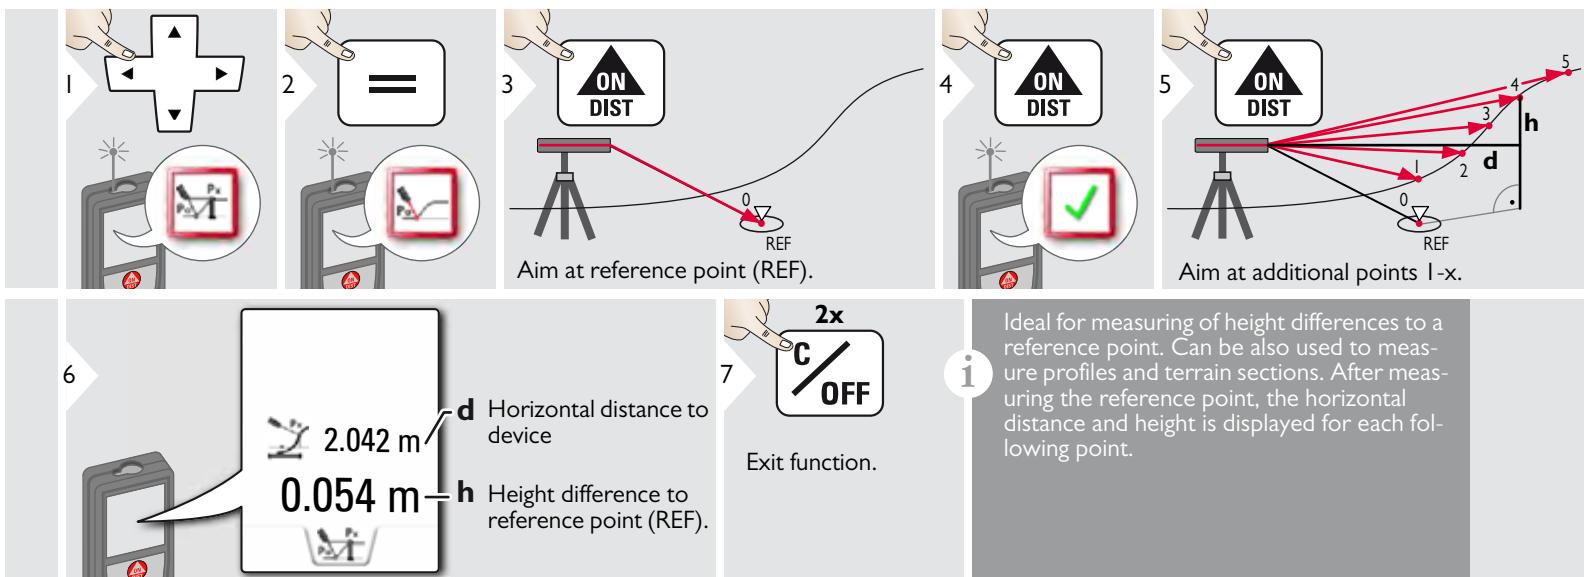 Height-profile measurement

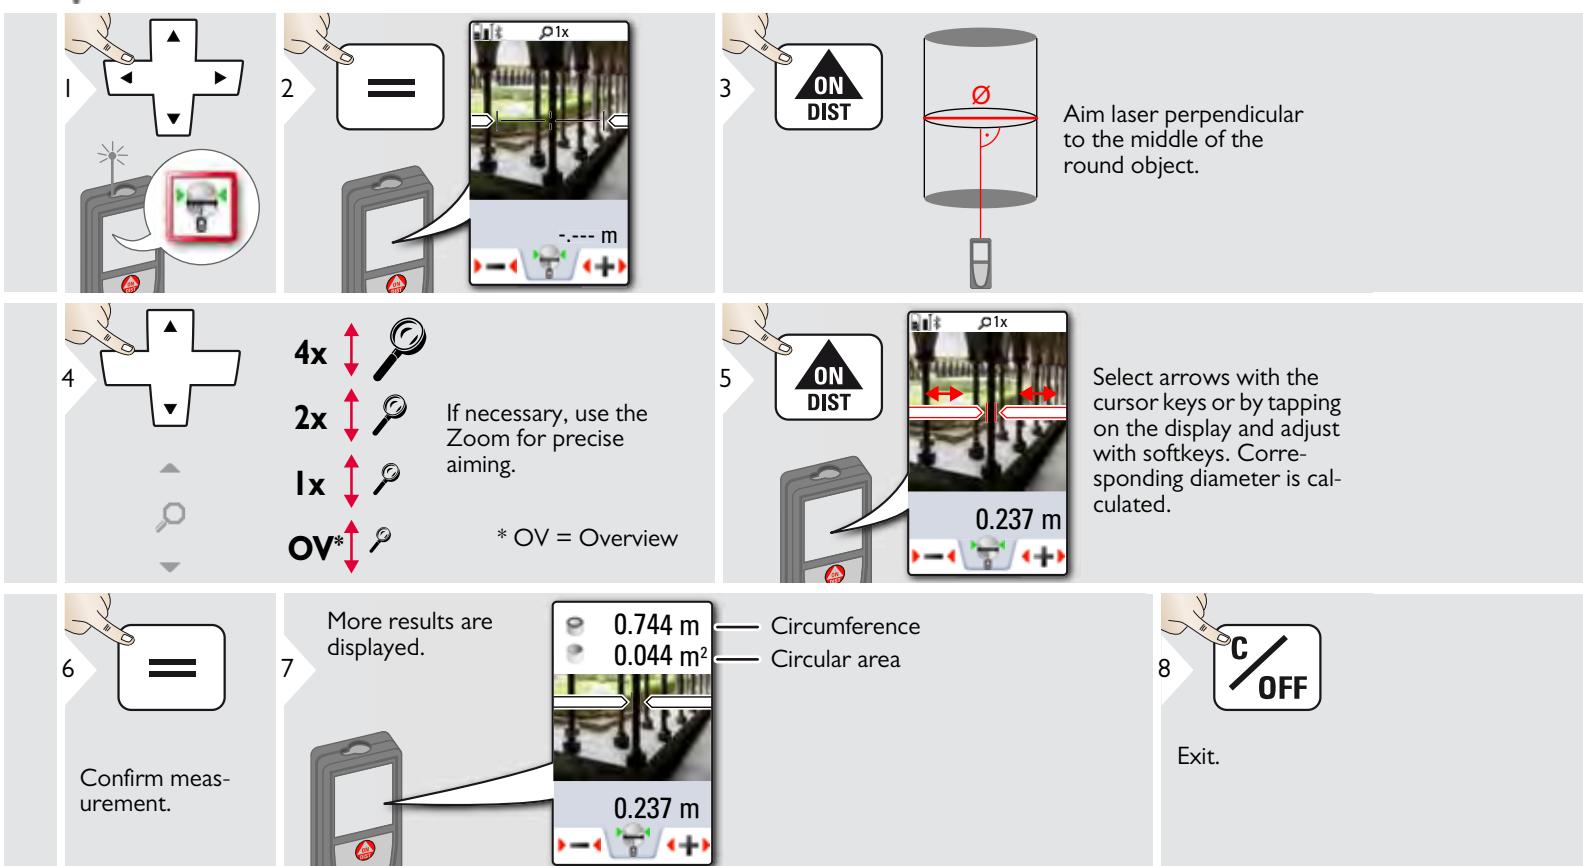
 Diameter

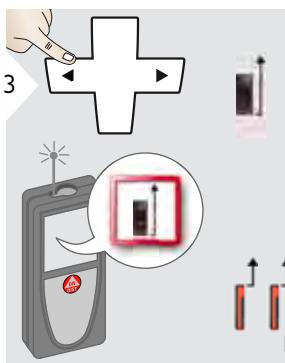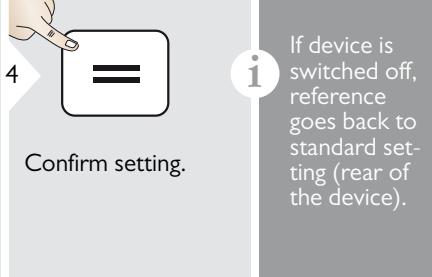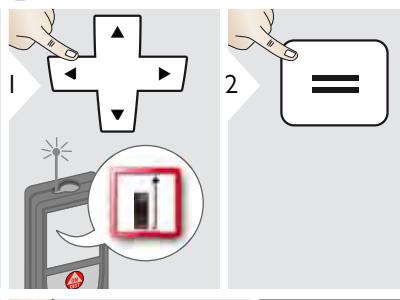
 **Adjusting measuring reference**

Distance is measured from the rear of the device (standard setting).



The orientation of the Smart Base is automatically detected and the zero point is accordingly adjusted.

Distance is measured from the front of the device (lock symbol = permanently).





Confirm setting.

4


FUNC Functions

EN



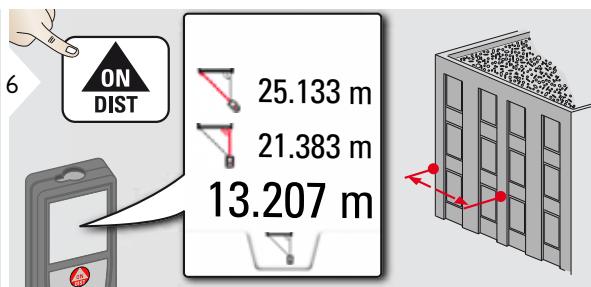
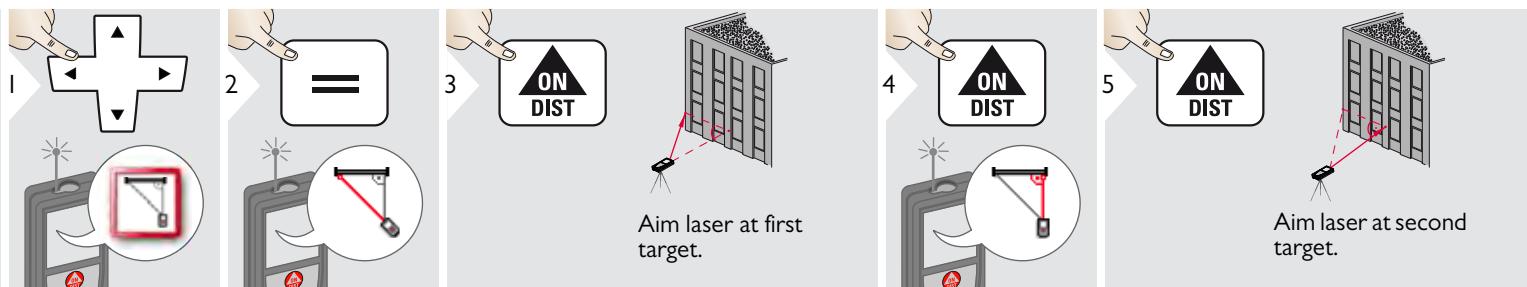
Pythagoras (2-point)

The result is shown in the main line.
Pressing the measuring key for 2 sec in the function activates automatically Minimum or Maximum measurement.


We recommend to use the pythagoras only for indirect horizontal measuring.
For height measuring (vertical) it is more precise to use a function with the inclination measuring.

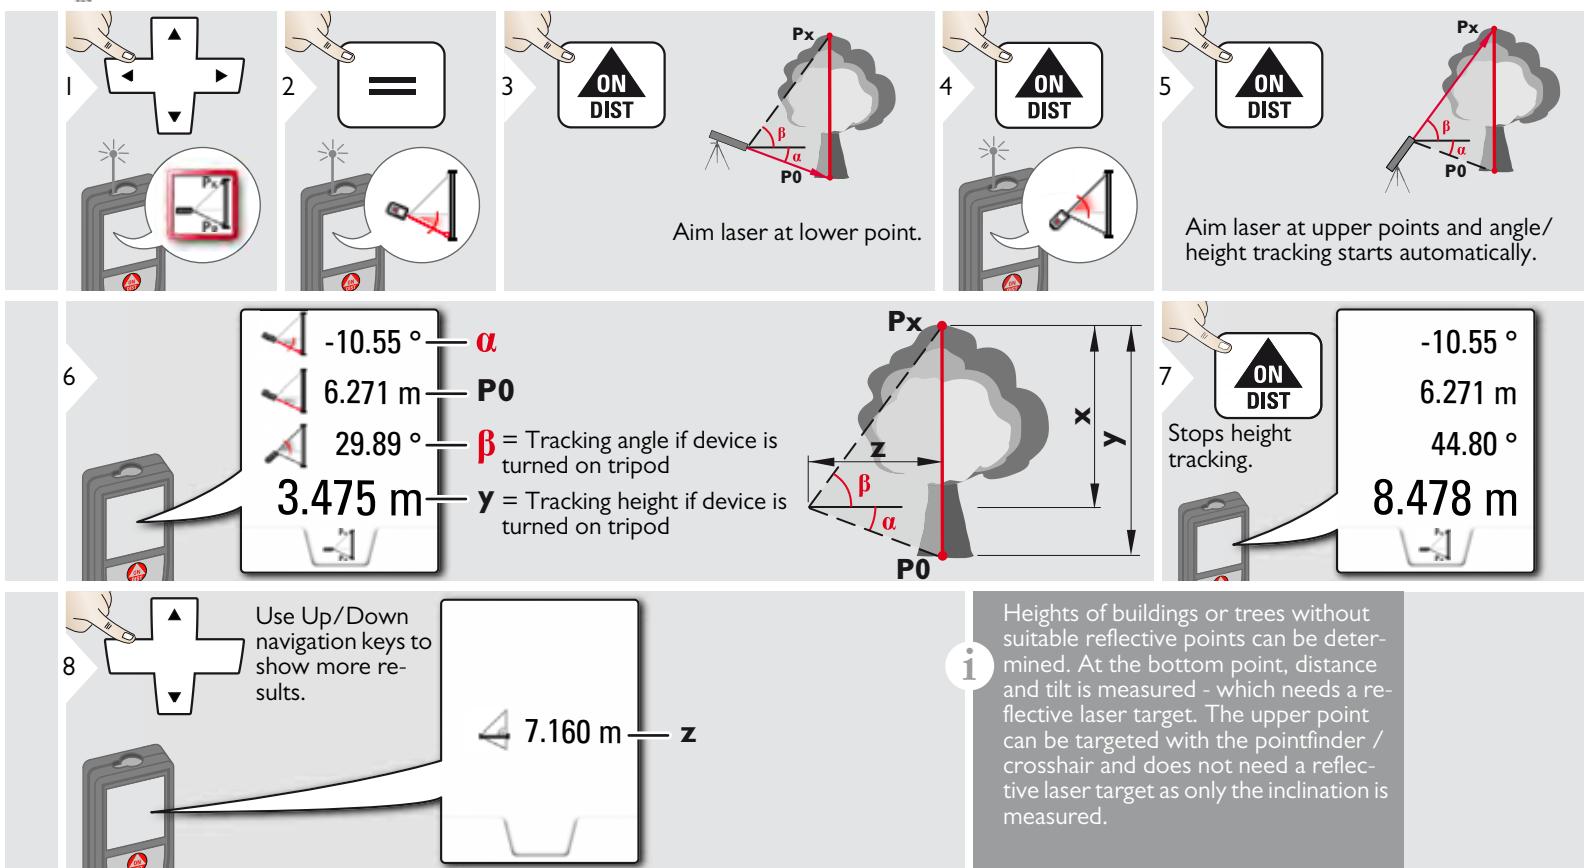 Height tracking

Area from Photo

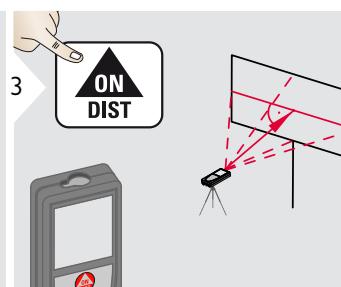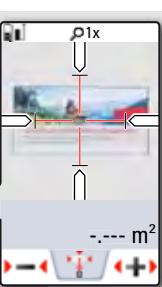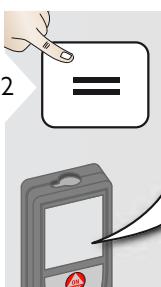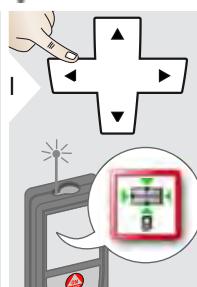


Aim perpendicular to the horizontal center line of the area. This area must be perfectly flat on the vertical plane.

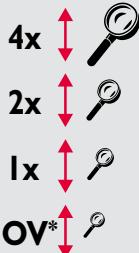


If necessary, use the Zoom for precise aiming.


* OV = Overview

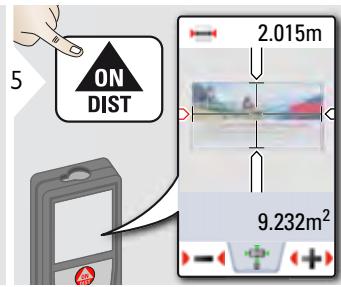

Select arrows with the cursor keys or by tapping on the display and adjust with softkeys. Corresponding area is calculated.

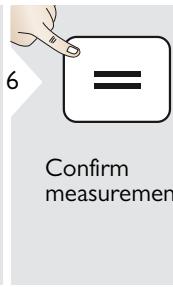


Confirm measurement.

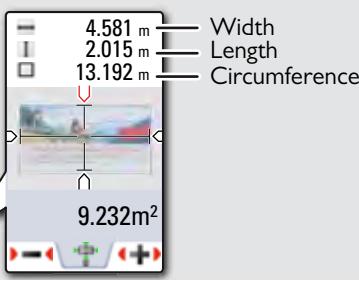

Exit.

★ Compass

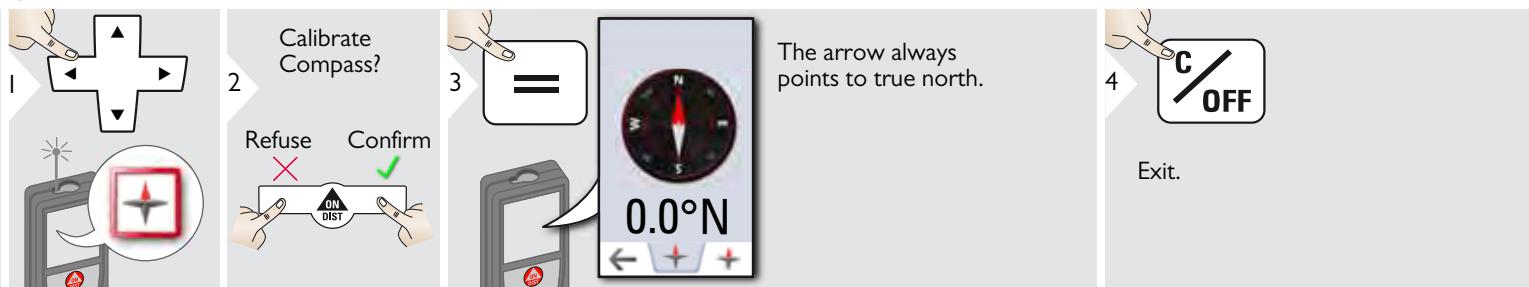

i At the following places the compass probably does not work correctly:


- Inside of buildings
- Close to high voltage lines (e.g. on train platforms)
- Close to magnets, metal objects or electrical household appliances

i If an error message occurs, the device is tilted too much ($>20^\circ$ over the front / $>10^\circ$ side-wise).

 **Keep the device away from any magnet!**

★ Calibration of Compass:

i The compass has to be calibrated before every first measurement after switching on the device.

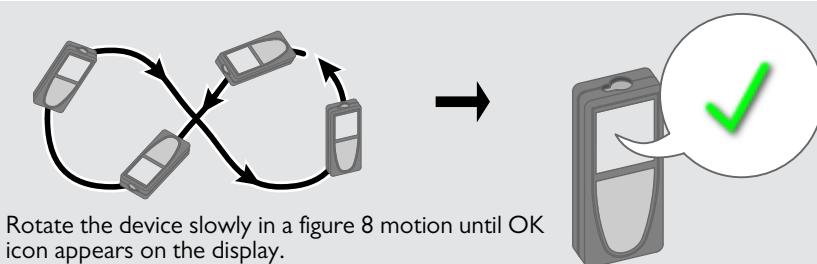


Rotate the device slowly in a figure 8 motion until OK icon appears on the display.

i After 2 sec the device goes back to the compass mode.

FUNC Functions

EN

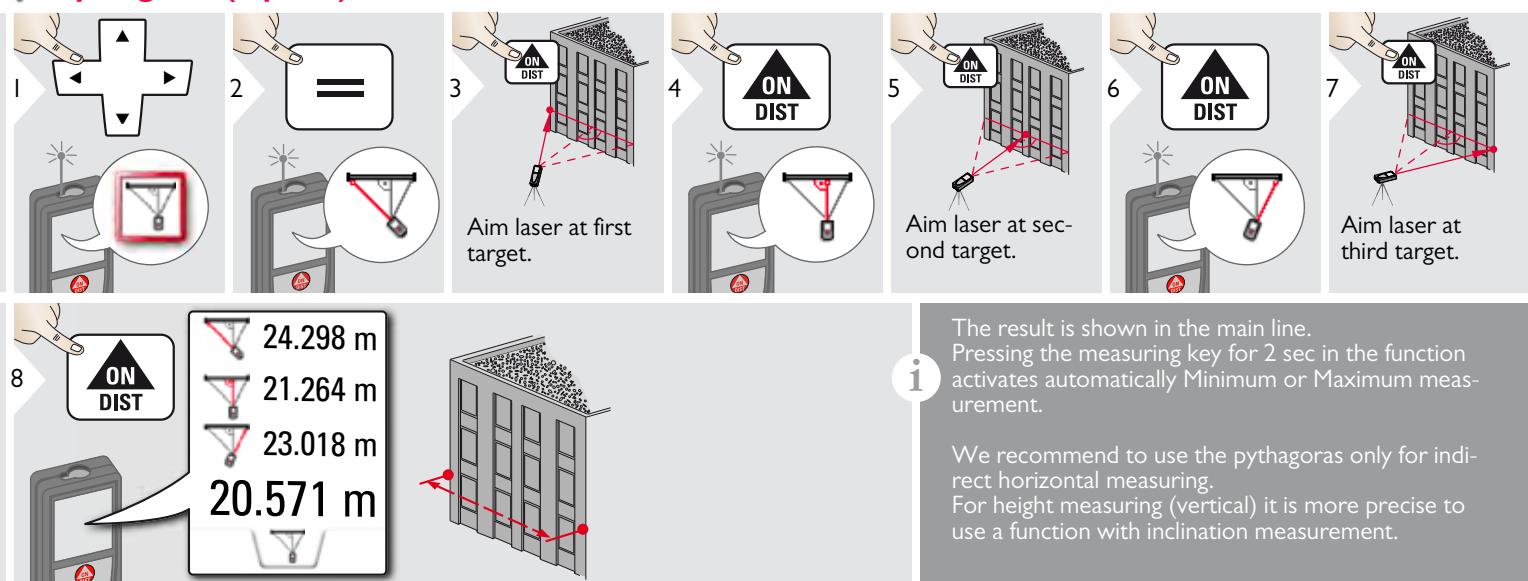Pythagoras (3-point)




i The result is shown in the main line.
Pressing the measuring key for 2 sec in the function
activates automatically Minimum or Maximum measurement.

We recommend to use the pythagoras only for indirect horizontal measuring.
For height measuring (vertical) it is more precise to
use a function with inclination measurement.

FUNC Functions

EN

 **Trapezium**







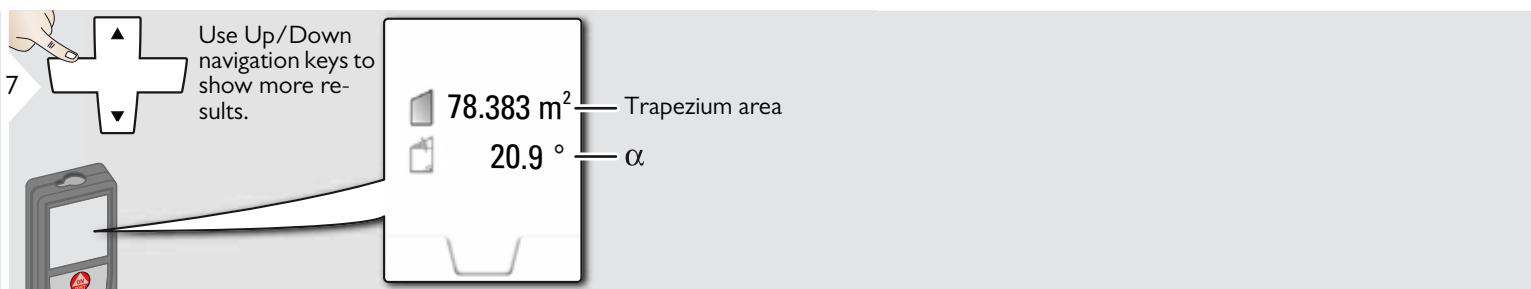
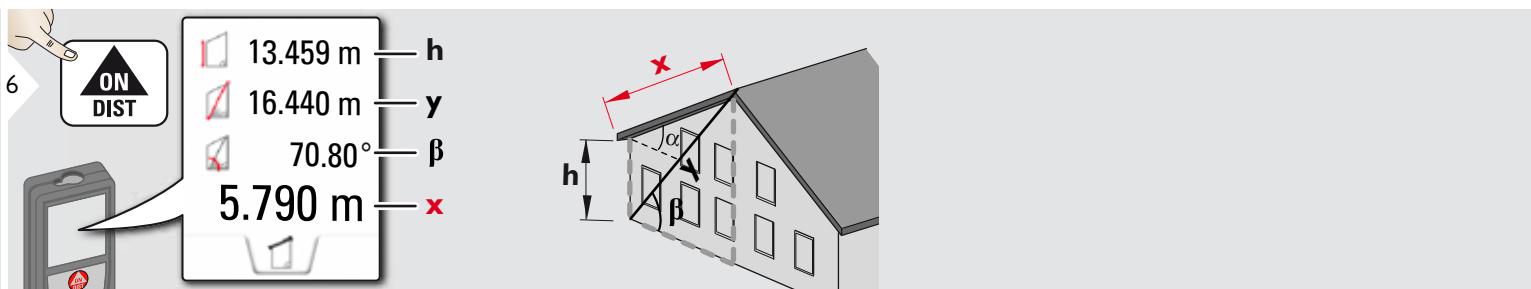
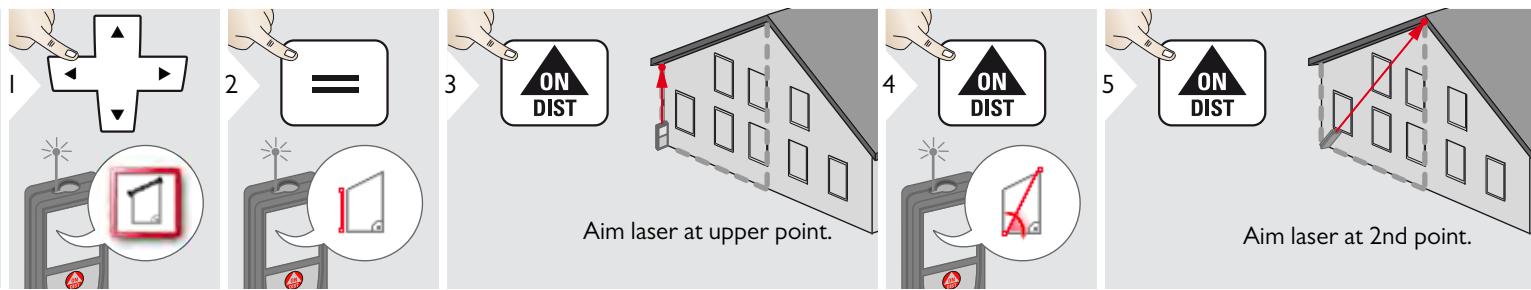


FUNC Functions


EN

Stake out**i**

Two different distances (a and b) can be entered to mark off defined measured lengths.

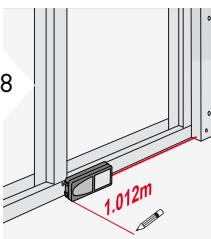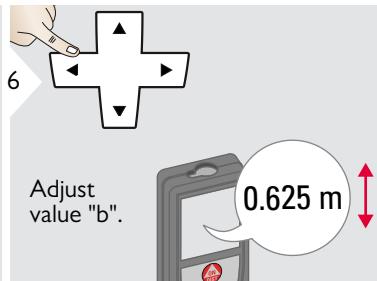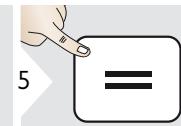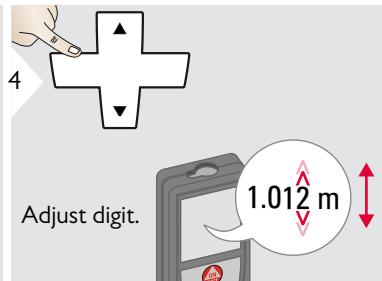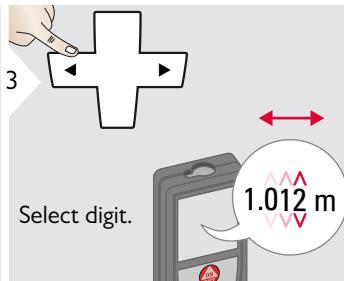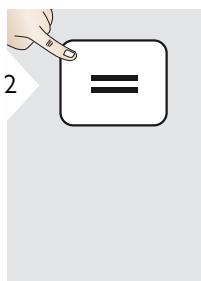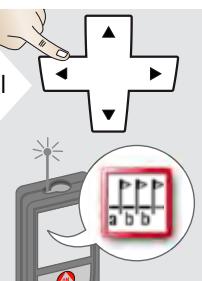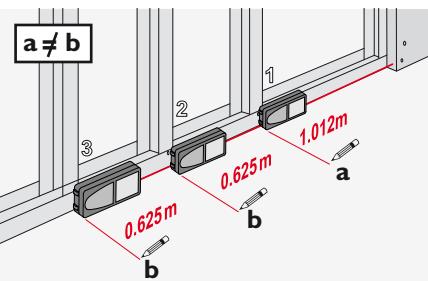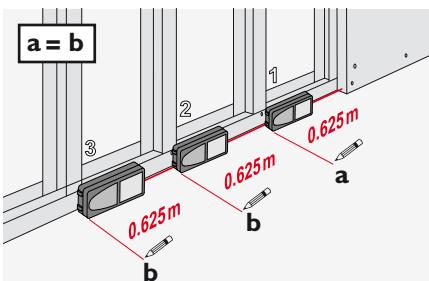

Move device slowly along the stake-out line. The distance to the next stake out point is displayed.

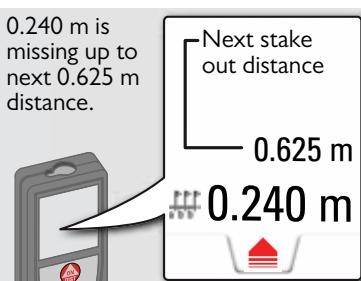

i When approaching a stake out point to less than 0.1 m the instrument starts to beep. The function can be stopped by pressing the CLEAR/OFF button.

Technical Data

EN

Distance measurement (ISO 16331-1)	
Accuracy with favourable conditions *	± 1.0 mm / 0.04 in ***
Accuracy with unfavourable conditions **	± 2.0 mm / 0.08 in ***
Range with favourable conditions *	0.05m - 300 m / 0.16 - 1000 ft
Range with unfavourable condition **	0.05m - 150m (0.16 - 492 ft)
Smallest unit displayed	0.1 mm / 1/32 in
X-Range Power Technology™	yes
Ø laser point at distances	6 / 30 / 60 mm (10 / 50 / 100 m)

Tilt measurement	
Measuring tolerance to laser beam ****	-0.1° / +0.2°
Measuring tolerance to housing ****	± 0.1°
Range	360°

Smart Base	
Working range vertical sensor	-40° to 80°
Accuracy vertical sensor	up to +/- 0.1°
Working range horizontal sensor	360°
Accuracy horizontal sensor	up to +/- 0.1°
Tolerance P2P function at distances (combination of sensors and distance measuring)	approx. : +/- 2 mm / 2 m +/- 5 mm / 5 m +/- 10 mm / 10 m

Device levelling	
Levelling range	+/- 5°
Levelling accuracy	+/- 0.05°

General	
Laser class	2
Laser type	635 nm, < 1 mW
Protection class	IP54 (dust- and splash water protected)
Autom. laser switch off	after 90 s
Autom. power switch-off	after 180 s
Bluetooth® Smart	Bluetooth® v4.0
Range of Bluetooth®	< 10 m
WLAN	yes
Range of WLAN	10 m
Dimension (H x D x W)	61 x 32 x 164 mm 2.4 x 1.3 x 6.5 in
Weight	291 g / 10.2 oz

Temperature range:	
- Storage	-25 to 60 °C
- Operation	-13 to 140 °F
-	-10 to 50 °C
- Charging	14 to 122 °F
-	-10 to 40 °C
-	14 to 104 °F

Digital data	
Resolution for photos	800 x 600 dpi
Resolution for screenshots	240 x 400 dpi
File format	JPG, DXF
Download	USB

Battery (Li-Ion)	
Rated voltage	3.7 V
Capacity	2.6 Ah
Measurements per battery charge	Approx. 4000
Charging time	Approx. 4 h
Output voltage	5.0 V
Charging current	1 A

* favourable conditions are: white and diffuse reflecting target (white painted wall), low background illumination and moderate temperatures.

** unfavourable conditions are: targets with lower or higher reflectivity or high background illumination or temperatures at the upper or lower end of the specified temperature range.

*** Tolerances apply from 0.05 m to 10 m with a confidence level of 95%. With favourable conditions the tolerance may deteriorate by 0.05 mm/m for distances between 10 m to 30 m, by 0.10 mm/m between 30 m and 100 m and by 0.20 mm/m for distances above 100 m.

With unfavourable conditions the tolerance may deteriorate by 0.10 mm/m for distances between 10 m to 30 m, by 0.20 mm/m between 30 m and 100 m and by 0.30 mm/m for distances above 100 m.

**** after user calibration. Additional angle related deviation of +/- 0.01° per degree up to +/- 45° in each quadrant.

Applies at room temperature. For the whole operating temperature range the maximum deviation increases by +/- 0.1°.

 At a recommended storage temperature of -20°C to +30°C (-4°F to +86°F), batteries containing a 50% to 100% charge can be stored up to 1 year. After this storage period the batteries must be recharged.

 For accurate indirect results, the use of a tripod is recommended. For accurate tilt measurements a transverse tilt should be avoided.

Message Codes

EN

Functions	
Distance measuring	yes
Min/Max measuring	yes
Permanent measuring	yes
Stake-out	yes
Addition/Subtraction	yes
Area	yes
Triangle area	yes
Volume	yes
Trapezium	yes
Painter function (area with partial measurem.)	yes
Pythagoras	2-point, 3-point
Smart Horizontal Mode / Indirect height	yes
Height-profile measurement	yes
Level	yes
Sloped objects	yes
Height tracking	yes
Memory	yes
Beep	yes
Illuminated colour display	yes
Pointfinder (Viewscreen)	4x zoom, OV
Bluetooth® Smart	yes
Personalized Favorites	yes
Timer	yes
Calculator	yes
Photo/Screenshot	yes
Compass	yes
Gallery with USB download	yes
Diameter	yes
Width	yes
Area from Photo	yes
Smart Base	yes
Pointdata transmission	yes
Point to point function /distance	yes
Smart Angle	yes
Smart Area	yes
DXF Data capture	yes

If the message **Error** does not disappear after switching on the device repeatedly, contact the dealer.

If the message **Info** appears with a number, press the Clear button and observe the following instructions:

No.	Cause	Correction
156	Transverse tilt greater than 10°	Hold the instrument without any transverse tilt.
162	Calibration mistake	Make sure, the device is placed on a absolutely horizontal and flat surface. Repeat the calibration procedure. If the mistake still occurs, contact your dealer.
204	Calculation error	Perform measurement again.
240	Data transfer error	Repeat procedure.
252	Temperature too high	Let device cool down.
253	Temperature too low	Warm device up.
255	Received signal too weak, measuring time too long	Change target surface (e.g. white paper).
256	Received signal too high	Change target surface (e.g. white paper).

No.	Cause	Correction
258	Measurement outside of measuring range	Correct range.
260	Laser beam interrupted	Repeat measurement.
300	Smart Base not folded out	Fold out Smart Base.
301	Device was moved, levelling not valid any more	Perform levelling again. Measuring with invalid levelling is possible, but it affects the accuracy.
302	«Point data transmission» is selected, but WLAN is off	Switch on WLAN.
340	WLAN: Data transfer error	Repeat procedure.
341	Authentication Error	Use correct password.

Care

- Clean the device with a damp, soft cloth.
- Never immerse the device in water.
- Never use aggressive cleaning agents or solvents.

Warranty

Warranty under PROTECT by Leica Geosystems

Lifetime Manufacturer's Warranty

Warranty coverage for the entire usage time of the product under PROTECT according to Leica Geosystems International Limited Warranty and PROTECT General Terms & Conditions set out under www.leica-geosystems.com/protect. Free of charge repair or replacement of all products or any parts under PROTECT that suffer defects as a result of faults in materials or workmanship.

3 Years No Cost

Additional services should the product under PROTECT become defective and require servicing under normal conditions of use, as described in the user manual, at no additional charge.

To receive the "3 years No Cost" period, the product under PROTECT must be registered at <http://myworld.leica-geosystems.com> within 8 weeks of the purchase date. If the product under PROTECT is not registered, a "2 years No Cost" period applies.

Safety Instructions

EN

The person responsible for the instrument must ensure that all users understand these directions and adhere to them.

Areas of responsibility

Responsibilities of the manufacturer of the original equipment:

Leica Geosystems AG
Heinrich-Wild-Strasse
CH-9435 Heerbrugg
Internet: www.distocom

The company above is responsible for supplying the product, including the User Manual in a completely safe condition.

The company above is not responsible for third party accessories.

Responsibilities of the person in charge of the instrument:

- To understand the safety instructions on the product and the instructions in the User Manual.
- To be familiar with local safety regulations relating to accident prevention.
- Always prevent access to the product by unauthorised personnel.

Permitted use

- Measuring distances
- Tilt measurement
- Data transfer with Bluetooth® / WLAN

Prohibited use

- Using the product without instruction
- Using outside the stated limits
- Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools (screwdrivers, etc.)
- Carrying out modification or conversion of the product
- Use of accessories from other manufacturers without express approval
- Deliberate dazzling of third parties; also in the dark
- Inadequate safeguards at the surveying site (e.g. when measuring on roads, construction sites, etc.)
- Deliberate or irresponsible behaviour on scaffolding, when using ladders, when measuring near machines which are running or near parts of machines or installations which are unprotected
- Aiming directly in the sun

Safety Instructions

EN

WARNING

Watch out for erroneous measurements if the instrument is defective or if it has been dropped or has been misused or modified. Carry out periodic test measurements.

Particularly after the instrument has been subject to abnormal use, and before, during and after important measurements.

CAUTION

Never attempt to repair the product yourself. In case of damage, contact a local dealer.

WARNING

Changes or modifications not expressly approved could void the user's authority to operate the equipment.

Limits of use

 Refer to section "Technical data".

The device is designed for use in areas permanently habitable by humans. Do not use the product in explosion hazardous areas or in aggressive environments.

Disposal

CAUTION

Flat batteries must not be disposed of with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations.

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country. 

Adhere to the national and country specific regulations.

Product specific treatment and waste management can be downloaded from our homepage.

Electromagnetic Compatibility (EMC)

WARNING

The device conforms to the most stringent requirements of the relevant standards and regulations.

Yet, the possibility of causing interference in other devices cannot be totally excluded.

FCC statement (applicable in U.S.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Instructions

EN

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference and
- this device must accept any interference, including interference that may cause undesired operation of the device.

Safety Instructions

EN

Use of the product with Bluetooth®

WARNING


Electromagnetic radiation can cause disturbances in other equipment, in installations (e.g. medical ones such as pacemakers or hearing aids) and in aircraft. It can also affect humans and animals.

Precautions:

Although this product conforms to the most stringent standards and regulations, the possibility of harm to people and animals cannot totally be excluded.

- Do not use the product near petrol stations, chemical plants, in areas with a potentially explosive atmosphere and where blasting takes place.
- Do not use the product near medical equipment.
- Do not use the product in airplanes.
- Do not use the product near your body for extended periods.

Laser classification

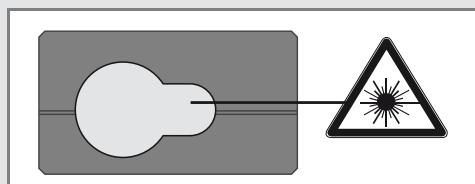

The device produces visible laser beams, which are emitted from the instrument:

It is a Class 2 laser product in accordance with:

- IEC60825-1 : 2014 „Radiation safety of laser products“

Laser Class 2 products:

Do not stare into the laser beam or direct it towards other people unnecessarily. Eye protection is normally afforded by aversion responses including the blink reflex.

WARNING


Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be hazardous.

CAUTION

Looking into the laser beam may be hazardous to the eyes.

Description	Value
Wavelength	620 - 690 nm
Maximum radiant output power for classification	0.95 mW
Pulse repetition frequency	320 MHz
Pulse duration	> 400 ps
Beam divergence	0.16 x 0.6 mrad

Labelling

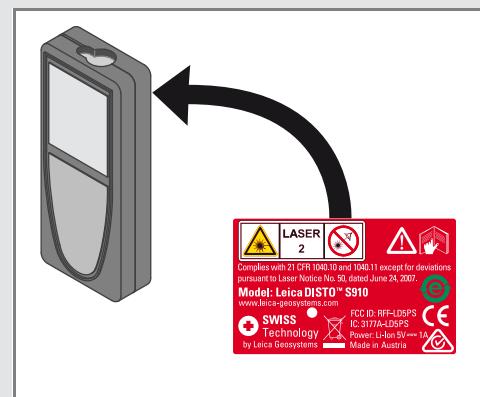

Subject to change (drawings, descriptions and technical data) without prior notice.

Leica Geosystems AG, Heerbrugg, Switzerland has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Copyright Leica Geosystems AG, Heerbrugg,
Switzerland 2015
Original text (808167a EN)

- when it has to be **right**

Leica
Geosystems