



CW2TPXXX

CW2LPXXX

CW2XPXXX



Veris Industries  
Stratford Park 5  
Telford TF3 3BL  
United Kingdom

### **WARNING**



#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors and covers before turning on power to this equipment.

**Failure to follow these instructions can result in death, serious injury or equipment damage.**

This product is intended for use in HVAC and building environmental control applications.

It is not intended for direct medical monitoring of patients. Read and understand these instructions before installing this product.

The installer is responsible for all applicable codes. If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

# CW2 Protocol Series

## Wall Mount Air Quality Sensors

### Product Overview

The CW2 Protocol Series of air quality sensors for living space is a flexible multi-sensor platform for use with BAS controllers designed to accept BACnet or Modbus outputs. CW2 Protocol Series sensors are available with three user interface options: touchscreen, LCD with three buttons and blank. CO<sub>2</sub> and temperature sensors are included with all CW2 Protocol Series air quality sensors. Models with VOC sensors and relative humidity sensors are also available.

### Product Identification

User Interface	Output	RH Accuracy*	VOC Sensor
CW2 <input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
T = Color touchscreen L = 3-button LCD display X = None	P = BACnet/Modbus	2 = 2% X = None	V = NDIR CO <sub>2</sub> /VOC = None

A

\* Replaceable RH module available to be ordered separately per table below.

### Replaceable RH Elements

Model	Description	Temp. Calibration	RH Calibration
HS1N	Replaceable RH sensor, 1% with NIST certificate	N/A	2-point calibration
HS2N	Replaceable RH sensor, 2% with NIST certificate	N/A	2-point calibration
HS2X	Replaceable RH sensor, 2%	N/A	2-point calibration

### Specifications

OPERATING ENVIRONMENT	
<b>Input Power</b>	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz
<b>Protocol Output</b>	BACnet or Modbus via RS-485, selectable
<b>Operating Temp. Range</b>	0 to 50 °C (32 to 122 °F)
<b>Operating Humidity Range</b>	0 to 95% RH non-condensing
<b>Housing Material</b>	High-impact ABS plastic
<b>Terminal Block Torque</b>	0.5 to 0.6 N·m (0.37 to 0.44 in-lbf)
<b>IP Rating</b>	IP 30
<b>Mounting Location</b>	For indoor use only. Not suitable for wet locations.
<b>Surface Mount</b>	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes
CO <sub>2</sub> TRANSMITTER	
<b>Sensor Type</b>	Non-dispersive infrared (NDIR), diffusion sampling
<b>Output Range</b>	0 to 10,000 ppm
<b>Accuracy</b>	±30 ppm ±3% of measured value
<b>Repeatability</b>	±20 ppm ±1% of measured value
<b>Response Time</b>	<60 seconds for 90% step change
VOC TRANSMITTER OPTION	
<b>Sensor Type</b>	Solid state

## Specifications (cont.)

<b>Output Range</b>	0 to 100% AQI for VOC		
<b>Accuracy</b>	±15% of measured value		
<b>Output Scale</b>	0 to 1,000 ppb of total VOC (TVOC)		
	<b>Level</b>	<b>Ventilation Recommendation</b>	<b>TVOC (ppb)</b>
<b>AQI Table*</b>	>61%	Greatly increased	>610
	20 to 61%	Significantly increased	200 to 610
	10 to 20%	Slightly increased	100 to 200
	5 to 10%	Average	50 to 100
	0 to 5%	Target value	0 to 50
<b>RH TRANSMITTER OPTION</b>			
<b>HS Sensor</b>	Solid state capacitive, replaceable		
<b>Accuracy (Includes Hysteresis)**</b>	±3.8% RH from 10 to 60% RH @ 25°C (77 °F) ±4.8% RH from 60 to 80% RH @ 25°C (77 °F) ±5.8% RH from 80 to 100% RH @ 25°C (77 °F)		
<b>Hysteresis</b>	1.5% typical		
<b>Stability</b>	±1% @ 20°C (68 °F) annually for 2 years		
<b>Output Range</b>	0 to 100% RH		
<b>Temperature Coefficient</b>	±0.1% RH/°C above or below 25 °C (77 °F) typical		
<b>TEMPERATURE TRANSMITTER</b>			
<b>Sensor Type</b>	Solid state, integrated circuit		
<b>Accuracy</b>	±0.2 °C (±0.4 °F) typical		
<b>Resolution</b>	0.1 °C (0.1 °F)		
<b>Range</b>	0 to 50 °C (32 to 122 °F)		
<b>DISPLAY MODES</b>			
<b>Touchscreen</b>	61 mm (2.4 in), color, backlit, capacitive, 240x300 px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout		
<b>LCD</b>	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout		
<b>SETPOINTS</b>			
<b>Temperature Setpoint</b>	Scale: 0 to 50 °C (32 to 122 °F) or 10 to 35 °C (50 to 95 °F) max., adjustable span		
<b>Humidity Setpoint</b>	Scale: 0 to 100% RH		
<b>Fan Speed Setpoint</b>	Off, Low, Medium, High, Auto		
<b>OVERRIDE</b>			
<b>Override Button</b>	Display models feature a momentary override button		
<b>WIRING TERMINALS</b>			
<b>Terminal Blocks</b>	Screw terminals, 18-24 AWG		
<b>Screw Terminal Torque</b>	0.2 N·m (2.0 in-lbF) max.		
<b>WARRANTY</b>			
<b>Limited Warranty</b>	5 years		


## Specifications (cont.)

<b>COMPLIANCE INFORMATION</b>	
<b>Agency Approvals</b>	UL 916 European Conformance CE: EN 60730-1, EN 60730-2-9, EN 60730-2-13, EN 61000-6-2, EN 61000-6-3, EN 61000 Series - Industrial Immunity, EN 61326-1 FCC Part 15 Class B, REACH, RoHS, RCM (Australia), ICES-003 (Canada), UKCA (UK)

\* Air Quality Index for VOC aligns with TVOC levels for IAQ as specified by the WHO (World Health Organization).

\*\* Humidity sensor overall accuracy should include: accuracy, temperature coefficient and stability. Humidity accuracy is shown as an absolute value, so if testing accuracy with a hand-held device, you must check for deviation in its readings instead of calculating the percentual deviation. Additionally, you must consider the overall accuracy of the hand-held device in the comparison.

## Dimensions

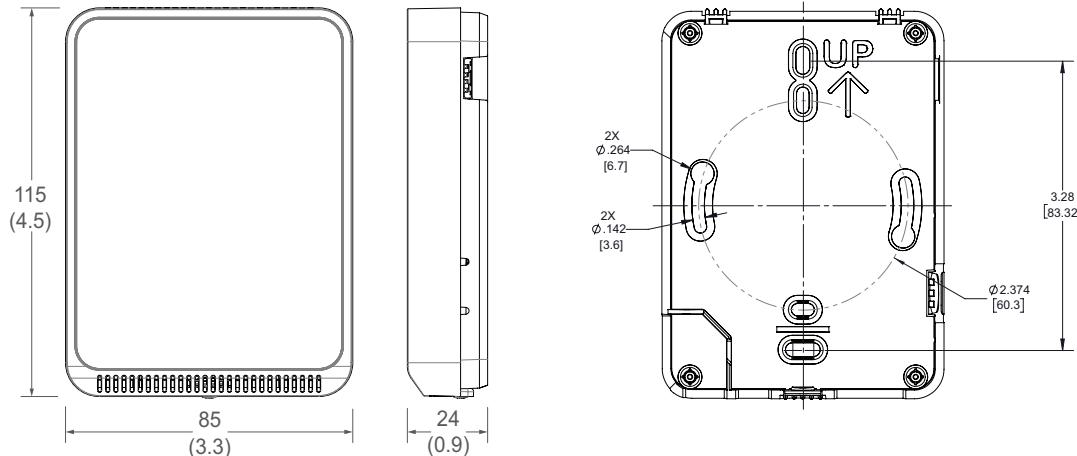

## Functions

The CW2 Protocol Series sensor measures CO<sub>2</sub>, VOC (if equipped), RH (if equipped) and temperature in a room and provides protocol outputs to a controller.

## Installation

1. Remove the cover from the base at the bottom of the device.



2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the "UP" arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.



## Installation (cont.)


3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.



4. Mount the backplate onto the wall using the screws provided.



5. Connect the wires to the screw terminals. Do not over-tighten the screws.

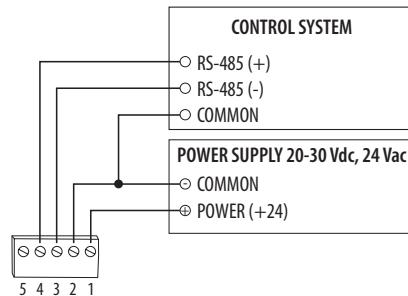


## 6. Configure the device.

### Address Configuration:

Each device on a single network must have a unique address. Set the DIP switch labeled "ADDRESS" to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.


## Installation (cont.)

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the "ADDRESS" DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

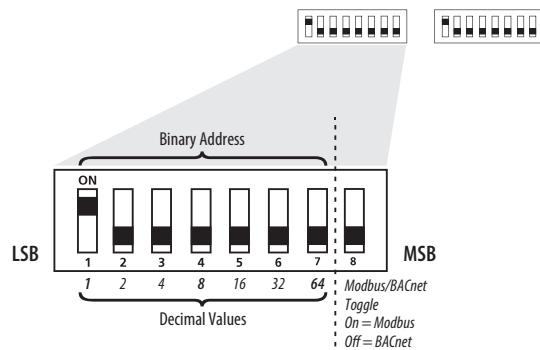

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

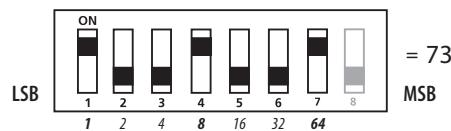


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 ( $1 + 8 + 64 = 73$ ).

### Communications Configuration:

The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

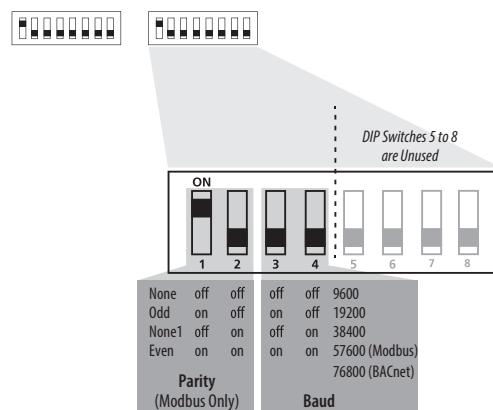

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8		
off	off	on	off	off	off	off	off		
None		19200 Baud		Unused					

## Installation (cont.)

### Modbus Point Map

#### Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

\*Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to “read only” holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case. “Preserved” means the values are maintained through power outages.

#### 32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format
1		
2	Temperature reading	32-bit floating point
3		
4	Humidity reading	32-bit floating point
5		
6	CO <sub>2</sub> reading	32-bit floating point
7		
8	VOC reading	32-bit floating point
9		
10		
11		
12		
13~41	Unused	NA
42		
43		
44		
45		

#### 32-Bit Holding Registers (Read/Write):

16-Bit Register Location	Description	Format
1	Temperature setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5		
6	Screen color set	32-bit
7~39	Device name	4x16-bit ASCII characters as a single query
40		
41	Fan speed	32-bit
42		
43	CO <sub>2</sub> yellow threshold	32-bit floating point
44		
45	CO <sub>2</sub> red threshold	32-bit floating point
46~51	Unused	NA

## Installation (cont.)

52	Offset temp by this value	32-bit floating point
53		
54	Offset humidity by this value	32-bit floating point
55		
56	Offset CO <sub>2</sub> by this value	32-bit floating point
57		
58	Offset VOC by this value	32-bit floating point
59		

*Note: All holding registers are preserved during power outages.*

### Coils (Read/Write):

Register	Description
2*	CO <sub>2</sub> stoplight
3*	Touchbutton disable
4*	Invoke CO <sub>2</sub> calibration
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
9*	Display shows CO <sub>2</sub> level
10*	Display shows VOC level
11	Set 400ppm as CO <sub>2</sub> baseline
12*	Display shows temperature setpoint on main screen
14*	Display shows setpoint

*\*Preserved during power outages.*

### BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. "Preserved" means the value is maintained through power outages.

#### Present\_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	50
Humidity Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	100
Screen Color	1	4
CO <sub>2</sub> Yellow Limits	400	10000
CO <sub>2</sub> Red Limits	400	10000
Fan Speed	1	5
Device_Instance	0	4,194,302
Temp Offset	-5	5
Humidity Offset	-10	10
CO <sub>2</sub> Offset	-250	250
VOC Offset	-10	10

## Installation (cont.)

### Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max_Info_Frames Max_Master	APDU_Timeout Max_Master Object_Name

### Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in Room
Room Humidity	AI 2	Humidity in Room
CO2 Sensor	AI 3	CO <sub>2</sub> Concentration
VOC Sensor	AI 4	VOC Level
Temperature Setpoint*	AV 1	Setpoint Value for Temperature
Humidity Setpoint*	AV2	Setpoint Value for Humidity
CO2 Yellow Limit*	AV3	CO2 threshold at which the screen color changes from green to yellow
CO2 Red Limit*	AV4	CO2 threshold at which the screen color changes from yellow to red
Temperature Offset*	AV7	Offset value to add to the temperature sensor output value
Humidity Offset*	AV8	Offset value to add to the humidity sensor output value
CO2 Offset*	AV9	Offset value to add to the CO2 sensor output value
VOC Offset*	AV10	Offset value to add to the VOC sensor output value
CO2 Stoplight*	BV1	ACTIVE enables CO <sub>2</sub> Stoplight INACTIVE disables CO <sub>2</sub> Stoplight
Touch Disable*	BV2	ACTIVE disables Touch Response INACTIVE enables Touch Response
CO2 ABC Cal*	BV3	ACTIVE enables ABC Calibration INACTIVE disables ABC Calibration
Temperature Units*	BV4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV6	ACTIVE enables Screen Timeout INACTIVE disables Screen Timeout
Display Humidity*	BV7	ACTIVE displays humidity on Screen INACTIVE removes humidity from Screen
Display CO2*	BV8	ACTIVE displays CO <sub>2</sub> level on Screen INACTIVE removes CO <sub>2</sub> level from Screen
Display VOC*	BV9	ACTIVE displays VOC level on Screen INACTIVE removes VOC level from Screen
CO2 FRC 400	BV10	ACTIVE sets 400 ppm as CO2 baseline after Present_Value is read INACTIVE leaves CO2 baseline in last state (no action)




## CO<sub>2</sub> Sensor Calibration

There are two methods for CO<sub>2</sub> calibration available: 400 ppm baseline calibration and automatic baseline calibration (ABC).

### 400 ppm Baseline Calibration

400 ppm baseline calibration allows the sensor to be set at 400 ppm. Push and hold the calibration button for 3 to 5 seconds. The LED will flash green. Once the button is released, calibration is complete and the LED switches off.

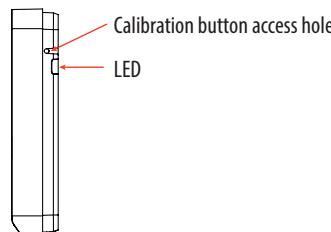


### Automatic Baseline Calibration (ABC)

The ABC mode addresses the 400 ppm calibration. It allows turning on or off a background correction/recovery mode that will minimize any calibration error that has been caused by shock during handling and transportation or is caused by a long term shift in measurement. The ABC algorithm constantly keeps track of the sensor's lowest reading over a preconfigured time interval and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400 ppm. After initial startup, it is expected that the sensor reaches specified accuracy after 7 to 21 days.

## Touchscreen Operation

### Main Screen

The touchscreen user interface displays applicable sensor output values (temperature, RH, CO<sub>2</sub> and VOC), setpoint value, menu button and CO<sub>2</sub> stoplight status (if enabled).

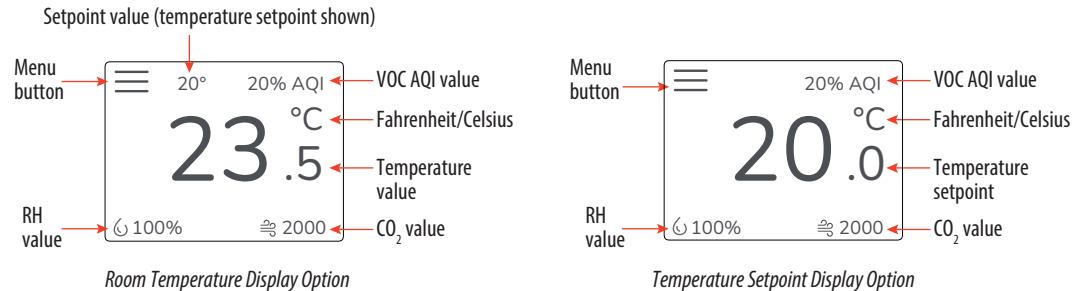

### Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings, setpoint submenu (temp, RH and fan) and CO<sub>2</sub> stoplight buttons are displayed on the menu screen.



Note: RH setpoint will not appear on non-RH models.

## Touchscreen Operation (cont.)

### Menu Button Functions



#### Integrator's Submenu

Press this icon to access the Integrator's menu.

#### Submenu Only

Model: CW2TP2AV  
Serial #: 4E54F3B5  
Date code: 2020  
Rev code: 01A



#### Occupied Override Button

Press this icon to provide momentary signal output to the controller

#### Single Press Only

Signals occupied/override call to controller.



#### Fahrenheit/Celsius Switch

Press this icon to display either °C or °F.

#### Single Press Only

Changes units to Fahrenheit when pressed.  
Changes units to Celsius when pressed.



#### Settings

This icon provides the ability to change the color scheme of the display.




#### Submenu Only



#### Temp Setpoint Adjustment

Click this icon to access the setpoint change menu.  
Toggle the Temp Setpoint Display button to display or hide the setpoint value on the home screen.

#### Submenu Only

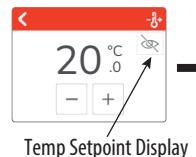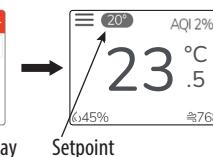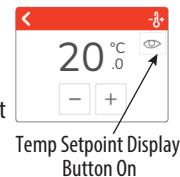

#### Humidity Setpoint Adjustment

Click this icon to access the setpoint change menu.

#### Submenu Only




#### Fan Speed

Click this icon to access the fan speed menu.

#### Submenu Only




## Touchscreen Operation (cont.)

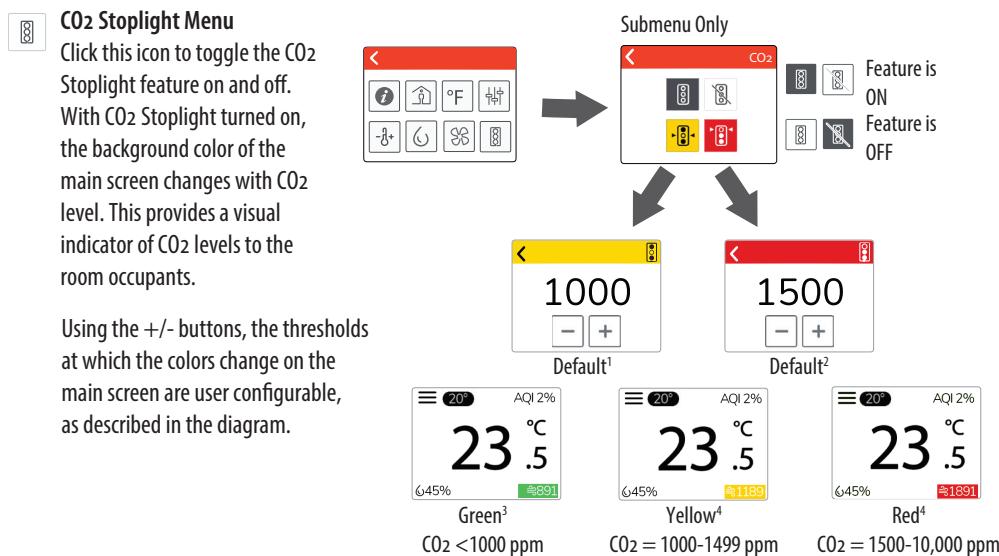

1. Values <400 ppm will be rounded up to the minimum limit of 400 ppm.
2. Values >10,000 ppm will be rounded down to the maximum limit of 10,000 ppm.
3. Possible to adjust CO<sub>2</sub> thresholds by changing the yellow and red limits.
4. User configurable in increments of 10 ppm using the +/- buttons. With a long press of these buttons, the number will change more quickly.


# LCD Display Operation

## *Button Functions*

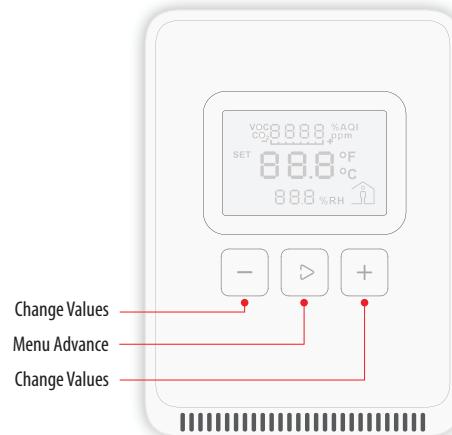

## Display Icons

The main screen displays sensor values for CO<sub>2</sub>, VOC (if equipped), RH (if equipped), room temperature or temperature setpoint and Celsius/Fahrenheit.

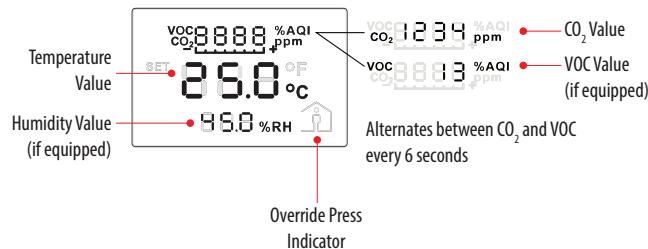

## Setpoint Function

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

### Temperature Setpoint Adjustment

Press the Menu Advance button



- Adjusts setpoint up
- Adjusts setpoint down



After adjustment, wait 6 seconds or press the Menu Advance button. Setpoint is accepted and main screen appears.

Note: Numeric information will flash while in Set mode.

### RH Setpoint Adjustment

Press the Menu Advance button



- Adjusts setpoint up
- Adjusts setpoint down




After adjustment, wait 6 seconds or press the Menu Advance button. Setpoint is accepted and main screen appears.

Note: Numeric information will flash while in Set mode.

### Fan Speed Setpoint Adjustment

Press the Menu Advance button

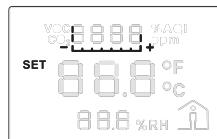

- Adjusts setpoint up
- Adjusts setpoint down



After adjustment, wait 6 seconds or press the Menu Advance button. Setpoint is accepted and the main screen appears.

Note: Fan speed scale flashes when in Set mode. Off setting is default.

### Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

Press the Menu Advance button



- Adjusts from °F to °C
- Adjusts from °C to °F




After adjustment, wait 6 seconds or press the Menu Advance button to return to the main screen.

Note: °F or °C text will flash while in Set mode.

### Occupied/Override Button

Press and hold the Menu Advance button for 1 second

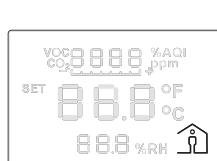

Override Press Indicator illuminates for 6 seconds.

## China RoHS Compliance Information

### Environment-Friendly Use Period (EFUP) Table

部件名称 Part Name	有害物质 - Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子元件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

(企业可在此处, 根据实际情况对上表中打  的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B