

EM35xx Series

Compact Power and Energy Meters
(Pulse, Modbus, BACnet)

Quick Installation Guide
Z206079-0F
1121




Schneider
Electric

Installation

The meter can be mounted in two ways: on standard 35 mm DIN rail or screw-mounted to the back of the enclosure.


A. DIN Rail Mounting

1. Disconnect and lock out power. Use a properly rated voltage sensing device to confirm power is off.
2. Attach mounting clips to the underside of the housing by sliding them into the slots from the inside. The stopping pegs must face the housing, and the outside edge of the clip must be flush with the outside edge of the housing.
3. Snap the clips onto the DIN rail. See diagram of the underside of the meter.
4. To prevent horizontal shifting across the DIN rail, use two end stop clips.

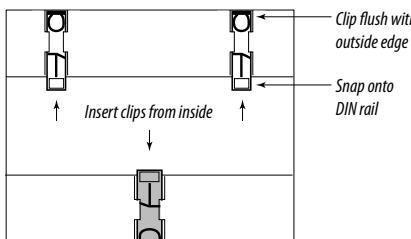

B. Screw Mounting

1. Disconnect and lock out power. Use a properly rated voltage sensing device to confirm power is off.
2. Attach the mounting clips to the underside of the housing by sliding them into the slots from the outside. The stopping pegs must face the housing, and the screw hole must be exposed on the outside of the housing.
3. Use three #8 screws (not supplied) to mount the meter to the back of the enclosure. See diagram of the underside of the meter.

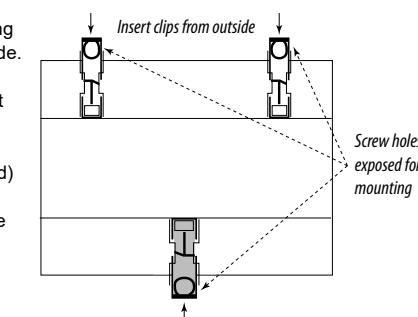

Excerpts: for additional information, please refer to the full installation guide at www.se.com

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Follow safe electrical work practices. See NFPA 70E in the USA, CSA Z462 in Canada, or applicable local codes.
- Read and understand the instructions before installing the product. Follow the instructions during installation.
- Installation, wiring, testing or service must be performed only by qualified persons in accordance with all applicable codes and regulations.
- Install the product in an appropriate electrical and fire enclosure per local regulations.
- Do not use the product for life or safety applications.
- Do not install the product in hazardous or classified locations.
- Do not exceed the product's ratings or maximum limits.
- The product may use multiple voltage/power sources.
- Turn off ALL power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm that all power is off.
- Do NOT depend on the product for voltage indication.
- Products rated only for basic insulation must be installed on insulated conductors.
- Current transformer secondaries (current mode) must be shorted or connected to a burden at all times.
- Remove all wire scraps and tools, replace all doors, covers and protective devices before powering the equipment.

Failure to follow these instructions will result in death or serious injury.

A qualified person is one who has skills and knowledge related to the construction and operation of this electrical equipment and installations, and has received safety training to recognize and avoid the hazards involved. NEC Article 100

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

The safety of any system incorporating this equipment is the responsibility of the assembler of the system.

WARNING: LOSS OF CONTROL. Networked devices can interfere with critical control functions. Refer to NEMA CS1.1 (latest edition). *Safety Guidelines for the Application, Installation, and Maintenance of Solid-State Controls* or its equivalent in your country, language, and/or location. Provide a device to disconnect this product from the supply. Place it in close, easy reach of the product, and mark it as the disconnecting device. The device shall meet IEC 60947-1 and IEC 60947-3 and be suitable for the application. In the US and Canada, disconnecting fuse holders can be used. Provide overcurrent protection for supply conductors with approved current limiting devices suitable to protect the wiring.

For use in an Installation Category III or II, Pollution Degree 2 or better environment only. See full install for definitions.

FCC PART 15 INFORMATION

NOTE: This equipment has been tested by the manufacturer and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications to this product without the express authorization of the manufacturer nullify this statement.

Page 2

Supported System Types

Num. of wires	CTs		Voltage Connections		System Type		Phase Loss Measurements		Wiring Diagram	
	Qty	ID	Qty	ID	Type	Modbus Register 130 or BACnet Analog Value object AV2	User Interface: SETUP> S SYS	VLL	VLN	
Single-Phase Wiring										
2	1	A	2	A, N	L-N	10	1L + 1n		AN	1
2	1	A	2	A, B	L-L	11	2L	AB		2
3	2	A, B	3	A, B, N	L-L with N	12	2L + 1n	AB	AN, BN	AN-BN
Three-Phase Wiring										
3	3	A, B, C	3	A, B, C	Delta	31	3L	AB, BC, CA		AB-BC-CA
4	3	A, B, C	4	A, B, C, N	Grounded Wye	40	3L + 1n	AB, BC, CA	AN, BN, CN & AB-BC-CA	AN-BN-CN & AB-BC-CA

Specifications

Measurement Accuracy:

Real Power & Energy IEC 62053-22 Class 0.2S, ANSI C12.20 0.2%

Input Voltage Characteristics:

Measured AC Voltage Minimum 90 V_{L-N} (156 V_{L-L}) for stated accuracy;

UL Maximums: 600 V_{L-L} (347 V_{L-N}); CE Maximum: 300 V_{L-N}

Impedance 2.5 MΩ_{L-N} / 5 MΩ_{L-L}

Frequency Range 45 to 65 Hz

Input Current Characteristics:

Measurement Input Range 0 to 0.333 VAC or 0 to 1.0 VAC (+20% over-range)

Impedance 10.6 kΩ (1/3 V mode) or 32.1 kΩ (1 V mode)

Control Power:

AC 5 VA max., 90 V min.

UL Maximums: 600 V_{L-L} (347 V_{L-N})

CE Maximum: 300 V_{L-N}

DC* 3 W max.; UL and CE: 125 to 300 VDC

Ride Through Time 100 msec at 120 VAC

Mechanical Characteristics:

IP Degree of Protection (IEC 60529) IP40 front display; IP20 Meter

Terminal Block Screw Torque 0.37 ft-lb (0.5 N·m) nominal

0.44 ft-lb (0.6 N·m) max.

Terminal Block Wire Size 14 to 24 AWG (0.2 to 2.1 mm²)

Rail T35 (35 mm) DIN Rail per EN 50022

Environmental Conditions:

Operating Temperature -30° to 70°C (-22° to 158°F)

Storage Temperature -40° to 85°C (-40° to 185°F)

Humidity Range <95% RH (non-condensing)

Altitude of Operation 3 km max.

Mounting Location Not suitable for wet locations. For indoor use only.

Metering Category:

North America CAT III; for distribution systems up to 347 V_{L-N}/600 V_{L-L}

CE CAT III; for distribution systems up to 300 V_{L-N}

Dielectric Withstand Per UL 508, IEC/EN 61010-1

Conducted and Radiated Emissions FCC part 15 Class B, EN 55011/

EN 61000 Class B (residential and light industrial)

Conducted and Radiated Immunity EN 61000 Class A (heavy industrial)


Agency Approvals: US and Canada (cULUS) UL 508 (open type device)/CSA 22.2 No. 14-05

Europe (CE) IEC/EN 61010-1


* External DC current limiting is required, see fuse recommendations.

Page 3


Dimensions

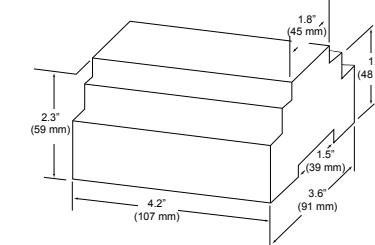

Bottom View
(DIN Mount Configuration)

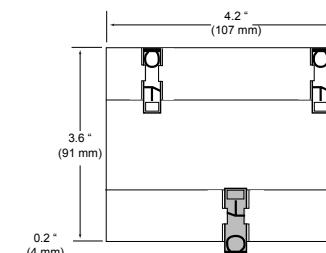

Bottom View
(Screw Mount Configuration)

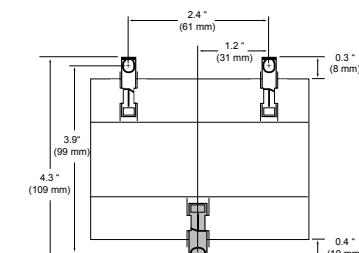

EM35xx:

02 = Unidirectional metering, pulse and alarm outputs only

50 = Unidirectional metering, Modbus full data set, pulse and alarm outputs


55 = Bidirectional metering, Modbus full data set, data logging, pulse and alarm outputs

60 = Unidirectional metering, BACnet full data set, data logging, and two pulse inputs

61 = Unidirectional metering, BACnet full data set, one alarm output, and one pulse input

Page 4

Product Diagram

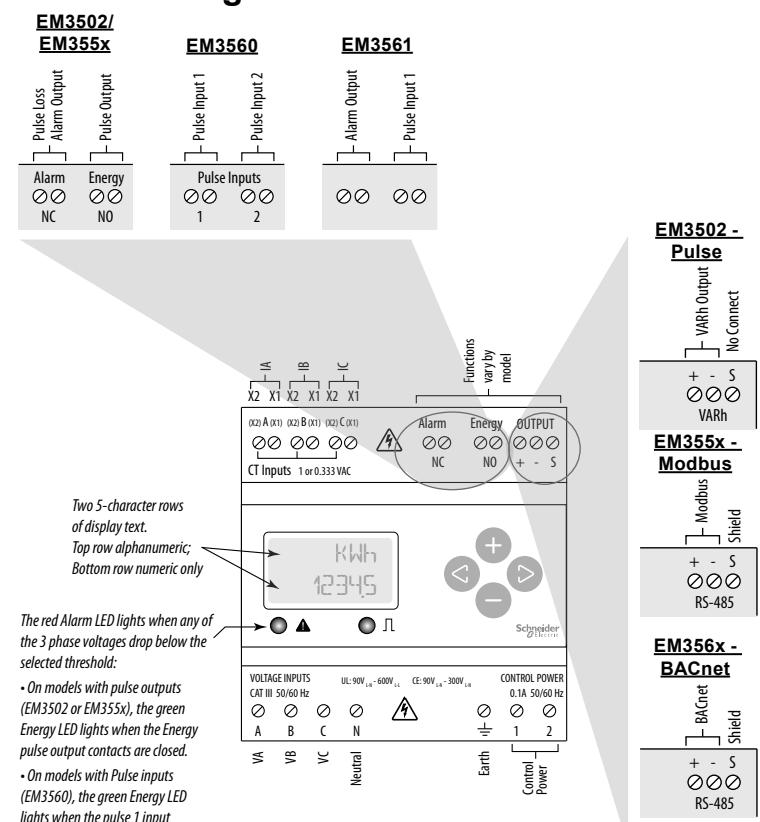

NOTICE

RISK OF EQUIPMENT DAMAGE

This product is designed only for use with 1V or 0.333 V current transducers (CTs).

- DO NOT USE CURRENT OUTPUT (e.g. 5A) CTs ON THIS PRODUCT.

Failure to follow these instructions can result in overheating and permanent equipment damage.

Wiring

WARNING

RISK OF ELECTRIC SHOCK OR PERMANENT EQUIPMENT DAMAGE

CT terminals are referenced to the meter's neutral and may be at elevated voltages:

- Do not contact meter terminals while the unit is connected.
- Do not connect or short other circuits to the CT terminals.

Failure to follow these instructions may cause injury, death or equipment damage.

For EM3502, EM3550, EM3560, and EM3561 models, CTs are NOT polarity sensitive. No need to observe orientation. For EM3555 model, CTs are polarity sensitive. Observe correct orientation as shown below.

Diagram 1: 1-Phase Line-to-Neutral 2-Wire System 1 CT

Use System Type 10 (1L + 1n)

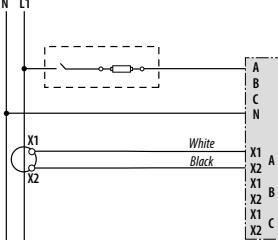


Diagram 2: 1-Phase Line-to-Line 2-Wire System 1 CT

Use System Type 11 (2L)

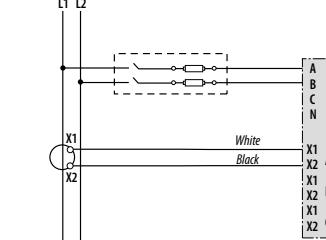


Diagram 3: 1-Phase Direct Voltage Connection 2 CT

Use System Type 12 (2L + 1n)


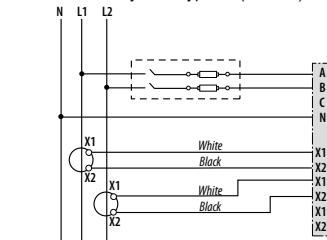


Diagram 4: 3-Phase 3-Wire 3 CT no PT

Use System Type 31 (3L)

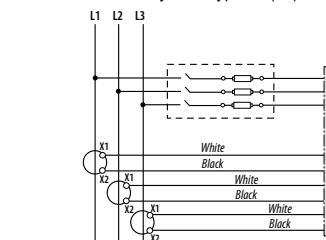


Page 9

RS-485 Communications (EM355x and EM3560 Only)


Daisy-chaining Devices to the Power Meter

The RS-485 slave port allows the power meter to be connected in a daisy chain with up to 63 2-wire devices.

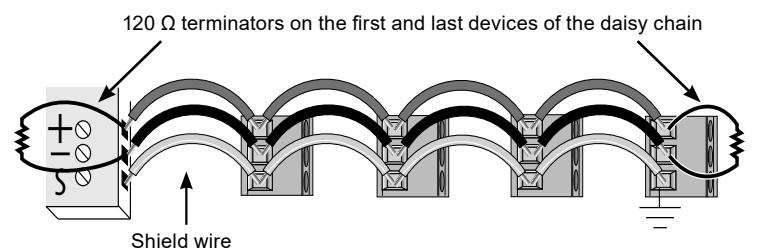

Notes:

- The terminal's voltage and current ratings are compliant with the requirements of the EIA RS-485 communications standard.
- The RS-485 transceivers are 1/4 unit load or less.
- RS-485+ has a 47 kΩ pull up to +5V, and RS-485- has a 47 kΩ pull down to Shield (RS-485 signal ground).
- Wire the RS-485 bus as a daisy chain from device to device, without any stubs. Use 120 Ω termination resistors at each end of the bus (not included).
- Shield is not internally connected to Earth Ground.
- Connect Shield to Earth Ground somewhere on the RS-485 bus.
- Use 14-24 gauge (2.1 to 0.2 mm²) wire for all connections.
- When tightening terminals, apply the correct torque: 0.37 to 0.44 ft-lb (0.5 to 0.6 N·m).

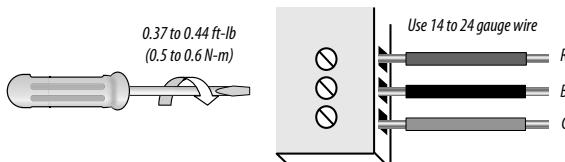

Page 13

Diagram 5: 3-Phase 4-Wire Wye Direct Voltage Input Connection 3 CT

Use System Type 40 (3L + 1n)



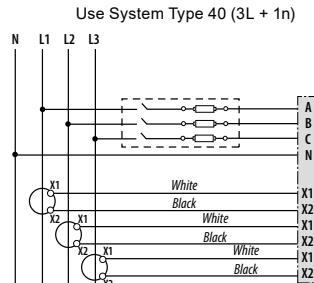


Diagram 6: 3-Phase 4-Wire Wye Connection 3 CT 3 PT

Use System Type 40 (3L + 1n)

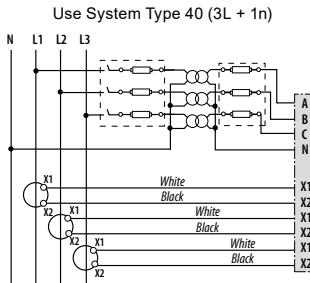

Direct Connect Control Power (DC Control Power) Control Power Transformer (CPT) Connection

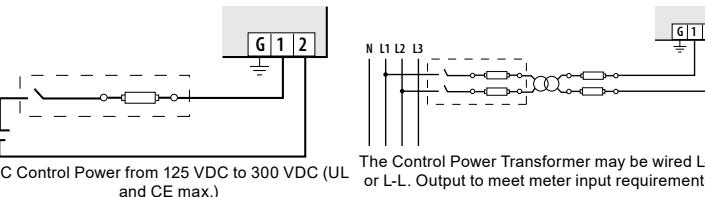


Fuse Recommendations:

Keep the fuses close to the power source (obey local and national code requirements). For selecting fuses and circuit breakers, use the following criteria:

- Select current interrupt capacity based on the installation category and fault current capability.
- Select over-current protection with a time delay.
- Use a voltage rating sufficient for the input voltage applied.
- Provide overcurrent protection and disconnecting means to protect the wiring. For DC installations, provide external circuit protection. Suggested: 0.5A, time delay fuses rated for DC operations at or above the supply voltage.
- Use the earth connection (G) for electromagnetic compatibility (EMC), not a protective earth ground.

Solid State Pulse Output (EM3502 and EM355x Only)


The EM3502 and EM355x have one normally open (N.O.) KY Form A output and one normally closed (N.C.) output. One is dedicated to energy (Wh), and the other to Alarm. The EM3502 also provides an additional (N.O.) reactive energy (VARh) contact. See the Setup section for configuration information.

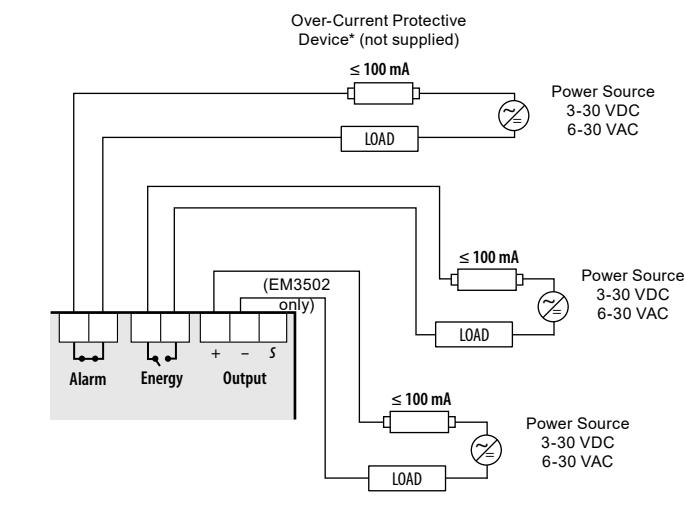


The solid state pulse outputs are rated for 30 VAC/DC nom. Maximum load current is 100 mA at 25°C. Derate 0.56 mA per °C above 25°C (e.g. 86 mA@50°C). * The over-current protective device must be rated for the short circuit current at the connection point. ** All pulse outputs and communication circuits are only intended to be connected to non-hazardous circuits (SELV or Class 2). Do not connect to hazardous voltages.

Display Screen Diagram

LCD Screen:

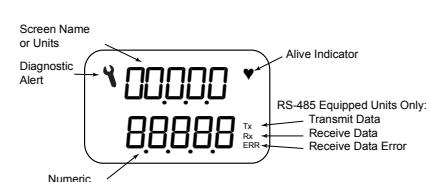

Buttons:

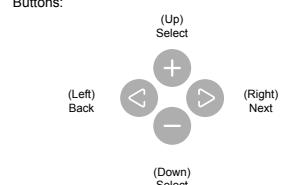

Initial Setup Instructions

These instructions assume the meter is set to factory defaults. If it has been previously configured, check all optional values. For more options and the full setup instructions, see the full installation guide for the specific model.

A. To Navigate to the Setup screens:

- Press **+** or **-** repeatedly until **SETUP** screen appears.
- Press **>** to get to the **PRSW** screen.
- Press **>** to move through the digits. Use the **+** or **-** buttons to enter your password (the default is **00000**).
- Press **>** to move to the first Setup screen (5 CT on EM3502, 5 COM on EM355x, 5 BRC on EM356x).
- Use **+** or **-** to select the parameter screen you want to set.
- After you set the parameters you want, use **+** or **-** to select the next Setup screen or **<** to exit the Setup screens (return to **SETUP**).

B. To Enter Modbus communication parameters (EM355x models only):

- Navigate to the **5 COM** (set communications) Setup screen (see section A).
- Press **>** to go to the **RRDR** screen and through the address digits. Use **+** or **-** to select the Modbus address (default is **00**).
- Press **>** to accept the value and go to the **BRUD** screen. Use **+** or **-** to select the baud rate (default is **19200**).
- Press **>** to go to the **PRR** screen. Use **+** or **-** to select the parity (default is **EVEN**).
- Press **>** to go back to the **5 COM** screen.

C. To Enter BACnet communication parameters (EM356x models only):

- Navigate to the **5 BRC** (set BACnet) Setup screen (see section A).
- Press **>** to go to the **MRD** screen and through the address digits. Use **+** or **-** to select the BACnet MAC address (default is **00**).
- Press **>** to accept the value and go to the **KBRUD** screen. Use **+** or **-** to select the baud rate (default is **19.2K**).
- Press **>** to go to the **ID1** screen and through the upper four digits of the Device Instance. Use **+** or **-** to select the ID digits (default is a pseudo-random number).
- Press **>** to accept the value and go to the **ID2** screen and through the lower three digits of the Device Instance. Use **+** or **-** to select the ID digits (default is a pseudo-random number).
- Press **>** to accept the value and go back to the **5 BRC** screen.

D. To Enter the CT (Current Transducer) output voltage and input current ranges:

- Navigate to the **5 CT** (Set Current Transducer) Setup screen (see section A).
- Press **>** to go to the **CT V** screen. Use **+** or **-** to select the voltage mode Current Transducer output voltage (default is **0.33**).
- Press **>** to go to the **CT 5Z** screen and through the digits. Use **+** or **-** to select the CT size in amps (default is **100**).
- Press **>** to accept the value and go back to the **5 CT** screen.

E. To Enter the service type to be monitored:

- Navigate to the **5 S5S** (Set System) Setup screen (see section A).
- Press **>** to go to the **S5ST** screen. Use **+** or **-** to select the configuration (see wiring diagrams - default is **3L-IN**).
- Press **>** to go back to the **5 S5S** screen.

China RoHS Compliance Information (EFUP Table)

部件名称	有害物质 - Hazardous Substances				
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)
电子件 Electronic	X	O	O	O	O

本表格依据 SJ/T11364 的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

(企业可在此处, 根据实际情况对上表中打 'X' 的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

2000057-08

ION, Modbus, and PowerLogic are either trademarks or registered trademarks of Schneider Electric in France, the USA and other countries. Other trademarks used are the property of their respective owners. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Schneider Electric
Stafford Park 5
Telford TF3 3BL
United Kingdom

©2021 Schneider Electric.
All Rights Reserved.